


# SENCOR SRC 310

## Instruction Manual

### AV-916P

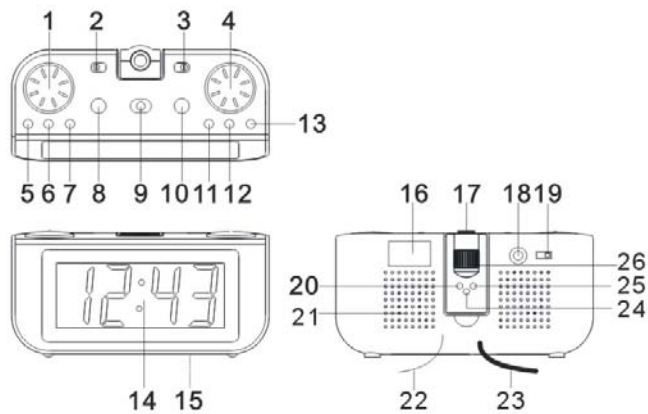

1. VOLUME KNOB
2. ALARM RADIO/BUZZ SWITCH
3. AM/FM BAND SWITCH
4. TUNING KNOB
5. TIME SET BUTTON
6. HOUR SET BUTTON
7. MINUTE SET BUTTON
8. SLEEP BUTTON
9. AUTO DIMMER SENSOR
10. SNOOZE BUTTON
11. ALARM ON/OFF BUTTON
12. ALARM SET BUTTON
13. ON/OFF BUTTON
14. LCD DISPLAY
15. BATTERY DOOR (BOTTOM OF UNIT)
16. RATING LABEL (REAR OF UNIT)
17. PROJECTION UNIT (REAR OF UNIT)
18. LINE IN JACK (REAR OF UNIT)
19. PROJECTION ON/OFF SWITCH
20. HOUR SET BUTTON FOR PROJECTION UNIT (REAR OF UNIT)
21. SPEAKER (REAR OF UNIT)
22. FM ANTENNA (REAR OF UNIT)

23.AC POWER CORD (REAR OF UNIT)

24.TIME SET BUTTON FOR PROJECTION UNIT (REAR OF UNIT)

25.MINUTE SET BUTTON FOR PROJECTION UNIT (REAR OF UNIT)

26.FOCUS ADJUSTMENT FOR PROJECTION UNIT (REAR OF UNIT)

### **POWER CONNECTION**

Plug the AC power cord to a household outlet AC source. This unit is equipped with a battery back up system, it requires a size 1 x 3V CR2032 flat lithium battery (not included). Insert the battery in the battery compartment, making certain that the positive and negative (+ and -) battery terminals are attached to the corresponding terminals on the plate in the battery compartment. If and AC power failure occurs, the clock automatically switches to the battery power supply, the clock and timer memory continue running. When the AC power resumes, the clock switches back to AC again.

### **TO SET THE TIME**

1. Press and hold down the Time Set button (5).
2. Next, press the Hour Set button (6) until you reach the correct hour setting.
3. Keep holding down the Time Set button (5) and press the Minute Set button (7) until you reach the correct minute setting.

### **SETTING THE ALARM TO WAKE YOU UP WITH MUSIC**

- Select the Alarm switch (2) to radio position
- Press the Alarm set button (12) and Hour set button (6) to set the hour.
- Press the Alarm set button (12) and Minute set button (7) to set the minute.
- The radio broadcast station will automatically wake you up at the alarm time

### **ALARM DURATION AND SNOOZE FUNCTION**

Alarm Duration – Buzzer alarm or Radio alarm will continue output for 60 minutes if not key press, then it will stop automatically and wait for same alarm time on next day.

Action for Snooze :

- During alarming, press Snooze button (10) will enable snooze function, Buzzer alarm or Radio alarm will stop.
- Snooze interval is 5 minute (not include second offset)
- Snooze will continue unless press On/Off button (13)/ Alarm On/Off

button (11) to alarm off of Buzzer alarm or Radio alarm stop automatically after 60 minutes.

### SLEEP FUNCTION

Press Sleep button (8) to turn on sleep mode the sleep time will keep flashing by 3 second, within 3 second and Sleep button (8) can change the duration from 90 min – 10 min.

Press On/Off button (13) to cancel sleep function.

### TO PLAY THE RADIO

- Press the On/Off button (13) to turn radio on.
- Select the station using the tuning knob (4)
- Turn the volume knob (1) to adjust volume as required.
- Press the On/Off button (13) to turn radio off.

### SEPCIFICATIONS

Frequency range : FM 87.5 – 108 MHz

AM 525 – 1615 KHz

Power Source : AC 230V ~ 50 Hz, 5W

Battery back-up : 1 x 3V CR2032 flat lithium battery (not included)

### **WARNING**

1. No naked flame sources, such as lighted candles, should be placed on the apparatus.
2. Do not place the product in closed bookcases or racks without proper ventilation
3. Where the mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
4. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc;
5. It shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
6. Do not connect FM antenna to outside antenna.
7. The unit should not be exposed to direct sunlight, very high or low temperature, moisture, vibrations or placed in dusty environment.
8. Do not use abrasive, benzene, thinner or other solvents to clean the

surface of the unit. To clean, wipe it with mild non-abrasive detergent solution and clean soft cloth.

9. Never attempt to insert wires, pins or other such objects into the vents or opening of the unit.

10. Class 1 LED product

### **CAUTION**

Danger of explosion if battery is incorrectly replaced

Replace only with the same or equivalent type

**The projection clock must be set separately**

### **TIME SETTING FOR PROJECTION UNIT**

- To preset the Hours, press simultaneously the Hour button and the Time button. Keep them pressed until the hour digits to be preset are displayed.
- To preset the Minutes, press simultaneously the Minute button and the Time button. Keep them pressed until the minute digits to be preset are displayed.
- Focus setting : adjust the projection clock brightness / focus by turning the brightness / focus adjustment wheel until the projected time is clearly shown on the ceiling or wall.

**NOTE : PROJECTS TIME IMAGE ON THE CEILING OR WALL OF A DARKENED ROOM. MAXIMUM PROJECTION DISTANCE IS 3-9 FEET.**

Line in

The Line in jack can be used to playback alternate audio signal sources on the unit speakers.

This line in jack requires a 3.5mm audio cable for input signal.

Note : The 3.5mm audio cable is not included

### **EN Disposal of Used Electrical & Electronic Equipment**



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your

applicable collection point for the recycling of electrical & electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.