

SENCOR®

SDV-7405H

DVD PLAYER

DVD PŘEHRÁVAČ

DVD PREHRÁVAČ

DVD-LEJÁTSZÓ

ODTWARZACZ DVD

DVD ПЛЕЕР

DVD GROTVAS

DVD

USER'S MANUAL

UŽIVATELSKÁ PŘÍRUČKA

 
POUŽÍVATEĽSKÁ PRÍRUČKA

FELHASZNÁLÓI KÉZIKÖNYV

INSTRUKCJA OBSŁUGI

РУКОВОДСТВО ПОЛЬЗОВАТЕЛЯ

VARTOTOJO VADOVAS



EN CZ SK HU PL RU LT

Content

Introduction

■ Important Safety Instructions	4
■ Caution	6
■ Features	7
■ Front Panel and Rear Panel Illustration	8
■ Remote Control	9
■ Connections	10

Advanced Features

■ SYSTEM setup.....	11
■ MP3/WMA/MPEG4 playing	15
■ Picture CD playback.....	16
■ Function of USB and CARD READER.....	16

Others

■ Troubleshooting	17
■ Specifications	18



THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE UNIT'S CABINET THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.



THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE MANUAL ACCOMPANYING THE UNIT.



THE MAINS PLUG USED AS THE DISCONNECT DEVICE, THE DISCONNECT DEVICE SHALL REMAIN READILY OPERABLE.



THE APPARATUS SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED THE APPARATUS.



THE APLIANCE COUPLER IS USED AS THE DISCONNECT DEVICE, THE DISCONNECT DEVICE SHALL REMAIN READILY OPERABLE.



ALWAYS REMEMBER TO REMOVE THE PLUG FROM THE MAINS SOCKET BEFORE DISCONNECTING THE POWER LEAD FROM THE BACK OF THE UNIT.



DO NOT PLACE AN OPEN FLAME — SUCH AS A BURNING CANDLE — ON THIS EQUIPMENT.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or cords.

WARNING:

TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THE UNIT TO RAIN OR MOISTURE. NEVER ATTEMPT TO OPEN THE CABINET, DANGEROUS HIGH VOLTAGES ARE PRESENTED IN THE UNIT. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

CAUTION:

THE UNIT EMPLOYS A LASER SYSTEM. TO ENSURE THE PROPER USE OF THE UNIT, READ THIS MANUAL CAREFULLY AND KEEP IT FOR FUTURE REFERENCE.

IF THE UNIT REQUIRES SERVICING, CONTACT THE SELLER OR SEE "TROUBLESHOOTING."

TO PREVENT DIRECT EXPOSURE TO THE LASER RADIATION, DO NOT OPEN THE CABINET. VISIBLE LASER MAY RADIATE WHEN THE CABINET IS OPENED OR THE INTERLOCKS ARE DEFEATED. DO NOT STARE INTO THE LASER BEAMS.

CAUTION:

THE DVD VIDEO PLAYER IS A CLASS 1 LASER PRODUCT. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADATION EXPOSURE.

AS THE LASER BEAM USED IN THIS DVD VIDEO PLAYER IS HARMFUL TO THE EYES, DO NOT ATTEMPT TO DISASSEMBLE THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

WARNING:

FCC REGULATIONS STATE THAT ANY CHANGE OF MODIFICATION TO THE EQUIPMENT, NOT EXPRESSLY APPROVED BY MAKER OR ITS AUTHORIZED PARTIES, COULD VOID USER'S AUTHORITY TO OPERATE THIS EQUIPMENT.

1. Read Instructions

All the safety and operating instructions should be read before the product is operated.

2. Retain Instructions

The safety and operating instructions should be retained for future reference.

3. Heed Warnings

All warnings on the product and in the operating instructions should be adhered to.

4. Follow Instructions

All operating instructions should be followed.

5. Cleaning

Unplug this product from the wall outlet before cleaning.
Do not use liquid cleaners or aerosol cleaners. Use a damp cloth from cleaning.

6. Attachments

Do not use attachments not recommended by the product manufacturer as they may cause hazards.

7. Water and Moisture

Do not use this product near water for example, near a bathtub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.

8. Accessories

Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

9. Portable Cart Warning

A product and cart combination should be moved with care. Quick stop, excessive force, and uneven surface may cause the product and cart combination to overturn.



(Symbol provided by RETAC)

10. Ventilation

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to. Do not block ventilation by covering the vents with objects such as newspapers, cloths or curtains.

11. Power Sources

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.

12. Grounding or Polarization

 
This product may be equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

13. Power Cord Protection

Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

14. Outdoor Antenna Grounding

If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information in regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See figure below.

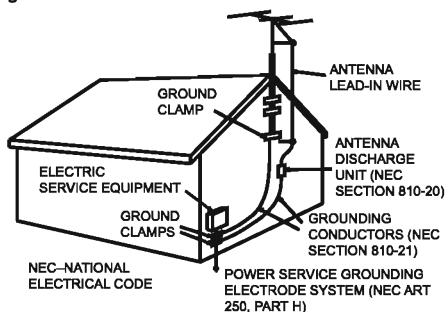

15. Lightning

For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning or power lines surges.

16. Power Lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

17. Overloading

Do not overload wall outlets, extension cords, or integral convenience receptacles, as this can result in a risk of fire or electric shock.

18. Object and Liquid Entry

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind to the product.

19. Servicing

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

20. Damage Requiring Service

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- A) When the power-supply cord or plug is damaged,
- B) If liquid has been spilled, or objects have fallen into the product,
- C) If the product has been exposed to rain or water,
- D) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment or other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation,
- E) If the product has been dropped or damaged in any way.
- F) When the product exhibits a distinct change in performance this indicates a need for service.

21. Wall or Ceiling Mounting

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

22. Heat

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

23. Batteries

Pay strict attention to the environment when using the batteries.

Do not expose the batteries to excessive heat, such as direct sunlight, fire, etc.

Improper use of the batteries may cause electrolyte leakage and corrosion. For the remote control to operate correctly, follow these instructions:

- Do not load the batteries in the wrong direction.
- Do not charge, heat, open or short circuit the batteries.
- Do not throw the batteries into fire.
- Do not leave drained batteries in the remote control.
- Do not combine different battery types or old batteries with new ones.
- If you don't use the remote control for a long time, remove the batteries to prevent possible damage from burst batteries.
- If the remote control does not work correctly or reduces its range, install new batteries.
- If electrolytes leak from the battery, have an authorized service facility clean the remote control.

- Please use the original box and packing materials for safe transportation of this product.

- It is normal for the cover and rear panel to become warm after the player has been operating for an extended period of time.

- Do not move this product during playback. Doing so may cause damage to the pickup and the disc.

- Press **OPEN/CLOSE** on the front panel of remote to open or close the disc tray. Do not push or touch the tray while it is opening or closing.

Disc formats supported by this player:



MPEG4 files on discs



Multi-angle



Dolby Digital



Subtitle choices



 
MP3 files on CD-R/CD-RW



Audio choices



DVD video



TV Aspect Ratio modes



Parental Lock



You can help protect the environment!


Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.

This product incorporates copyright protection technology that is protected by method claims of certain U. S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

The product complies with the Picture CD format and will display Picture Cds.


Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works. © 1992 – 1997 Dolby Laboratories, Inc. All rights reserved.

 Front panel

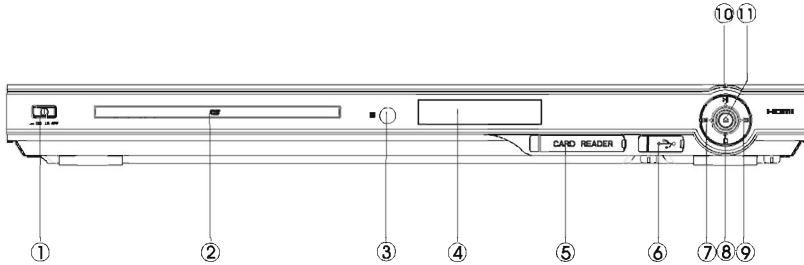

- | | | |
|--------------|---------------|---------------------|
| ① POWER | ⑤ CARD READER | ⑨ NEXT BUTTON |
| ② CABIN DOOR | ⑥ USB | ⑩ PLAY/PAUSE BUTTON |
| ③ SENSOR | ⑦ PREV BUTTON | ⑪ OPEN/CLOSE BUTTON |
| ④ LED SCREEN | ⑧ STOP BUTTON | |

 
Rear panel

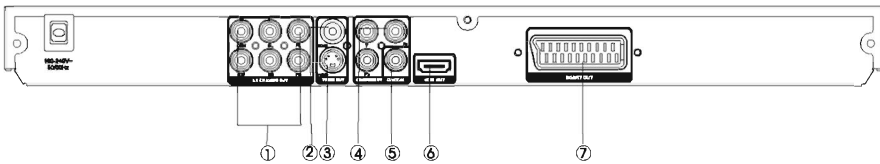

- ① 5.1CH Audio output (FL, FR, SL, SR, CEN, SW)
- ② COMPOSITE VIDEO output jack
- ③ S-VIDEO output jack
- ④ Component Video output (Y, Pb, Pr)
- ⑤ Digital Audio COAXIAL output jack
- ⑥ HDMI out
- ⑦ SCART out

Remote Control

 - 20 OPEN/CLOSE
- 21 0-9 NUMBER KEY
- 22 CLEAR
- 23 ZOOM
- 24 SLOW
- 25 PAUSE
- 26 MENU
- 27 MOVE(▲,▼,◀,▶)
- 28 SETUP
- 29 REV
- 30 FWD
- 31 A-B
- 32 REPEAT
- 33 PROG
- 34 MUTE

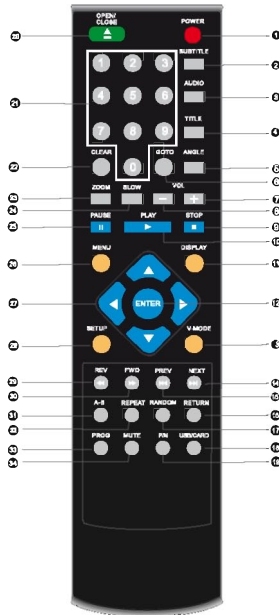


- 1 POWER
- 2 SUBTITLE
- 3 AUDIO
- 4 TITLE
- 5 ANGLE
- 6 GOTO
- 7 VOL+
- 8 VOL-
- 9 STOP
- 10 PLAY
- 11 DISPLAY
- 12 ENTER
- 13 V-MODE
- 14 NEXT
- 15 PREV
- 16 RETURN
- 17 RANDOM
- 18 USB/CARD
- 19 P/N

- V-MODE : Video Output Mode; select between Component, P-Scan and S-VIDEO. This button only works when HDMI cable is not connected to your TV.


Remote Control Preparation

Battery installation

 
1. Open the cover.



 2. Install batteries.

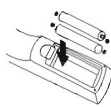


 3. Close the cover.

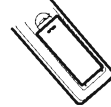


Using the remote

 Point the remote control at the remote sensor.
(The pictures below are for reference only.)

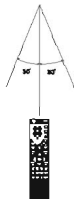

Notes:

 - Point the remote control directly at the player's remote sensor.
- Do not leave the remote control in an extremely hot or humid place.
- Do not spill water or put anything wet on the remote control.
- Inserting the 2 x AAA 1.5V batteries making sure the polarity (+ or -) of the batteries matches the polarity marks inside the unit.

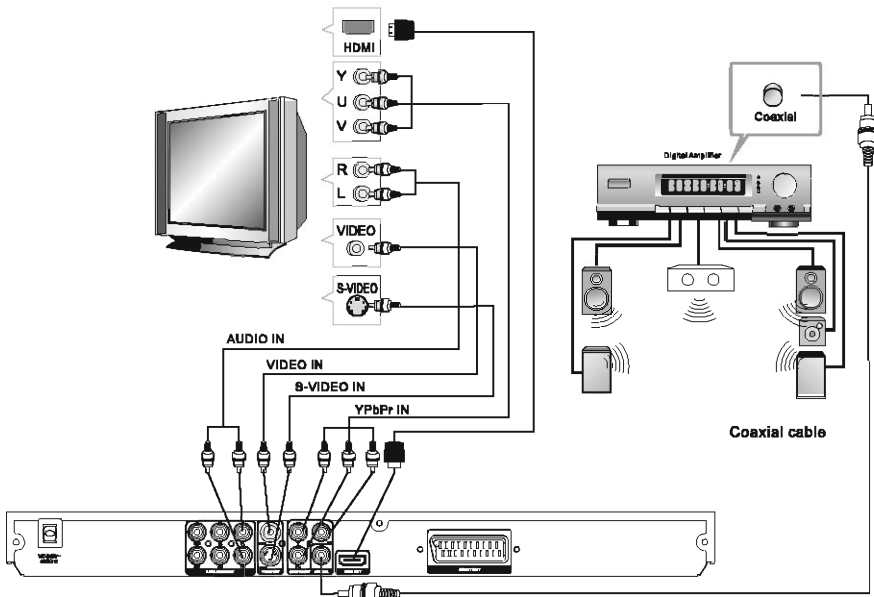

● **CONNECT DVD PLAYER TO TV SET BY AV CABLE**

Connect the DVD player's FR and FL jack the audio input jack on the TV.

● **CONNECT DVD PLAYER TO TV SET BY S-VIDEO SOCKET**

Use the S-VIDEO cable (not supplied) to connect DVD player and your TV. Set the [Video Type] to [S-Video].

● **CONNECT DVD PLAYER TO TV SET WITH SCART SOCKET**

Use the SCART cable (not supplied) to connect DVD player and your TV. Set the [Video Type] to [TV-RGB].

● **CONNECT THE DVD TO A TV USING THE Y/Pb/Pr JACKS**

Use the COMPONENT Cable (not supplied) to connect DVD player to your TV. Set the [Video Type] to [YUV]. For Progressive Scan, set to [Y,Pb,Pr]. [YUV] and [Y,Pb,Pr] signal is transferred through same jack. If the TV set supports P-scan function, you can set [Video Type] to [Y,Pb,Pr]. If not, you can set [Video Type] to [YUV].

● **Connecting to an AV Amplifier with Digital Audio Input**

Notes:

1. Select the Coaxial digital audio output.
2. Set the player's Audio out to Raw or PCM mode .
3. Set the digital Amplifier to the AV input connected to the DVD player.

SYSTEM SETUP

DVD menu setup

Press the **SETUP** button on the remote control, the SETUP MENU(main) will be displayed.

After accessing the setup menu, press the direction buttons for up and down movement to select an item desired, then press the **ENTER** button to confirm. Press **LEFT** direction button return to the menu of upper level.

To exit the setup, press the **SETUP** button again. In the SETUP MENU, you may choose any of the following options as you like.

LANGUAGE SETUP

Select **Language** in the setup menu, and display the **Language** submenu:

Language	OSD Language
Video	Subtitle
Audio	Divx Subtitle
Rating	Audio
Misc	DVD Menu

OSD Language

Use this item to select the language of the setup menu and screen display.

Subtitle

This option provides the preset subtitle language.

Follow the operating instructions stated in **DVD MENU SETUP** in combination with the desired option.

Divx Subtitle

Choice different DivX subtitle encoding option

Audio

Follow the operating instructions stated in **DVD MENU SETUP** in combination with the desired option.

This option provides the built-in disc dubbing language options.

DVD Menu

This option provides the film's menu language options.

Follow the operating instructions stated in **DVD MENU SETUP** in combination with the desired option.

SYSTEM SETUP

VIDEO SETUP

Select **Video** in the setup menu, and display the **Video** submenu:

Language	Aspect Ratio	4:3LB
Video	TV System	4:3PS
Audio	Video Out	16:9
Rating	Smart Picture	
Misc	HD Resolution	

Aspect Ratio

4:3PS/4:3LB : Choosing this setting if your DVD player is connected to a normal ratio TV. You can fill the movie to the entire screen of your TV. This might mean that parts of the picture (the left and right edges) won't be seen.

16:9 : Choose this setting if your DVD player is connected to a wide screen TV. If you choose this setting and you don't have a side screen TV, the images on the screen may appear distorted due to vertical compression.

Notes:

The image display ratio is related to the recorded disc format. Some disc can not display images in the aspect ratio you choose. If you play a disc recorded in 4:3 format on a wide screen TV, black bars will appear on the left and right side of the screen. You must adjust the screen setting depending on the type of the television you have.

TV System

This product supports output of various system, including **Multi**, **NTSC**, **PAL**. If your TV set has only **NTSC** or **PAL** system, the screen will blink and become colorless when a wrong system is selected.

Note: For more information of output format, refer to the instructions or your TV set.

Video Output

When DVD player is not connected to TV through HDMI cable, selecting the Video Output setting to switch between different video outputs.

S-VIDEO : Set the video output to S-VIDEO output.

COMPONENT: Set the video output to YUV output.

P-SCAN: If your TV is progressive TV, please select the option. You can get better picture quality.

RGB: Set the video output to SCART output. If you select SCART connection, you should set up the play mode as **RGB** state, then it will output normally.

When DVD player is connected to TV through HDMI cable, the Video Output setting will be changed to P-SCAN automatically.

SYSTEM SETUP

Smart picture

Adjust display effect for video output:

Standard: default effect.

Bright: internal setting for bright view effect.

Soft: internal setting for soft view effect.

Dynamic: user adjust brightness, contrast, color etc.

HD Resolution

After you set the video output to HDMI output, you can choose the mode of HDMI output: Auto, 480p/576p, 720p, 1080i, 1080p.

AUDIO SETUP

Select **Audio** in the setup menu, and display the **Audio** submenu.

Language	Analog output	5.1 CH
Video	Digital Output	2 CH
Audio	Test Tones	
Rating	Down sampling	
Misc	Smart sound	

Analog output

Analog out select 5.1CH or 2.0CH(select down mix) audio output.

Digital output

Selecting the **Digital Output** setting allows the user to adjust the audio output on S/PDIF ports to work in harmony with the audio equipment(e.g.receiver, speakers)connected to the player.

Off Digital audio output is disabled.

PCM Select this option when you are going to use stereo signals(2 channels). You should combine this option with the option **Lower sampling rate**, Which we explain further on.

RAW If you select this option the player will use the DVD original audio track. Use this option when you want to use the Dolby Digital Ac3 signals through the coaxial audio output.

Test Tones

Selecting the **Test Tone** setting allows the user to test the player's audio output on each speaker. When you select channel, a short burst of pink noise will be sent to corresponding channel.

Down sampling

Down sampling:

ON: system will down sampling rate for high sampling rate audio (more than 96K).

OFF: as normal, may be can play high sampling rate audio.

SYSTEM SETUP

Smart sound

Smart sound select different music effect whiling listening music.

RATING SETUP

Select **Rating** in the setup menu, and display the Rating submenu:

Note: Not all DVD support ratings.

Language	Parental Control Set Password	1. Kid Safe 2. G 3. PG 4. PG-13 5. PG-R 6. R 7. NC-17 8. Adult
Video		
Audio		
Rating		
Misc		

Parental Control

Selecting a Rating allows the user to set the parental control feature of the player

Select **Parental Control**, and press **ENTER** to change the different mode.

Note: Unlock the password before setting **Parental Control**.

Set Password

Use the 0-9 keys to input four digits(password), then press **ENTER** to confirm.

Note: If you forget your password, please use the universal password 6666 to unlock.

MISC SETUP

Select **MISC** in the setup menu, and display the submenu:


* Use Default Settings


Reset setup data to factory default and re-load disc.

Screen saver: Enable/Disable screen saver function.

Language	Use Default Settings Screen saver	On Off
Video		
Audio		
Rating		
Misc		

 MP3/WMA/MPEG4 PLAYING

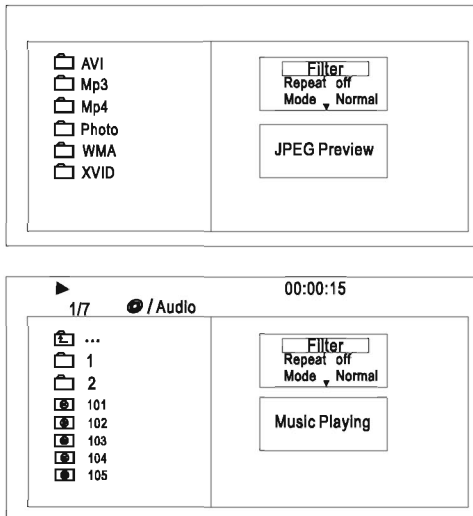

The MP3/WMA/MPEG4 disc has such a directory structure as shown in the picture above. Press **Direction key** to choose the root directory and then press **ENTER** button to enter into the sub directory. Press **Direction key** to choose the desired track and then press **ENTER** or **PLAY** to enjoy the music or movie. If you want to return to the upper menu, press **Direction key** to choose  the icon and press **ENTER** button.

Filter: Allows selecting the categories of files displayed in the browser list.

This selection is done among the 3 categories: Audio, Photo and Video.

Repeat: To switch different repeat playing mode

Mode: Select different playing mode

Normal: Shuffle mode is cancelled

Shuffle: Shuffle mode enabled. When playback reaches the end of the current chapter/track, playback jumps to a random chapter/track. As the end of each chapter/track is reached, another random chapter/track will be played until all tracks/chapters have been played or the Shuffle mode is cancelled by toggling to a different Mode Option.

Music Intro: In this mode, the media will play 10 seconds then skip to next media.

*Edit Mode: To enable programmed playback mode. When you select the mode, press **LEFT Direction key** to directory and press **ENTER** to choose the desired track and press **Add to program** to start program playback.*

Program view: Display program track


Browser view: Display track directory

*Add to program: Choose the track press **Add to program** to add the track of the program play directory*

*Clear program: In the complete stop state (press the **STOP** button twice), choose the track press **Clear program** to delete the track of the program play directory.*

PICTURE CD PLAYBACK

The PICTURE CD disc has such a directory structure as shown in the following picture.

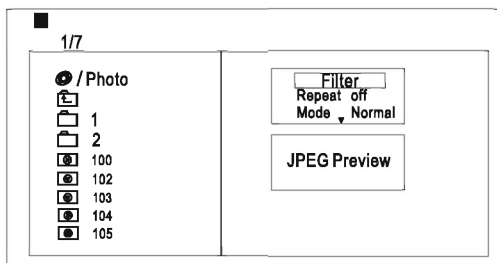 

Press **Direction key** to choose the root directory and then press ENTER button to enter into the sub directory. Press **Direction key** to choose the desired picture and then press ENTER or PLAY to enjoy the picture. If you want to return to the upper menu, press **Direction key** to choose the icon and press ENTER button.

Image rotation

In picture playstate, press **Direction key** to rotation the picture, press ANGLE button to change the picture scan mode.

FUNCTION OF USB

3 In 1 Card Reader Function

This unit have a 3 in 1 card jack, when no disc in the player. You can insert (MMC, SD, MS) three kinds of card with card port interface to play the mp3 music or MPEG4 movie and JPEG files. All the function is the same to play a disc.

USB interface

This unit have a USB jack, when no disc in the player, you can insert a USB device or a Mp3 Player with USB Interface to play the Mp3 music or and JPEG files. All the function is the same to play a disc. When the disc is in the player at the stop state, user can enjoy USB by selecting USB in the remote control USB/CARD. Not all USB Device can be supported by this system.

NOTE:

When using USB function. Please do not insert in the wrong direction, or it will be corrupted.

If you have any questions, please consult the troubleshooting guide below.

NO PICTURE OR SOUND

- Ensure the power button is on.
- Ensure the power outlet is operational.
- Ensure the power cord is not damaged.
- Ensure the power plug is connected firmly to the outlet.

PICTURE BUT NO SOUND

- Ensure the audio jacks are securely connected.
- Ensure the audio connector is not damaged.
- Ensure the volume is turned up in VOL/CH setup.
- Ensure you have set the player's AUDIO settings correctly.
- Ensure you have entered the correct AV Input for your TV.
- Ensure the audio is not set to mute.

SOUND BUT NO PICTURE

- Ensure the video jacks are securely connected.
- Ensure you have entered the correct AV input for your TV.
- Ensure the video connector is not damaged.
- Ensure you have set the player's VIDEO settings correctly.

POOR PICTURE OR SOUND

- Ensure you have set the player's AUDIO settings correctly.
- Ensure the disc is not scratched or stained.
- Ensure the AV connector or the output terminal is not damaged.

"BAD DISC" DISPLAYED

- Ensure the disc is not warped, damaged or deformed.
- Ensure the disc is not badly stained or damaged.
- Ensure the disc format is compatible with the player.
- Please check whether you have tried to play a software CD. If so, please restart the player.

REMOTE NOT WORKING

- Make sure the Main unit's POWER button is on.
- Ensure the remote batteries are working.
- Point the remote control directly at the player's IR sensor.
- Remove any obstacles between the remote and the IR sensor.

UNIT NOT WORKING

- Turn off the power, and then turn it on again.

"NO DISC" DISPLAYED

- Ensure you have put the disc on the tray.
- Ensure the disc is not upside down.
- Ensure the disc is not distorted, stained or scratched.

Power requirements: AC 100-240 Volt, 50/60Hz

Power consumption: 15W

Video standard: NTSC/PAL

Disc s COMPATIBILITY: MPEG4,DVD,DVD+/-R/RW,VCD,JPEG.CD-DA,CD-R,
CD-RW

Video out

Video out: 1.0V(p-p)/75Ω, sync, negative polarity

S-video output connector(separate Y、C signal output connector):

Y output: 1.0V(p-p)/75Ω, sync, negative polarity

C output: 0.286V(p-p)/75Ω

HDMI output: 480P/576P, 720P, 1080i, 1080P, Auto

Audio out

Coaxial out: 0.5V(p-p)75Ω

Frequency response: 20Hz to 20kHz

S/N ratio:>90dB

Total harmonic distortion: <0.025%

[Accessories]

Video/ Audio cable x 1

Remote Control x 1

User's Manual x 1

Battery x 2

Specifications are subject to change without notice.

Weight and dimensions are approximate.

ELECTRONIC AND ELECTRIC APPLIANCE DISPOSAL INSTRUCTIONS



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



This product is in compliance with the requirements of the regulations of EU on electromagnetic compatibility and electrical safety.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

