

SENCOR SDA 800

Digital Photo Album
Digitální foto album
Digitálny foto album
Cyfrowy album fotograficzny
Digitális fotóalbum



User Manual

Uživatelská příručka • Používateľská príručka
Instrukcja obsługi • Használati útmutató

1. Gallery
2. Create Album
3. Settings
4. Copy, Delete
5. Photo Tag Line
6. Printing

Thank you for purchasing Sencor SDA 800

Sencor SDA 800 is a new model of digital photo viewer. It is built-in with 8 Inc, 800x600 resolution LCD screen. You can browse with JPG file format picture. Also with built-in FLASH dodges saves. Including manage folders and files with " Create, Move, Delete". It is user friendly for everyone. It is a high technology product, and designed for family used.

Please read this manual and familiar with the controlling on the functions before using Sencor SDA 800.

Table Of Contents

Package included	4
IMPORTANT	
Safety Precautions	5
Operation Procedures	6
Getting Started	
Location of Controls	7
Others Accessories	8
Plug in Memory Card	8
Connecting USB Flash Memory	9
Connecting with PC	9
Viewing Photos	
1. Turn on the unit.....	10
2. Main Menu	10
3. Select Source of Photo	11
4. Browsing Photo	11
5. Zoom In	12
6. Browsing Sub Album.....	12
7. Circumrotate Screen	13
Playing Slideshow	
Slideshow from Sub-photo Album File	13
Photo Slideshow	14
Slideshow Effects	14
Advance Functions Controlling	
Create Sub-photo Album File	15
Copy Photo and Sub Album	17
Delete Photo and Sub Album Folder	20
Setup	23
Add, Display Picture Tag Line.....	25
Printing Photo	27

Package included :

Please check SDA 800 packaging box is included the accessories below, if there is missing, please contact with your dealer.

Digital Photo Album




Frame Supporter x 2



Leather Cover



User Manual

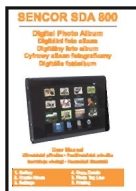


USB Cable



USB Host



AC-DC Adapter

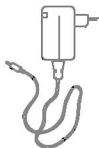

IMPORTANT

Safety Precautions

Please follow the following safety precautions when using Sencor Digital Photo Album. This will reduce the risk of fire, electric shock, product damage and personal injury.



STOP using when any liquid or foreign object went into the Digital Photo Album. At the same time, please turn it off and unplug all the power, and do not continue to use the photo frame to prevent fire or electric shock hazard.



Do not use beside flammable or explosive gas. To prevent detonation.



Avoid metal or explosive object went in memory slot or power charging port. To prevent fire and electric shock hazard.



Avoid using wet hand to operating the unit, to prevent damage or electric shock hazard.



Do not cover the unit when it's in charging, will cause machine heat, and become distortion or fire.



The longer time using on the Digital Photo Album will cause heat, and will break down. Turn the unit to stand by mode for few minutes for cooling down, if feel the unit is hot.



Do not place the Digital Photo Album in high temperature places, example inside a airtight car, direct sunlight, or temperature variation places. Temperature too high or too low might damage the unit.

Operation Procedures

Operation Procedures means when operating Sencor Digital Photo Album, conditions to avoid, some conditions might caused damage on the unit.



Please avoid dropping the unit on floor or hit on it. LCD screen might damaged.



Do not open the cover shield. Otherwise, might damaged. The unit or losing the warranty conditions.



Make sure formatting the memory card after bought, which to use in the Digital Photo Album.



Never place the unit near strong magnetic force and wireless staff. Example video game , speaker, radio. Strong magnetic force might damaged the Digital Photo Album spoiled or lost LCD screen.



When charging battery on the unit, do not move it. Please switch off the power before unplug. Make sure there is no power source connected with the unit before moving it, else might caused fire or electric shock hazard.



Please check the direction of the cable is correct before plug in. Do not force to plug in if it's not correct.





Please use the correct way to plug in memory card. If found your memory card can't be plugged in, please check the direction or does the unit support it. Do not force to plug in.

Getting Started

Location of Controls

Please read carefully for every buttons name for understanding and operating /setting the unit.

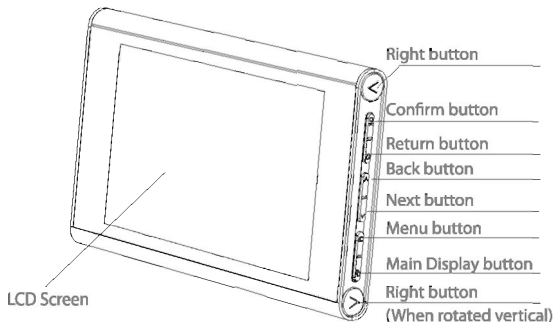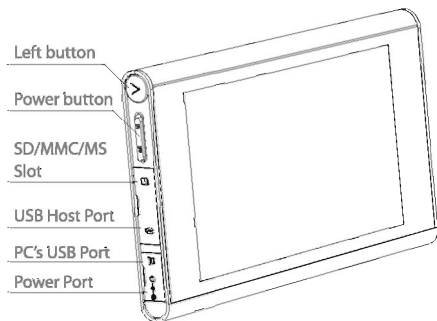

Others Accessories

Using the Digital Photo Album might need :-



Memory Card and
USB flash memory




Computer



Printer


Plug In Memory Card

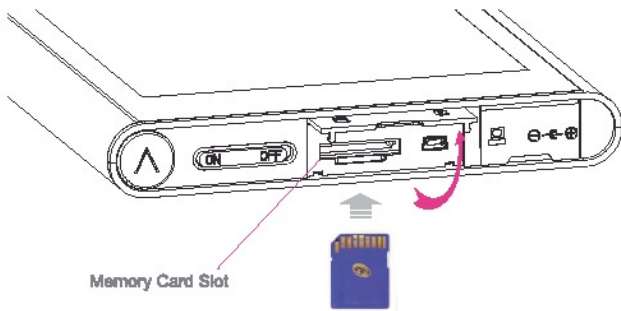

1. Open Memory Card Slot Cover
2. Plug In the memory card with faced down


If found hard to plug in the memory card, please check the direction is correct. Please don't force to plug in, it might caused damage on the memory card and memory slot.

Connecting USB Flash Memory

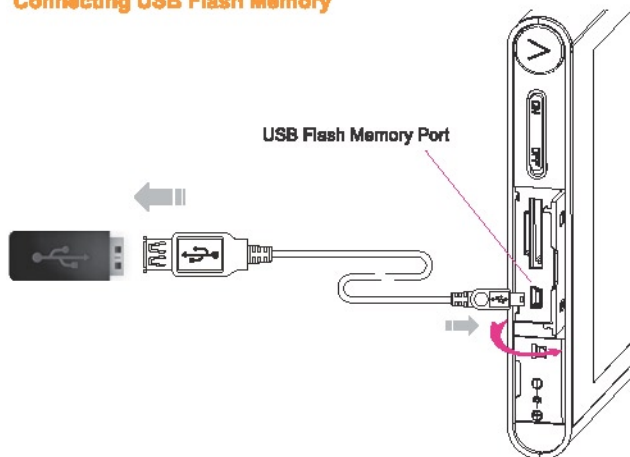

1. Open memory card slot and USB port cover.
2. Connect USB flash memory with USB cable, plug in the another side according the arrow showed on right.

Connecting With PC

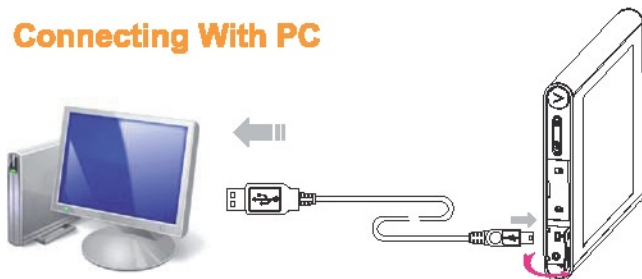

1. Open PC USB slot cover.
2. Connect USB jack with PC, and plug in the cable according the arrow.


* Please switch on the unit when connecting to PC

Viewing Picture

*Please confirm that you plugged in a memory card or USB flash memory which contained *.jpg picture.
Or already in the Digital Photo Album driver.


1. Turn on the Unit

Push up the button, and on animation will appear on the screen and it is on.

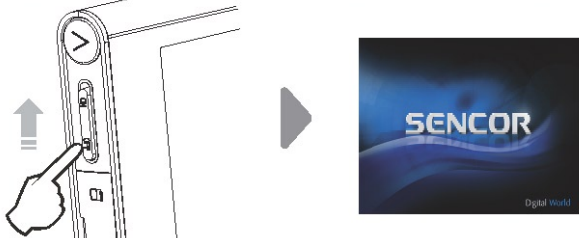


2. Main Menu

After the unit is turned on, there is a main menu on the screen like below.

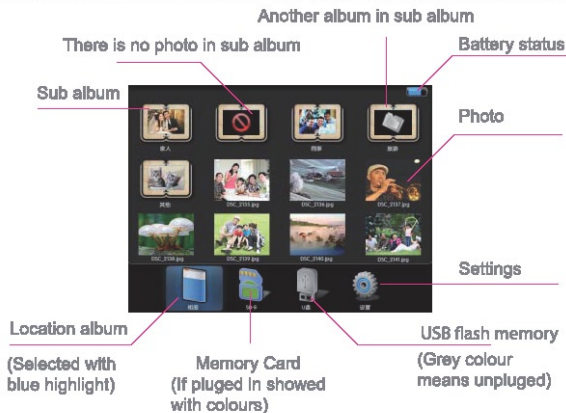

3. Select Source of Photo

Enter into main display, press "</>" button to select the source of photo from "Photo Album", "Memory Card" or "USB Device" (plitch on with bright blue), then press "OK" button to enter.

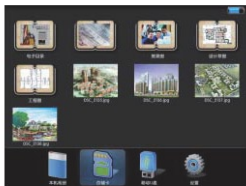

4. Browse Photo

Enter into source of photo, press "</>" button to select photo.

Selected picture
enlarged




Press "OK" button after selecting photo to zoom in with full screen or enter into browse mode. Press "</>" button to take view from the previous and next photo.



5. Zoom In

Under browse mode, press "OK" button to zoom In, the photo will be zoom In one time as press "OK" button one time, it can up to 3 times.

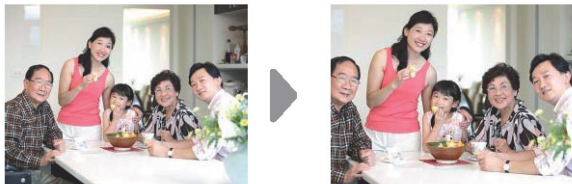

Press "</>" button or "▲/▼" button to move the view area to up, down, left or right.


6. Browsing Sub Album

Choose the sub album and press "OK" button.

Selected sub album
enlarged



Press "⏪" button back to previous level menu. Or press "⏩" button to main menu.

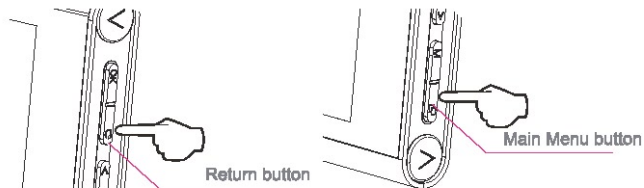

7. Circumrotate Screen

If the photo is lengthways, make the unit upright, the photo will be circumrotate with the unit.



Playing Slideshow

Slide Show from Sub-photo Album File

Select sub-photo album file, press "M" button to display menu, click "A/V" button to choose 'slide show', then press "OK" button to display subordinate menu.



2. Choose "single" or "multiple", and press "OK" button to play the slideshow.

Photo Slideshow

1. Select photo, press "M" button to display menu, then press " \wedge / \vee " button to click "slide show" option, press "OK" button again to play slide show.



Slideshow Effects

1. Select photo, press "M" button to display menu, press " \wedge / \vee " button to choose "slide show effect" option, then click "OK" button to display subordinate menu.



2. Press " \wedge / \vee " button to select "fade / shutter / cross comb / mask / brick / dissolve / bar / expansion / silk / random" mode, press "OK" button to choose slide show effect, automatic back previous menu, it will play slide show next time according the mode which is selected at the previous time.
3. If want to turn off specific effect, select "off" and press "OK" button, the slide show effect will be off.


Advance Functions Controlling

Create Sub-photo Album File


1. Built In player

- * This function only works in Main Menu. If is not at main display, press “” button back to main menu.

Under mode of main menu, press "M" button to display the menu, press "</>" button and "Λ/V" button to choose 'create album', then press "OK" button to enter into the creating mode.

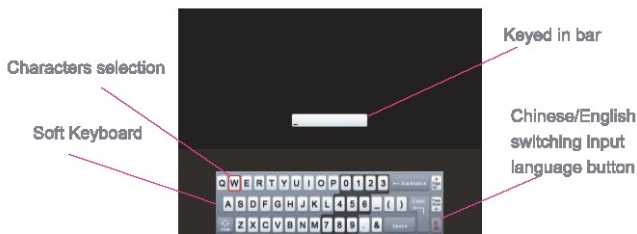


Under the mode of creating, press "</>" button and "Λ/V" button to choose the letter, then press "OK" button to input the letter, the letter will be displayed in the "Keyed in bar".

To switching capital letter and small letter, press "</>" button and "Λ/V" button to select , and press "OK" button.

Key in Chinese

Press "</>" button, "A/V" button and select , then press "OK"

button to switch to Chinese. At the time, Chinese/English option become . Input Chinese character same with PC "Pin Yin", example "我" word, key in "wo", and same pronounce characters selection will appearing like the picture below.



According to the character which wish to key in, press "</>" button and "A/V" button to select, and press "OK" button to key in.

If the word is not in selection, select  /  option for more same pronounce characters.

2. Create Folder from Computer

1. Connect the unit to computer



* On the computer

2. Double click my computer, select removable memory device..

3. Open the folder, right click and select create new folder.

4. And rename the new folder.

Copy Photo and Sub Album

Copy Photo

1. Press "</>" button to choose the picture, and press "M" button.
2. Press "^/V" button select "copy photo to" option, click "OK" button to continue.



3. Press "^/V" button to select copied photo copy to "flash card" or "USB Driver".
4. Press "OK" button to confirm, and a loading bar will appear, after succeeded, the photo will copied to the selected driver.



Copy Sub Album Folder

1. Press "</>" button to select the sub photo album folder which you wish to copy, and press "M" button to display the menu.
2. Press "A/V" button to select "copy photo to" option, click "OK" button to display subordinate menu.





3. Press "A/V" button to select copied sub photo album folder copy to "flash card" or "USB Driver".
4. Press "OK" button to confirm, and a loading bar will appear, after succeeded, the sub photo album folder will copied to the selected driver.




TIPS Picture, Folder or Sub Photo Album Folder only can copy from port to port, and it can not do copy function in the built in driver.

Copy all Content from Driver

- * Only can use this function In main menu. If you are not in the main menu press “” button to return back to main menu.
1. Under main menu, press “” button to choose the driver.
 2. And press “M” button to display the menu, then press “A/V” button to select “Copy all to” option, and press “OK” button to confirm.



3. Press “A/V” button to select the copied content copy to “flash card” or “USB Driver”.
4. Press “OK” button to confirm, and a loading bar will appear, all the content will copied to your selected driver after loading complete.

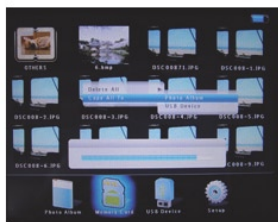

Delete Photo and Sub Album Folder


Delete photo

1. Press "</>" button select the photo, and press "M" button to display the menu.
2. Press "▲/▼" button select "Delete photo" option, and press "OK" button to display subordinate menu.



3. To delete the photo, choose "Yes" and press "OK" button to confirm. A loading bar will appear, the photo will be deleted after the loading finished.

Select "No" option to cancel.

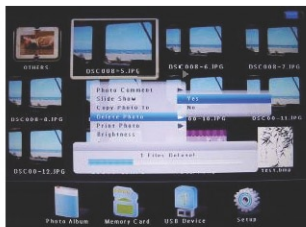

Delete Sub Album Folder

1. Press "</>" button to choose the sub album, and press "M" button to display the menu.
2. Press "▲/▼" button to select "Delete album folder" option, and press "OK" button to display subordinate menu.




3. Choose "Yes" to delete the folder and press "OK" button to confirm. And a loading bar will appear, the folder will be deleted after loaded.

Select "No" option to cancel.



Delete all Content from Driver

- * This function only able to use In Main Menu. Press "" button to return back to main menu.
1. Under main menu, press "</>" button to select the driver .
 2. Press "M" button to display the menu, and press "A/V" to choose "Delete all" option, and press "OK" button to display subordinate menu.



3. To delete all the contents, select "Yes" option and press "OK" button to confirm. A loading bar will appear, after finished, all contents will deleted. Select "No" to cancel.




Setup

Under main menu, press " \leftarrow/\rightarrow " or " \wedge/\vee " and select "Setting" option, and press "M" button to display the menu.



Language Setup


Press " \wedge/\vee " and select "Language", and press "OK" button.

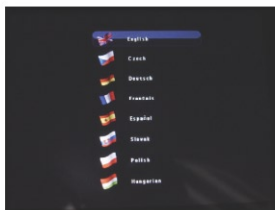

Press " \wedge/\vee " to select your preferred language, and press "OK" button to confirm.

Brightness Setup


Press " \wedge/\vee " and select "Brightness", and press "OK" button to enter into display of brightness setup .

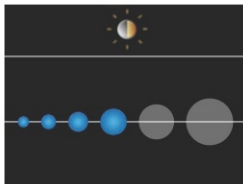

Press " \leftarrow/\rightarrow " button to adjust the brightness, and press "OK" button to confirm.

Contrast Setting


Press "**▲/▼**" button to select "Contrast" option, and press "OK" button to display the contrast setup.

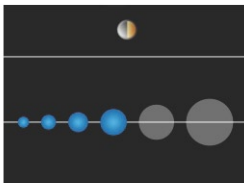

Press "**</>**" button to adjust the contrast, and press "OK" button to confirm.

Slideshow Speed

 Press "**▲/▼**" button to select "Slideshow speed" option, and press "OK" button to display the menu.

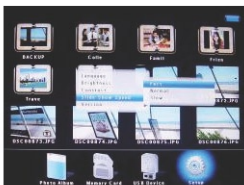

Press "**▲/▼**" button to select "Fast", "Normal" or "Slow", and press "OK" button to confirm.

Version

 
Press "**▲/▼**" button to select "Version" option, and press "OK" button to check the version.




Add, Display Picture Tag Line

Add Picture Tag Line

1. Open the unit, connect to PC.
* On the computer
Right click and select properties on a picture.

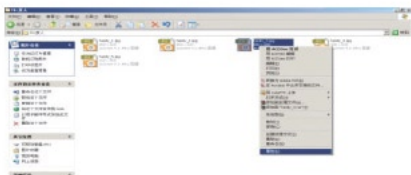

2. Select "Description" tab, key in tag line under "Tag"

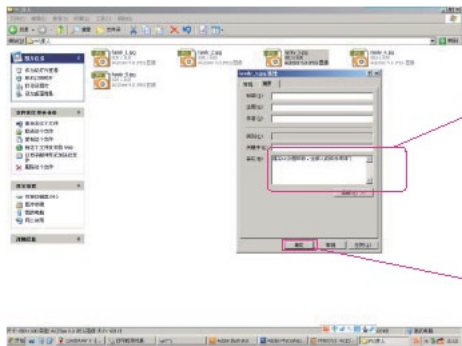

3. After key in, press "OK" to save the picture tag line.

Display Photo Tag Line

1. Press "</>" button or "▲/▼" button to select the photo, then press "M" button to display the menu. And press "▲/▼" to select "Photo tag line" option, and press "OK" button to display subordinate menu.



2. Press "▲/▼" button and select "On" option to display photo tag line, and press "OK" button to confirm.




3. To disable photo tag line, select "Off" option and press "OK" button to confirm.

Printing Photo

1. Use "</>" or "</>" button to select the photo, press "M" button to display the menu and press "</>" button to select "Printing" option, and go to the subordinate menu.



2. Connect USB cable to a printer.

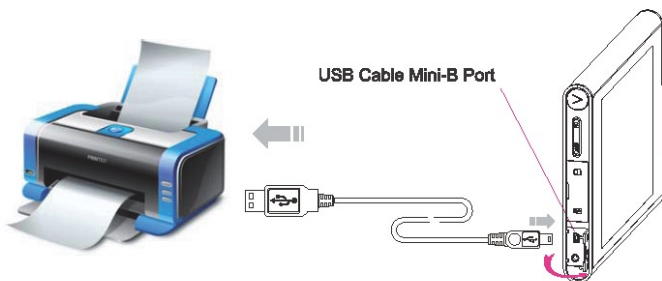

3. Select "Yes" and press "OK" button to print.
4. Select "No" and press "OK" button to go backward, or press "⏪" button.

Remark:

The printer must support the PicBridge. Nevertheless the Manufacturer do not guarantee compatibility with all available printers. In case of troubles please use another printer.

DISPOSAL OF USED ELECTRICAL & ELECTRONIC EQUIPMENT



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Discard the used packaging material at a site designated for waste in your locale.



This device conforms with EU rules and regulations regarding electromagnetic and electrical safety.