

SENCOR®

SDV-6201

DVD PLAYER

DVD PŘEHRÁVAČ

DVD PREHRÁVAČ

DVD LEJÁTSZÓ

ODTWARZACZ DVD

DVD ПЛЕЕР

DVD GROTVAS

DVD

USER'S MANUAL

PŘÍRUČKA UŽIVATELE

PRÍRUČKA UŽÍVATEĽA

FELHASZNÁLÓI KÉZIKÖNYV

INSTRUKCJA UŻYTKOWNIKA

РУКОВОДСТВО ПОЛЬЗОВАТЕЛЯ

VARTOTOJO VADOVAS



EN

CZ

SK

HU

PL

RU

LT



Please read this User Manual carefully to ensure proper use of this product and keep this manual for future reference.

Content

Introduction

Safety Instructions	4
Important Safety Instructions	5
Caution	7
Features.....	8

System setup

Menu operation.....	9
MP3/WMA/JPEG/MPEG4 playback	13
Picture CD playback	14
Card Reader, USB, Karaoke (Optional).....	15

Others

Troubleshooting	16
Specifications	17

Safety Precautions



THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE UNIT'S CABINET THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.



THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE MANUAL ACCOMPANYING THE UNIT.



THE MAINS PLUG USED AS THE DISCONNECT DEVICE, THE DISCONNECT DEVICE SHALL REMAIN READILY OPERABLE.



THE APPARATUS SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED THE APPARATUS.



THE APPLIANCE COUPLER IS USED AS THE DISCONNECT DEVICE, THE DISCONNECT DEVICE SHALL REMAIN READILY OPERABLE.



ALWAYS REMEMBER TO REMOVE THE PLUG FROM THE MAINS SOCKET BEFORE DISCONNECTING THE POWER LEAD FROM THE BACK OF THE UNIT.



DO NOT PLACE AN OPEN FLAME — SUCH AS A BURNING CANDLE — ON THIS EQUIPMENT.

WARNING:

TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THE UNIT TO RAIN OR MOISTURE. NEVER ATTEMPT TO OPEN THE CABINET. DANGEROUS HIGH VOLTAGES ARE PRESENTED IN THE UNIT. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

CAUTION:

THE UNIT EMPLOYS A LASER SYSTEM. TO ENSURE THE PROPER USE OF THE UNIT, READ THIS MANUAL CAREFULLY AND KEEP IT FOR FUTURE REFERENCE.

IF THE UNIT REQUIRES SERVICING, CONTACT THE SELLER OR SEE "TROUBLESHOOTING."

TO PREVENT DIRECT EXPOSURE TO THE LASER RADIATION, DO NOT OPEN THE CABINET. VISIBLE LASER MAY RADIATE WHEN THE CABINET IS OPENED OR THE INTERLOCKS ARE DEFEATED. DO NOT STARE INTO THE LASER BEAMS.

CAUTION:

THE DVD VIDEO PLAYER IS A CLASS 1 LASER PRODUCT. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

AS THE LASER BEAM USED IN THIS DVD VIDEO PLAYER IS HARMFUL TO THE EYES, DO NOT ATTEMPT TO DISASSEMBLE THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

WARNING:

FCC REGULATIONS STATE THAT ANY CHANGE OF MODIFICATION TO THE EQUIPMENT, NOT EXPRESSLY APPROVED BY MAKER OR ITS AUTHORIZED PARTIES, COULD VOID USER'S AUTHORITY TO OPERATE THIS EQUIPMENT.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or cords.

Important Safety Instructions

1. Read Instructions

All the safety and operating instructions should be read before the product is operated.

2. Retain Instructions

The safety and operating instructions should be retained for future reference.

3. Heed Warnings

All warnings on the product and in the operating instructions should be adhered to.

4. Follow Instructions

All operating instructions should be followed.

5. Cleaning

Unplug this product from the wall outlet before cleaning.

Do not use liquid cleaners or aerosol cleaners. Use a damp cloth from cleaning.

6. Attachments

Do not use attachments not recommended by the product manufacturer as they may cause hazards.

7. Water and Moisture

Do not use this product near water for example, near a bathtub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.

8. Accessories

Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

9. Portable Cart Warning

A product and cart combination should be moved with care. Quick stop, excessive force, and uneven surface may cause the product and cart combination to overturn.

10. Ventilation

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface.

This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

Do not block ventilation by covering the vents with objects such as newspapers, cloths or curtains.

11. Power Sources

This product should be operated only from the type of power source indicated on the marking label.

If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.

12. Grounding or Polarization

This product may be equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

13. Power Cord Protection

Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

 


(Symbol provided by RETAC)

Important Safety Instructions

14. Outdoor Antenna Grounding

If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information in regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See figure below.

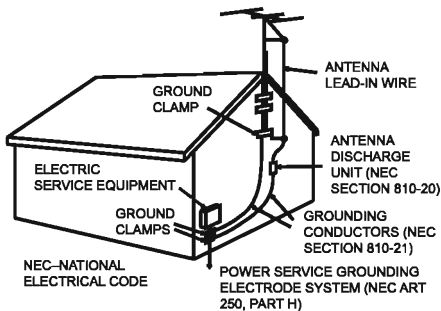

15. Lightning

For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning or power lines surges.

16. Power Lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

17. Overloading

Do not overload wall outlets, extension cords, or integral convenience receptacles, as this can result in a risk of fire or electric shock.

18. Object and Liquid Entry

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind to the product.

19. Servicing

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

20. Damage Requiring Service

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- A) When the power-supply cord or plug is damaged,
- B) If liquid has been spilled, or objects have fallen into the product,
- C) If the product has been exposed to rain or water,
- D) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment or other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation,
- E) If the product has been dropped or damaged in any way.
- F) When the product exhibits a distinct change in performance this indicates a need for service.

21. Wall or Ceiling Mounting

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

22. Heat

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

23. Batteries

Pay strict attention to the environment when using the batteries.

Do not expose the batteries to excessive heat, such as direct sunlight, fire, etc.

Improper use of the batteries may cause electrolyte leakage and corrosion. For the remote control to operate correctly, follow these instructions:

- Do not load the batteries in the wrong direction.
- Do not charge, heat, open or short circuit the batteries.
- Do not throw the batteries into fire.
- Do not leave drained batteries in the remote control.

Important Safety Instructions

- Do not combine different battery types or old batteries with new ones.
- If you don't use the remote control for a long time, remove the batteries to prevent possible damage from burst batteries.
- If the remote control does not work correctly or reduces its range, install new batteries.
- If electrolytes leak from the battery, have an authorized service facility clean the remote control.

Caution

Please use the original box and packing materials for safe transportation of this product.

It is normal for the cover and rear panel to become warm after the player has been operating for an extended period of time.

Do not move this product during playback. Doing so may cause damage to the pickup and the disc.

Press OPEN/CLOSE on the front panel or remote to open or close the disc tray. Do not push or touch the tray while it is opening or closing.

Features

Disc formats and features supported by this player:



MPEG4 files on discs



Multi-angle



Dolby Digital



Subtitle choices



 
MP3 files on CD-R/CD-RW



Audio choices



DVD video

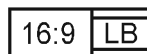

TV Aspect
Ratio modes



Parental Lock



You can help protect the environment! Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

The product complies with the Picture CD format and will display Picture CDs.

 
Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. Copyright 1992 1997 Dolby Laboratories. All rights reserved.

Menu operation

Press the **SETUP** button on the remote control, the **SETUP MENU** will be displayed. After accessing the setup menu, press the direction buttons for up and down movement to select an item desired, then press the **ENTER** button to confirm. Press **LEFT** direction button return to the menu of upper level. To exit the setup, press the **SETUP** button again. In the **SETUP MENU**, you may choose any of the following options as you like.

LANGUAGE SETUP

Select **Language** in the setup menu, and display the **Language** submenu:

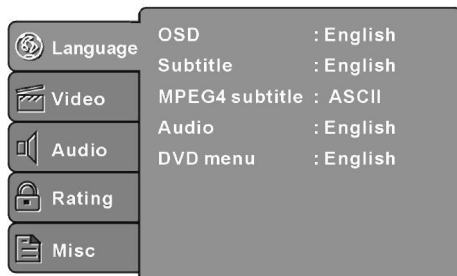

OSD

Use this item to select the language of the setup menu and screen display.

Subtitle

This option provides the preset subtitle language.

MPEG4 Subtitle (optional)

Select different MPEG4 subtitle encoding option.

Note: Not all players support this item.

Audio

 
Select the built-in disc dubbing language options.

DVD Menu

This option provides the film's menu language options.

VIDEO SETUP

Select **Video** in the setup menu, and display the **Video** submenu:

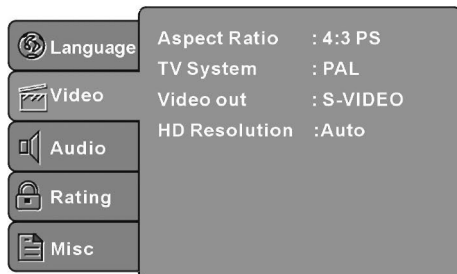

Menu operation

Aspect Ratio

Select the aspect ratio.

Note:

The image display ratio is related to the recorded disc format. Some disc can not display images in the aspect ratio you choose. If you play a disc recorded in 4:3 format on a wide screen TV, black bars will appear on the left and right side of the screen. You must adjust the screen setting depending on the type of the television you have.

TV system

Select the different TV system.

Note: The DVD player setting should be matched to your TV set.

For more information of output format, refer to the instructions of your TV set.

Video out

Select the video output format wanted.

Note: Only HDMI DVD player has "HD" selection.

 
HD Resolution

After you set the video output to HD output, you can choose the resolution of HDMI output.

Note: Only HDMI DVD player has this item.

AUDIO

Select **Audio** in the setup menu, and display the **Audio** submenu.

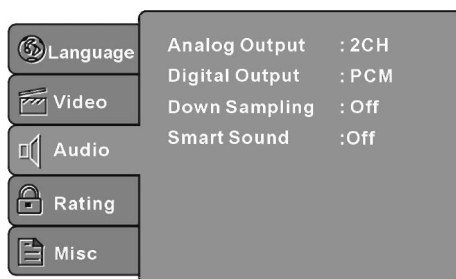

Analog output (Optional)

Analog out select 5.1CH or 2.0 CH (select down mix) audio output.

Note: This item is only for 5.1ch player.

Menu operation

Digital output (Optional)

Adjust the audio output on Coaxial ports to work in harmony with the audio equipment (e.g.receiver, amplifier) connected to the player.

Off Digital audio output is disabled.

PCM Transfer stereo 2 channels signals

RAW Transfer the DVD original audio track

Note: This item is only for the player with coaxial output.

Down sampling

Select down sampling function on or off.

ON: System will down sampling rate for high sampling rate audio (more than 96K).

OFF: Disable this function.

 
Smart sound (Optional)

Select different music effect while listening to music.

Note: Not all player has this item.

RATING SETUP

Select **Rating** in the setup menu, and display the Rating submenu:

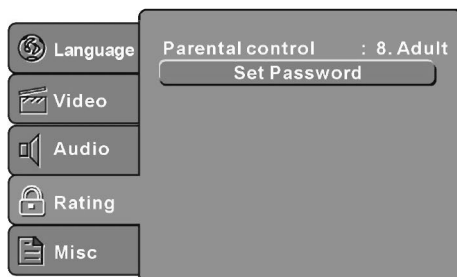

Parental Control

Set the parental control feature of the player

Note: Password is needed before setting Parental Control.

Set password

 
Input four digits (password), then press **ENTER** to confirm.

Note: If you forget your password, please use the universal password 6666 to unlock.

Menu operation

MISC SETUP

Select **MISC** in the setup menu, and display the submenu:

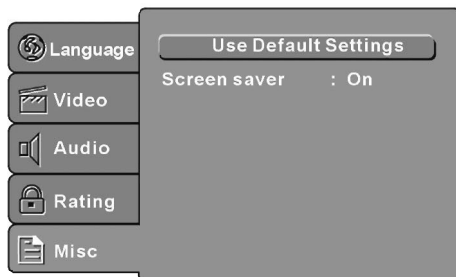

Use Default Settings

Reset setup data to factory default value.

 
Screen Saver (Optional)

Enable/disable the screen saver function.

Note: *Not all player has this item.*

MP3/WMA/JPEG/MPEG4 playback

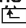

The MP3/WMA/MPEG4 disc has such a directory structure as shown picture above. Press **Direction** key to choose the root directory and then press **ENTER** button to enter into the sub directory. Press **Direction key** to choose the desired track and then press **ENTER** or **PLAY** to enjoy the music or movie. If you want to return to the upper menu, press **Direction** key to choose  the icon and press **ENTER** button.

Filter: Allows selecting the categories of files displayed in the browser list.

Repeat: To switch different repeat playing mode

Mode: Select different playing mode as follows:

Normal: Shuffle mode is cancelled.

Shuffle: Shuffle mode enabled. When playback reaches the end of the current chapter/track, playback jumps to a random chapter/track. As the end of each chapter/track is reached, another random chapter/track will be played until all tracks/chapters have been played or the Shuffle mode is cancelled by toggling to a different **Mode** Option.

Music Intro: In this mode, the media will play 10 seconds then skip to next media.

Edit Mode: To enable programmed playback mode. When you select the mode, press **LEFT Direction key** to directory and press **ENTER** to choose the desired track and press **Add to program** to start program playback.

Program view: Display program track.

Brower view: Display track directory.


MP3/WMA/JPEG/MPEG4 playback

*Add to program: Choice the track press **Add to program** to add the track of the program play directory.*

*Clear program: In the complete stop state (press the **STOP** button twice), choose the track press **Clear program** to delete the track of the program play directory.*

PICTURE CD PLAYBACK

The PICTURE CD disc has such a directory structure as shown in the following picture.

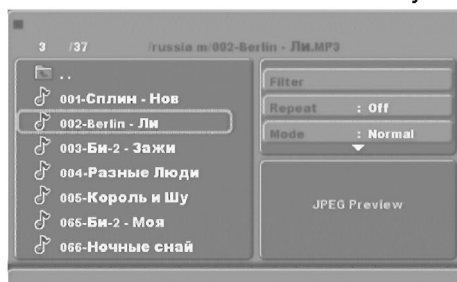 

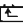 
Press **Direction key** to choose the root directory and then press **ENTER** button to enter into the sub directory. Press **Direction key** to choose the desired picture and then press **ENTER** or **PLAY** to enjoy the picture. If you want to return to the upper menu, press **Direction key** to choose  the icon and press **ENTER** button.

Image rotation

In picture play state, press **Direction key** to rotate the picture, press **ANGLE** button to change the picture scan mode.

Card reader ,USB, karaoke (optional)

Note: *Not all player has these items*

3 In 1 Card Reader

If the player has a 3 in1 card jack and it's NOT in "disc playing" status, you can insert three kinds of card (MMC, SD, MS) to play the MP3 music or MPEG4 movie and JPEG files. All the function is the same to playing a disc.

USB

If the player has a USB slot and it's NOT in "disc playing" status, you can insert a USB device or a MP3 Player with USB Interface to play the MP3 music or and JPEG files. All the function is the same to play a disc.

Note: *When inserting the USB device, please do not insert in the wrong direction. Otherwise the USB device or player may be damaged*

When the disc is playing, please stop playing first and then enjoy USB by press USB(/CARD) key on the remote control.

Not all USB device can be supported by this system.

KARAOKE

1. Connecting to microphone
Please insert your microphone to the MIC jack on the front panel.or rear panel.
2. Start.
 - A. Put the DVD or VCD disc in the tray.
 - B. Press the KARAOKE button on the remote control to select function.

Note: *Please set karaoke off if you want 5.1CH audio output when playing 5.1CH disc.*

Troubleshooting

If you have any questions, please consult the troubleshooting guide below.

NO PICTURE OR SOUND

- ▲ Ensure the power button is on.
- ▲ Ensure the power outlet is operational.
- ▲ Ensure the power cord is not damaged.
- ▲ Ensure the power plug is connected firmly to the outlet.

PICTURE BUT NO SOUND

- ▲ Ensure the audio jacks are securely connected.
- ▲ Ensure the audio connector is not damaged.
- ▲ Ensure the volume is turned up in VOUCH setup.
- ▲ Ensure you have set the player's AUDIO settings correctly.
- ▲ Ensure you have entered the correct AV input for your TV
- ▲ Ensure the audio is not set to mute.

SOUND BUT NO PICTURE

- ▲ Ensure the video jacks are securely connected.
- ▲ Ensure you have entered the correct AV input for your TV
- ▲ Ensure the video connector is not damaged.
- ▲ Ensure you have set the player's VIDEO settings correctly.

POOR PICTURE OR SOUND

- ▲ Ensure you have set the player's AUDIO settings correctly.
- ▲ Ensure the disc is not scratched or stained.
- ▲ Ensure the AV connector or the output terminal is not damaged.

„BAD DISC“ DISPLAYED

- ▲ Ensure the disc is not warped, damaged or deformed.
- ▲ Ensure the disc is not badly stained or damaged.
- ▲ Ensure the disc format is compatible with the player.
- ▲ Please check whether you have tried to play a software CD. If so, please restart the player.

REMOTE NOT WORKING

- ▲ Make sure the Main units POWER button is on
- ▲ Ensure the remote batteries are working.
- ▲ Point the remote control directly at the player's IR sensor.
- ▲ Remove any obstacles between the remote and the IR sensor.

UNIT NOT WORKING

- ▲ Turn off the power, and then turn it on again

„NO DISC“ DISPLAYED

- ▲ Ensure you have put the disc on the tray.
- ▲ Ensure the disc is not upside down.
- ▲ Ensure the disc is not distorted, stained or scratched.

Specifications

Power requirements: AC 100-240 Volt, 50/60Hz
Power consumption: 15W
Video standard: NTSC/PAL
Discs Compatibility: MPEG4,DVD,DVD+/-R/RW,VCD,JPEG.CD-DA,CD-R, CD-RW

Video out

Video out: 1.0V(p-p)/75Q, sync, negative polarity

Audio out

Audio out level: 2Vrms -1/+0.2
Frequency response: 20Hz to 20kHz
S/N ratio: >90dB
Total harmonic distortion: <0.025%

Accessories

Remote Control x 1
User's Manual x 1

Note: Specifications are subject to change without notice.

Disposal of Used Electrical & Electronic Equipment



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city of-fice, your household waste disposal service or the shop where you purchased the product.



This product is in compliance with the requirements of the regulations of EU on electromagnetic compatibility and electrical safety.

Changes in the text, design and technical specifications may change without prior notice and we reserve the right to make these changes.