

SENCOR®

SDV-8701T

 
DVD\DVb-T COMBO PLAYER

KOMBINOVANÝ PŘEHRÁVAČ
DVD\PŘIJÍMAČ DVb-T

KOMBINOVANÝ PREHRÁVAČ
DVD\PRIJÍMAČ DVb-T

DVD

USER'S MANUAL
PŘÍRUČKA UŽIVATELE
PRÍRUČKA UŽIVATEĽA

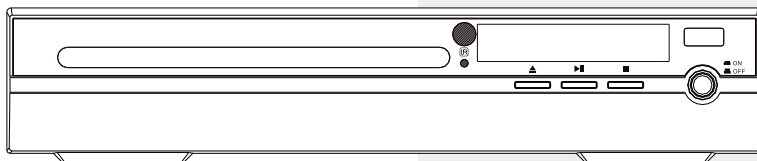

EN CZ SK

Forward

The machine has two major functions. It can act as a set-top box for receiving DVB-T broadcasts. It can also act as a DVD player.

Table of Contents

Table of Contents	1
Important Safety Instructions	2
Caution	3
Features	6
Front panel and Rear pane illustration	7
Connecting to a TV Set	8
Remote Control	9
Remote Control Introduction	10
The setup menu system---DVD PART	11
MP3 Playback	16
Kodak picture CD Playback	17
The setup menu system---DVB PART	18
Troubleshooting	24
Specifications	25

Please read this User Manual carefully to ensure proper use of this product and keep this manual for future reference.

Safety Precautions



THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED „DANGEROUS VOLTAGE“ WITHIN THE UNIT'S CABINET THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.



THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE MANUAL ACCOMPANYING THE UNIT.



WARNING:

TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THE UNIT TO RAIN OR MOISTURE. NEVER ATTEMPT TO OPEN THE CABINET, DANGEROUS HIGH VOLTAGES ARE PRESENTED IN THE UNIT. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

CAUTION:

TO PREVENT ELECTRIC SHOCK, MATCH WIDE- BLADE PLUG WITH WIDE SLOT AND FULLY INSERT. THE APPARATUS SHALL NOT BE EXPOSED TO WATER AND NO OBJECTS FILLED WITH LIQUID SUCH AS VASES SHALL BE PLACED ON THE APPARATUS.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or cords.

CAUTION:

THE UNIT EMPLOYS A LASER SYSTEM. TO ENSURE THE PROPER USE OF THE UNIT, READ THIS MANUAL CAREFULLY AND KEEP IT FOR FUTURE REFERENCE.

IF THE UNIT REQUIRES SERVICING, CONTACT THE SELLER OR SEE „TROUBLESHOOTING“.

TO PREVENT DIRECT EXPOSURE TO THE LASER RADIATION, DO NOT OPEN THE CABINET. VISIBLE LASER MAY RADIATE WHEN THE CABINET IS OPENED OR THE INTERLOCKS ARE DEFEATED. DO NOT STARE INTO THE LASER BEAMS.

CAUTION:

THE DVD VIDEO PLAYER IS A CLASS 1 LASER PRODUCT. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. AS THE LASER BEAM USED IN THIS DVD VIDEO PLAYER IS HARMFUL TO THE EYES, DO NOT ATTEMPT TO DISASSEMBLE THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

WARNING:

FCC REGULATIONS STATE THAT ANY CHANGE OR MODIFICATION TO THE EQUIPMENT, NOT EXPRESSLY APPROVED BY MAKER OR ITS AUTHORIZED PARTIES, COULD VOID USER'S AUTHORITY TO OPERATE THIS EQUIPMENT.

1. The apparatus shall not be exposed to dripping or Splashing and that no objects filled with liquids, such as Vases, shall be placed the apparatus.
2. The mains plug is used as the disconnect device the disconnect device shall remain readily operable
3. To be completely disconnect the power input, the mains plug of apparatus shall be disconnected from the mains.
4. The mains plug of apparatus should not be obstructed or should be easily accessed during intended use.

Important Safety Instructions

1. Read Instructions

All the safety and operating instructions should be read before the product is operated.

2. Retain Instructions

The safety and operating instructions should be retained for future reference.

3. Heed Warnings

All warnings on the product and in the operating instructions should be adhered to.

4. Follow Instructions

All operating instructions should be followed.

5. Cleaning

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

6. Attachments

Do not use attachments not recommended by the product manufacturer as they may cause hazards.

7. Water and Moisture

Do not use this product near water for example, near a bathtub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.

8. Accessories

Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

9. Portable Cart Warning

A product and cart combination should be moved with care. Quick stop, excessive force, and uneven surface may cause the product and cart combination to overturn.



(Symbol provided by RETAC)

10. Ventilation

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

11. Power Sources

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.

12. Grounding or Polarization

 
This product may be equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

13. Power Cord Protection

Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

14. Outdoor Antenna Grounding

If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See figure below.

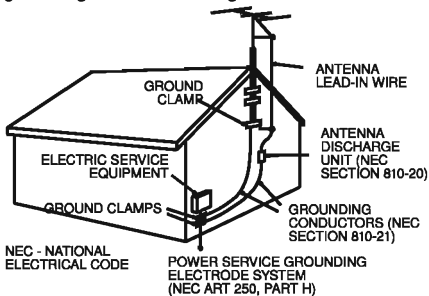

15. Lightning

For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power lines surges.

16. Power Lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

17. Overloading

Do not overload wall outlets, extension cords, or integral convenience receptacles, as this can result in a risk of fire or electric shock.

18. Object and Liquid Entry

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

19. Servicing

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

20. Damage Requiring Service

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged,
- If liquid has been spilled, or objects have fallen into the product,
- If the product has been exposed to rain or water,
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation, E)If the product has been dropped or damaged in any way.
- When the product exhibits a distinct change in performance this indicates a need for service.

21. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

22. Safety Check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

23. Wall or Ceiling Mounting

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

24. Heat

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

Caution

- Please use the original box and packing materials for safe transportation of this product.

- It is normal for the cover and rear panel to become warm after the player has been operating for an extended period of time.

- Do not move this product during playback. Doing so may cause damage to the pickup and the disc.

- Press **OPEN/CLOSE** on the front panel or remote to open or close the disc tray. Do not push or touch the tray while it is opening or closing.

Features

- Full compatibility with MPEG4,DVD, CD, MP3, Kodak Picture CD, CD-R and CD-RW (finalized)
- Screensaver
- Multiple play back modes: Program , Search
- Coaxial digital audio output
- S-video, composite video and component (Y, Pb, Pr) video outputs

Disc formats supported by this player:



MPEG4 files on discs



Multi-angle



Dolby Digital



Subtitle choices



 
KODAK picture CD



Audio choices



MP3 files on CD-R/CD-RW



TV Aspect Ratio modes



DVD VIDEO



Parental Lock

 
This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

The product complies with the KODAK Picture CD format and will display KODAK Picture CDs. The „KODAK Picture CD Compatible“ logo is a trademark of Eastman Kodak Company and is used with permission.

Manufactured under license from Dolby Laboratories. „Dolby“ and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works. © 1992-1997 Dolby Laboratories, Inc. All rights reserved.


Front panel and Rear panel illustration

Front panel

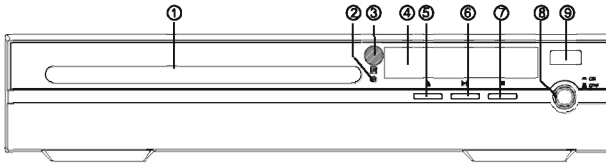

- | | |
|--------------------------------------|---------------------|
| ① Disc tray | ⑥ Play/Pause button |
| ② Power LED indicator | ⑦ STOP |
| ③ Infrared(IR) remote control sensor | ⑧ POWER(On/Off) |
| ④ LED display | ⑨ USB port |
| ⑤ Open/Close button | |

 
Rear panel

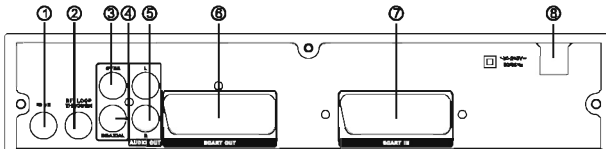

- | | |
|--------------------------|---------------------------------|
| ① RF IN | ⑤ L(Left)/R(Right) audio output |
| ② RF LOOP THROUGH | ⑥ Scart output |
| ③ CVBS | ⑦ Scart input |
| ④ Digital Coaxial output | ⑧ Power cord |


Connecting to a TV Set

 Caution: Make sure to check the voltage specification of the wall outlet is the same rating with the receiver. To prevent the risk of electric shock, do not open the cover or the back of the receiver.

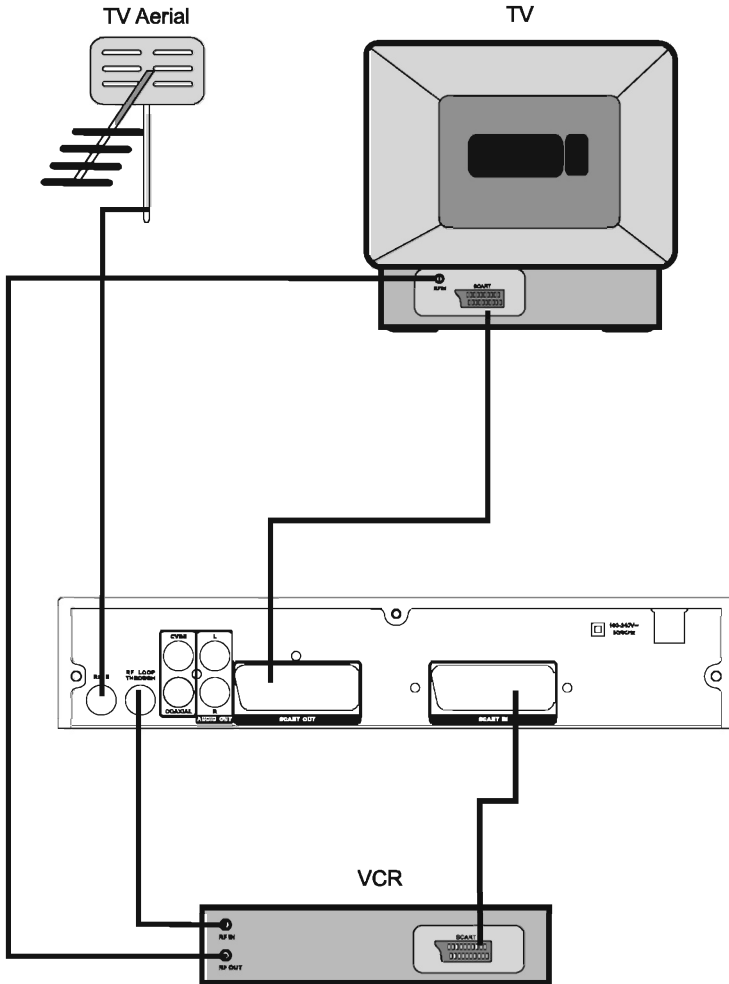

Note: When connecting the receiver to other equipment, e.g., TV, VCR and amplifier, make sure to refer to relevant user manual for instruction. Also, make sure you disconnect all the equipments from the mains supply before the connection.

 Remote Control

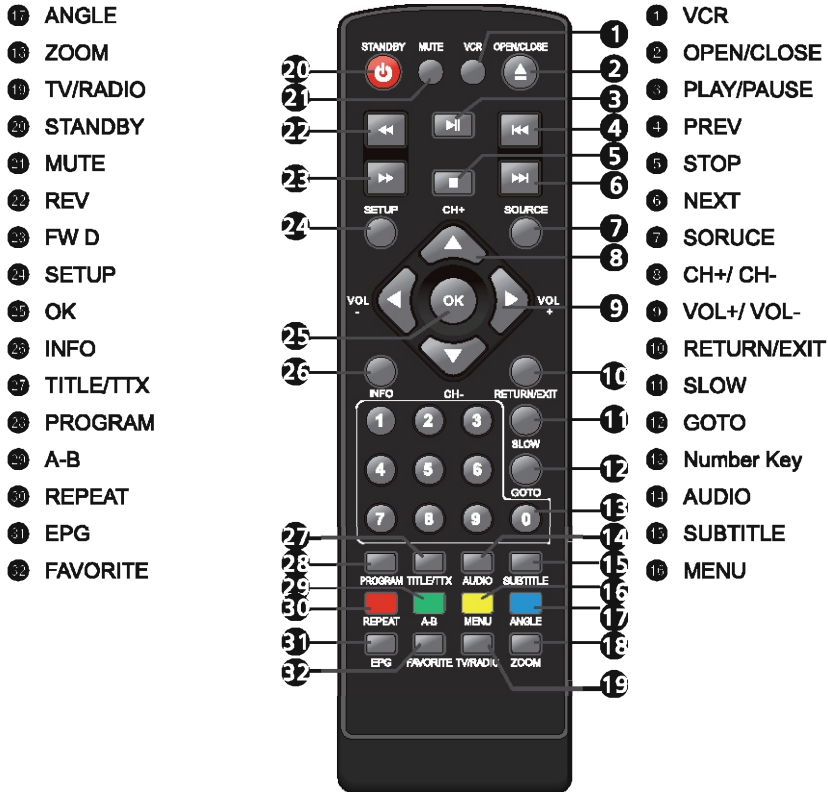

Note:

 
1. In this manual, \leftarrow \rightarrow \uparrow \downarrow will be used to represent different NAVIGATION ARROWS on the remote respectively.
2. In order to operate any of the remote functions, you must first press the Power button on the DVD player.
3. Some of the keys is multiple key. Function before / can be used in DVD mode, after / can be used in DVB mode.

Insert batteries

1. Open the cover.



2. Insert batteries.



Make sure to match the „+“ and „-“ of the batteries with the marks inside the battery compartment.

Close the cover.



Notes:

 
Improper use of batteries may cause battery leakage and corrosion. To operate the remote control correctly, follow the instructions below:

- Do not insert the batteries in the wrong direction.
- Do not charge, heat, open, or short-circuit the batteries.
- Do not throw batteries into a fire.
- Do not leave dead batteries in the Remote Control.
- Do not use different types of batteries together, or mix old and new batteries.
- If you do not use the remote control for a long period of time, remove the batteries to avoid possible damage from battery corrosion.
- If the remote control does not function correctly or the operating range becomes reduced, replace all batteries with new ones.
- If battery leakage occurs, clean the battery compartment, then insert new ones.

Using the remote control

Point the remote control at the remote sensor.

(The pictures below are for reference only.)

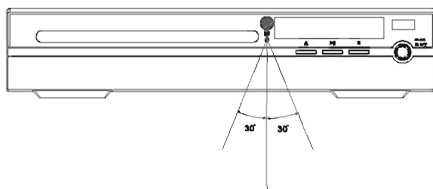

Remarks: Do not expose the remote sensor of the DVD Player to a strong light source, such as direct sunlight.

Notes:

- Point the remote control directly at the player's remote sensor.
- Do not leave the remote control in an extremely hot or humid place.
- Do not spill water or put anything wet on the remote control.
- Battery life is ~1 year under normal conditions.

The setup menu system--DVD PART

NOTE: In the DVD setup and System setting options. If you press <SETUP> into the DVD setup and System setting option when playing disc, the some options has no effect.

 
1. General Steps of setup menu

In the DVD mode, Press the <STOP> button or open mode, Then press <setup> button, the DVD main setup menu appears.



A. DVD Setup-language Setup

Press the Up and Down button move on the DVD setup and to enter. the DVD Setup-lanugae Setup option appear the screen.

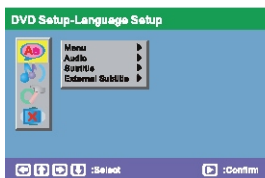

1). MENU

Highlight the MENU option, and press the Arrow buttons to choose the menu language you prefer. Press <ENTER> to confirm. If the disc you are playing has that Language availabel. It will display the menu in the language.

Notes:

If your preferred language is not availabel, the disc s default language will be played.

2). AUDIO

Highlight the AUDIO option, and press the Arrow buttons to choose the audio language you prefer. Press <ENTER> to confirm. If the disc you are playing has that language available, it will output the language.

3). SUBTITLE

 
Highlight the SUBTITLE option, and press the Arrow buttons to choose the subtitle language you prefer. Press <ENTER> to confirm. If the disc you are playing has that language available, it will display subtitles in that language.

4). EXTERNAL SUBTITLE

Highlight the EXTERNAL SUBTITLE option, and press the Arrow buttons to choose the supported subtitle language when playing MPEG4 format discs.

B. DVD Setup-Audio Setup

Press <DOWN> arrow button to highlight the Audio Setup option on the screen.

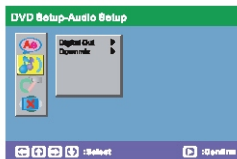

1). DIGITAL OUT

Highlight the DIGITAL OUT option, and press the Arrow buttons to choose the audio output mode you prefer. Press Enter to confirm. There are 3 optional audio output modes: SPDIF / RAW, and SPDIF / PCM, OFF.

Notes:

 
When digital output is NOT in use, It is recommended to turn OFF , the digital output setting for the purpose on minimizing circuit interference.

2). DOWNMIX

There are two modes, one is LO/RO, one is LT/RT.

C. DVD Setup-Custom Setup

Press the <Down> arrow button to highlight the Custom Setup option on the screen.

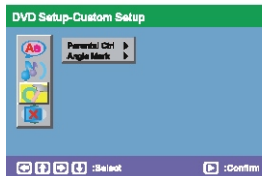

1). PARENTAL CTRL

Parental Ctrl:1,2:G,3:G,4:PG13,5,6:R,7:NC17,8 the eight levels. The first level discs are open to people of ever age and eight level only suitable for the adult. If you want to change the parental ctrl setting, enter the user s age control item and then enter four digital password. The default password is 6666 (if you are using this player for the first time, just input this code).If the input code has been confirmed, the level setting up menu will appear. Move the cursor to choose the expected level and press <ENTER> button to confirm and memory it. Move the cursor to the „ENTER“ and press <ENTER> button to confirm and withdraw to the „user setup“ menu or press <ENTER> button to directly withdraw from the operation.

2). ANGLE MARK

There are On and Off the two choices for this item. If in the ON mode, when play a disc which the content is multi-angle shot, you may press the <ANGLE> button on the remote control to enjoy the scene in different angles.

D. DVD Setup-Exit

Press the <DOWN> arrow button to highlight the <EXIT> option on the screen.

 
In the DVD Setup-Exit ,Choose the Exit option to return the DVD main Setup.

2. DVD Mode of System Setting

Press the <SETUP> button, the DVD main setup menu appears the screen, then press the <DOWN> button to highlight the system setting option.

A. System Setting Menu-language Setup

Press the <UP> and <DOWN> button move on the System setting and to enter button. the System setting Menu-lanuage Setup option appear the screen.

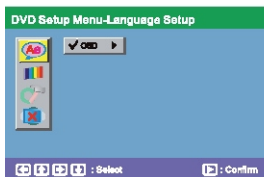


In the System setting Menu-language Setup, you can setup the OSD option.

1. OSD LANGUAGE

Highlight the OSD LANGUAGE option, and press the Arrow buttons to choose the OSD language you prefer. Press <ENTER> to confirm, and it will display OSD in that language.

B. System setting Menu-Display Setup

 Press the <DOWN> arrow button to highlight the Setup option on the screen.

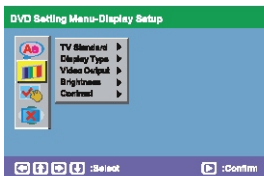

1). TV Standard

According to the Color System of the TV, you can choose the TV Standard.

2). Display type

According to the Display type, you can choose 4:3PS,4:3LB or 16:9.

3). VIDEO OUTPUT

According to the output jack of TV set, you can choose CVBS+S-VIDEO, CVBS+RGB, CVBS+YUV, YUV+ P-SCAN.

4). BRIGHTNESS

 
According to the Brightness, you can choose Normal, Bright or soft.

5). CONTRAST

Use the <UP> and <DOWN> arrow buttons to move the scroll and adjust the contrast.

C. System setting Menu-Preference

Press the Down arrow button to highlight the Preference option on the screen.

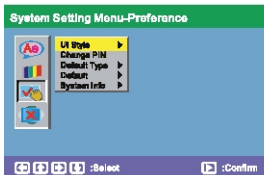

1). UI Style

According to UI Style, you can choose Style1,Style2,Style3,Style4.

2). Change PIN

The default password is 6666.

3). Default Type

In the Default Type options, you can choose the DVD MODE, DVB MODE, USB MODE, User Select MODE, Last operation Type MODE.

NOTE: In the Default Type, If you choose the DVB MODE. That next power on the PLAYER will direct enter DVB MODE, no again display the SOURCE list.

4). Default

The Default setup options are RESTORE factory setup, Let your PLAYER work on the default state.

5). System Info

The system info includes model, HW, SW and Date.

3. Game options

Press the <SETUP> button, the DVD main setup menu appears the screen, then press the <DOWN> button to highlight the Game option.



- a. Press the <UP> and <DOWN> button move on the DVD setup and press <ENTER> button to confirm the Main Menu-Game option, appear the screen.

In the Main Menu-Game Setup, you can setup the Mine, Tetris, Rush Hour, Calendar four kinds of games. For example:

If you want to play the Mine Game, you can press the <DOWN> button to highlight the Mine options. Then press the <ENTER> button to enter. As below:

Other Game options operation same to the Mine Game.

MP3 Playback

When a Mp3 disc is loaded, the screen will display as follows:



Press $\leftarrow \rightarrow$ to select the file when the cursor appears in the file window.

Press select to play the current file select by the cursor.

Press $\leftarrow \rightarrow$ to switch between the directory window and the file window.

Note: The player will not function correctly under the following condition:

1. The disc is badly scratched, damaged or dirty.
2. The disc is not finalized.
3. The recording format is not supported by the player.

Kodak picture CD Playback

The introduction of KODAK Picture CD

A Kodak Picture CD has the size and shape of a regular CD. You can order a KODAK Picture CD simply by checking the box on the photo finishing envelope when you drop off a roll of film (35 mm or Advanced Photo System (APS) color print film) at the time of processing in Kodak Express store displaying „Kodak Picture CD“ sign. When your order is returned, you receive your prints, negatives, and your full roll of pictures safely stored on your KODAK Picture CD. Each KODAK Picture CD brings you the tools to enhance, share and manage your pictures on your computer. You also can record the JPEG picture into CD-R or CD-RW with the CD-Rewriter yourself.

Note:

1. The Max. Size of JPEG Picture can be supported: 3840X3840 pels
2. JPEG stands for Joint Picture Experts Group. It is the first International Standard on Still Picture Compressing; ISO 10918-1, constituted by the Committee on Still Picture Compressing Standard of ISO.

The pictures on KODAK Picture CD are stored in this format (JPEG). This player can decode the JPEG pictures in KODAK Picture CD and playback the pictures in different modes. Now, you can playback Kodak Picture CDs on this player and view your wonderful pictures on your TV in the comfort of your living room.

When a Kodak Picture CD is inserted on a player an automatic slide show is launched. Each picture in the Kodak Picture CD will be displayed consecutively in a slide-show fashion and will be scaled to fit in the whole TV screen.

General function:


- You can set sideshow transition modes for any pictures.
- Press **PAUSE** to stop playing.
- Press **◀◀** or **▶▶** to see the previous or next picture.
- Press **PLAY** to continue sideshow transitions.
- Press **STOP** to return to root menu.

IMAGE ROTATION

- Press the **DIRECTION** button (↕↔↔) to rotation the image as you prefer.

Zoom function:

 This player provides both Zoom in /out and Zoom pan function. Press the **ZOOM** consecutively, the picture will zoom in/out in turn as followings:




Note: During the **ZOOM** function, slideshow transitions and image rotation are disabled. Q off: close zoom, press **PLAY** again to resume slideshow transition mode.

The setup menu system—DVB PART

1. First Time Installation

After all the connections have been made properly, switch on your TV. Make sure the receiver is connected to the mains and press <POWER> to switch the receiver on. If you are using the receiver for the first time, a First Time Installation menu will be displayed to guide you through the initial setup. Use the remote controller to finish the setup.

 
- a. At the **First time Installation menu**, select **YES** and press <ENTER> button on the remote controller to proceed.

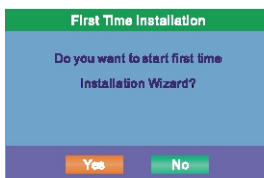

- b. Enter your regional settings, include your Country, Language, Time Zone . Then select <NEXT> to proceed.



 - c. Select **Yes** to start the automatic channel search.

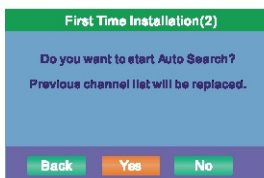

- d. Wait to complete the scanning.
In case you want to stop the scanning, press the <RETURN> button. The channels already found will still be stored.



- e. When finished, all active channels found will be stored automatically.
The last found channel will be played.

2. DVB Mode of Main Menu

 
Press the <SETUP> button, the DVB main setup menu appears the screen, then press the <DOWN> button to highlight the DVB Menu option.



- a. Press the <UP> and <DOWN> button move on the DVB Menu and to enter button to enter the DVB Menu-Program list option, appear the screen.

1). TV Program

Press the <RIGHT> button to highlight the TV Program, Then press the <ENTER> button to enter the TV program options, appear the screen.

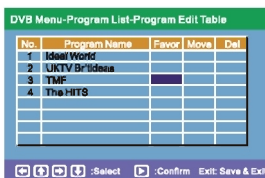

All active channels are listed in the **Program List**, allowing you to make your own favorite channel group, move, delete channels.

Creating Favorite Channel Groups

This feature allows you to group your favorite channels. To create your favorite groups:

- a. Select the channel which you would like to add to the group and go to the **Favor** column.
- b. When the **Favor** column of the desired channel is highlighted, one red heart symbol will appear after press the <ENTER> button. Pressing the <ENTER> button again will un-select the channel of the favorite group.
- c. Once your favorite group is created, you can press the <FAVORITE> keys to quickly access your favorite channels.

Moving a Channel

- a. Select the channel which you like to move and go to the **Move** column.
- b. Press <ENTER> button and a ↓ ↑ symbol will be displayed.
- c. Use the <UP / DOWN> key to move the channel to a desired position.
- d. Press <ENTER> button again will be exit the moving channel mode.

Deleting a Channel

- a. Select the channel which you like to delete and go to the **Del** column.
- b. Press <ENTER> button and an **X** symbol will be displayed. Repeat this step in the channel to be deleted.
- c. Press <SETUP> or <RETURN> button and the marked channel will be deleted.
- d. Press <ENTER> button again will exit the deleting channel mode.

2). Music Program

Press the <DOWN> button to highlight the Music Program, Then press the <ENTER> button to enter the Music program options, appear the screen.

NOTE: This Music program options operation same the TV Program.

3). Sort

Press the <DOWN> button to highlight the Sort options, you can choose the channels Sort style. As: By Name, By Service ID, By Channel number

 
- B. Press the Up and Down button move on the DVB Menu-Program Search option appear the screen.




In the DVB Menu-Program Search, you can setup the Automatic Search, Manual Search options.

1). Automatic Search

Choose the Automatic Search options, This operation same the same the First Time Installation. Refer to First time Installation.

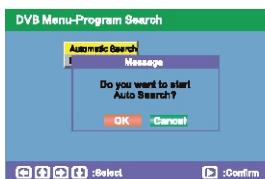

 2). Manual Search

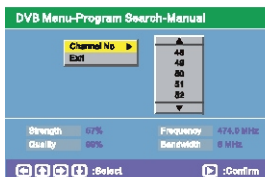

If any channel is missing after auto search, or you want to add newly launched channels, you can use **Manual Search** to scan the desired channels. To manually search the target channel, you must know its parameters, e.g., the channel number.

After the channel is found, it is appended to the current channel list.

- Enter the **Manual Search** menu via **Main Menu > Program Search > Manual Search**.
- Specify the appropriate channel number in the **Channel No** field by press <DOWN> and <UP> button. Enter your selection, the frequency and bandwidth values are changed accordingly.
- Select <ENTER> button to start manual search
- If no signal is found, a message indicating no signal will appear. Otherwise scanned channel will be saved and appended to the current channel list.

C. Parental Control

This feature allows you to prevent children or unauthorized people from watching channels.

 
- Enter **Main Menu > Parental Control**. First, you will need to enter PIN as prompted to use the parental control menu. (The default PIN is 6666.)
- After correct PIN input, the following options are provided:

Channel Lock

Allows you to activate or de-activate the overall parental control. When set to **YES**, all the channels with locking settings will be locked.

Parental Setting

In the channel list, select the channel you want to lock and then press <ENTER>. A padlock symbol will be displayed. To remove the lock, press <ENTER> again.

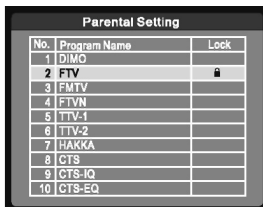

No.	Program Name	Lock
1	DIMO	
2	FIV	🔒
3	FMTV	
4	FITN	
5	TTV-1	
6	TTV-2	
7	HAKKA	
8	CTS	
9	CTS-IQ	
10	CTS-EQ	

Antenna Power

The default setting is **OFF**. Set this option to **ON** if this receiver box is connected to an external active antenna that amplifies the received signal. This receiver box can supply 5V DC at 50mA maximum.



Caution: If you are using a normal passive antenna, make sure to set this setting to **OFF** .

2). Country

In the Country options, you can choose a kinds of the Countries. As: England Germany, Italy, France, Spain etc.

3). Language

Press the <DOWN> button to highlight the Language options, then Press the <ENTER> button to into the Language setup.

1 st /2nd Audio

This option allows you to select your first and second choice for the audio language. If neither of your selected language is available on the program transmitted, the main language of the program will be used.

Subtitle

Allows you to select the subtitle language. If your selected language is not available on the program transmitted, the main language of the program will be used. Exit: you can choose the Exit options to return the System setting.

4). GMT usage

Allows you to enable/disable Greenwich Mean Time (GMT) usage. If you know the GMT time zone of your location, set **GMT usage** to **ON** and select an appropriate time zone. If you prefer to set the time manually, select **OFF** in **GMT usage** item and then manually select the date and time.

5). Time Zone

 
Select an appropriate time zone to display the local time correctly. Both EPG and system schedule need a correct time zone setting.

6). System Schedule

Press the <DOWN> button to highlight the System Schedule options, then Press the <ENTER> button to into the System schedule setup.

This feature allows the receiver to automatically switch on and tune to a pre-specified channel for a pre-set length of time. Up to 10 tasks can be scheduled.

- a. In the **Schedule** pane, use the <UP / DOWN> key to select a task and use <RIGHT / LEFT > key to switch between Inactive and Active.
- b. Press <ENTER> to enter the detail page.
- c. Enter the following settings as required. Use the <UP / DOWN> key to move between setting items, the <RIGHT / LEFT> key to switch between available selections and numeric keys to enter numeric value. **Mode**: You can repeat the task by setting the frequency as **Once**, **Daily** or **Weekly**. Or you can select **Stop** to disable the task. **Start and End Time**: Enter the start and end time that automatically turns on and off the receiver. **Channel Type**: Select TV or radio channel as required. **Channel No**: Select the channel to be played at scheduled time.
- d. When the setting is done, press <SETUP> or <RETURN> to save the changes.

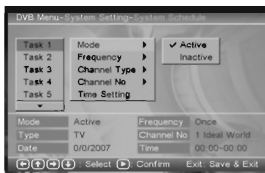

If you have any questions, please consult the troubleshooting guide below.

NO PICTURE OR SOUND

- Ensure the power button is on.
- Ensure the power outlet is operational.
- Ensure the power cord is not damaged.
- Ensure the power plug is connected firmly to the outlet.

PICTURE BUT NO SOUND

- Ensure the audio jacks are securely connected..
- Ensure the audio connector is not damaged.
- Ensure the volume is turned up in VOL/CH setup.
- Ensure you have set the players AUDIO settings correctly.
- Ensure you have entered the correct AV input for your TV.
- Ensure the audio is not set to mute.

SOUND BUT NO PICTURE

- Ensure the video jacks are securely connected.
- Ensure you have entered the correct AV input for your TV.
- Ensure the video connector is not damaged.
- Ensure you have set the player's VIDEO settings correctly.

POOR PICTURE OR SOUND

- Ensure you have set the players AUDIO settings correctly.
- Ensure the disc is not scratched or stained.
- Ensure the AV connector or the output terminal is not damaged.

„BAD DISC“ DISPLAYED

- Ensure the disc is not warped, damaged or deformed.
- Ensure the disc is not badly stained or damaged.
- Ensure the disc format is compatible with the player.
- Please check whether you have tried to play a software CD. If so, please restart the player.

REMOTE NOT WORKING

- Make sure the Main unit s POWER button is on
- Ensure the remote batteries are working.
- Point the remote control directly at the player; s IR sensor.
- Remove any obstacles between the remote and the IR sensor.

UNIT NOT WORKING

- Turn off the power and then turn it on again.

„NO DISC“ DISPLAYED

- Ensure you have put the disc on the tray.
- Ensure the disc is not upside down.
- Ensure the disc is not distorted, stained or scratched.

Power requirements: 100-240V~ 50/60Hz
Power consumption: Standby < 1W, Max 15W
Video standard: NTSC/PAL/AUTO

Video out

Video out: 1.0V(p-p)/75Ω, sync, negative polarity, RCA pin jack x 1

Audio out

L/R out

Frequency response: 20Hz to 20kHz
S/N ratio:>90dB
Total harmonic distortion: <0.0025%

[Accessories]

Video/ Audio cable x 1
Remote Control x 1
User s Manual x 1
Battery x 2

Specifications are subject to change without notice. Weight and dimensions are approximate.

Instructions and information regarding the disposal of used packaging materials

Dispose of packaging material at a public waste disposal site.



Disposal of used electrical and electronic appliances

The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

