 


SENCOR

SPT 106

PORTABLE CD RADIO PLAYER

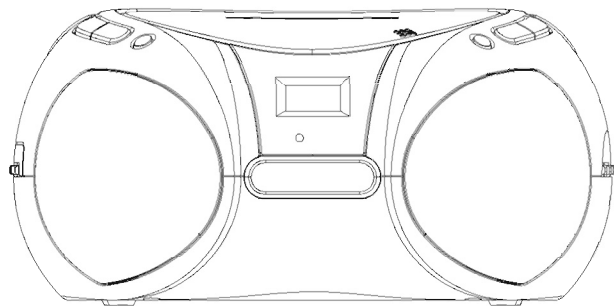

INSTRUCTION MANUAL



SAFETY PRECAUTIONS



Read this instruction and safety manual carefully before use. Keep this manual in a safe place for further reference.

WARNINGS

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.

EXPLANATION OF GRAPHIC SYMBOLS.

	HAZARD WARNING	
RISK OF ELECTRIC SHOCK DO NOT OPEN		
CAUTION: TO MINIMISE THE RISK OF ELECTRIC SHOCK, NEVER REMOVE THE COVER. THIS PRODUCT CONTAINS NO USER-SERVICEABLE PARTS. ONLY QUALIFIED REPAIR TECHNICIANS SHOULD WORK ON THIS EQUIPMENTS.		

	The lightning symbol inside an equilateral triangle warns the user of the presence inside the product of uninsulated hazardous electric voltages powerful enough to represent an electrocution risk.
	The exclamation mark symbol inside an equilateral triangle warns the user that important operating and servicing (troubleshooting) instructions are contained in the documentation accompanying the product.

HAZARD WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT
APPAREIL À LASER DE CLASSE1
PRODUIT LASER DE CLASSE1

CAUTIONS
INVISIBLE LASER RADIATION
WHEN OPEN AND INTERLOCKS
DEFEATED. AVOID EXPOSURE
TO BEAM.



This product contains a low-power emitter.

PRECAUTIONS FOR USE

To ensure safe use of this product, please follow the advice below:

Positioning

- Do not use the product in extremely hot, cold, dusty or damp condition.
- Place the product on a smooth, flat surface.
- Do not obstruct the flow of air through the product. Place it on a well-ventilated position; do not cover with fabric or stand on a rug or carpet.

Power supply

- Before using this product, check that its rated voltage matches your mains power supply voltage.

Safety instructions

- Never pull on the power cord when plugging in or unplugging the product: always use the plug pulling the cord could damage it and create a risk of electric shock.
- Unplug the product from the mains socket if you do not intend to use it for an extended period.
- The On/Off button does not isolate the product from the power supply. To disconnect the product from the mains power supply, you must unplug the power cord.
- This product should only be used in a horizontal position.

Condensation

- Water droplets or condensation may form inside it if moved into a very warm, humid atmosphere.
- Condensation can cause the product to malfunction.
- Leave the set in a warm room for 1 to 2 hours to allow the condensation to evaporate.

In the event of a problem, unplug the power cord and contact a qualified repair technician.

Ventilation precautions

- Never obstruct the product's ventilation holes.

Warning concerning liquids

- Do not allow liquids to splash or spill onto the product, and never stand a liquid-filled container (vase, jar, etc.) on the top of it.

Warning concerning excessive sound levels

- Owing to this product's extremely low noise output and extended dynamic range, the user may be tempted to turn up the volume louder than necessary.
- The sound output may be excessively high, to the point of damaging the product's headphones or loudspeaker. Always keep the volume within reasonable limits.

Owner's record

For your convenience, record the model number and serial number for future reference.

Model : _____ Serial number : _____

SAFETY PRECAUTIONS

IMPORTANT INFORMATION

- *This product is designed for use in moderate climate. Do not use or install this unit where it would be exposed to direct sunlight or in extremely hot temperatures, or near a radiator, stove or appliance that produces heat.*
- *Do not take this unit into the bathroom, or near a swimming pool. Do not use it where it would be exposed to water, moisture, dripping or splashing.*
- *No objects filled with liquids, such as vases, placed on the product.*
- *No naked flame sources, such as lighted candles on the product.*
- *If water gets inside the unit, Unplug the power cord from the supply socket and consult your dealer.*
- *Do not handle the power cord with wet hands. To avoid electric shock, NEVER touch any internal parts. Repairs/servicing should be left to qualified service personnel.*
- *When connecting or disconnecting from the mains supply, hold the plug but not the cord. Pulling the cord may damage it and is dangerous.*
- *Do not drop the unit, spill liquid into it or allow objects to fall in it.*
- *When plugged in, a very small current will flow. To save electricity and for safe, it is recommended that the product is completely disconnected with the AC mains socket after the unit not used for a long time.*
- *Consult your nearest dealer when damage, disconnection or contact failure is found with the cord.*
- *Do not bend the cord sharply, pull or twist it.*
- *Do not modify the power cord in any manner.*
- *Do not insert any metallic object in the unit.*
- *Unplug the power cord when there is the possibility of lightning.*
- *Mains plug is used as the disconnecting device. It shall remain readily operable and should not be obstructed during intended used.*
- *To be completely disconnected the apparatus from supply mains, the mains plug of the apparatus shall be disconnected from the mains socket outlet completely.*
- *In case of malfunction due to electrostatic discharge, just reset the product reconnect of power source may be required to resume normal operation.*

POSITIONING THE UNIT

- *A minimum distance of 6 INCHES must be kept to provide sufficient ventilation.*
- *Do not place the product in closed bookcases or racks without proper ventilation.*
- *Allow adequate ventilation for the unit ventilation. It should not be impeded by covering the ventilation openings with items such as newspapers, table cloths, curtains etc .*
- *Do not stand it on a thick pile carpet, install it in a thick pile carpet, or install it in a place with inadequate air flow. Place the unit on a flat even surface.*
- *Do not use the unit in excessively hot, cold, dusty, damp or humid place.*
- *Condensation may form inside the CD player if the unit is left anywhere warm and damp, or if you move the unit from somewhere cold to a warm room. In this case, let the unit stand for 1-2 hours or gradually increase the room temperature that the unit will be dry before use.*

SAFETY PRECAUTIONS

- *Do not place it where it could be subject to vibration.*
- *Do not place it where it could be magnetised by a magnet or speaker. Since there are magnets, do not place tapes as recorded data could be erased.*
- *When this unit is used near a TV, the TV picture could be distorted. If this happens, move the unit away from the TV. If the situation could not be solved, avoid using the unit when the TV is turned on.*
- *Keep the CD door closed so the lens is not contaminated by dust. Do not touch the lens.*
- *Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.*
- *Warning: excessive sound pressure from earphones and headphones can cause hearing loss.*
- *Attention should be drawn to the environmental aspects of battery disposal.*

SAFETY MECHANISM

 
- *This unit incorporates a safety interlock mechanism that switches the laser beam on and off, when the disc holder is open, the laser beam stops automatically.*

CAUTION


- *Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.*

FUNCTIONS AND CONTROLS


Front panel

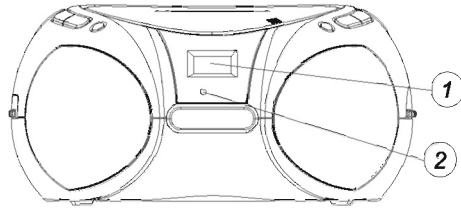


Top panel

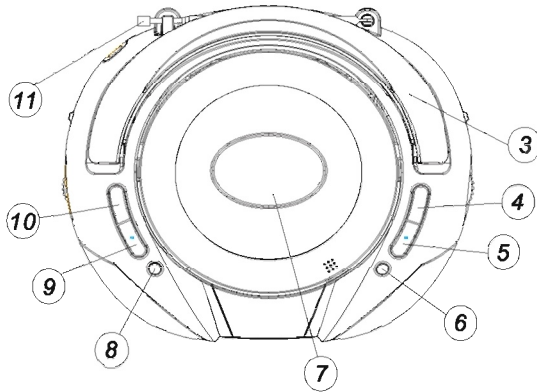 

Side panel

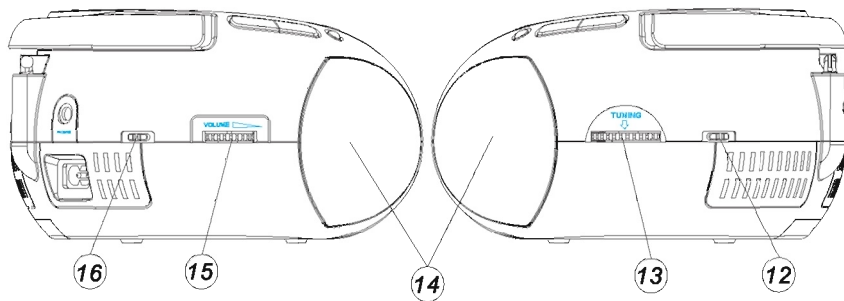 

Rear panel

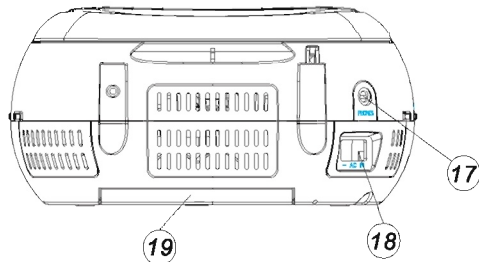 

FUNCTIONS AND CONTROLS

FRONT, TOP AND SIDE PANEL

1. **DISPLAY**
- display of CD functions.
2. **FM STEREO INDICATOR**
- display of FM stereo indications.
3. **HANDLE**
4. **REPEAT**
CD: repeat a track/CD/program.
5. **NEXT**
CD: next tracks.
6. **PLAY/PAUSE**
CD: start or pauses CD playback.
7. **CD DOOR**
- CD compartment door open/close mark (OPEN/CLOSE).
8. **STOP**
CD: stops CD playback or delete a program.
9. **BACK**
CD: return to the previous track.
10. **PROGRAM**
CD: programming and control of programmed track number.
11. **TELESCOPIC ANTENNA**
- improvement of FM reception.
12. **BAND SELECTOR (AM•FM•FM ST.)**
- frequency band selection: AM, FM or FM ST.
13. **TUNING KNOB**
- AM/FM/FM ST. stations selector.
14. **SPEAKER**
15. **VOLUME CONTROL**
- sound level control.
16. **FUNCTION SELECTOR**
- source selection RADIO, OFF and CD.

REAR PANEL

17. **STEREO HEADPHONE JACK**
- connect for the 3.5mm stereo headphone.
18. **AC POWER SUPPLY**
- power supply cord connection.
19. **BATTERY COMPARTMENT**
- opening of the battery compartment.

POWER SUPPLY

If you would like, the electrical power supply can be used to save the batteries. Make sure that the unit is unplugged from the wall outlet before inserting the batteries.

USING THE DC POWER SUPPLY

Batteries (not included)

Open the battery compartment and insert 8 R14 batteries with respect to the "+" and "-" polarity indications in the compartment.

Warnings relating to the use of batteries

Batteries must be inserted taking care to match the polarities shown. Make sure that the (+) and (-) terminals are placed in the right direction.

Never use batteries that show signs of electrolyte leaks or cracking.

Never dispose of used batteries in an open fire.

Keep batteries out of reach of children.

Never recharge disposable batteries.

Never short circuit battery terminals.

Always remove used batteries from the appliance case.

Do not try to open the batteries.

Do not mix up different kind of batteries or new and already used batteries together.

Only use batteries of the recommended or equivalent type.

Remove batteries from the appliance before disposing of it at the end of its service life.

Important:

When replacing the batteries, make sure you dispose of the old batteries in accordance with applicable regulations. They should be disposed of in a location specifically designated for that purpose so they can be recycled safely and without posing any risk for the environment. Do not burn or bury them.

- Warnings: excessive sound pressure from earphones and headphones can caused hearing loss.

USING THE AC POWER SUPPLY

1. Make sure that the voltage indicated on the manufacturer's nameplate corresponds to the voltage supplied by your electrical installation. If this is not the case, consult your dealer or service center.
2. Connect the electrical power cable the unit then plug it into the wall outlet. The wall outlet must be located near the product and be easily accessible.
3. To turn power to the apparatus off, unplug the power supply cable from the wall outlet.
4. To protect the unit during violent thunderstorms, unplug the power supply cable from the wall outlet.

GENERAL OPERATION

GENERAL OPERATION

1. Select the source by setting the **FUNCTION SELECTOR** to **RADIO**, **OFF** or **CD**.
2. Set the desired volume level using the **VOLUME CONTROL**.
3. To turn off the unit, set the **FUNCTION SELECTOR** to **OFF**.

RADIO RECEPTION

1. Adjust **FUNCTION SELECTOR** to **RADIO**.
2. Position the **BAND SELECTOR** on the desired band: **AM**, **FM** or **FM ST**.
3. Turn the **TUNING KNOB** to search for the desired station.

NOTE: The **FM stereo indicator** comes on if the **BAND SELECTOR** is set on **FM stereo** and you have tuned the radio to an **FM stereo station**.

4. Adjust **VOLUME CONTROL** for the desired volume level.

5. When you have finished listening to the radio, position the **FUNCTION SELECTOR** to **OFF** to turn the unit off.

Helpful hints:

To improve radio reception

- To listen to the **FM radio**, extend the telescopic antenna and orient it for optimum reception. Reduce the length of the antenna if the signal is too strong (if you are very near the transmitter, for example).
- As the unit is equipped with a built-in antenna, the telescopic antenna does not have to be used to listen to **AM stations**. Move the entire unit to orient the built-in antenna.

STEREO HEADPHONE JACK

Plug stereo headphones (not included), equipped with a 3.5mm mini-plug, into the **PHONES** jack for private listening, without disturbing those around you.

Reduce the **VOLUME** to a low level before putting on the headphones. You can then adjust the **VOLUME** progressively to a comfortable level.

NOTE: The speakers will be muted when headphones are connected to the set.

CD PLAYER OPERATION

This CD player plays Audio Discs including CD-R and CD-RW. MP3 CD ROMs, CD-I, CDV, VCD, DVD or computer CDs are not possible for playback on this set.

Note: Even if this portable radio-CD player is able to read CD-R and CD-RW discs, in addition to conventional compact discs, it is not possible to offer a 100% guarantee that all CD-R/RW discs can be read; playback depends on the quality and condition of the blank discs that you use, among other things. A playback failure does not necessarily indicate that the unit is malfunctioning.

IMPORTANT: CDs encoded with copyright protection technologies by some record companies may be unplayable by this product.

1. Adjust **FUNCTION SELECTOR** to **CD**.
2. To open the CD door, raise it by the corner marked **OPEN/CLOSE**.
3. Insert a CD with the printed side facing up and press the CD door gently to close.
(Display shows -- and later the total number of tracks)
4. Start playback by pressing **PLAY/PAUSE**.
5. Press **PLAY/PAUSE** to interrupt or resume playback.
6. To stop CD playback, press **STOP**.

NOTE: CD playback stops automatically when:

- the CD compartment is opened;
- the **RADIO** function is selected;
- the CD is finished.

SELECTING A DIFFERENT TRACK

- Press **NEXT** or **BACK** once or repeatedly until the desired track number appears in the display.
- In the stop/pause position, press **PLAY/PAUSE** to start playback.

SEARCHING FOR A PASSAGE ON A TRACK

1. During playback, press and hold down **BACK** or **NEXT**. (The CD is played at high speed and low volume.)
2. When you recognize the passage you want release **BACK** or **NEXT**. (Normal playback resumes.)

NOTE: When your searching reaches the end of the last track, the CD goes to stop mode.

REPEAT

Repeat: playback of the current track continuously.

Repeat All: playback of the entire CD continuously.

PROGRAMMING OF TRACK NUMBERS

You may store up to 20 tracks in the desired sequence. If you like, store any track more than once.

1. In **STOP** mode, press **PROG** to activate programming. (Display: **PROG** and "00" flash.)
2. Press **BACK** or **NEXT** to select your desired track. (Display: **PROG** and your desired track number flash.)
3. Press **PROG** to store the desired track number. (Display: **PROG** and "00" flash for you to program the next track.)
4. Repeat step 2 to 3 to select and store all desired tracks in this way.
5. To play your program, press **PLAY/PAUSE**. (Display: **PROG** flash during program playback.)

NOTE: If you try to store more than 20 tracks, no track can be selected and the display will show flashing --.

PROGRAM CHECK

In **STOP** mode, press the **PROG** repeatedly to see your stored track numbers.

DELETING A PROGRAM

Perform the following operations to delete the memory:

- open the CD door;
- select the **RADIO** source;
- press **STOP** once.

MAINTENANCE & SAFETY

SAFETY INFORMATION

- Place the unit on a hard, flat and stable surface so that the system does not tilt.
- Do not expose the unit, batteries, CDs to humidity, rain, sand or excessive heat caused by heating equipment or direct sunlight.
- Do not expose the apparatus to dripping or splashing.
- Adequate ventilation with a minimum gap of 15cm between the ventilation holes and surrounding surfaces is necessary to prevent heat build-up.
- The ventilation should be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc...
- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- The mechanical parts of the set contain self-lubricating bearings and must not be oiled or lubricated.
- To clean the set, use a dry cloth. Do not use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the housing.

 
CLEANING CDs

- Use a soft and clean cloth to wipe away fingerprints or dust from the surface of the disc.
- Wipe in a straight motion from the center to the edge. Very small dust particles and slight smudges have absolutely no effect on the sound quality.
- Never use chemical products such as sprays for conventional (vinyl) records, anti-static aerosols, benzene or thinners to clean your CDs.
- To reduce the risk of scratches, always store CDs in their case when not used.
- Do not expose CDs to direct sunlight, high humidity or excessively high temperatures for long periods of time.
- Never write or affix labels to the CD's surfaces.

CLEANING THE LENS

If the lens is dirty, the sound may skip and the CD may not be read correctly. Open the CD door and clean the lens as follows:

- Unplug the power cord.
- Dust or dry particles:
Blow on the lens several times using a camera lens brush, then wipe it gently with the brush to remove the dust. Then blow again on the lens.
- Fingerprints:
If you are unable to clean the lens with the camera lens brush, use a dry cotton swab to clean the surface, from the center to the outside.

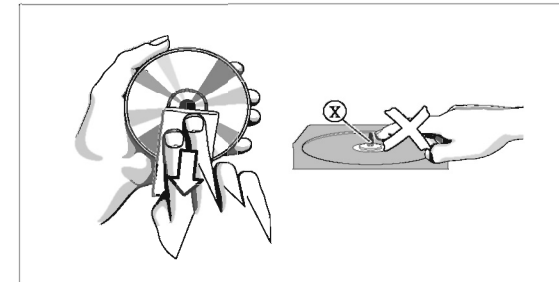

TROUBLESHOOTING

If a fault occurs, first check the points listed below before taking the set for repair.
If you are unable to remedy a problem by following hints, consult your dealer or service center.

WARNING: Do not open the unit as there is a risk of electric shock. Under no circumstances should you try to repair the set yourself; as this will invalidate the guarantee.

Problem

- Possible cause
- Remedy

No sound/power

- Volume not adjusted.
- Adjust the volume.

- Power cord not securely connected.
- Check the AC power cord properly.

- Batteries dead/incorrectly inserted.
- Insert (fresh) batteries correctly.

- CD contains non-audio files.
- Press BACK or NEXT once or more to skip to a CD audio track, instead of the data file.

Display does not function properly/No reaction to operation of any of the controls

- Electrostatic discharge.
- Switch off and unplug the set. Reconnect after a few seconds.

The CD skips tracks

- CD damaged or dirty.
- Replace or clean CD.

- Program is active.
- Quit program mode.

Notes:

Make sure the CD is not encoded with Copyright protection technologies, as some do not conform to the Compact Disc standard.

-- indication

- No CD inserted.
- Insert a CD.

- CD badly scratched or dirty.
- Replace/clean CD, see Maintenance.

- Laser lens steamed up.
- Wait until lens has cleared.

- CD-R(W) is blank or not finalized.
- Use a finalized CD-R(W) or suitable CD Audio disc only.

Environmental information

All unnecessary packaging materials has been omitted. The packaging can be easily separated into three materials: cardboard, polystyrene and plastic.

Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging, dead batteries and old equipment.

SPECIFICATIONS

Power supply	: AC 230V~50Hz : DC 12V = 8 x UM-2/R14 batteries (not included)
Power consumption	: 12 Watts
Dimensions of unit	: 231(L) x 202(W) x 113.6(H) mm
Weight	: 1.40 kgs
Frequency range	: AM 540-1600kHz : FM 88-108MHz
Output power (RMS)	: 1.2W x 2 RMS
Speaker	: 8 ohm
Headphone	: ø 3.5mm

(The technical characteristics are liable to change without notice)



This product is in compliance with the requirements of the regulations of EU on electromagnetic compatibility and electrical safety.

EN Disposal of Used Electrical & Electronic Equipment

The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

