

SENCOR®

SPV 7766TD

PORTABLE DVD (2 PANELS)

PŘENOSNÝ DVD PŘEHRÁVAČ (2 PANELE)

PRENOSNÝ DVD PREHRÁVAČ (2 PANELE)

HORDOZHATÓ DVD LEJÁTSZÓ (2 PANEL)

PRZENOŚNY ODTWARZACZ DVD (2 PANELE)

ПОРТАТИВНЫЙ DVD ПЛЕЕР (С 2 ПАНЕЛЯМИ)

NEŠIOJAMASIS DVD GROTVUVAS (2 VALDYMO SKYDAI)

DVD

USER'S MANUAL

NÁVOD K OBSLUZE

NÁVOD NA OBSLUHU

HASZNÁLATI ÚTMUTATÓ

INSTRUKCJA OBSŁUGI

РУКОВОДСТВО ПОЛЬЗОВАТЕЛЯ

NAUDOTOJO VADOVAS

EN CZ SK HU PL RU LT

Contents

Safety Precautions	3
Before Use.....	5
Identification of Controls.....	7
Main Unit.....	7
Slaver.....	7
Insert the battery	8
Remote control	9
SETUP Menu Setting.....	11
System Setup Page	11
Language Setup Page	12
Video Setup Page.....	12
DVB Operation.....	13
Slaver LCD Setup menu.....	19
Parameters and specifications.....	20
Troubleshooting tips.....	21

Before connecting, operating or adjusting this product, please read this user's manual carefully and completely – contains important information for safe and optimal use of all features and functions. Store the user's manual in case you need it again.

Precautions When Still Image is Displayed, Red/Blue/Green/Black spots on the screen

A still image may cause permanent damage to TV screen

- Do not display still image on the LCD panel for more than 2 hours as it can cause screen image retention. This image retention is known as „screen bum“. To avoid such image retention, reduce the degree of brightness and contrast of the screen during still image watching.
- Similar „screen bum“ effect can appear on the LCD panel due to still TV channel logo displaying.
- Watching TV in 4:3, 16:9 or similar modes which doesn't cover whole screen for long period of time may leave traces of borders displayed on the left, right or center of the screen caused by the difference of light emission on the screen. Playing a DVD or a game console can cause a similar effect to the screen.
- Displaying still images from video games and PC for longer than a certain period of time may produce partial after-images. To prevent this effect reduce the brightness and contrast when displaying still images.



There may appear red spots, blue spots, green spots and black spots on the screen




- This is a characteristic of liquid crystal panels and is not a problem. The liquid crystal panels are built with very high precision technology giving you fine picture details. Occasionally a few non-active pixels may appear on the screen as fixed point of red, green, blue or black (up to 0.001 % of total display pixels). Please note this doesn't affect the performance of your LCD TV.


Damage caused by above reasons is not covered by the Warranty!


Safety Precautions





The device is a precision product taking advantage of the advances of modern electronics, mechanics and optics and requires corresponding handling. When handling the device adhere to the generally valid usage instructions for audiovisual technology products and devices including the following:

-  To prevent risk of injury through electric shock or the creation of a fire, do not take the device out of the case - there are no parts inside the case repairable or adjustable by the user without relevant equipment and qualifications. Should the device require adjustment or repair, contact a professional service centre.
-  Protect the device against rain, spray or contact with any other liquid, do not leave or install the device outdoors. Not adhering to this instruction creates a risk of electrical shock or fire hazard.
-  The player uses a low power class 1 laser beam. Do not remove the player from the device, do not turn the player when it is out of the device - after unblocking the protection and switching on the player there is risk of permanent eye damage by the laser radiation. During standard use of the player according to the instructions in the user's manual the player does not present any risks even for its direct vicinity.





 Leave free space on all sides of the device, which is necessary for proper air circulation around the device - in this way hot air created during its operation is removed. Covering the ventilation opening of the devices case creates a risk of overheating or damaging the device.

 Before allowing children to use the device, they must be appropriately to their age, informed about the correct and safe use of the player.



 In the case of any unusual events occurring during the use of the player such as for example a sudden interruption of the video and/or sound, or the screen or control buttons turn off, or there is a distinct smell of burning insulation or smoke comes out of the device, immediately turn off the device, disconnect the device from the power source and do not use the device until you have received the results of the inspection from the employees of the professional service centre.






 To recharge the battery block that is integrated into the device, place the device in a well ventilated place and at a sufficient distance from easily flammable materials.

Safety Precautions

-  Neither the manufacturer nor the seller of the device under no condition takes responsibility for any direct or indirect damages caused by not adhering to instructions for installation, setup, use, service or cleaning of this device as described in this user's manual.
-  Protect the device against being knocked, dropped, hit, shaken and against vibrations, humidity and dust.
-  Do not install the device in direct sunlight or in the vicinity of a heat source - high temperatures substantially reduce the lifetime of the device's electronic components. Do not use or leave the device in the vicinity of an open fire.
-  When the device is moved from a cold to a warm environment or vice versa, e.g. when using the device in a very humid environment, air humidity may condense on some parts inside the case of the device, namely on the sensing system and the player may temporarily stop functioning. When possible condensation of air humidity in the player occurs, remove the disc from the player and then leave the player on undisturbed for 1 - 2 hours - the humidity will evaporate and the device can again be used as usual. Take care especially during the first use of the player immediately after its purchase during a cold season.

IMPORTANT SAFETY INSTRUCTIONS:

-  THE POWER PLUG IS USED AS A DISCONNECTING DEVICE, WHICH MUST FOR THIS REASON REMAIN EASILY ACCESSIBLE.
-  DO NOT EXPOSE THE DEVICE TO THE EFFECTS OF DRIPPING OR SPRAYING WATER AND DO NOT PLACE THE DEVICE ON OBJECTS FILLED WITH A LIQUID (E.G. VASES).

-  THE DEVICE'S CONNECTOR IS USED AS A DISCONNECTING DEVICE, WHICH MUST FOR THIS REASON REMAIN EASILY ACCESSIBLE.
-  REMEMBER TO ALWAYS DISCONNECT THE POWER PLUG FROM THE POWER SOCKET BEFORE DISCONNECTING THE POWER CABLE FROM THE BACK SIDE OF THE DEVICE.
-  AN OPEN FLAME MUST NOT BE PLACED ON THE DEVICE, E.G. A BURNING CANDLE.
-  PAY SPECIAL ATTENTION TO THE BATTERIES USED AS REGARDS TO THE ENVIRONMENT.
-  THE VENTILATION MUST NOT BE IMPEDED BY COVERING THE VENTILATION OPENINGS WITH OBJECTS SUCH AS NEWSPAPERS, TABLECLOTHS, CURTAINS, ETC.

Notes on Copyrights:

- It is forbidden by law to copy, broadcast, show, broadcast via cable, play in public, or rent copyrighted material without permission.
- This product features the copy protection function developed by Macrovision. Copy protection signals are recorded on some discs.
- When recording and playing the pictures of these discs picture noise will appear.
- This product incorporates copyright protection technology that is protected by method claims of certain U. S. Patents and other intellectual property rights owned by Macrovision Corporation and other rights owners.
- Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by macrovision Corporation. Reverse engineering or disassembly is prohibited.

Safety Precautions

SERIAL NUMBER:

You can find the serial number on the back of the unit. This number is unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase.

Model number _____

Serial number _____

Purchase date _____



This item incorporates copy protection technology that is protected by U.S. patents and other Intellectual property rights of Rovl Corporation. Reverse engineering and disassembly are prohibited.

Due to wide offer of USB devices on the market, we do not guarantee full compatibility of the device with all types USB sticks.



charge



strong impact



over heat 40 °C

Before Use

The user's manual contains information and instructions for the correct installation, connection, setup, operation and service of this device.

- The identification of buttons, connectors, and other control and connection elements of the player are described using CAPITAL LETTERS in the user's manual.
- For all text information displayed on the screen of the player or on the screen of the connected television the user's manual uses **bold letters**.

This manual provides information on the operation and maintenance of your DVD player. Should the unit require service, contact an authorized service location.

Symbol Used in this Manual



The lightning flash symbol alerts you to the presence of dangerous voltage within the product enclosure that may constitute a risk of electric shock



The exclamation point alerts you to the presence of important operating and maintenance/servicing instructions



Indicates hazards likely to cause harm to the unit itself or other material damage

Note:

Indicates special notes and operating features.

Tip:

Indicates tips and hints for making the task easier. A section whose title has one of the following symbols is applicable only to the disc represented by the symbol:

 DVD and finalized DVD+R/RW

 Video CDs VCD

 Audio CDs CD

 MP3 Discs MP3

 WMA Discs WMA

 JPEG Discs JPEG

 Divx Discs DIVX



About the Symbol Display

This symbol means that the function included in the user's manual cannot be carried out because it is forbidden by the software of the disc being played back.

Notes about disks

Handling discs

- Do not touch the surface of the disc where there is no label and where the recording is stored. When handling the disc, hold it by its edges, or by the edge and the centre disc opening. Do not stick labels on to the discs - to label a disc use soft tip markers specially designed for this purpose, mark the side of the disc with the label.

 


After playback return the disc into its cover, where it is protected against scratching. Do not leave discs in direct sunlight or near a heat source, do not leave discs in closed motor vehicles parked in direct sunlight. Risk of deformation of the disc.

Before Use




Cleaning of discs

- Fingerprints and dust affect the quality of the image while playing the recording from the disc. To remove this before playing the disc, clean with a soft lint-free cloth. When cleaning a disc proceed from the centre of the disc directly towards the edge (not using circular motion).



- For cleaning, do not use anti-static sprays for vinyl records, petrol, spirits or other solvents or thinners.

Types of Playable Discs

	DVD (8 cm/12 cm disc)
	Video CD (VCD) (8 cm/12 cm disc)
	Audio CD (8 cm/12 cm disc)

Apart from the above mentioned disc types it is possible to play DVD+/-R, DVD+/-RW, Kodak Picture CD, SVCD, CD-R with recordings in CD format (CD audio copy), CD-R with compressed music files in formats MP3 or WMA, CD-R with image files in the format JPEG and CD-R with video recordings in the DivX format. Playing of disc types not mentioned here is not guaranteed.

RW COMPATIBLE	This indicates a product feature that is capable of playing DVD-RW discs recorded with Video Recording format.
-------------------------	--

Poznámky:

- Depending on the recording media, recording method (used PC program used for the disc recording) and its finalisation, it is possible that it will not be possible to play some CD-R or DVD+/-RW/R discs.
- Do not attach any seal or label to either side (the labeled side or the recorded side) of a disc.
- Use the player to play only circular discs - when playing irregular shaped discs there is a risk of damaging the disc or the player.
- Some playback operations of DVDs and Video CDs may be intentionally programmed by software manufacturers. This unit plays DVDS and Video CDs according to disc content designed by the software manufacturer, therefore some playback features may not be available or other functions may be added.

- Region code**

This DVD player is designed and manufactured for playback of region „2“ encoded DVD software. This unit can play only DVD discs labeled „2“ or „ALL“.




Notes on Region Codes

Most DVD discs have a globe with one or more numbers in it clearly visible on the cover. This number must match your DVD player's region code or the disc cannot play. If you try to play a DVD with a different region code from your player, the message „Check region Code“ appears on the TV screen.


Identification of Controls

Main Unit

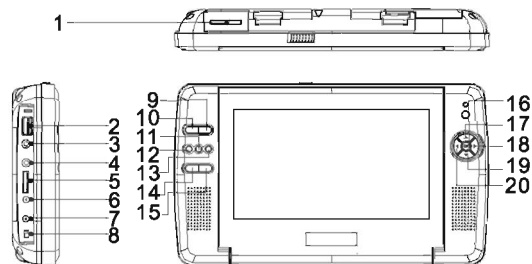

- | | |
|-------------------------------|---------------|
| 1. SD/MS/MMC | 11. ► |
| 2. USB | 12. SETUP |
| 3. AV OUT | 13. ■ |
| 4. HEADPHONE OUT JACKS | 14. MENU |
| 5. Volume adjust | 15. TITLE |
| 6. DC OUT 9-12V | 16. OK |
| 7. DC IN 9-12V | 17. ▲ (UP) |
| 8. POWER ON/OFF | 18. ► (RIGHT) |
| 9. MUTE | 19. ▼ (DOWN) |
| 10. SOURCE (DVD/CARD/
USB) | 20. ◀ (LEFT) |

Slaver

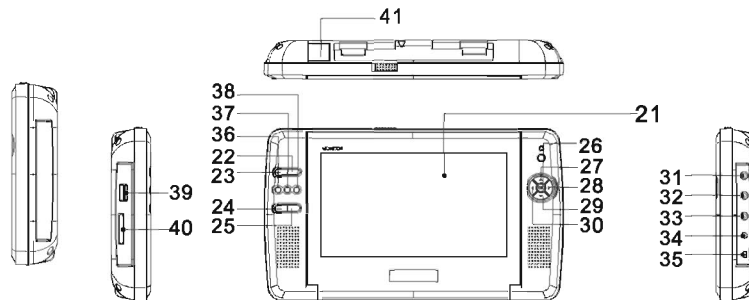


- | | |
|-------------------------|------------------|
| 22. SOURCE | 34. DC IN 9-12V |
| 23. MODE | 35. POWER ON/OFF |
| 24. SCAN | 36. SETUP |
| 25. EXIT | 37. EPG |
| 26. OK | 38. TTX |
| 27. ▲ (UP) | 39. USB |
| 28. ► (RIGHT) | 40. SD/MS/MMC |
| 29. ▼ (DOWN) | 41. ANT |
| 30. ◀ (LEFT) | |
| 31. VIDEO AUDIO OUT | |
| 32. VIDEO AUDIO IN | |
| 33. HEADPHONE OUT JACKS | |


Insert the battery

Insert the battery

1. Open the battery door.

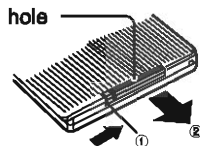

2. Insert two AAA size batteries.

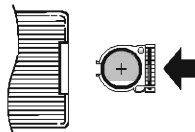

To control the device using the remote control point the remote control at the device and then press the button with the required function. The maximum range of the remote control is about 5 meters with a deviation of up to +/- 30° from the perpendicular direction to the reception sensor of the remote control on the front side of the device. The falling capacity of the batteries gradually reduces the remote control range.

There must be no solid obstacles in the area between the remote control and the device when the remote control is being used.

During standard use the lifetime of batteries in the remote control is about 1 year. When the effective ranges of the remote control is substantially reduced or when there are problems with its use, change both the batteries in the remote control.

If you will not be using the remote control for a longer period of time, take out both batteries from it - in this way you will prevent potential damage caused by their leakage.

Pay special attention to the batteries used as regards to the environment. The batteries must not be exposed to excessive heat, such as sun radiation, fire, etc.

The incorrect use of batteries may cause the leakage of the electrolyte and corrosion. To ensure that the remote control works correctly, proceed according to the instructions below:

- Do not insert the batteries in the wrong direction.
- Do not recharge, heat, open or short the batteries.
- Do not throw batteries into a fire.
- Do not leave discharged batteries in the remote control.
- Do not combine various types of batteries or new and old batteries.
- If you are not using the remote control for a longer period of time, remove the batteries to prevent potential damage caused by a subsequent battery leakage.
- If the remote control is not working correctly or its operational range is reduced, change all batteries for new ones.
- If electrolyte leaks out from the batteries, have the remote control cleaned by an authorised service centre.

Remote control

Remote control



- 1. PLAY/PAUSE ►||**
Press PLAY/PAUSE once to pause playback, pressing PLAY/PAUSE second time will resume the playback.
- 2. STOP ■**
When this button is pressed once, the unit records the stopped point, from where playback will resume if ENTER button is pressed afterwards. But if STOP button is pressed again instead of ENTER button, there will be no resume function.
- 3. Reverse Skip ◀◀**
Go to previous chapter/ track to the beginning.
- 4. Forward Skip ▶▶**
Go to next chapter/ track.
- 5. ANGLE/TTX**
Press ANGLE will change the view angle, on DVDs that support this feature.
In DVB, show the TTX.
- 6. REPEAT**
Press REPEAT during playback to select a desired repeat mode.
DVD: you can play a chapter/title/all on a disc.
VCD CD: you can play a track/all on a disc.
MP3 WMA: you can select Repeat one/Repeat folder play mode on a disc.
- 7. TV-RADIO**
In DVD, to repeat a segment: press AB once to set the starting point for repeat segment. Press it again to set an end point; the player will repeat the segment from the start to the end point.
In DVB, switch TV and RADIO.
- 8. PROG/EXIT**
Place a track on the program list in DVD mode. Exit current page in DVB mode.
- 9. MUTE**
Disable Audio output.
- 10. TITLE/FAV**
Return to DVD title menu; Show favourite program in DVB mode.
- 11. STEP**
In DVD, press STEP once to pause playback. From this station press STEP to advance one video frame.
- 12. 0-9 NUMBER BUTTONS**
Selects numbered items in a menu.
- 13. ENTER**
Confirms menu selection.

Remote control

14. PBC/EPG

In DVD mode, PBC on/off switch. Only for VCD, for other discs, the function is invalid.

In DVD mode, show the EPG information.

15. DISPLAY

To display the playtime and status information.

16. SUBTITLE

Press SUBTITLE repeatedly during playback to hear a different subtitle languages.

17. ZOOM

Use ZOOM to enlarge or shrink the video image.

18. MENU

Accesses menu on DVD disc.

19. SETUP

Accesses or removes setup menu.

20. 10+ BUTTON

In order to select a track 10 or greater, first press 10+; for example: select a track 12, first press 10+, and then press number 2 button.

21. OSD/SCAN

In DVD, select OSD language. Scan program in DVB mode.

22. ◀◀ BUTTON

Press ◀◀ button to skip back at 5-level speed (X2 -> X4 -> X8 -> X20), press ENTER button to return to normal playback.

23. ▶▶ BUTTON

Press ▶▶ button to skip ahead at 5-level speed (X2 -> X4 -> X8 -> 20), press ENTER button to return to normal playback.

24. AUDIO

DVD: Press AUDIO repeatedly during playback to hear a different audio language or audio track, if available.

MP3 CD VCD: Press AUDIO repeatedly during playback to hear a different audio channel (Stereo, Left, or Right).

In DVB mode, select program audio.

25. SLOW/MODE

Press SLOW button repeatedly to enter slow playback, and cycle between different speeds. The speeds are 1/2, 1/3, 1/4, 1/5, 1/6, 1/7 and normal.

It should be enter DVB TFT menu to adjust TFT.

26. GO TO/SOURCE

In DVD, go to time point, title or chapter you want. In DVB, switch DVB and AV IN.

27. DVD/CARD/USB

28. COLOR KEYS (RED/GREEN/YELLOW/BLUE)


In DVB, use to operate different functions in TEXT screen or other menus.

SETUP Menu Setting

System Setup Page

Press SETUP button to get the setup menu. Use direction buttons ▲ ▼ ◀ ▶ to select the preferred item. After finishing settings, press SETUP again to normal display.

System Setup

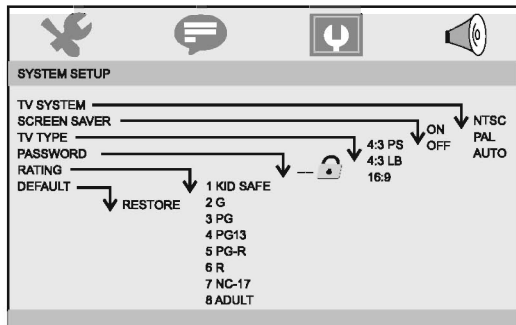

TV System

Select the colour system that corresponds to your TV when AV output. This DVD Player is compatible with both NTSC and PAL.

PAL - Select this if the connected TV is PAL system.

It will change the video signal of a NTSC disc and output in PAL format.

NTSC - Select this if the connected TV is NTSC system.

It will change the video signal of a PAL disc and output in NTSC format.

Auto: Change the video signal output automatic according to the playing disk format.

Screen Saver

This function is used to turn the screen saver on or off.

TV Type

Select the aspect ratio of the playback picture.

4:3 PS: if you have a normal TV and want both sides of the picture to be trimmed or formatted to fit your TV screen.

4:3 LB: if you have a normal TV. In this case, a wide picture with black bands on the upper and lower portions of the TV screen will be displayed.

16:9: wide screen display.

Password

Input user password. Default password is 0000.

Rating

After input correct password, you can change parental level.


Default

Restore the factory setting of setup menu.

SETUP Menu Setting


Language Setup Page

- Language setup

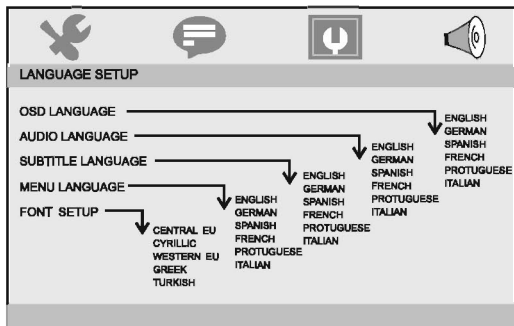


You can select OSD language, and select audio/subtitle/menu language of DVD discs if available. Also you can select font type for mpeg4 subtitle.

Video Setup Page

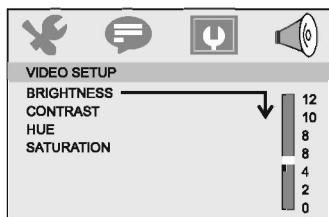

You can change the video setting: brightness, contrast, hue, saturation.


- Speaker Setup

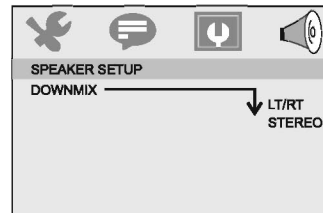


- Downmix:

LT/RT: When playing a 5.1ch DVD disc, the LS/RS/Center channel audio will output through both L and R channel.
STEREO: When playing a 5.1ch DVD disc, the LS channel audio will output only through L channel, RS channel audio will output only through R channel, Center channel audio will output through both L and R channel.

DVB Setup Menu

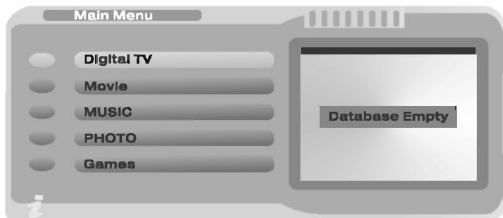

In Main Menu, press ▲/▼ key to choose Digital TV option and then press OK button once to enter Digital TV menu.

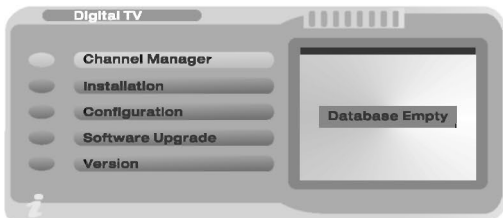

- **Installation**

There are three kinds of Installation mode as follow:

1. Area Search: searching programs by scan area
2. Manual Search
3. Auto Search.

Area Search

Area search is a kind of intelligent and convenient mode of programs searching, which covers programs of all frequent points of target countries or regions.

Manual Search

If you understand much about digital TV and know the frequency of the program or if you want to scan the program at any frequency required, you can select manual scanning, which can save you much time.

Auto Search

You can search the programs of any channel.

1. You can move the cursor to „area search“ via press ▲/▼ key under „installation menu“, then press „OK“ to enter into area searching page.
2. Prior to auto searching, you need to configure relevant parameters including:
 1. Start Freq (kHz): the default frequency is 474000 kHz. You can input relevant digitals to modify it.
 2. End Freq (kHz): the default frequency is 474000 kHz. You can input relevant digitals to modify it.
 3. Band Width: the default value of bandwidth is 64MHz. While you set it to 6 MHz, 7 MHz, 8 MHz.
3. Press „OK“ button after configuration of parameters to start manual scan.
4. If any program is detected and the scanning process is finished, system will exit the scanning page and save the program, at the same time EXIT to full screen to play the program.

DVB Operation

- **Channel Manager**

System offers an efficient function of channel management such as channel deleting, marking, moving, locking, sorting and grouping. There are two independent pages for channel management, TV and RADIO. You can enter the page via „digital TV channel manager“.



Channel Organizer

Channel organizer page includes favourite channels, channel deleting, moving, locking and rename.

Channel Sorting

The channels shall be listed according to certain sequence so that the user can easily find them.

Channel Grouping

Group channels according to Movies, Sport, Music, Kids, Fashion etc.

Edit Channel


Have such operations as Add, Delete and Rename to channels.

Delete All

If you do not like one or some channels, you can delete it/them in Channel Organizer menu, but if you do not like all TV or Radio, you can enter Delete All menu to choose to delete all TV, RADIO.

- **Configuration**


Configuration provides individualized system setup function; you can configure the system according to your own hobby and demand.

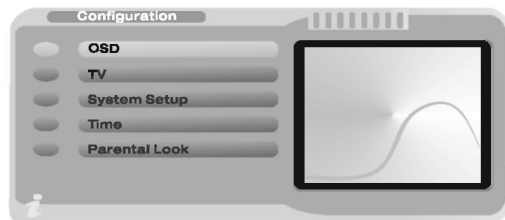

OSD

Via OSD option setup, you can set the user interface display mode according to your own demand. Via the menu (MENU -> Digital TV -> Configuration -> OSD), you can enter OSD menu.

DVB Operation

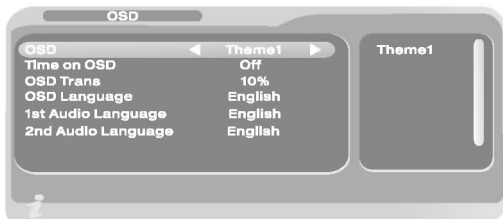

All options are listed on the left of the OSD menu, when the cursor moves on the option in OSD menu, the values corresponding to this option on the right of the menu, press CH+/CH- key to move upward and downward to choose the options in OSD menu.


There are following options in OSD menu:

1. OSD Option – sets system menu mode; currently, one mode is supported.
2. Time on OSD Option – sets whether to display system time in full-screen play channel. Move the cursor to time on OSD option, press VOL+/VOL key to choose between On and Off, the default is Off.
3. Trans option – sets menu transparency, press VOL+/VOL- key to adjust between 0–60 %.
4. OSD Language option – The system has the user interface supporting a couple of languages, you can set language via OSD Language option:
 - (1) Move the cursor onto OSD Language option, Press VOL- key to enter OSD Language List.
 - (2) Press CH+/CH- key choose language.
 - (3) Press OK key to confirm system interface language selection, then the setting is effective, and then the interface language turns into the currently chosen language, the cursor can move onto OSD Language option on the left.

5. 1st Audio Language option – Press VOL- key to enter the currently supported Audio Language list, in the Audio Language list, press CH+/CH key to choose language, press OK key to confirm.
6. 2nd Audio Language option – Press VOL- key to enter the currently supported Audio Language list, in the Audio language list, press CH+/CH key to choose language, press OK key to confirm.

• TV

TV setup provides convenient TV input mode, you can via menu (ENU -> Digital TV -> Configuration -> TV) enter TV set.

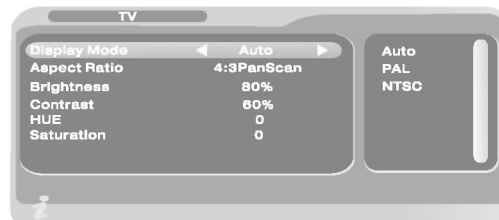

All options are listed on the left of the menu, when the cursor moves to the option on the left of the TV menu, the values corresponding to this option can be displayed on the right of the menu.

• Display Mode

TV mode can change the mode of the output video, you can adjust TV mode according to the actual situation of you receiving equipment.

DVB Operation

Aspect Ratio

Video output mode can change the mode of video output, you can adjust TV mode according to the actual situation of you receiving equipment.

Brightness

Adjust the system brightness.

Contrast

Adjust the system contrast.

Hue

Adjust the system hue.

Saturation

Adjust the system saturation.

System Setup

System Setup menu can provide convenient system setup, you can via menu (MENU -> Digital TV -> Configuration -> System Setup) enter System Setup menu.



Time

Via menu (MENU -> Digital TV -> Configuration -> Time), enter time set.



You can set Timer Mode in Time page: Timer Mode: set time mode, Date: set date, Time: set time, GMT Offset: set GMT Offset, Summer Time: set summer time.

Parental Lock

You can revise system Password, you can via menu (MENU -> Digital TV -> Configuration -> Parental Lock) to enter Parental Lock menu.



1. Press the 0–9 number buttons on the remote control to input old password, the system defaults password as „0000“.
2. If the password is input correctly, the cursor can move onto input new password option, press 0–9 number buttons on the remote control to input new 4-digit password.
3. The cursor move confirm New Password option, press 0–9 number buttons press on the remote control to input new 4-digit password; if it is confirmed the new password is different from the new Password input, the system will hint to input new password again, until they are consistent. After the password is set successfully, the system will hint the success and save the setting, and the new password will come into effect.

Software Upgrade

You can automatically update the software of the equipment. The software of the new version can support more areas and more functions or solve more problems. Via menu (MENU -> Digital TV -> Software Upgrade) enter Software Upgrade menu.



Download from USB

Update software from USB device or card.

Media Play

The device integrates powerful function to support USB and you can connect Ex-equipments via the USB. At present, system can support usual USB media players and upgrade to system software. This product supports the play of MP3, JPEG and MPEG-4 (AVI). It can support only the files displaying in the list and the file format this product plays.

1. Copy media documents to USB.
2. Plug in USB device.
3. Enter device in main menu.

Movie

1. In main menu, press ▲/▼ to choose USB Movie option, Press OK key to confirm, enter USB main directory.
2. Press OK key to enter next directory, every directory displays only movie file and folder name.

Press EXIT key to EXIT previous directory:

1. Press CH+/CH- key to choose movie file name.
2. Press OK key to play movies.
3. Press FF key to play movie quickly (x2, x4, x8, x20, x1).
4. Press REV key to rewind movie (x2, x4, x8, x20, x1).
5. Press SLOW +/- key to slow down movie (1/2, 1/4, 1).
6. Press ▲ key to play previous movie, ▼ key to play next movie.
7. Press LANGUAGE key to switch between the left and right channel and stereo.
8. Press PAUSE/STEP key to pause or play.
9. All movies can be replayed after paused during playing.
10. Press EXIT key to exit movie play mode and EXIT to the file directory.

Music

1. In main menu press CH+/CH- to choose USB Music option, to choose OK key to confirm, enter USB main directory.
2. Press OK key to enter next directory, every directory can show music file and folder name only.
3. CH+/CH- key to choose music file name.
4. Press OK key to play music file.

1. Press FF key to play quickly (x2, x4, x8, x20, x1).
2. Press REV key to rewind music (x2, x4, x8, x20, x1).
3. Press ▲ key to play previous music, press ▼ key to play next music.
4. Press LANGUAGE key to switch between the left and right channel and stereo.
5. Press PAUSE/STEP key to pause or play music.
6. Press EXIT key to exit the music play mode and EXIT to the file directory.

Photo

1. In main menu press CH+/CH- to choose USB Photo option, press OK key to confirm, enter USB main directory.
2. Press OK key to enter next directory, every directory can show photo file and folder name. Press EXIT key to EXIT to the previous directory.
3. CH+/CH- key to choose photo file name.
4. Press OK key to play Photo file.
5. Press ▲ key to play previous Photo, ▼ key to play next Photo.
6. In full-screen play state: Press VOL+/VOL- key to rotate the photo clockwise/counter clockwise by 90 degrees.
7. Press EXIT key to exit play mode and EXIT to file directory.


Games

If you want to have a rest or to relieve yourself after hard working, you can play some game attached in the system.

Slaver LCD Setup menu

- To enter the SLAVER LCD Setup menu, press the „MODE“ button.
To exit the LCD Setup menu, press it repeatedly.
 1. Press the MODE button repeatedly to display the menus in the following order:
PICTURE -> OPTION
 2. To select a menu item, press the ▲ ▼ buttons to scroll up and down the list.
 3. When a menu item is highlighted, use the ◀ ▶ buttons to adjust the setting.

PICTURE

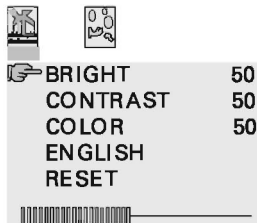

BRIGHT:
Adjust the brightness of the picture.


CONTRAST:
Adjust the contrast of the picture.

COLOR:
Adjust the colour of the picture.

ENGLISH:
Select other language.

RESET:
Reset to the default settings.

OPTION

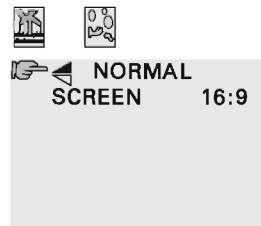

NORMAL: Rotate the picture upside down.

SCREEN: Select the aspect ratio: 16:9 or 4:3.

Parameters and specifications

Electronical parameters

Item	Standard requirement	
Power requirements	AC 100 – 240 V, 50/60 Hz	
Dimensions (approx.)	248 (l) × 142 (w) × 37 (h) mm	
Power consumption	< 18 W	
Weight (approx.)	1,1 kg	
Operating humidity	5 – 90 %	
Output	VIDEO OUT	1 Vp-p (75 Ω)
	AUDIO OUT	1,4 Vp-p (1 kHz, 0 dB)

System

Laser	Semiconductor laser, wavelength 650 nm
Signal system	NTSC/PAL
Frequency response	20 Hz to 20 kHz (1 dB)
Signal – to – noise ratio	More than 80 dB (ANALOGUE OUT connectors only)
Dynamic range	More than 80 dB (DVD / CD)

Battery Specifications

Output: 7, 4 V

Charge/Discharge Time

Standard charge time: 3h – 4h

Storage and work circumstances

1. Storage circumstances	Temperature	Humidity	
	6 months	-20 °C – +45 °C	65 ± 20 %
1 week	-20 °C – +65 °C	65 ± 20 %	
2. Work circumstances	Temperature	Humidity	
	Standard charge	0 °C – +45 °C	65 ± 20 %
	Standard discharge	-20 °C – +65 °C	65 ± 20 %

Troubleshooting tips

Troubleshooting tips

Before calling for service, you can check the following items on symptoms and solutions.

No sound or distorted sound:

Ensure that the equipment is connected properly.
Ensure that the input settings for the TV and stereo system are proper.

No picture:

Ensure that the equipment is connected properly.
Ensure that the input setting for the TV is „video“.
Ensure that the LCD is on.

No play:

Condensation has formed : wait about 1 to 2 hours to allow the player to dry out.
This player can't play discs other than DVDs, MP3s and CDs.
The disc may be dirty and require cleaning .
Ensure that the disc is installed with the label side up.

No remote control:

Check the batteries are installed with the correct polarities (+&-).
The batteries are depleted: replace them with new ones.
Point the remote control unit at the remote control sensor and operate.
Remove the obstacles between the remote control unit and the remote control sensor.
Operate the remote control unit at a distance of not more than 8 meters from the remote control sensor.

No key operation(by the unit and/or the remote control) is effective:

Turn the unit off and then back to on. Alternatively, turn off the unit, disconnect the AC power cord and the re-connect it. (The player may not be operating properly due to lightning, static electricity or some other external factor.)

Battery does not work

Check whether the battery is out of power or in proper connection.

Instructions for the correct disposal of the product

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.