 


SENCOR[®]

SPT 205

**Portable CD/MP3 Radio
Cassette Recorder**

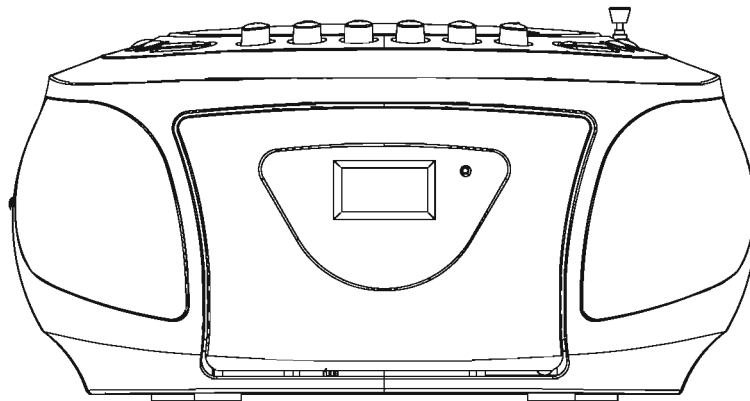

Instruction Manual

Safety Precautions

- Read all instructions carefully before using the unit and keep them for further reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.

Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

Location of Unit

- The unit must be placed on the flat stable surface and should not be subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over.
- The mains socket must be located near the unit and should be easily accessible.

Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas/electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

Naked Flames

- Never place any type of candle or naked flame on the top of or near the unit.

Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.
- If you spill any liquid into the unit, it can cause serious damage. Switch it off at the mains immediately. Withdraw the mains plug and consult your dealer.

Ventilation

- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.

Safety

- Always disconnect the unit from the mains supply before connecting/disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket during a lightning storm.

Mains Cable

- Make sure the unit or unit stand is not resting on top of the mains cable, as the weight of the unit may damage the mains cable and create a safety hazard.
- If the mains cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do it, it may adversely affect the operating performance of the unit, and cause a distorted picture or sound.

Batteries

- Batteries used in the unit are easily swallowed by young children and this is dangerous.
- Keep loose batteries away from young children and make sure that the battery holder tray is secure in the unit. Seek medical advice if you believe a cell has been swallowed.
- Please dispose of batteries correctly by following the guidance in this manual.

Safety Precautions

Earphones

- Listening to loud sounds for prolonged periods of time may permanently damage your hearing.
- Before putting on earphones, turn the volume down then put the earphones on and slowly increase the volume until you reach a comfortable listening level.

Supervision

- Children should supervise to ensure that they do not play with the unit and the remote control.
- Never let anymore especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.

Service

- To reduce the risk of electric shock, do not remove screws, the unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.

Maintenance

- Ensure to unplug the unit from the mains socket before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface.
- Do not use liquids to clean the unit.

Class 1 Laser Product

- This unit utilizes a laser. Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- Before removing the unit, ensure the disc tray is empty.
- Always remove the disc when the unit is empty.
- Failure to do so will risk severely damaging the disc and the unit.
- Do not stack device, heat from other devices may affect the performance of the unit.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

 
Owner's record

For your convenience, record the model number and serial number for future reference.

Model no.: _____ Serial no.: _____


Product Overview

Front View

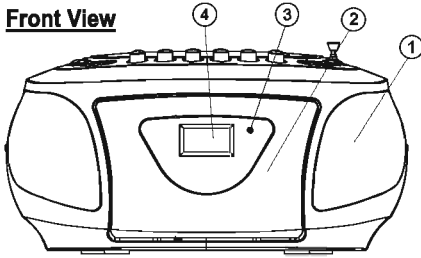


1. **Speakers**
2. **Cassette Door**
3. **FM Stereo Indicator**
4. **LCD Display**

 Top View

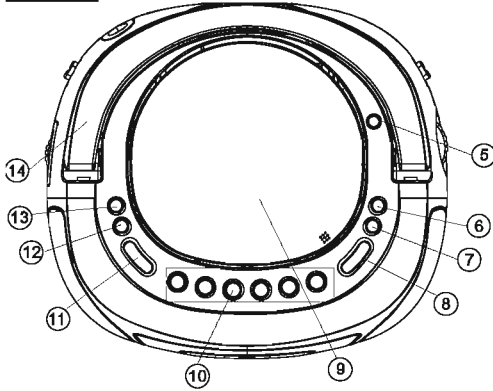

5. **Telescopic Antenna**
6. **Repeat**
7. **Next**
CD: skip tracks forward.
8. **Play/Pause**
CD: start or pauses CD playback.
9. **CD Door**
10. **Cassette Control Buttons**
Pause – interrupts recording or playback.
Stop/Eject – stops the tape; opens the cassette door.
FWD/REW – forwards/rewinds the tape.
Play – starts playback.
Record – starts recording.
11. **Stop**
CD: stops CD playback or delete a program.
12. **Back**
CD: skips tracks backward.
13. **Program**
14. **Handle**

 Rear View

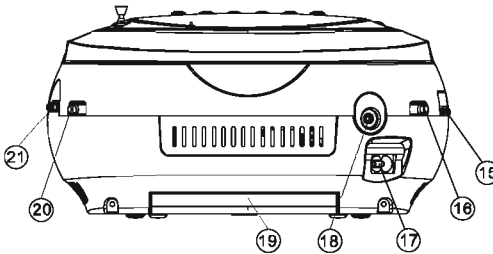

15. **Volume Control**
16. **Function Selector**
- select CD/MP3, TAPE(OFF) and RADIO.
17. **AC IN Jack**
- connect AC power cord to the mains socket.
18. **Earphones Jack**
19. **Battery Compartment**
20. **Band Selector**
- select FM Stereo, FM or AM radio.
21. **Tuning Knob**
- adjust the AM or FM radio station.

Power Supply

Connect AC power

Caution:

Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the rating label located on back or bottom of the unit.

Warning:

Risk of electric shock! When you disconnect the AC power, always pull the plug from the wall outlet.

Note: Install the unit near the wall outlet and where the AC power plug can be easily reached.

1. Connect the power cord to the **AC IN** jack on the unit and to the wall outlet.
2. To save energy: After use, set the switch to **TAPE(OFF)**.

Install batteries (not included)

Note: You can use both batteries and AC power as power supply of this unit.

Batteries are not supplied with the accessories.

1. Open the battery compartment.
2. Insert 8 x UM-2 batteries with correct polarity (+/-) as indicated.
3. Close the battery compartment.

Handling the batteries

- Install the batteries correctly by following the polarity (+ and -) indications in the battery compartment.
- Never use batteries that show signs of electrolyte leaks or cracking.
- Never dispose of used batteries in an open fire.
- Keep batteries out of reach of children.
- Never recharge disposable batteries.
- Never short circuit battery terminals.
- Always remove used batteries from the appliance case.
- Do not try to open the batteries.
- Do not mix up different kind of batteries or new and already used batteries together.
- Only use batteries of the recommended or equivalent type.
- Remove batteries from the unit before disposing of it at the end of its service life.
- Do not dispose of the end of the used batteries as domestic waste. Dispose of them in accordance with local regulations.

Note:

When replacing the batteries, make sure you dispose of the old batteries in accordance with applicable regulations. They should be disposed of in a location specifically designated for that purpose so they can be recycled safely and without posing any risk for the environment. Do not burn or bury them.

General Operation

1. To switch on and select your operation source, adjust the **Function Selector** to **CD/MP3** or **RADIO**.
2. Adjust the sound with **Volume Control**.
3. To switch off the unit, adjust the **Function Selector** to **TAPE(OFF)**.

Note: To avoid unnecessary energy consumption, always adjust the **Function Selector** to **TAPE(OFF)**.

Radio Reception

1. Adjust the **Function Selector** to **RADIO**.
2. Adjust the **Band Selector** to AM, FM or FM ST.
3. Turn the **Tuning Knob** to tune a station.

Note: The FM stereo indicator comes on if the band selector is set on FM stereo and you have turned the radio to an FM stereo again.

Helpful hints:

- To improve FM reception, you can extend, incline or turn the telescopic antenna for best reception.
- To improve AM reception, turn the unit to face a different direction.

Using earphones

Turn down the volume before connecting the earphones. Slowly raise the volume with the earphones on until you reach your desired volume. When earphones are connected, the speaker is automatically disabled.

Note: Avoid listening to sound at excessive levels which could be harmful to your ears. At full power, the prolonged listening can damage the ears of the user.

Cassette Recorder

Play a tape

1. Adjust the **Function Selector** to **TAPE(OFF)**.
2. Press the **Stop/Eject** button to open the cassette door and insert a cassette then close it.
3. Press the **Play** button to start playback.
4. To pause or resume playback, press the **Pause** button.
5. To rewind or fast-forward, press the **REW** or **FWD** buttons.
6. To stop the tape, press the **Stop/Eject** button.

Note:

- The keys are automatically released at the end of a tape and the set is switched off (unless PAUSE mode has been activated.)
- During fast forwarding/rewinding, the key will not be released at the end of a tape. To switch off the set, make sure the cassette keys are also released.

General information on cassette recording

- Recording is permissible in so far as copyright or other rights of third parties are not infringed.
- This deck is not suitable for recording on CHROME (IEC II) or METAL (IEC IV) type cassettes. For recording, you should use NORMAL type cassettes (IEC I) on which the tabs have not been broken.
- Check and tighten slack tape before use with a pencil to avoid jamming the deck mechanism.
- The volume level is set automatically.

Note:

- No recording at beginning 7 seconds.
- Break safeguard tab to prevent the accidental erasure of a recording.

Record from radio to tape

1. Adjust the **Function Selector** to **RADIO**.
2. Rotate **Tuning Knob** to tune to the radio station.
3. Press the **Stop/Eject** button to open the cassette door.
4. Insert a blank tape.
5. Press the **Record** button to start recording.
 - To pause/resume recording, press the **Pause** button.
 - To stop recording, press the **Stop/Eject** button.

Record from CD to tape

1. Adjust the **Function Selector** to **CD/MP3**.
2. Insert a CD.
3. Press the **Stop/Eject** button to open the cassette door.
4. Insert a blank tape.
5. Press the **Record** button to start recording.
 - Disc play starts automatically from the beginning of the disc.
 - To pause/resume recording, press the **Pause** button.
 - To stop recording, press the **Stop/Eject** button.

CD/MP3 Operation

 
You can play commercially available audio CDs including CD-R, CD-RW and MP3 files.

Note:

- Even if this portable radio-CD player is able to read CD-R and CD-RW discs, in addition to conventional compact discs, it is not possible to offer a 100% guarantee that all CD-R/RW discs can be read; playback depends on the quality and condition of the blank discs that you use, among other things. A playback failure does not necessarily indicate that the unit is malfunctioning.
- You cannot play CDs encoded with copyright protection technologies.

Play a CD or MP3

1. Adjust the **Function Selector** to **CD/MP3**.
2. To open the CD door, raise it by the corner marked **OPEN/CLOSE**.
3. Insert a CD with the printed side facing up.
 - The total number of tracks in the disc will display.
 - If no disc, display shows "NO".
 - If CD door is not closed, display shows "OP".
4. To start playback, press the **Play/Pause** button.
5. To pause/resume play, press the **Play/Pause** button.
6. To stop play, press the **Stop** button.
7. To skip a track, press the **Back** or **Next** buttons.
8. To search within a track, press and hold the **Back** or **Next** buttons. Release the button to resume normal play.

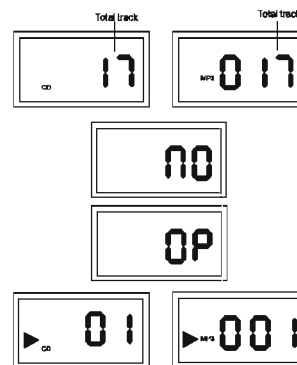


Play options

Adjust volume level

1. During play, turn **Volume Control** to increase/decrease the volume level.

Select play modes

 1. Press the **REP.** button repeatedly to select a play mode:
 - Repeat: repeat the single track.
 - Repeat all: repeat the whole disc.
2. To return to normal play, press the **REP.** button repeatedly until play mode icons are no longer displayed.

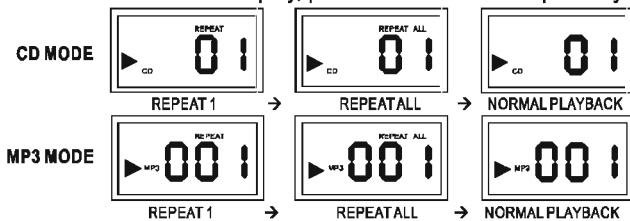

Program play sequence

You may store up to 20 tracks in desired sequence. Be sure to press the **Stop** button before use to ensure no prior program has been set.

1. In stop mode, press the **PROG.** button to activate programming.
 - "PROGRAM" and "P01" indicator will flash on the display.
2. Press the **Back** or **Next** buttons to select your desired track number.
3. Press the **PROG.** button to store the desired track number.
4. Repeat step 2-3 to select the additional tracks into program memory.
 - When the memory full, "PROGRAM" and "FULL" will flash on the display.
5. To play your program, press the **Play/Pause** button in stop mode.
 - The "PROGRAM" indicator will flash.
6. To review the program, press the **PROG.** button to display your stored tracks in stop mode.
7. To erase a program, press the **Stop** button in stop mode or by opening the CD door.
 - The "PROGRAM" indicator will disappear.



Maintenance

 
Clean the cabinet

Use a soft slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Clean discs

When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the centre out.

Do not use solvents such as benzene, thinner, commercially available cleaners, or antistatic spray intended for analogue records.

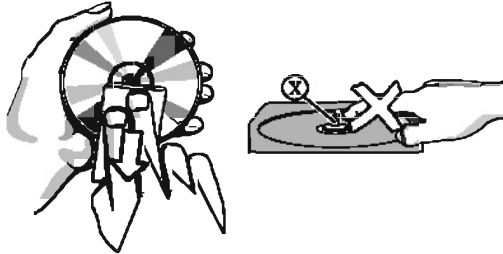

Clean the disc lens

 
After prolonged use, dirt or dust may accumulate at the disc lens. To ensure good play quality, clean the disc lens with camera lens brush or any commercially available cleaners. Follow the instructions supplied with cleaner.

Clean the tape deck

Use a cotton bud slightly moistened with alcohol or a special head cleaning fluid to clean the deck.

1. Open cassette compartment door by pressing Stop/Eject.
2. Press the Play button and clean the rubber pressure rollers C.
3. Press the Pause button and clean the magnetic heads A and also the Capstan B.
4. After cleaning, press the Stop/Eject button.

Note: Cleaning of the heads can also be done by playing a cleaning cassette through once.

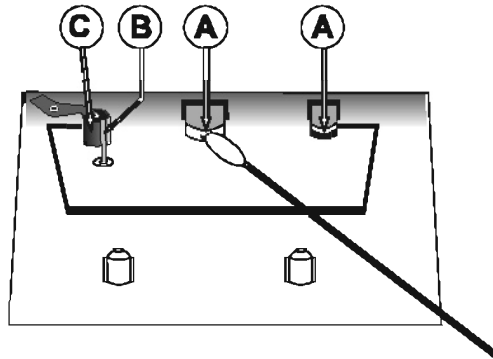

Troubleshooting

If a fault occurs, first check the points listed below before taking the set for repair.

If you are unable to remedy a problem by following hints, consult your dealer or service center.

Note: Do not open the unit as there is a risk of electric shock. Under no circumstances should you try to repair the set yourself; as this will invalidate the guarantee.

No power

- Ensure that the power cord connect securely.
- Ensure that there is power at the AC Mains.
- Ensure that the batteries are inserted correctly.

No sound or poor sound

- Adjust the volume.

No response from the unit

- Disconnect and reconnect the AC power cord, then turn on the unit again.
- Electrostatic discharge, re-connect the AC power cord after a few seconds.

No disc detected

- Insert a disc.
- Check if the disc is inserted upside down.
- Wait until the moisture condensation at the lens has cleared.
- Replace or clean the disc.
- Use a finalized CD or correct format disc.

The CD skips tracks

- Ensure that the CD is not damaged or dirty.
- Ensure that program mode is deactivated.

Poor radio reception

- Increase the distance between the unit and your TV or any home appliance.
- Fully extend the telescopic antenna.

Poor cassette sound quality

- Dust and dirt on the heads, etc. Clean deck parts, see maintenance.
- Use of incompatible cassette types (METAL or CHROME). Only use the NORMAL (IEC I) for recording.

Recording does not work

- Cassette tab(s) may be broken. Apply adhesive tape over the missing tab space.

Environmental information

All unnecessary packaging materials have been omitted. The packaging can be easily separated into three materials: cardboard, polystyrene and plastic.

Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging, dead batteries and old equipment.

Specifications

Power Supply	: Mains: AC 230V~50Hz : Battery: DC 12V(UM-2 x 8 batteries, not included)
Power Consumption	: 12W
Dimensions	: 246(L) x 218(W) x 129.5(H) mm
Weight	: 1.72kg
Frequency Range	: AM 540-1600KHz : FM 88-108MHz
Output Power (RMS)	: 2 x 1.2W
Speakers	: 8 Ohms
Earphones Jack	: 3.5mm

(The technical characteristics are liable to change without notice)

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.



DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES

The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.