

# SENCOR SDF 750

DIGITAL PHOTO FRAME

USER MANUAL



CE

## Table of contents

1. Safety.....	3
1.1 Intended use.....	3
1.2 General safety instructions.....	3
2. Preparations for use.....	3
2.1 Unpacking.....	3
2.2 Package contents.....	3
2.3 Connecting to the mains.....	3
3. Functions.....	4
4. Operation.....	5
4.1 General functions.....	5
4.2 Calendar.....	5
4.3 View.....	5
4.4 Interval.....	5
4.5 Slideshow.....	5
4.6 Thumbnail.....	6
4.7 Storage.....	6
4.8 Setting.....	6
5. Technical data.....	7

# 1. Safety

## 1.1 Intended use

The digital photo album display photos. The clock function includes a calendar function. Read the manual carefully before the first use.

Due to the great variety of products with external memory connection (USB,SD/MMC,etc.) and their sometimes quite manufacturer-specific functions we can neither guarantee that all devices will be recognized, nor that all operating options that are possible in theory will actually work.

## 1.2 General safety instruction

### WARNING

Do not force on the appliance. It will damage the appliance.

### CAUTION

Do not spill any liquid on the appliance.

# 2. Preparation for use

## 2.1 Unpacking

Unpack the appliance carefully.

Check the package contents as described below. If any item is missing Please contact your reseller.

Remove the label from the front panel carefully if present.

## 2.2 Package contents

The following items are including in the received package:


- 1 Digital photo frame
- 1 AC/DC adaptor+cable
- 1 Operator manual

## 2.3 Connecting to the mains

Connect the adaptor plug on the adaptor cable to the DC connection.

Connect the mains plug to a wall socket.

### 3. Functions

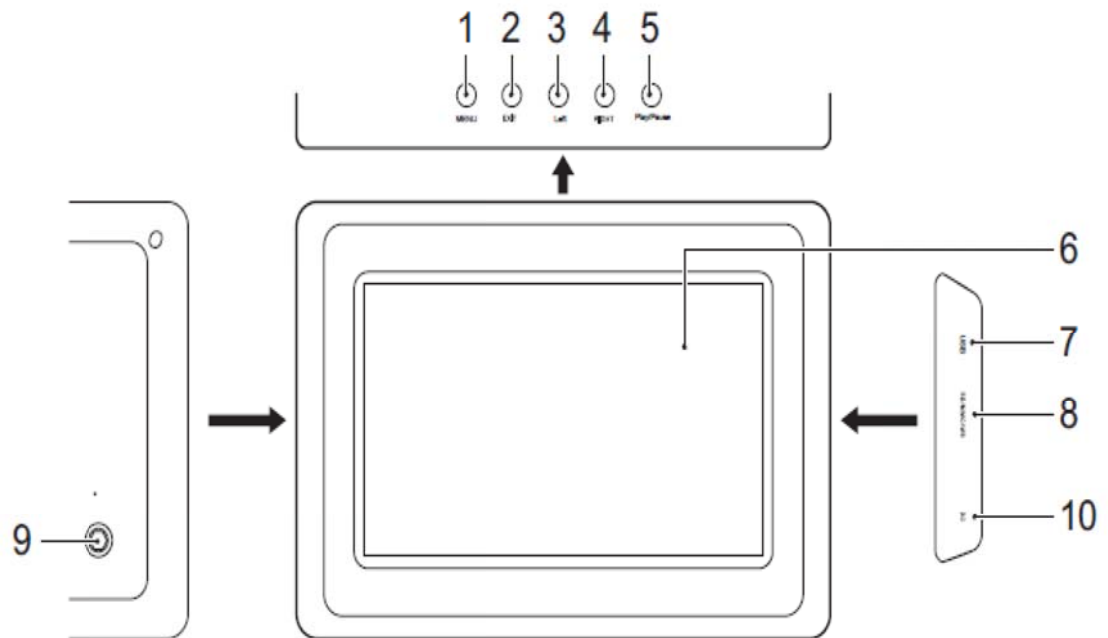

- 1 MENU button
- 2 EXIT button
- 3 LEFT button
- 4 RIGHT button
- 5 PLAY/PAUSE button
- 6 Display
- 7 USB slot
- 8 Memory card slot
- 9 Stand
- 10 DC connection

# 4. Operation

## 4.1 General functions

- 1) When the digital photo frame is powered on a slideshow of the pictures on the inserted memory card or USB will start automatically.
- 2) If no memory card is inserted, the screen will display the calendar with initial screen logo.

## 4.2 Calendar

Select the calendar in the main menu.

Press the PLAY/PAUSE button (5) to enter the calendar.

Left screen display the calendar & date and right screen show the photos.

Or press again left screen display as analog clock & date time and right screen show the photos too.

## 4.3 View

Select the View in the main menu.

Press the PLAY/PAUSE button (5) to enter the view the photos. (Be effective when insert the Card or USB)

In view model, just will display current picture. Should be press left or right button if want see others photos.

## 4.4 Interval

To set the interval between the slides(5s,10s,30s,1m,5m,30m,1hr,3hr,12hr,1d).

## 4.5 Slideshow

Select the Slideshow in the main menu.

Press the PLAY/PAUSE button (5) to enter the display the photos. (Be effective when insert the Card or USB)

After power on, DPF starts playing photos in the memory card if a memory card is inserted.

During the slideshow play, photo date will be shown on the bottom-right if setting first.

Several special effects are available during the slideshow play. (At Random)

In slideshow model it cannot manual change the display picture just automatically.

In slideshow model if press the MENU button and enter the selected menu of VIEW will change to manual, you can go to previous/next photo by pressing LEFT/RIGHT button.

## 4.6 Thumbnail

Select the Thumbnail in the main menu.

Press the PLAY/PAUSE button (5) to enter the display the Thumbnail photos. (Be effective when insert Card or USB)

6 pieces of thumbnail photos can be display in one page and will show the file name at left corner.

## 4.7 Storage

Select the Storage in the main menu.

Press the PLAY/PAUSE button (5) to enter the Storage. (Be effective when insert the Card or USB) .You can choose if read USB or card content when both of them are inserting.

## 4.8 Setting

To change the initial settings

To enter the setting menu, press the MENU button and then press the SETTINGS

To select a menu item, press the LEFT button or the RIGHT button.

To enter the selected menu item, press the PLAY/PAUSE button

To adjust a setting, press the left button or the right button

To confirm the setting, press the play/pause button

To exit to the menu, press the EXIT button.

### 1.1 Restore defaults

Restore what you setting in the digital photo frame.

### 1.2 System information

### 1.3 Return

### 1.4 Language

With this option you can select the language for your on screen display (OSD)

### 1.5 Time format

-12H

-24H

### 1.6 Date Format

-YYYY/MM/DD

-DD/MM/YYYY

--MM/DD/YYYY

### 1.6 Week Format

### 1.7 LCD Brightness

### 1.8 Date& time

### 2.0 Photo Date

When set the photo date "on" the date& time will display on the photo in the Slideshow model.

## 5. Technical Data

Parameter	Value
Voltage	5v-1A
Input voltage	100-240v/50-60hz
USB connection	USB 2.0 compatible
Flash memory connection	SD/MMC/MS
Supported media formats	JPEG
Screen size	7"
Aspect ratio	4:3
Resolution	800*600 pixels
Brightness	250 dc/m2
Contrast	600 : 1



### **EN Disposal of Used Electrical & Electronic Equipment**

The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.