

# SENCOR®

## SDV-8805T

 
DVD\DVb-T COMBO PLAYER

KOMBINOVANÝ PŘEHRÁVAČ  
DVD\PŘIJÍMAČ DVb-T

KOMBINOVANÝ PREHRÁVAČ  
DVD\PRIJÍMAČ DVb-T

# DVD

USER'S MANUAL  
PŘÍRUČKA UŽIVATELE  
PRÍRUČKA UŽIVATEĽA

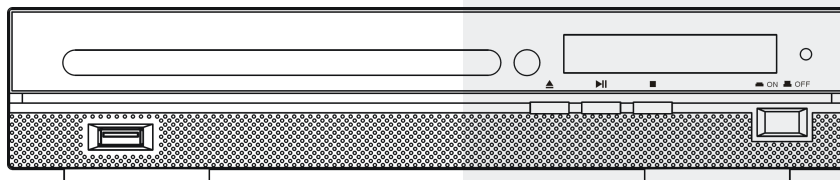

EN CZ SK

Please read this User Manual carefully to ensure proper use of this product and keep this manual for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings, install in accordance with the instructions.
8. Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized plug. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protected the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lighting storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
15. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.
16. No naked flame sources, such as lighted candles, should be placed on the apparatus.
17. Attention should be drawn to the environmental aspects of battery disposal.
18. The use of apparatus in moderate climate.
19. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

**WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

**WARNING:** The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.





The symbol indicates that dangerous voltages constituting a risk of electric shock are present within this unit.



The symbol indicates that here are important operating and maintenance instructions in the literature accompanying this unit.



The symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.

The USB memory stick should be plugged in the unit directly. USB extension cable should not be used to avoid failing of data transferring and interference caused.

The electrostatic loads may cause malfunction. The user needs to reset the unit if this is the case.

**Notes on USB connector:**

The device can play similar file types and formats from the USB device as from the disc.

Before using the USB memory device, test its function ability in communication with the device and read/write data speed.

Keep in mind the data reading through the external connector may be slower than from the internal memory disc and high bit rate files may not be played smoothly.

To achieve the maximum read and write speed, it is recommended to maintain defragmented disc space. Use the FAT32 file system, one part, with no protection. Remember the write speed of memory devices can be significantly lower than the read speed. If the reading / writing of the memory device is not smooth, it can lead to undesirable phenomena, such as shortage of the part of the image (squared) or whole image, sound failure, and in extreme cases to stop the read / write operation.

Unpredictable performance of connected memory device or presence of virus or other harmful software may cause the device function to stop with a need to restart it.

USB connector is of a standard type and it cannot supply the USB device with high power take-off (e.g. HDD). Use devices with own power supply and power them from their own adaptors.

The device has been designed with regard to maximal compatibility with memory devices. Due to the high diversity of devices on the market, we cannot guarantee the compatibility with any USB device. In case of difficulties, try to format the memory device directly in the device. If the problem persists, use another memory device.

 
The device has been tested, using the Kingston memory devices.

## **TABLE OF CONTENTS**

Front panel and Rear pane illustration .....	1
Connecting to a TV Set .....	2
Remote Control .....	3
The setup menu system - DVD part .....	4
MP3 Playback .....	7
Kodak picture CD Playback .....	7
The setup menu system - DVB part .....	8
Troubleshooting .....	12
Specifications .....	13


## FRONT PANEL AND REAR PANE ILLUSTRATION

### Front panel

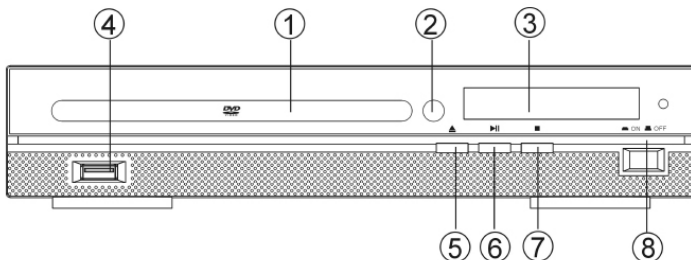


- |                          |                      |
|--------------------------|----------------------|
| 1. CABIN DOOR            | 5. OPEN/CLOSE BUTTON |
| 2. REMOTE CONTROL SENSOR | 6. PLAY/PAUSE BUTTON |
| 3. LED                   | 7. STOP              |
| 4. USB JACK              | 8. POWER             |

### Rear panel

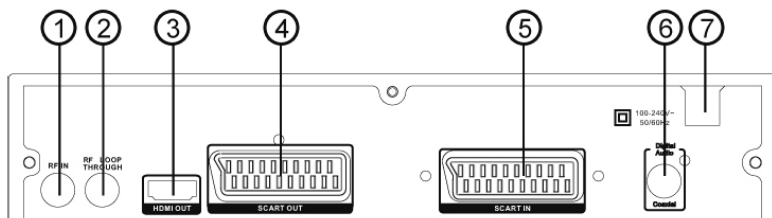 


- |                    |                |
|--------------------|----------------|
| 1. RF IN           | 5. SCART IN    |
| 2. RF LOOP THROUGH | 6. COAXIAL OUT |
| 3. HDMI OUT        | 7. MAINS CABLE |
| 4. SCART OUT       |                |

# CONNECTING TO A TV SET

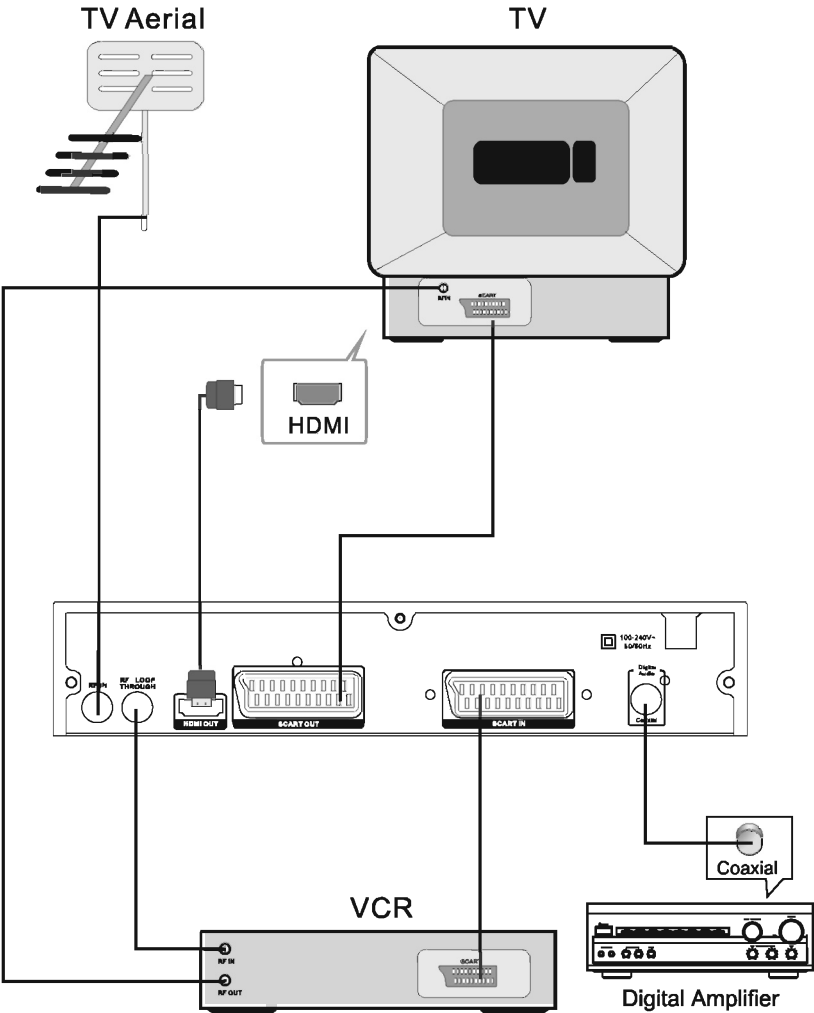 

## REMOTE CONTROL

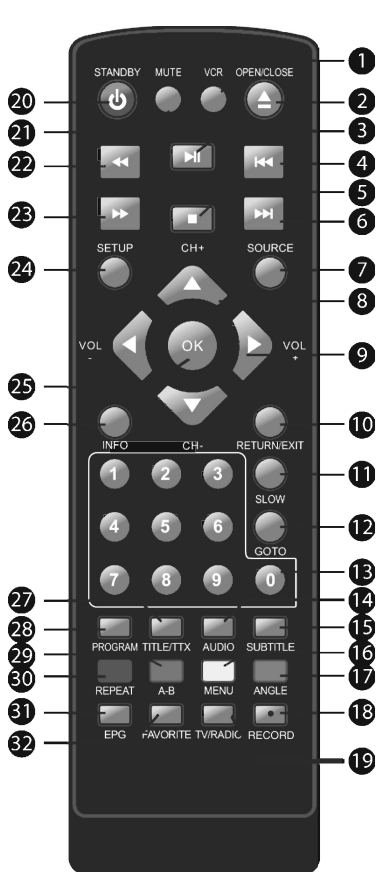 

- 1) VCR
- 2) OPEN/CLOSE
- 3) PLAY/PAUSE
- 4) PREV
- 5) STOP
- 6) NEXT
- 7) SOURCE
- 8) CH+/CH-
- 9) VOL+/VOL-
- 10) RETURN/EXIT
- 11) SLOW
- 12) GOTO
- 13) Number Key
- 14) AUDIO
- 15) SUBTITLE
- 16) MENU
- 17) ANGLE
- 18) RECORD
- 19) TV/RADIO
- 20) STANDBY
- 21) MUTE
- 22) REV
- 23) FWD
- 24) SETUP
- 25) OK
- 26) INFO
- 27) TITLE/TTX
- 28) PROGRAM
- 29) A-B
- 30) REPEAT
- 31) EPG
- 32) FAVORITE

### Note:

1. In this manual, “←” “→” “↑” “↓” will be used to represent different navigation arrows on the remote respectively.
2. In order to operate any of the remote functions, you must first press the Power button on the DVD player.
3. Some of the keys is multiple key. Function before/can be used in DVD mode, after/can be used in DVB mode.
4. The broadcaster is responsible for the content, information and time data, including the accuracy of teletext, Electronic Program Guide EPG and other services, such as audio tracks and subtitles. The device does not display short descriptions but it displays expanded description of programs in EPG.

## THE SETUP MENU SYSTEM - DVD PART

### NOTE:

In the DVD setup and System setup.

If you press [SETUP] into the DVD setup and System setup when playing disc, the some options has no effect.

### GENERAL STEPS OF SETUP MENU

In the DVD mode, Press the [STOP] button or open mode, Then press [SETUP] button, the main setup menu appears.



#### A. DVD Setup - language Setup

Press the [LEFT/RIGHT] button move on the DVD setup and to enter.

The DVD Setup-language Setup option appear the screen.

##### 1. MENU

Highlight the MENU option, and press the [OK] and [UP/DOWN] buttons to choose the menu language you prefer. Press [OK] to confirm.

If the disc you are playing has that Language available, It will display the menu in the language.

**Notes:** If your preferred language is not available, the discs default language will be played.

##### 2. AUDIO

Highlight the AUDIO option, and press the [OK] and [UP/DOWN] button to choose the audio language you prefer. Press [OK] to confirm. If the disc you are playing has that language available, it will output the language.

##### 3. SUBTITLE

Highlight the SUBTITLE option, and press the [OK] and [UP/DOWN] button to choose the subtitle language you prefer. Press [OK] to confirm. If the disc you are playing has that language available, it will display subtitles in that language.



#### B. DVD Setup-Audio Setup

Press [UP/DOWN] button to highlight the Audio Setup option on the screen.

##### 1. DIGITAL OUT

There are three modes: SPDIF/PCM, SPDIF/RAW and OFF.

##### 2. DOWNMIX

There are two modes, one is LO/RO, one is LT/RT.





## C. DVD Setup - Custom Setup



Press the [UP/DOWN] button to highlight the Custom Setup option on the screen.

### 1. PARENTAL CTRL

Parental Ctrl:1,2; G,3; G,4; PG13; 5, 6; R,7; NC17, 8 the eight levels. The first level discs are open to people of ever age and eight level only suitable for the adult. If you want to change the parental ctrl setting, enter the users' age control item and then enter four digital password. The default password is 6666 (if you are using this player for the first time, just input this code). If the input code has been confirmed, the level setting up menu will appear. Move the cursor to choose the expected level and press [OK] button to confirm and memory it.

### 2. ANGLE MARK

There are On and Off the two choices for this item. If in the ON mode, when play a disc which the content is multi-angle shot, you may press the [ANGLE] button on the remote control to enjoy the scene in different angles.

## D. DVD Setup - Exit

Press the [UP/DOWN] button to highlight the EXIT option on the screen.

In the DVD Setup-Exit ,Choose the Exit option to return the DVD main Setup.

### 1. DVD Mode of System Setting

Press the [SETUP] button, the main setup menu appears the screen, then press the [UP/DOWN] button to highlight the system setup.

## E. System Setting Menu-language Setup



Press the [UP/DOWN] button move on the System setup and press [OK] button. the System Menu - Language Setup option appear the screen. In the System Menu - Language Setup, you can setup the OSD option.

### 1. OSD

Highlight the OSD LANGUAGE option, and press the Arrow buttons to choose the OSD language you prefer. Press <ENTER> to confirm, and it will display OSD in that language.

### 2. ENCODING

Highlight the ENCODING option, and press the [OK] and [UP/DOWN] button to choose the supported subtitle language when playing MPEG-4 format media.

## F. System setting Menu - Display Setup



Press the <DOWN> arrow button to highlight the Setup option on the screen.

### 1. TV STANDARD

According to the Color System of the TV, you can choose the TV Standard.

### 2. DISPLAY TYPE

According to the Display type, you can choose 4:3PS, 4:3LB or 16:9.

### 3. VIDEO OUTPUT

According to the output jack of TV set, you can choose CVBS or RGB.

### 4. HDMI RESOLUTION

You can choose 480I, 480P, 576I, 576P and so on.

## G. System setting Menu - Preference



Press [UP/DOWN] button to highlight the Preference option on the screen.

### 1. CHANGE PIN

The default password is 6666.

### 2. DEFAULT TYPE

In the Default Type options, you can choose the DVD MODE, DVB MODE, USB MODE, User Select MODE, Last operation Type MODE.

**Note:** In the Default Type, If you choose the DVB MODE.

That next power on the PLAYER will directly enter DVB MODE, no again display the SOURCE list.

### 3. AUTO STANDBY

You can choose on, The system will go to standby mode after 3 hours in idle state.

### 4. DEFAULT

The Default setup options are RESTORE factory setup, Let your PLAYER work on the default state.

### 5. SYSTEM INFO

The system info includes model, HW, SW and Date.

## MP3 PLAYBACK

When a MP3 disc is loaded, the screen will display as follows:

Press **[UP/DOWN]** button to select the file when the cursor appears in the file window.

Press **[SELECT]** to play the current file select by the cursor.

Press **[LEFT/RIGHT]** to switch between the directory window and the file window.



**Note:** The player will not function correctly under the following condition:

1. The disc is badly scratched, damaged or dirty.
2. The disc is not finalized.
3. The recording format is not supported by the player.

## KODAK PICTURE CD PLAYBACK

- You can set sideshow transition modes for any pictures.
- Press **PAUSE** to stop playing.
- Press **⏪** or **⏩** to see the previous or next picture.
- Press **PLAY** to continue sideshow transitions.
- Press **STOP** to return to root menu.

## IMAGE ROTATION

- Press the **DIRECTION** button (**↑**, **↓**, **←**, **→**) to rotation the image as you prefer.

## THE SETUP MENU SYSTEM - DVB PART

### 1. FIRST TIME INSTALLATION

After all the connections have been made properly, switch on your TV.

Make sure the receiver is connected to the mains and press **[POWER]** to switch the receiver on. And then press the **[SOURCE]** button to switch to DVB reception.

The **[SOURCE]** button is used to switch between DVD, DVB and USB mode.

If you are using the receiver for the first time, a First Time Installation menu will be displayed to guide you through the initial setup. Use the remote control to finish the setup.

- A. At the **First time installation** menu, select **YES** and press **[OK]** button on the remote control to proceed.



- B. Enter your regional settings, include your Country, Language, Time Zone. Then select **NEXT** to proceed.



- C. Select **Yes** to start the automatic channel search.



- D. Wait to complete the scanning. In case you want to stop the scanning, press the **[EXIT]** button. The channels already found will still be stored.



- E. When finished, all active channels found will be stored automatically.  
The last found channel will be played.

## 2. DVB MODE OF MAIN MENU

Press the [SETUP] button, the DVB main setup menu appears the screen, then press the [LEFT/RIGHT] button to highlight the DVB Menu option.

- Press the [UP/DOWN] button move on the DVB Menu and to enter button to enter the DVB Menu-Program list option, appear the screen.



### 1. TV PROGRAM

Press the [RIGHT] button to highlight the TV Program, then press the [OK] button to enter the TV program options, appear the screen. All active channels are listed in the Program List. Select a channel and press the [RIGHT] button, it will show a edit menu to allow you to make your own favorite channel group, lock, move and delete channels.



### 2. MUSIC PROGRAM

Press the [UP/DOWN] button to highlight the Music Program, then press the [OK] button to enter the Music program options, appear the screen.

**Note:** This Music program options operation same the TV Program.

### 3. SORT

Press the [UP/DOWN] button to highlight the Sort options, you can choose the channels Sort style. As: By Name, By Service ID, By LCN.

Press **[UP/DOWN]** button move on the DVB Menu - Program Search option appear the screen. In the DVB Menu-Program Search, you can setup the Automatic Search, Manual Search options.

### 1. AUTOMATIC SEARCH

Choose the Automatic Search options. This operation same the First Time Installation. Refer to First time Installation.

### 2. MANUAL SEARCH

If any channel is missing after auto search, or you want to add newly launched channels, you can use **Manual Search** to scan the desired channels. To manually search the target channel, you must know its parameters, e.g., the channel number. After the channel is found, it is appended to the current channel list.



- A. Enter the **Manual Search** menu via **Main Menu > Program Search > Manual Search**.
- B. Specify the appropriate channel number in the **Channel No** field by press **[UP/DOWN]** button. Enter your selection, the frequency and bandwidth values are changed accordingly.
- C. Select **[OK]** button to start manual search
- D. If no signal is found, a message indicating no signal will appear. Otherwise scanned channel will be saved and appended to the current channel list.

### 1. COUNTRY

In the Country options, you can choose a kinds of the Countries. As: England, Germany, Italy, France, Spain etc.

### 2. LANGUAGE

Press **[UP/DOWN]** button to highlight the Language options, then Press the **<ENTER>** button to into the Language setup.

**1 st /2nd Audio:** This option allows you to select your first and second choice for the audio language. If neither of your selected language is available on the program transmitted, the main language of the program will be used.

**Subtitle:** Allows you to select the subtitle language. If your selected language is not available on the program transmitted, the main language of the program will be used.

**Exit:** you can choose the Exit options to return the System setting.

### 3. GMT USAGE:

Allows you to enable/disable Greenwich Mean Time (GMT) usage.

If you know the GMT time zone of your location, set **GMT usage** to **ON** and select an appropriate time zone. If you prefer to set the time manually, select **OFF** in **GMT usage** item and then manually select the date and time.

### 4. TIME ZONE

Select an appropriate time zone to display the local time correctly.

Both EPG and system schedule need a correct time zone setting.

## 5. SYSTEM SCHEDULE

Press [UP/DOWN] button to highlight the System Schedule options, then Press the [OK] button to into the System schedule setup. This feature allows the receiver to automatically switch on and tune to a pre-specified channel for a pre-set length of time. Up to 10 tasks can be scheduled.

- a. In the **Schedule** panel, use the [UP/DOWN] key to select a task and use [LEFT/RIGHT] key to switch between Inactive and Active.
- b. Press [OK] to enter the detail page.
- c. Enter the following settings as required. Use the [UP/DOWN] key to move between setting items, the [LEFT/RIGHT] key to switch between available selections and numeric keys to enter numeric value.

**Mode:** You can repeat the task by setting the frequency as **Once, Daily or Weekly**. Or you can select **Stop** to disable the task.

**Start and End Time:** Enter the start and end time that automatically turns on and off the receiver.

**Channel Type:** Select TV or radio channel as required.

**Channel No:** Select the channel to be played at scheduled time.

- d. When the setting is done, press [SETUP] or [EXIT] to save the changes.

## 6. PVR SETTING

1. Record Preference: User can change the mode of one button Recording and the length of default Recording Period.

2. Recording Device:

In this Menu: User can change the partition of the USB device, view the USB device information, and format the USB partition.

**Note:** PLEASE NOTICE THE FORMAT OPERATION WILL DELETE ALL THE FILE IN THE CURRENT PARTITION, SO BACKUP THE FILES BEFORE FORMAT OPERATION.

3. My record

Press the [source] button and select the [my record] item.

In this menu, user can watch and delete the record program list in the USB device.

Note:

1. The format of USB only support FAT32, not support NTFS.
2. This initialing time of starting record takes few seconds, please wait.

## TROUBLESHOOTING

If you experience problems with this receiver or its installation, in the first instance please read carefully the relevant sections of this User Manual and this Troubleshooting section.

<b>Problem</b>	<b>Possible cause</b>	<b>What to do</b>
Standby light does not lit	Mains lead unplugged	Check mains lead
	Mains fuse blown	Check fuse
No signal found	Aerial is disconnected	Check aerial lead
	Aerial is damaged/misaligned	Check aerial
	Out of digital signal area	Check with dealer
No picture or sound	Tuned to digital teletext channel	Retune to another channel
Mosaic blocks in picture or picture freezes	Aerial may not be compatible	Check aerial
Scrambled channel message	Channel is scrambled	Select an alternative channel
Forgotten channel lock code		Re-install channels to cancel channel lock
No response to remote control	Receiver off	Plug in and turn on receiver
	Handset not aimed correctly	Aim handset at front panel
	Front panel obstructed	Check for obstructions
	Remote control batteries are inserted incorrectly	Check batteries direction
	Handset batteries exhausted	Replace remote control batteries
After moving the receiver to another room, find can't receive the digital reception	The aerial feed may come through a distribution system which may reduce the digital signal now received by the receiver	Try a direct feed from the antenna
BAD Disc is displayed	Ensure the disc is not warped, damaged or deformed. Ensure the disc is not badly stained or damaged. Ensure the disc format is compatible with player. Please check whether you have tried to play a software CD. If so, please restart the player.	
No disc is displayed	Ensure you have put the disc on the tray. Ensure the disc is not upside down. Ensure the disc is not disorted, stained or scratched.	



## SPECIFICATIONS

Item	Specification	
<b>Tuner</b>	Frequency range	VHF: 174MHz to 230MHz UHF: 470MHz to 862MHz
	Input Impedance	75 Ohms unbalanced
	Signal Input Level	- 78 ~ - 25DBM
	Bandwith	7/8 MHz
<b>Demodulation</b>	Demodulator	COFDM
	OFDM Modulation	2K, 8K FFT, SFN and MFN
	Packet Carries	2K/8K
	Guard Interval	1/4, 1/8, 1/16, 1/32
<b>Connectors</b>	RF IN	IEC 169 - 2 female connector
	RF Loophthrough	IEC 165 - 2 male connector
	TV Scart	Composite video (CVBS), RGB, audio L/R
	VCR Scart	Composite video, audio L/R
	Coaxial	RCA, for SPIDF digital audio output
	Output Port	HDMI
<b>Power</b>	Input	100 - 240V ~ 50/60Hz
	Consumption	15 W max.
<b>Display</b>	Decoder module	PAL, NTSC
	Resolution	720 x 576 (PAL); 720 x 480 (NTSC)
	Aspect Ratio	4:3 (Letterbox, Pan & Scan), 16 :9
<b>Decoding</b>	Video	MPEG2 Transport <u>MP@ML</u>
	Audio	MPEG Auio Layer I&II
<b>Others</b>	Compliance	ETSI EN 300 744 DVB-T Compliance
	Sound Mode	Right, Left, Stereo

**We reserve the right to change technical specifications.**

## Instructions and information regarding the disposal of used packaging materials

Dispose of packaging material at a public waste disposal site.



### Disposal of used electrical and electronic appliances

The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

### For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

### Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

