

SENCOR SDF 1270

Digital Photo Frame



Instruction Manual



TABLE OF CONTENTS

SAFETY INFORMATION.....	2
PACKAGE CONTENTS.....	3
SPEC SUMMARY	3
DPF INTRODUCTION.....	4
REMOTE CONTROL OVERVIEW	5
QUICK START.....	6
OPERATION GUIDE	6
1. Main Menu.....	6
2. Memory Select.....	6
3. Computer connecting elect.....	10
4. Set up	10
5. Calendar/Clock/Alarm.....	11
6. Settings.....	11
7. Frequently Asked Questions.....	12
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS	13
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES.....	13

SAFETY INFORMATION:

- Keep away from water, moisture and dusty areas.
- Working temperature 0-40 °C. Never store in a hot or very cold place.
- Be careful not to drop or knock the photo frame.
- Never try to open the case yourself, always seek technical support.
- Connect the AC adaptor to both the DC IN jack and to the power outlet. (mains socket)
- Only use attachments/accessories approved by the manufacturer.
- When left unused for a long period of time, the unit should be unplugged from the household AC outlet

Warning: To reduce the risk of fire or electric shock, do not expose to rain, moisture, dripping or splashing.

PACKAGE CONTENTS:



Digital Photo Frame



Remote Control



Adapter

SPEC SUMMARY

Main Features:

Plays digital photos as single mode, slide show, and split screen
Play Music and video
Display calendar and clock with alarm
Rotate and zoom photos
Brightness, contrast and saturation adjustable
Easy to use on-screen menus & button controls


Memory Card Slots:

Secure Digital (SD)
Multi Media Card (MMC)
Memory Stick (MS),MS Pro,MS Duo, MS Pro Duo
(MS Duo adapter required)
Secure Digital High Capacity (SDHC)

Specifications:


Pictures: JPEG up to 16 mega pixel resolution
Video:MPEG-1\2\4, Motion JPEG
Audio: MP3
USB ports -USB 2.0 Device
- USB 2.0 Host
AC adapter
-Input AC 100V~240V. 50-60Hz
-Output DC 12V

DPF INTRODUCTION

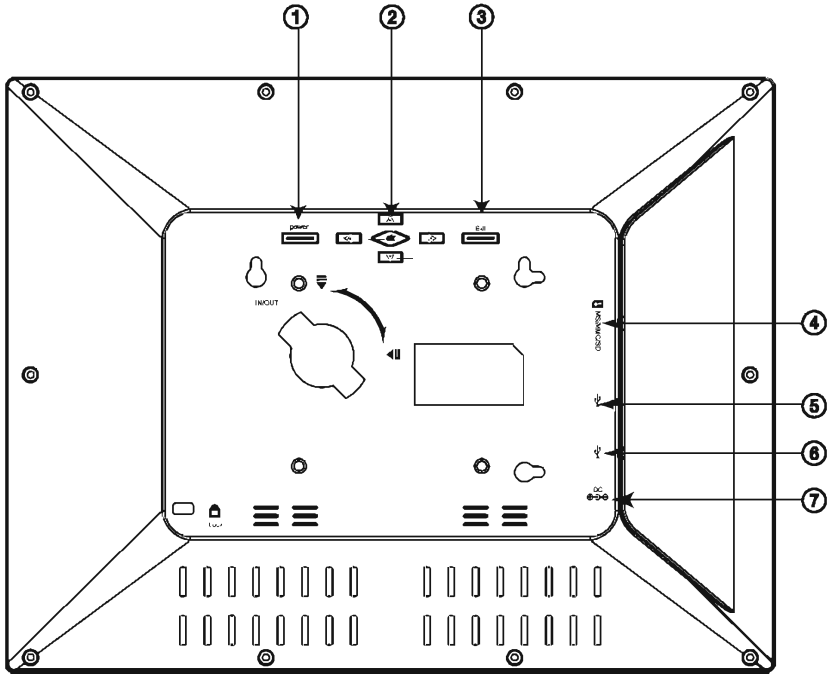

- ① Power
- ② Up/Down/Left/Right/Enter
- ③ Exit
- ④ SD/MMC/MS
- ⑤ USB
- ⑥ MINI USB
- ⑦ DC

REMOTE CONTROL OVERVIEW

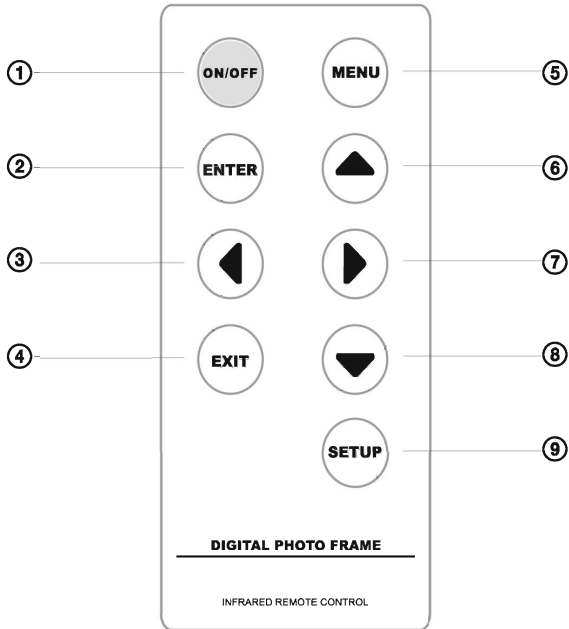

- ① ON/OFF
- ② Select/Execute
- ③ Left
- ④ Exit
- ⑤ Menu
- ⑥ Up/Vol +
- ⑦ Right
- ⑧ Down/Vol -
- ⑨ Setup

Note:

- a) To edit or adjust, press MENU on the remote control.
- b) To go back a step or go to the main menu, press EXIT on the remote control;

QUICK START

Insert the Jack of the DC adaptor into the digital photo frame, and then plug the DC adaptor into a standard power outlet.

OPERATION GUIDE

1. MAIN MENU

- 1) **Card select:** Show which card you insert into frame
- 2) **Setup:** adjust frame settings
- 3) **Calendar:** display a calendar with time and alarm settings



2. MEMORY SELECT

- 1) **Movie:** Select to play movie files
- 2) **Music:** Select to play music files
- 3) **Picture:** Select to play photo as a slideshow
- 4) **Combo:** Slideshow pictures with music background
- 5) **Edit:** Select to copy or delete files



2.1 MOVIE DISPLAY

- Choose movie icon, all the movie files will list on the screen
- Press [▲]/[▼] to choose movie and press ENTER to play
- Press [MENU] during movie playback, the info bar appears on the screen or you can instead press button [Exit] on the frame for 3 seconds.
- Press [◀]/[▶] and ENTER to make selection on the info bar.

Note: Press [▲]/[▼] to increase or decrease volume.



2.2 MUSIC DISPLAY

- Choose music icon, all the music files will list on the screen
- Press [p]/[q] to choose music and press [ENTER] to play



Note: Press [▲]/[▼] to increase or decrease volume.

2.3 PICTURE DISPLAY

- Choose picture icon, all the pictures will list on the screen
- Press [▲]/[▼]/[◀]/[▶] to choose picture and press [ENTER] to play
- Press [MENU] during display pictures, the info bar appears on the screen or you can instead press button [Exit] on the frame for 3 seconds.
- Press [◀]/[▶] and [ENTER] to make selection on the info bar



2.4 COMBO DISPLAY

- Choose combo icon, all the combo files will list on the screen
- Press [▲]/[▼] to choose music or picture and press [ENTER] to play



Note: Press [▲]/[▼] on remote control to increase or decrease volume

2.5 EDIT

Select EDIT Icon

- All the files and folders will be listed on the screen
 - Press [▲]/[▼] to choose different files
 - Press [▶] to select one file, a ✓ will be marked beside the file
- To deselect the file by pressing [▶] again

COPY

- After file selected, press [MENU] and select "copy"
- Press [▲]/[▼] and [▶] to select the copy destination
- Press ENTER, copy finished.



DELETE

- After file selected, press [MENU] and select "delete"
- Press [ENTER] to select "delete"
- Select ✓ then Press [ENTER] to delete selected file.



3. COMPUTER CONNECTING

- Connecting the frame to computer by using USB cable
- Edit files in computer



4. SET UP

Select the setup icon from the main menu to setup your frame

Language	English
Slideshow Time	3s
Slideshow Mode	Random
Display Mode	Crop
Brightness	8
Contrast	8
Saturation	8
Splitscreen Function	Off

Operation method:

[▲]/[▼] button: Shift items or choose parameters

[◀]/[▶] button: change the parameters

[ENTER] button: confirm the setup result

[EXIT] button: back to item list

5. CALENDAR/CLOCK/ALARM

Press [▲]/[▼] to move to the previous or next year,
 Press [◀]/[▶] to change to the previous or next month
 Date Setting is in "set up" menu.



6. SETTINGS

Language	Multi language
Slideshow Time	3/5/15 seconds, 1/15min, 1 hour
Slideshow Mode	14 mode
Music Repeat Mode	Repeat all/one/off
Movie Repeat Mode	Repeat all/one/off
Display Mode	Original—preserves dimension ratios of original picture Stretch – stretches picture to fit screen Crop-- full screen picture, preserves dimension ratios, but crops picture to do so.
Time	Set time (Year/month/day/hour/minute)
Alarm	Set alarm
Brightness	Brightness adjust
Contrast	Contrast adjust
Saturation	Saturation adjust
Auto Power on Time	Set time to power on automatically
Auto Power off Time	Set time to power off automatically
Spitscreen Function	Several photos display on screen the same time
Auto Play	Picture/music/movie/calendar/main menu
Default	Restore to the factory settings.

7. FREQUENTLY ASKED QUESTIONS

Q. Why can't the Digital Photo Frame play all images or movie files?

A: The Digital Photo Frame can support JPEG, MP3 and some video format depending on the product specification. It may not read some files downloaded from the internet.

Q. I have a memory card in the Digital Photo Frame, but it's not reading the card, what should I do?

A: First, make sure that you are using a memory card that is supported by the Digital Photo Frame. Second, ensure that the memory card is inserted all the way into the correct slot. Third, choose the correct card icon which you want to play.

Q. Why do some pictures load faster than others?

A: Higher resolution pictures usually load slower.



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.

NOTE: All rights for modifications reserved

- The above settings are subject to change if the product specifications are modified.

APAML121-2011 V1.1

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.