

# SENCOR®

## SFP 1061 PK / SFP 1062 B Hello Kitty

**MP3/WMA Player**

### **Instruction Manual**

Please read this manual carefully before operation.

**EN**

**MP3/WMA přehrávač**

### **Návod k obsluze**

Přečtěte si prosím tento návod ještě dříve, než začnete s přístrojem pracovat.

**CZ**

**MP3/WMA prehrávač**

### **Návod na obsluhu**

Prečítajte si, prosím, tento návod ešte skôr, než začnete s prístrojom pracovať.

**SK**

**MP3/WMA lejátszó**

### **Használati útmutató**

Kérjük olvassa el ezt a használati útmutatót mielőtt a készüléket használni kezdi.

**HU**

**Odtwarzacz MP3/WMA**

### **Instrukcja obsługi**

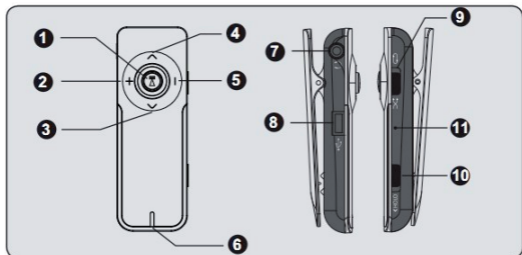
Przed rozpoczęciem używania urządzenia zapoznaj się z jego instrukcją obsługi.

**PL**

 


# UNIQUE FEATURES

- Elegant appearance and easy to use.
- Multi-Code Player - Supporting MP1, MP2, MP3, WMA formats
- Drive Free U Disk - You may manage your files directly through “Portable Device” in “My Computer” on Winows2000 Operating System or above without driver.


# 1. BRIEF VIEW OF PLAYER



 
## 2. KEY FUNCTIONS OF BUTTONS

1.  Play/Pause/Stop, turn on or turn off the mp3 player.
- 2/5. +/- to adjust the volume
3.  to the next
4.  to the previous.
6. indicator light
7. earhone jack
8. USB interface
9. cycle mode
10. control locking
11. reset


### Turn On/Off

Long press  to turn on the player.

When player is switched on, it will play automatically with indication light on.


Long press  to turn off the player when the player is working

### Play& Stop

Short press  to pause when file is playing

## 3. PLAY MUSIC

### Basic Operations

1. Connect the earphone to player
2. Long press  to turn on the player
  - ◀◀ To select previous music
  - ▶▶ To select next music
3. To adjust the volume  
Press +/- to adjust volume.

## 4. USB DISK

The player could be use as standard USB disk with operating system of Windows 2000 and above, Mac OS 10.3 and above, Linux Redhat 8.0 and above (no driver needed) while Windows98 need to set up driver

### **Battery:**

The light is on when the player is charging, the light will be off when the battery is full.

Disconnect the player and charger if you want to stop charging.

Turn off the player when you do not use player.

### **Trouble Shooting**

No Power	<ul style="list-style-type: none"><li>• Check to see if battery is low.</li><li>• Check to see if the player is ON</li></ul>
No sound from earphone.	<ul style="list-style-type: none"><li>• Check to see Volume is set "0" and connect the earphone connects properly</li><li>• Make sure earphone is clean and in good status</li><li>• Damaged MP3 file may make noise and could not be played Make sure that the music files are not damaged.</li></ul>
Failure of music download	<ul style="list-style-type: none"><li>• Check to see if USB cable is damaged and connected properly.</li><li>• Check to see if driver is installed correctly</li><li>• Check to see if memory space is enough</li></ul>

## 5. TECHNICAL SPECIFICATIONS

Capacity	4GB
Interface	USB 2.0 High Speed
Max Playtime	Up to 15 hrs(Ear); Speaker:4 hrs
Battery Type & Capacity	Li-Polymer Rechargeable (3.7V) 280mAh
File type	MP1/MP2/MP3/WMA
S/N ratio	85 ~ 95Db
Earphones output power	(L)5mW + (R)5mW(32 Ohm); Speaker: 1w(8 Ohm)
Operating System	Compatible with Window2K/XP/VISTA/ WIN7 and above
Dimensions	18 x 65 x 23 mm
Weight	14 g
Two variants	SFP 1061 PK - Pink SFP 1062 B - Black



#### **INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS**

Dispose of packaging material at a public waste disposal site.

#### **DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES**

The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

#### **For business entities in the European Union**

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

#### **Disposal in other countries outside the European Union**

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



**This product meets all the basic EU regulation requirements that relate to it.**

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.