

SENCOR®

Let's live!



**BLUETOOTH SPEAKER
SSS 6200N**

**USER'S MANUAL
EN**



Table of Contents

1.	Supply content.....	4
2.	Description of the BT speaker	4
3.	Putting into operation.....	5
4.	LED indicator (power button)	5
5.	Pairing devices via Bluetooth.....	5
6.	NFC feature	6
7.	Audio AUX IN	6
8.	Playback.....	7
9.	Charging	8
10.	Technical specifications	9

Safety Instructions

This product has been designed with the utmost safety in mind.

However, incorrect use may lead to electric shock or fire. This is why users should observe the following instructions when using this device.

This device uses a semiconductor unit and contains no user serviceable parts. Do not disassemble this device, otherwise you are exposed to the risk of electric shock. If any damage to this product occurs, please have this product repaired by a qualified service technician.

Power source

Power supply of this unit must be match the serial plate data.

Heat source

Keep this unit out of heat sources like stove or direct sunlight.

Cleaning

Prior to cleaning, please disconnect power first. For cleaning, don't use liquid detergents or caustic liquids - just clean the unit with a soft cloth.

Heavy objects

Do not place heavy objects on the unit, otherwise damage might occur.

Connecting other devices

Before connecting other devices to this unit, please make sure to disconnect power. Otherwise damage to the unit or personal injury might occur.

Faults to be repaired

If any of the following problems occurs, please disconnect power to the unit and contact a qualified service technician.

- A. Power cord or plug is damaged.
- B. Liquids or other foreign objects have penetrated inside the product.
- C. If the unit does not work even if it's being operated according to the instructions, don't press any buttons other than those described in these instructions. Otherwise, damage to this unit may occur along with a more demanding repair.
- D. This unit has fallen on the ground from a big height.
- E. Burns can be smelled from the product inside.

Maintenance

If you don't have enough technical knowledge necessary to maintain this unit, don't attempt to repair it by yourself. By removing cover, you are exposed to a risk of electric shock. If needed, please contact a qualified service technician.

Replacement of parts

If you need to replace any part of this unit, ask your service technician to make a replacement for equal spare part models. If other spare part models are used for replacement, serious damage, electric shock or shortening the unit's lifetime may occur.

Safety check

When done with the maintenance, ask your service technician to perform an on-site safety check to make sure that the unit's operation is safe.


Note:

Before using this product, read these instructions carefully and keep it well for future use.

1. Supply content

- A** BT speaker
- B** 3.5 mm Audio Jack
- C** Micro USB cable
- D** User's manual

2. Description of the BT speaker

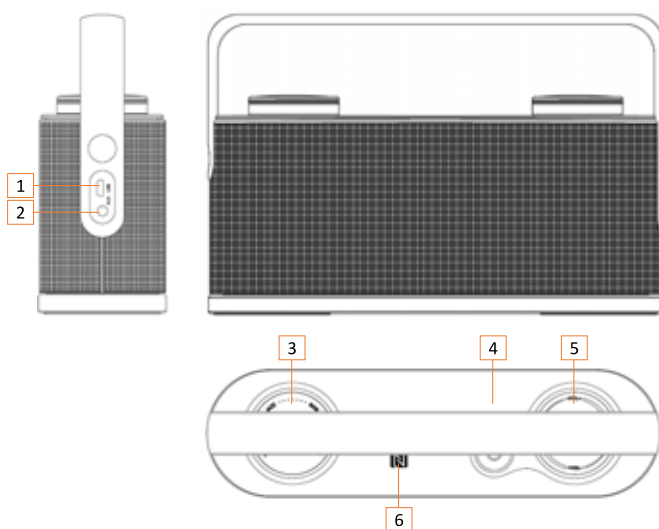

- 1** Micro USB charging connector
- 2** Line-IN 3.5mm Audio Jack
- 3** Equaliser
- 4** Power On button
- 5** Volume; play previous/next
- 6** NFC

3. Putting into operation

Before first use, be sure to read the safety instructions contained in this user's manual carefully.

We recommend that the BT speaker is fully charged before initial starting. Hold down the power button (No. 4) to turn on the BT speaker. Turning on/off is indicated by a sound signal. To turn the BT speaker off, hold down the power On button (No. 4).

4. LED indicator (power button)

The LED indicator shows the following states of the BT speaker:

- a. Blinking blue - the unit is ready to be paired via Bluetooth and the source of the audio signal is not connected
- b. Solid blue - the BT speaker is paired with another device via Bluetooth
- c. Solid green - AUX-IN 3,5mm Audio Jack is connected
- d. Blinking green - the BT speaker's battery is empty
- e. Solid red - the BT speaker's battery is being charged
- f. Solid green - the BT speaker is fully charged

5. Pairing devices via Bluetooth

Turn on the BT speaker and search for its Bluetooth name "SSS 6200N" in the device to which you wish to pair and start the pairing process. If you are requested to enter a pairing code while your device and the BT speaker are pairing, use the code: "0000".

Note:

The time required to pair may vary subject to a specific device. When pairing to a new device for the first time, it's always necessary to pair devices according to the above procedure. The device will then be paired automatically when connected next time (if the BT connection on your paired device is enabled). The BT speaker remembers the last 8 paired devices. To ensure a stable Bluetooth connection, make sure that the distance between the BT speaker and your connected device is kept within 10 m.



Attention:

Some connected devices support common volume setting. If some of the connected devices do not support this feature, the volume setting will operate separately on each device.

6. NFC feature

Enable your device's NFC feature, if equipped, and place your device near the NFC chip on the BT speaker. Follow the instructions on your device. If the connection is established successfully, your device and the BT speaker will be connected automatically.

7. Audio AUX IN

The BT speaker is equipped with a 3.5 mm jack (No. 2 in figure "description of the BT speaker"). Your device (such as mobile phone, personal computer, MP3 player) can be connected to the BT speaker via the supplied audio cable. First connect the audio connector to your appliance and then into the socket in the BT speaker.

Note:


If the BT speaker is paired and a device is connected via a 3.5 mm audio jack simultaneously, only the AUX IN connection will remain active.

**Attention:**

Before connecting your device to the BT speaker, ensure that the output signal from your device is at its minimum level (minimum output volume). This will prevent the BT speaker from possible damaging.

8. Playback

To control the playback, use the illustrated controls:

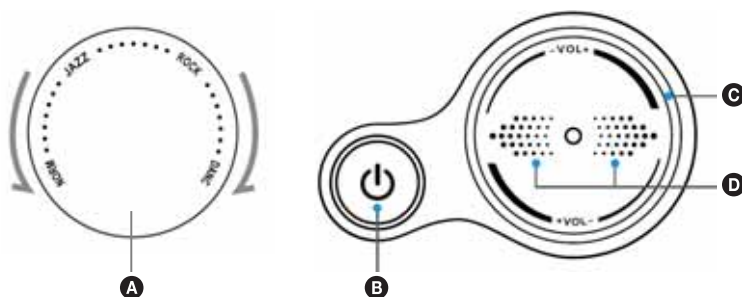

- A** To change the equaliser mode type, turn the control.
- B** To answer an incoming call on a paired device, press the power button. To reject incoming call, press the power button twice quickly.

Note:

The BT speaker allows the sound to be transmitted via the built-in microphone during incoming/outgoing phone call. To ensure the microphone's correct function, it's necessary to speak from a close distance to the area of the controls and the speaker front side.

- C** To change the volume level, turn the control (to increase the volume, turn clockwise, to decrease the volume, turn anticlockwise).
- D** To start the first track playback on a paired device, touch control's the centre point and then move your finger to the right. To skip to next/previous track during playback, touch the control's centre point and then move your finger to the right/left.



Attention:

Controlling smart devices using the BT speaker buttons may differ depending on the connected device.

9. Charging

A charged battery provides power for several hours of operation at normal volume levels. A high volume consumes more battery power; therefore, we recommend listening at normal volume levels.

To charge your device, use your power adapter and USB cable supplied together with the BT speaker. To start charging, connect the cable and your adapter to a power outlet and the BT speaker's socket (No.1 on "description of the BT speaker" figure). The BT speaker will indicate low battery by acoustic signal.

**Note:**

For charging, use only the original accessories supplied with the appliance. To achieve the maximum battery lifetime, it is best to start charging the battery after the low battery power notification by the LED indicator. Charge continuously until fully charged. When the battery operating time becomes very short, the battery lifetime has been used up; we recommend that you have the battery replaced at your authorized centre.

Recommendation:

If the unit is not to be used for an extended period of time, we recommend to fully charge the battery once every two to three months. We do not recommend storing the unit with a flat battery to prevent irreparable damage to the battery (loss of capacity).

10. Technical specifications

SSS 6200N

Easy connection via NFC
DSP digital sound processor
Red dot Desing Award 2016 winner

Sound:

Output power: 20 W (Impedance: 4 Ω)
Frequency response: 120 Hz-18 kHz
Total harmonic distortion: $\leq 1\%$
2 speakers + 2 passive radiators

Inputs:

Bluetooth Audio 4.1
Connection distance: up to 15 m
External audio input (AUX) (3.5 mm stereo connector)

Other:

Amplifier class: D (for rich sound with minimum energy consumption)
Handsfree feature
Built-in battery: 4,000 mAh Li-Ion
Playback time: approx. 8 hours
Micro USB charging
Max. charging time: 5 hours
Accessories: USB charging cable, 3.5 mm external cable (AUX), user's manual
Dimensions: 231 x 151 x 65 mm
Weight: 1 200 g

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



The product meets EU requirements.

Hereby, FAST ČR, a.s. declares that the radio equipment type SSS 6200N is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: www.sencor.eu

Changes in the text, design and technical specifications may be made without prior notice and we reserve the right to make such changes.

The original version is in the Czech language.

Address of the manufacturer: FAST ČR, a.s., Černokostelecká 1621, Říčany CZ-251 01

SENCOR®

EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Authorized service centers

Visit www.sencor.eu for detailed information about authorized service centers.

