

**SENCOR®**

**Let's live!**



**LED TV**  
**SLE 2465DTC**

**USER'S MANUAL**  
**EN**






PLEASE, READ THESE INSTRUCTIONS BEFORE STARTING TO OPERATE THE TELEVISION. STORE IT FOR LATER REFERENCE. NOTE DOWN THE MODEL NUMBER AND THE SERIAL NUMBER OF THE TV SET. LOOK AT THE LABEL ON THE BACK COVER AND PASS THE INFORMATION PROVIDED THERE TO YOUR DEALER IN CASE THAT YOU WOULD NEED SERVICING.

## Contents


1.	Important safety conditions.....	2
2.	Assembly.....	11
2.1.	Installation instructions.....	11
3.	Device.....	12
3.1.	Button functions of the control panel.....	12
4.	Remote controller.....	14
5.	First start.....	16
5.1.	Language selection.....	16
5.2.	Country selection.....	16
5.3.	Environment.....	16
5.4.	Automatic tuning.....	17
6.	Menu.....	19
6.1.	Channel menu.....	19
6.2.	Picture Menu.....	23
6.3.	Sound menu.....	26
6.4.	Time menu.....	28
6.5.	Lock menu, systems block.....	30
6.6.	Hotel mode.....	33
6.7.	Setup menu.....	34
6.8.	Screen menu (only in computer mode).....	39
7.	USB.....	41
7.1.	Photo Menu.....	42
7.2.	Music menu.....	43
7.3.	Movie menu.....	44
7.4.	Text Menu.....	45
8.	DVD player.....	46
9.	Troubleshooting.....	48
10.	Technical specifications.....	51
10.1.	Information sheet.....	53

# 1. Important safety conditions

To be able to use this product properly, read this user's manual carefully and keep it for future reference. If you plan to give (sell) this device to a third person, include all documentation, including this manual, with the transaction.

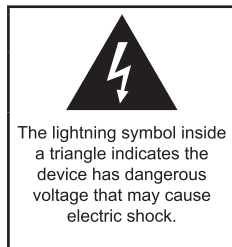

**TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK SIDE). THE INSIDE OF THE DEVICE DOES NOT CONTAIN PARTS THAT CAN BE REPAIRED BY THE USER. REFER TO AUTHORIZED REPAIR SHOPS FOR REPAIR WORK.**

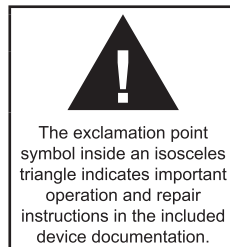

## General safety instructions

- Please read this manual carefully before using the device. Follow this manual and the instructions inside.
- Heed all warnings.
- Follow all instructions.
- Use only the attachments and accessories specified by the manufacturer.
- **OPEN FLAMES, FOR EXAMPLE A BURNING CANDLE, SHALL NOT BE PLACED ON THE DEVICE. DO NOT PLACE HOT OBJECTS OR OBJECTS WITH AN OPEN FIRE ON THE DEVICE, FOR EXAMPLE CANDLES OR NIGHT LAMPS. HIGH TEMPERATURES MAY MELT PLASTIC COMPONENTS AND CAUSE FIRE.**
- Use the device in temperate climate.
- The manufacturer and vendor of the device are in not in any way liable for any direct or indirect damages caused by not following the instructions for installation, setup, operation, maintenance and cleaning of the device mentioned in this manual.
- Protect the device against impacts, falls, blows, shocks, vibration, moisture and dust.
- Prior to granting children consent to use the device, they shall become familiar with the proper and safe use of the player, corresponding to their age.
- If the device has a headphone jack, do not use headphones set to maximum volume. Risk of hearing damage or loss.

## Installation, control

- Install the device according to the instructions in the manual.
- Leave free space around the device, it is necessary for proper air circulation. It helps to dissipate the heat generated by the operation of the device. By covering the air vents of the cabinet, you risk overheating and damage of the device. It is important to ensure that ventilation of the device is not prevented by covering the ventilation openings with e. g. newspaper, tablecloth, drapes, etc. Follow the installation instructions in the manual.

- This device shall not be kept in a closed area, such as a library or shelf, provided sufficient ventilation cannot be provided or the manufacturer's instructions cannot be followed.
- Do not place any objects into the air vents or any other holes. Risk of touching components with dangerous voltage or shorting parts that could cause fire or electric shock. Do not pour any liquids into the device.
- Do not install the device in direct sunlight, or close to heat sources, like radiators, heat exchangers, stoves or other appliances (including amplifiers) producing heat. High temperatures shorten the life of the electronic components of the device significantly. Do not use and do not leave the device near an open fire.
- The device must not be exposed to dripping or running water and you must not place upon it objects filled with liquid, e.g. vases. Protect the device against becoming wet, sprayed on or poured on by any liquid, do not leave or install the device outdoors. Do not use the device outdoors. You risk electric shock or fire by not adhering to these instructions.
- Do not use the device close to water.
- Handle the glass panels and cover of the device with care. The glass screen can break on impact and cause serious injury.
- Make sure the power cord is not stepped on or compressed, especially near the plug and point leading from the device or adapter. The power plug (adapter) is used to disconnect the system and must be easy to access.
- Do not use a device with a damaged power cord or plug. If the power cord or plug is damaged, turn off the device, disconnect it from the power supply and contact your authorized repair shop. Only a professional can replace a damaged power cord or plug. Under no circumstances should you attempt to replace the power cord or plug yourself.
- Do not attempt to bypass the safety function of the polarized plug. If the plug cannot be plugged into your socket, refer to an electrician to replace your obsolete socket.
- Before plugging the device into the socket make sure the voltage in your socket corresponds with the voltage on the label of the device or power adapter. If you are not sure of the type of power source you have in your home, refer to your vendor or local power company.
- Before switching the device on, check whether all power connections are in order and comply with the instructions of the manufacturer. Switch the device off and unplug it from the socket before plugging in or changing the connection of the device.
- Remember to always unplug the plug (adapter) from the socket before unplugging the power cord.
- Plug the power cord into an independent socket. Do not overload wall sockets using extension cords or unified sockets. Risk of electric shock.
- Hold the power cord by the plug and not by the cable when pulling out from the socket.
- Disconnect the power cord from the power outlet during thunderstorms, or when not in use for a longer period of time.

- Avoid carrying the device from a cool environment into a warm environment or vice versa, or operating the device in a moist environment. Air moisture may condense in some areas within the device case and may cause the device to become temporarily inoperable. In this case, leave the device in a warm and well-ventilated area and leave for 1–2 hours until the moisture evaporates. The device can be normally used again. Be especially cautious when using the device for the first time during a cool season immediately after purchasing.
- Do not place the device on an unstable cart, stand, console or table. The device can fall and cause serious injury to children or adults or seriously damage the device and other objects. Only carts, stands or tables defined by the manufacturer or sold with the device shall be used. Any assembly work with the device shall be carried out according to the manufacturer's instructions and shall use assembly accessories recommended by the manufacturer.
- Do not lean against the device, do not lean over or use the device as a step. Avoid quick movements. Make sure children do not play with the machine.
- Be careful when moving the device when placed on a cart. Suddenly stopping, using excessive force and uneven surfaces may cause the cart holding the device to tip over.
- Under no circumstances are the manufacturer or vendor liable for any direct or indirect damage caused by the failure to observe the instructions for installation, configuration, operation, treatment and cleaning of this device included within this manual.
- Protect the device against impacts, falls, blows, shocks, vibration, moisture and dust.
- Do not expose the device to extreme temperatures or humidity.

**Note:**

If the device is powered by an adapter, only use the AC adapter and power cord included with the device. Do not use defective sockets. Make sure the cord is properly plugged into the socket. If the cord is loose, an electric arc can cause fire. Refer to a qualified electrician to replace sockets.

**Note:**

Plug the device into a properly grounded socket with protective grounding pin only.

**Note:**

If you plan to mount the device to a wall or ceiling, follow the instructions of the manufacturer and the user's manual for the given system.

## Repairs and maintenance

- To avoid risks of electric shock or fire, do not remove the device from the case – the case does not contain components that the user could repair or adjust without the necessary equipment and qualification. Refer to a professional service centre if your device requires service.
- In the event of any unusual occurrences during the use of the device, e.g. smelling the characteristic smell of burning insulation or even seeing a smoke, turn the device off immediately, disconnect the power supply and wait with continuing use of the device until you learn the result of its inspection by the service personnel.
- Leave all service to qualified service personnel. Service is necessary when the device is damaged in any way, for example in case of damage to the power cord, spilling liquid on the device, intrusion of foreign objects into the device, when the device is exposed to rain or moisture, if the device does not function in the usual manner or if it fell.
- When repairing or replacing a component of the device, make sure the repair technician used spare parts defined by the manufacturer to ensure the replaced components have the same features as the original. Unauthorized replacements can cause fire, electric shock or other risks.
- Prior to cleaning, moving or other maintenance work, unplug the cord (adapter) from the socket.
- Clean the device with a dry cloth only.
- Do not use gasoline, thinner or other solvents or abrasives, scouring pads, or sponges with scouring pads to clean the device.

**Note:**

Do not throw the device into your common household waste. Respect laws and regulations when disposing of the machine.

## Remote controller and battery

- Do not expose the remote controller or battery to direct sunlight, or close to heat sources, like radiators, heat exchangers, stoves or other appliances (including amplifiers) producing heat. Do not use and do not leave the device near an open fire.
- Make sure the sensor is not exposed to intense light (e.g. sunlight) or fluorescent tube light, which could lower the efficiency and reliability of the remote controller.
- The remote controller or battery must not be exposed to dripping or running water and objects filled with liquid, e.g. vases, shall not be placed on the device. Protect the remote controller against becoming wet, sprayed or poured on by any liquid. Do not use outdoors. Failure to respect these instructions can lead to the remote controller or battery becoming damaged.
- Do not use the device close to water.

- The impact the battery disposal has on the environment shall be monitored carefully. Using the batteries incorrectly can result in leakage and corrosion. Follow the following instructions to ensure proper remote control operation:
  - Do not insert the batteries in the wrong direction.
  - Do not charge, heat, open or short the batteries.
  - Do not throw batteries into a fire.
  - Do not leave dead batteries in the remote controller.
  - Do not combine various types of batteries or old and new batteries.
  - If you do not use the remote controller for a longer period of time, remove the batteries to prevent damaging the remote controller by the batteries leaking out.
  - If the remote controller does not work correctly or its range decreases, replace all batteries with new ones.
  - If there is an electrolyte leakage from the batteries, have the remote control serviced by an authorized technician.

**ALERT:**

**To prevent risk of fire or electric shock, do not expose the device to rain or moisture.**

**ALERT:**

**The batteries must not be exposed to excessive heat, for example sunlight, fire, etc.**



**This symbol indicates the device has double insulation between dangerous voltage from the network and user-accessible parts. Replace parts with identical spare parts only.**

## DVD player

This device is equipped with a built-in DVD player.

To avoid direct exposure to laser radiation, the disc opening is usually located on the side of the device for safety reasons. Do not try to change or alter the opening for discs in any way. When inserting the disc into the player or during the replay, do not look into the opening for discs. Visible laser radiation could be emitted. Do not look at the laser beams.



**ALERT:**

**This device with built-in DVD player is a Class 1 laser product. When using controls or procedures not listed in this manual, people may be exposed to hazardous radiation because the laser beam used in this device is harmful to human eyes. Do not attempt to disassemble the covers of the device. Have all repairs performed by a qualified service center personnel.**

**WARNING:**

**Interference with the device and adjustment or modification without the express agreement of the manufacturer or his authorized representative may result in loss of warranty, removal of the device, damage to property and, last but not least, serious personal injury.**

## Storage and handling of discs

### Handling discs

- Use regularly shaped discs. If you use an irregularly shaped disc (a disc with an unusual shape) this player could be damaged.
- Do not touch the surface without label, which is the recording carrier. When moving the disc, hold the disc by the edges or by the edges and the central opening.
- Do not stick papers or an adhesive tape to the disc.
- If you do not use the player for a longer time, remove the disc from it and store it in a package.
- Make sure that you do not leave fingerprints or scratches on the disc.

**Notes:**

- Do not write on the printed side with a ballpoint pen or pencil. To mark the disc, use a special felt tip pen specially made for this purpose.
- Do not use scratch-resistant protection or packaging.
- Do not use disks labels printed on printers available on the market.
- Do not insert warped or broken discs.

### Discs cleaning

- Fingerprints and dust affect the quality of the picture during playback of the disc. Wipe the disc from the center to the edge using clean cloth, which does not release threads, before use.
- Do not use any solvents, like a thinner, benzene, common cleaning agents or antistatic spray.

## Disc storage

Be careful not to damage the disc, because the data on the disc are sensitive to the surrounding environment.

- Do not store the discs in direct sunlight or close to heat sources. Do not leave the discs in closed motor vehicles parked in direct sunlight. There is a risk of deformation of the discs.
- Keep in a cool and ventilated place.
- Store them in an upright position.
- Store them in clean protective packaging.
- If you suddenly move the player from a cold place to a hot one, condensation may occur on components and lenses, causing abnormal playback. If that happens, do not plug the power cord in the outlet and wait 2 hours. Then insert the disc and try playing it again.

## Supported disc formats



This information informs the user that the player lets you play DVD-RW recordings in VR format (Video Recording).

### Notes:

1. Depending on the recording medium, recording method (PC program used for the making of the disc) and its finalization it is possible that some CD-R or DVD +/- RW / R will not play on this player.
2. Do not attach any stickers or labels to either side of the disc (label side or recording side).
3. Do not use the player to play non-circular discs – when playing irregularly shaped discs you risk damage to the disc or to the player.
4. Some DVD and Video CD playback operations can be intentionally programmed by software manufacturers. This device plays DVD and Video CD disc according to the content of the discs created by the software manufacturer, so some playback features may not be available or some extra features may be available.

Manufactured under the license of Dolby Laboratories Inc. “Dolby”, “Pro Logic” and the double D icon are registered trademarks of Dolby Laboratories Inc.

## Regional code



This player is designed for playback of DVD video with region code 2 or ALL (discs so labelled can be played by any DVD players). You can find the regional code on the label or packaging, the regional code is indicated on its back or bottom side. After inserting a DVD with a region other than the region code listed above into the player, the Check Region Code message will be displayed on the screen and the DVD playback will be rejected by the player.

**This device is equipped with anti-copying technology, protected by USA patents and other rights for the protection of the intellectual property of ROVI. Reverse engineering and disassembly is prohibited.**

## Annex to the LCD screen user's manual

# SENCOR® Appendix to LCD TV Operating manual

### Measures for static image; red/blue/green/black spots on the screen

#### Static picture can permanently damage the screen part of the TV set

- Do not leave a static image on the LCD panel for more than 2 hours. This may result in a damaged panel. This damage is known as "screen burn-in".
- Similar damage to the LCD panel can be caused by static placement of the television station logo.
- Watching television in 4:3 and 16:9 or similar aspect ratios (formats which do not cover the entire display panel) for a longer period of time can leave traces on the right or left edge, or even in the middle of the screen, caused by differences in light emission. Similar damage can also occur for DVD playback or playing video games.
- Displaying a static image from video games or a computer for a longer period of time can result in "image persistence". To prevent this effect, reduce the brightness and contrast levels when displaying static images.



#### The warranty does not apply to screen damage caused by the reasons stated above!

#### Red, blue, green, and black dots may appear on the screen

- This is typical for liquid crystal displays and does not indicate any problems. LCD screens are made using precision technology to provide even the finest image details. Several defective pixels can appear on the screen from time to time, indicated as red, blue, green or black dots (up to 0.001% of the total pixel count of the screen). This does not affect the characteristics and the effectiveness of your TV set.

#### Notes on the USB connector:

- USB memory devices require being connected directly into the device. To prevent a failing or interrupting data transfer, do not use USB extension cable. Electrostatic discharge can cause the device to not function. In this case, the user must restart the device.
- Before using a USB memory device, test that it communicates with the device and its read and write speed.
- For maximum reading speed, we recommend to keep the disc space defragmented. Use file system FAT32, single partition, no protection. If the reading/writing of the memory device is not smooth, it can lead to undesirable effects, such as interruption

of the image (blocky image) or failure of whole frames, audio malfunctions, and in extreme cases, stopping of the operation. Unexpected behaviour of the memory device or the presence of viruses or other malware, may cause stopping of functioning of the device and need to be restarted.

- The USB connector is a standard type and cannot power a USB device with a high power consumption (e.g. hard drives). Use a device with its own power and power them with their own power supply.
- The device was designed with respect to maximum compatibility with memory devices. Considering the variety of devices on the market, we cannot guarantee compatibility with every USB device available. Should you run into any issues, try formatting the memory device directly in the device. Should problems persist, use another memory device.

**Due to wide range of the USB devices on the market, it is not possible to ensure compatibility of the device with all types of USB devices.**

### Serial number

The device's serial number is a unique number that unambiguously identifies your device. Mark down the serial number of your device below along with additional information important for the unambiguous identification of your device.

Serial number: \_\_\_\_\_

Date of purchase: \_\_\_\_\_

#### Note:

1. The graphics in this manual is informative.
2. The menu on your TV screen may be slightly different from the illustrations in this manual.
3. The information in the document are subject to change without notice. The manufacturer accepts no liability for damages incurred directly or indirectly from errors, incompleteness or discrepancies between the instruction manual and the product described.


## 2. Assembly

Before attaching /removing the stand, make sure the TV is turned off and plug is disconnected from the wall outlet.

Before performing the work, put underneath the LED TV set some soft material (e.g. blanket). This will prevent damage to it. Ensure a proper attachment of the supports so that the TV set is stable.

Place the assembled TV set on a firm and flat surface.

### 2.1. Installation instructions

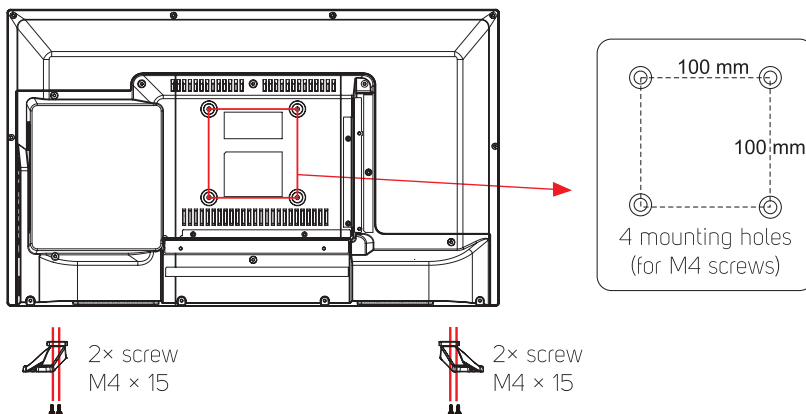


## 3. Device

### 3.1. Button functions of the control panel

The buttons on the bottom right control basic TV functions, including on-screen menu. If you want to use advanced functions, you have to use the remote controller.

**Note:**


Pictures are for illustration only.

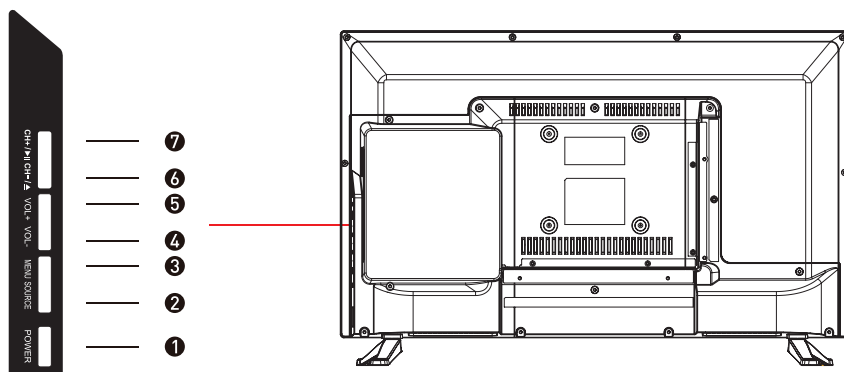

1. **POWER:** TV on/off
2. **SOURCE:** source selection
3. **MENU:** entering or exit menu  
(Use the buttons CH+/- to select, use the buttons VOL+/- for item setting)
4. **VOL-:** lowering volume
5. **VOL+:** increasing volume


6. **CH-**: previous channel  
 ▲: eject disc  
**CH+**: next channel  
 ►||: play/pause
7. **IR RECEIVER**: receives infrared signals from the remote controller
8. **INDICATOR LED**: status indicator

### Connecting points

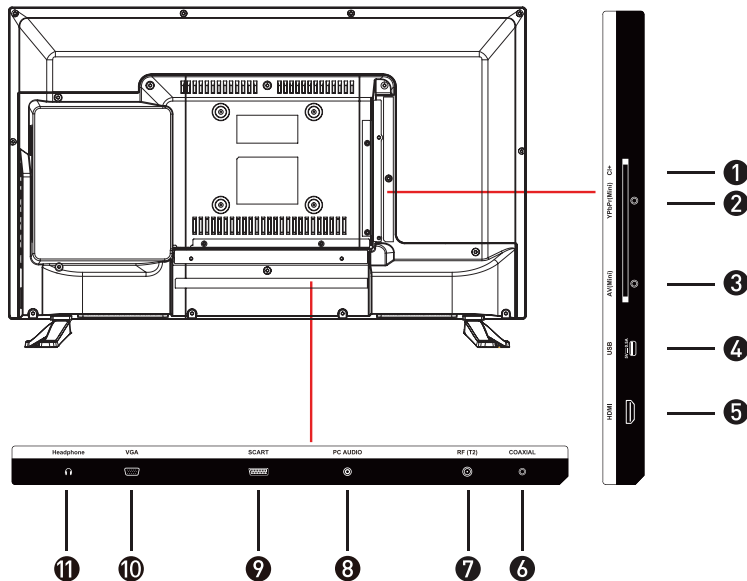

1. **CI+**: CI input
2. **YPbPr (Mini)**: to connect video output YPbPr from DVD
3. **AV (Mini)**: to connect video output from DVD or video player
4. **USB**
5. **HDMI**
6. **COAXIAL**
7. **RF**: to connect antenna
8. **PC AUDIO**: to connect audio output from PC
9. **SCART**
10. **VGA**: to connect video output from PC
11. Headphones jack

## 4. Remote controller

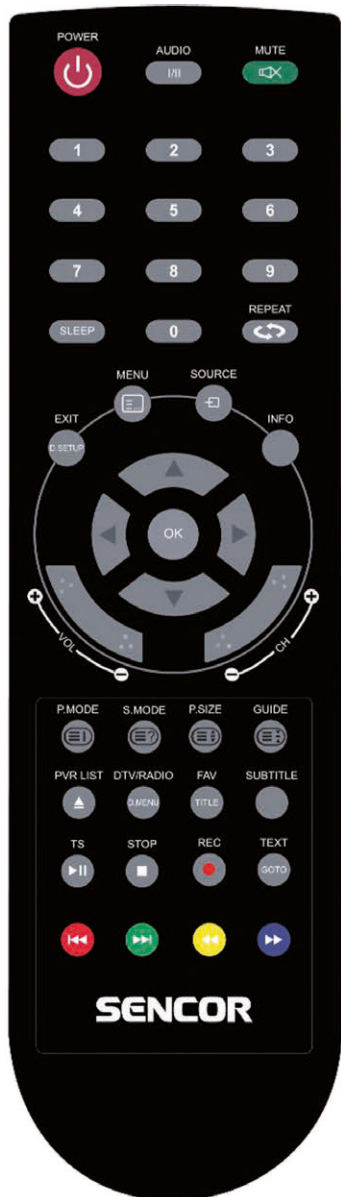

1. **POWER button:** Turn the TV set on/off in/out of the standby mode.
2. **AUDIO I/II button:** Switching between audio channels during playback of media files.
3. **MUTE button:** Press to mute the sound. Resume it by pressing again or by pressing the VOL + button.
4. **0-9 buttons:** Press button 0-9 directly to select a TV channel when watching television. Select the page number in the teletext mode, etc.
5. **SLEEP button:** Set time to automatically turn off the TV set.
6. **REPEAT button (↺):** Button to switch to the previously watched channel.
7. **EXIT button:** Function to exit menu or the screen. In DVD mode is the D.SETUP function, disc playback setting.
8. **MENU button:** In the TV mode it displays the main television menu.
9. **SOURCE button:** Press to select the required input.
10. **INFO button:** Press once to display information such as the channel being watched or the selected input.
11. **▲/▼/◀/▶/OK buttons:** Used for navigation in the menu on the screen and set the TV set according to your preferences.  
**OK button:** Used to confirm; display list of channels.
12. **VOL+/VOL- buttons:** Press to increase or lower the volume.
13. **CH+/CH- buttons:** Press to switch to individual channels.
14. **S.MODE button:** Press repeatedly to select an audio mode.  
**(E) button:** Press the REVEAL button to display or hide hidden information in teletext (depends on the broadcast).



15. **P.MODE button:** Press repeatedly to select a picture mode.  
**(E) button:** Used to display the main page in teletext mode.
16. **P.SIZE button:** Press the P.SIZE button to change the display size.  
**(E) button:** Use to display the top, bottom, or entire teletext page.
17. **GUIDE button:** Press to display/hide the electronic program guide.  
**(E) button:** Hold the current display.
18. **DTV / RADIO button:** Switching between the digital television and radio modes. Starts disc menu in the DVD mode.
19. **PVR LIST button:** Displays the PVR recordings list in the DTV mode. Ejects the inserted disc in the DVD mode (EJECT).
20. **FAV button:** In the TV mode you enter the Favourites menu or you exit it. Starts title menu in the DVD mode.
21. **SUBTITLE button:** Button to display/hide subtitles on the bottom part of the screen if available.
22. **Button ■:** Stop recording/playback of media.
23. **TS button:** Used to start time shift in the DTV mode.  
**▶|| button:** Play/Pause or start a disc or media.
24. **REC/■ button:** Used to start recording in the DTV mode, to stop recording press the button ■.
25. **GOTO button:** Used for playback from a specific location.  
**TEXT button:** Turn teletext on or off.
26. **▶▶I button:** Skip to next track.
27. **Button I◀◀:** Jump to previous track.
28. **◀◀ button:** Fast rewinding.
29. **▶▶ button:** Fast forwarding.  
**Colour buttons:** Used for certain functions in teletext or EPG mode or USB.

#### Note:

Remove the battery during storage or if you do not use the device for a long time. To control your device with a remote controller, point it at the device and then press the desired function. The maximum range of the remote control is about 5 meters with a deviation of up to +/- 30 degrees from the perpendicular direction to the receiving remote sensor on the front of the device. The falling battery capacity decreases gradually the range of the remote controller. When you use the remote controller, there can not be any fixed obstacles between the remote controller and the device. During a standard use, the battery life in the remote controller is about 1 year. If there is a significant reduction in the effective range of the remote controller, replace both batteries in the controller. If you are not going to use the controller for a long time, take out both batteries – thus preventing a possible damage from battery leakage. Prevent entry of strong light (e.g. sunlight or strong light from fluorescent or energy-saving sources) that may limit the efficiency and reliability of infrared remote controller.

## 5. First start

Press **SOURCE** to display the list of input sources.

Use the buttons ▼/▲ or **OK** to select the required input source.

Press **OK** to switch to the appropriate input source.

Press **EXIT** to exit menu.

To watch television connect the antenna cable with functional reception (antenna, common antenna, cable...) to TV input marked as "RF-In".


### 5.1. Language selection

Using buttons ◀/▶ select the language used in menus and news.

### 5.2. Country selection

Using buttons ▼/▲ select the country menu.

Using buttons ◀/▶ select the required country.

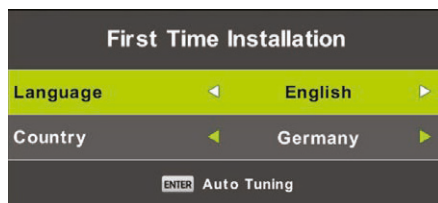

### 5.3. Environment




Choose between home use (Home/Off) or presentation use in a Shop (Shop/On).

Note: Use in presentation mode sets some parameters of the device to the highest values for demonstration in an environment with extreme lighting, accompanied especially by higher wear and tear and power consumption. Therefore switching to the presentation mode is accompanied by an inquiry by the device, where you have to confirm your intention separately.

We strongly recommend home use for common use.

## 5.4. Automatic tuning

Select between the Analogue (ATV) or digital (DTV) reception or keep both receptions ATV+DTV. First will be processed the tuning of the analogue television channels (ATV). If you want to skip the ATV tuning, press the Menu button and the button with left arrow. Afterwards, the tuning of the digital television channels will be done (DTV). If you want to skip the DTV tuning, press the Menu button and the button with left arrow.

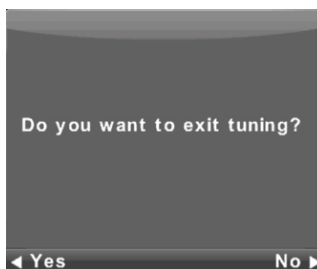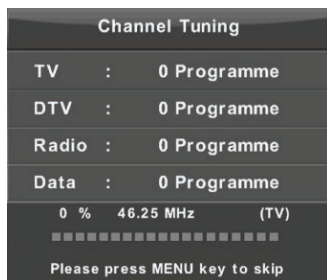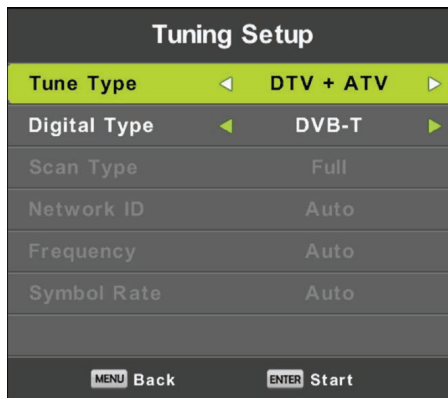

**Note:**

When the automatic tuning does not find any receivable channel (e.g. due to poor antenna) or you interrupted the tuning manually, you can still tune channels manually, one by one, in the device menu described below. For this you will need some technical information about the broadcast that you want to receive, e.g. the method of transmission, of the channels frequency, sound modes, the transmission speed etc.


A successful completion of the automatic tuning results in saving of the list of the available TV programs and radio stations, which you can receive immediately. In the case of multiple occurrences of the same or similar programs (e.g. due to local variations of the same central program or a remote reception with interference or local reception "clean" reception) verify, which station works best for you or modify the list.

## 6. Menu

### 6.1. Channel menu

Press **MENU** to display the main menu.

Use the buttons ◀/▶ to select the item **CHANNEL** in the main menu.

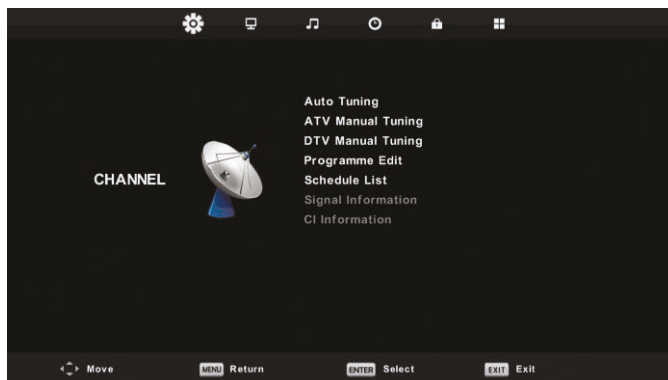

1. Using the buttons ▼/▲ select the item, which you want to modify in the menu **CHANNEL**.
2. Press **OK** and edit.
3. After you finish editing press **OK** to save changes and return to previous menu.

#### 6.1.1. Automatic tuning

Press ▼/▼ to select the item **Auto Tuning** and enter it by pressing **OK/▶**. The same action will happen like in the first tuning, all the previously tuned channels will be deleted.

Tuning Setup	
Country	◀ Germany ▶
Tune Type	◀ DTV + ATV ▶
Digital Type	◀ DVB-T ▶
Scan Type	Full
Network ID	Auto
Frequency	Auto
Symbol Rate	Auto
<input type="button" value="ENTER Start"/> <input type="button" value="MENU Back"/>	




## Search

Start channel search.


### 6.1.3. Manual DTV tuning

Press ▼/▲ to select the item **DTV Manual Tuning** and press **OK** to enter the submenu.  
Press ◀/▶ to select a channel and press **OK** to perform channel search.

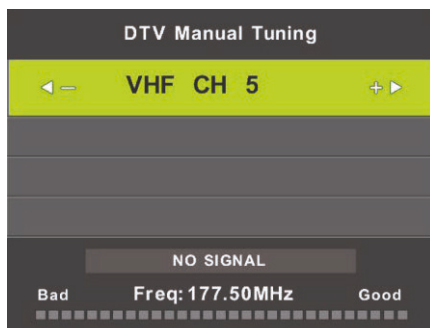

### 6.1.4. Program edit

Press ▼/▲ to select the item **Program Edit** and press **OK** to enter the submenu.

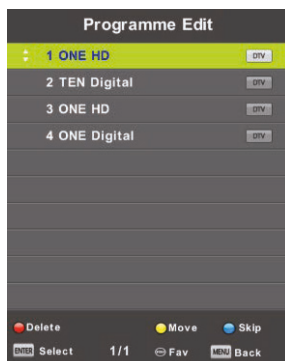

Use colour buttons for channel programming ● ● ●.

First, press the buttons ▼/▲ to mark the channel, which you want to select. Then:

Use the **red** button to remove the program from the list.


Use the **yellow** button to move the program in the Favourites list.

Use the **blue** button to skip the selected channel.



**Press FAV** to add or remove the channel from the list of the Favourite channels (the television will automatically skip the channel when you will use the buttons CH+/- for switching channels).

### 6.1.5. Schedule list

You can program in the digital broadcast system certain time dependent actions, which are called Events. These events scheduled by you (programmed) are saved in the list. Press ▼/▲ to select the item **Schedule List** and press **OK** to enter the submenu. It is available with some sources.

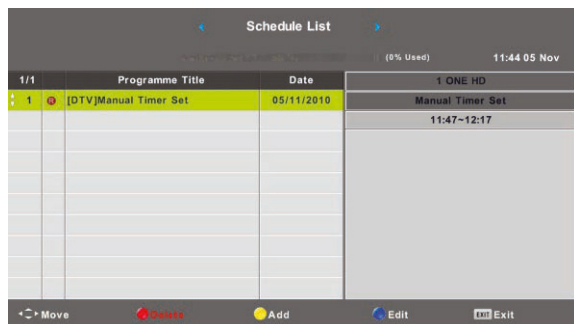

Enter the following interface using the **yellow** button.

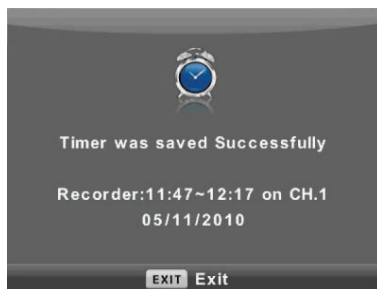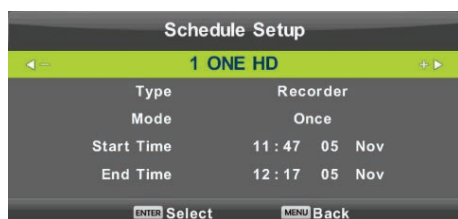

If the set time is in conflict an alert is displayed.



## 6.1.6. Signal information


Use the buttons ▼/▲ to select the item **Signal Information**. Press **OK** to display detailed information about the signal, its strength and quality (degree of interference). Available only for the DTV signal. For satisfactory reception use only programs/channels with the highest values of both variables, max. is 100.

Signal Information	
Channel: 5 (177.50MHz)	
Network ...	
Modulation Unknow	
Quality 100	(Good)
Strength 0	(Weak)

## 6.2. Picture Menu

Press **MENU** to display the main menu.

Use the buttons ◀/▶ to select the item **PICTURE** in the main menu.

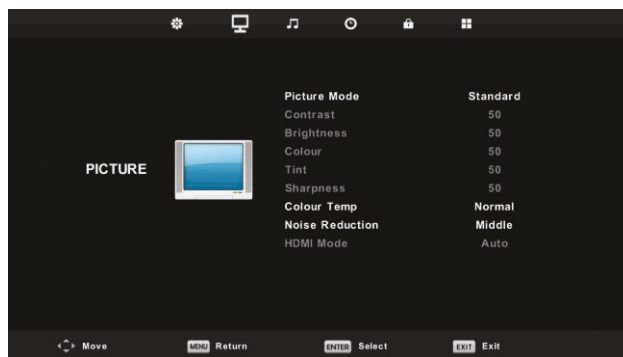


1. Using the buttons ▼/▲ select the item, which you want to set in the menu **PICTURE**.
2. Press **OK** and set.
3. After you finish the setting, save it by pressing the button **MENU** and return to the previous menu.

### 6.2.1. Picture mode

Press ▼/▲ to select the item **Picture Mode** and press **OK** to enter the menu.

If the picture is in the **Personal** mode, you can change the values of contrast, brightness, colors, sharpness and tint.

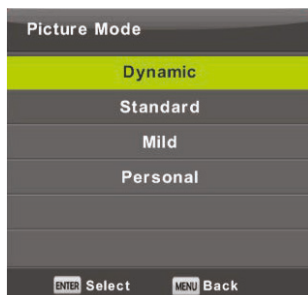

Tip:

You can use the button PMODE for direct change of the picture mode.

Contrast / Brightness / Color / Tint / Sharpness

Press ▼/▲ to select the item and then press ◀/▶ to perform the change.

Contrast: The level of intensity of the light places in the picture. The dark places remain unchanged.

Brightness: Setting the overall brightness of the picture. Affects the dark areas of the picture.

Colour: Adjust the colour saturation according to your preference.

Tint: Used for color compensation, only for NTSC.

Sharpness: Setting the highlighting of picture details.

#### Note:

The items are available only for **User picture setting**.

### 6.2.2. Color temperature

Change of the overall color presentation.

Using the buttons ▼/▲ select the item **Color Temperature** and then press **OK** to enter the submenu.

Using the buttons ◀/▶ select the mode (available picture modes: Cold, Normal, Warm).



**Cold** Emphasizes blue tint of the white color.


**Normal** Keeps the white color neutral.

**Warm** Enhances the red tone of the white colour.

### 6.2.3. Noise reduction

It is used to filter and suppress image noise and improve image quality.

Using the buttons ▼/▲ select the item **Noise Reduction** and then press **OK** to enter the submenu.

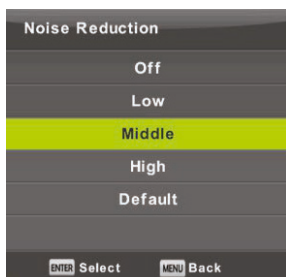

**Off:** Noise detection in the picture is off.

**Low:** Detection and reduction of a low picture noise.

**Medium:** Detection and reduction of a medium strong picture noise.

**High:** Detection and reduction of a strong picture noise.

**Default:** Set as default.


### 6.2.4. HDMI mode

Select for the currently connected source in the HDMI input either **Video** (e.g. satellite receiver) or **PC** (computer) or **AUTO**. This way you will adjust the picture processing and its size to the current source. When a source is not connected the HDMI is not active.

## 6.3. Sound menu

Press **MENU** to display the main menu.

Press **◀/▶** to select in the main menu the item **SOUND**.

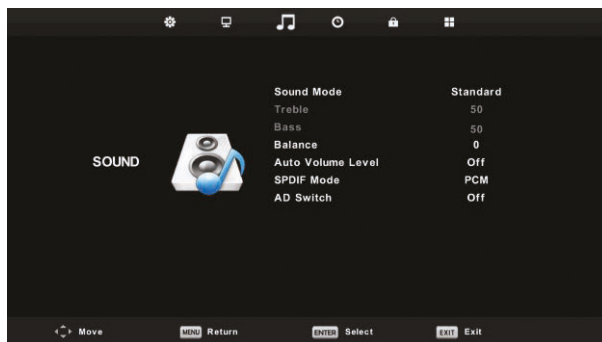


1. Using the buttons **▼/▲** select the item, which you want to set in the menu **SOUND**.
2. Press the button **OK** and adjust the setting.
3. When you complete the setting, press **OK** to save it and return to the previous menu.

### 6.3.1. Sound mode

Press **▼/▲** to select the item **Sound Mode** and press **OK** to enter the submenu.

Use the buttons **▼/▲** to make selection.

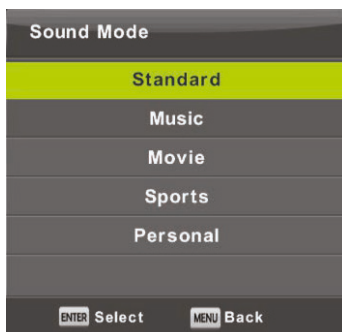

If the sound is in the **User** mode, you can change the values for treble and bass.

**Tip:**

To change the sound mode directly, use the button **SMODE** on the remote controller.

**Standard:** Provides balanced sound in all environments.

**Music:** Maintains the original sound. Suitable for music programs.

**Movie:** Emphasizes the treble and bass for an enhanced audio experience.

**Sports:** Emphasizes voice in sports programs.

**Personal:** It allows you to customize the sound settings.

**Note:**

Bass and treble are available only in the **User** mode, where you can set it as necessary.

### 6.3.2. Balance

Use the buttons **▼/▲** to select the item **Balance**. Use the buttons **◀/▶** to perform the adjustment.

### 6.3.3. Automatic volume levelling

Use the buttons **▼/▲** to select the item **Auto Volume Level** and then use the buttons **◀/▶** to select the option **On** or **Off**.

### 6.3.4. Digital output

Press **▼/▲** to select the item **SPDIF Mode** and then press **◀/▶** to select the option **Off**, **PCM** or **Auto**. Designed for external digital audio processing.

### 6.3.5. Switching the sound description

Use the buttons **▼/▲** to select the item **AD Switch** and then use the buttons **◀/▶** to select the option **On** or **Off**. Function for the visually impaired, at which an active audio track describes the current picture. It requires the support of the encoded data stream. When you turn the function on, it adds to the original sound of the program a commentary with a preset volume, with which are some programs equipped by the broadcaster.

**Note:**

**Balance:** this item allows to set the speaker output and to optimize listening from the place where you are.

**Auto Volume Level:** This item is used to automatically reduce the differences between the volumes of channels and programs.

## 6.4. Time menu

Press **MENU** to display the main menu.

Use the buttons ◀/▶ to select the item **TIME** in the main menu.




1. Using the buttons ▼/▲ select the item, which you want to set in the menu **TIME**.
2. Press the button **OK** and adjust the setting.
3. When you complete the setting, press **OK** to save it and return to the previous menu.

### 6.4.1. Time zone

Press ▼/▲ to select the item **Time Zone** and press **OK** to enter the submenu.

Use the buttons ▼/▲/◀/▶ to select the time zone.

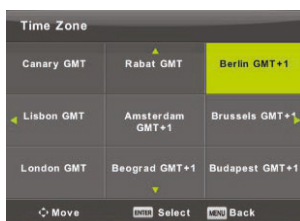


#### Note:

Correct time setting (incl. the switching to summer time) is needed for many functions of digital broadcasting, e.g. EPG. The accurate time is present in the broadcasting and the device synchronizes with it. It is necessary only for the user to set the correct time zone.


### 6.4.2. Sleep Timer

Press ▼/▲ to select the item **Sleep Timer** and press **OK** to enter the submenu.  
Use the buttons ▼/▲ to select (available options: Off, 15 min, 30 min, 45 min, 60 min, 90 min, 120 min, 180 min, 240 min).

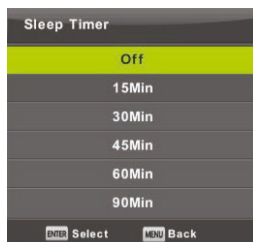

### 6.4.3. Automatic standby mode

Press ▼/▲ to select the item **Auto Standby** and press **OK** to enter the submenu.  
Use the buttons ▼/▲ to make selection.

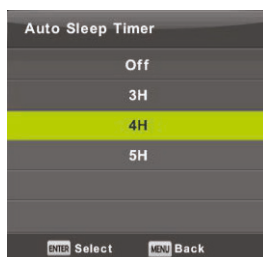


#### Tip:

If you do not use the remote control during the set time, the TV automatically switches to standby mode. If you use the controller, the timer resets. The length of time suffices for most users. You can deactivate the shutoff function entirely by selecting OFF.

### 6.4.4. Menu display timer


Use the buttons ▼/▲ to select the item **OSD Timer** and press **OK** to enter the submenu. Use the buttons ▼/▲ to select how long should be displayed the setting options on the screen before they disappear.

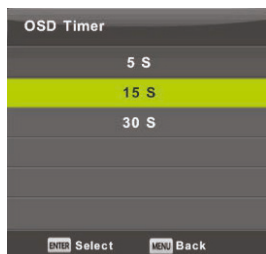

### 6.5. Lock menu, systems block

Press **MENU** to display the main menu.

Use the buttons ◀/▶ to select in the main menu the item **Lock**. You have to enter a valid password.

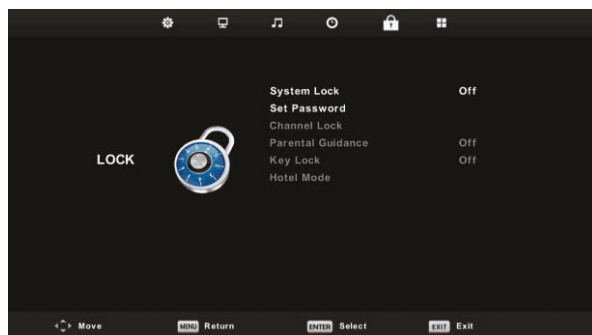


1. Using the buttons ▼/▲ select the item, which you want to set in the menu **LOCK**.
2. Press the button **OK/◀/▶** and adjust the setting.
3. After you finish the setting, save it by pressing the button **MENU** and return to the previous menu.

The default factory password is 0000, and if you forget what you have set, contact a service centre.




### 6.5.1. Lock system

Press ▼/▲ select the item **Lock System**, press **OK** and select one of the following options.

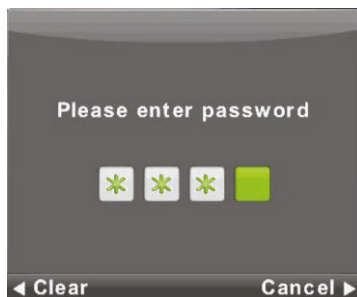

### 6.5.2. Setting the password

Press ▼/▲ to select the item **Set Password** and then press **OK** to enter the submenu and set the new password.

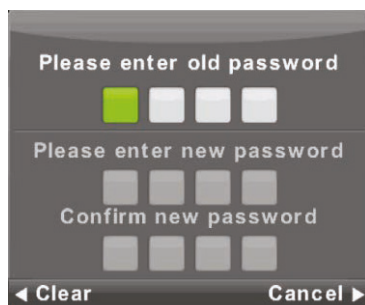

### 6.5.3. Channel Lock

Press ▼/▲ to select the item **Channel Lock** and then press **OK** to enter the submenu and perform the selection.


Use the **green button** to lock or unlock the channel. You have to enter the a password to watch it.



### 6.5.4. Parental Guidance

Press ▼/▲ to select the item **Parental Guidance** and then press **OK** to enter the submenu and select the age suitable for your children.

The broadcaster can provide information about a program about a recommended or minimum age for watching it. If a program is broadcast with hidden mark of minimum age, the device then compares it with what you entered, and possibly prompts for a password, so that you can watch the program for higher age.

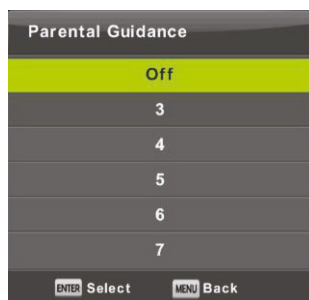


### 6.5.5. Key Lock

Use the buttons ▼/▲ to select the item **Key Lock** and then use the buttons ◀/▶ to select the option **Off** or **On**.

If the key lock is active, you can not use the buttons on the control panel of the TV.

### 6.5.6. Hotel mode

Hotel Mode is used to restrict certain TV functions, to make it easy to operate in places where should be e.g. limited maximum volume or to prevent tuning TV.

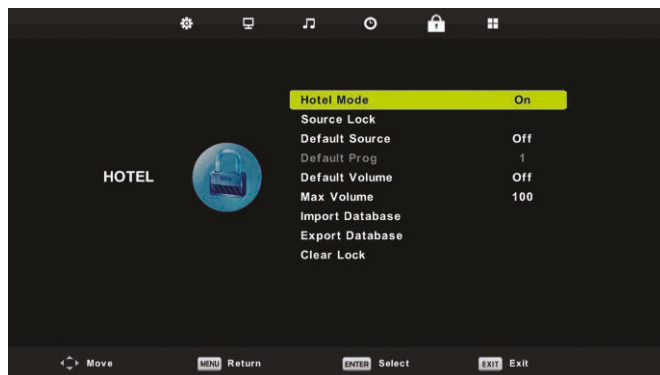

1. Use the buttons ▼/▲ on the remote control to select the hotel mode in the menu **Lock**.
2. Press **OK** on the remote controller to enter the submenu.
3. After you finish the setting, save it by pressing the button **MENU** and return to the previous menu.

## 6.6. Hotel mode

Using the buttons ▼/▲ select the item **Hotel Mode** and then use the buttons ◀/▶ to select the option **On** or **Off**.

### 6.6.1. Source Lock

Use the buttons ▼/▲ to select the item **Source Lock** and then press **OK** to enter the submenu and to select.

### 6.6.2. Default Source

Use the buttons ▼/▲ to select the item **Default Source** and then press **OK** to enter the submenu and to select.

### 6.6.3. Default Program

Use the buttons ▼/▲ to select the item **Default Prog** and then use the buttons ◀/▶ to select.

### 6.6.4. Maximum Volume

Use the buttons ▼/▲ to select the item **Max Volume** and then use the buttons ◀/▶ to select.

### 6.6.5. Clear Lock

Press ▼/▲ to select the item **Clear Lock** and then press **OK** to clear the previous settings.

## 6.7. Setup menu

Press **MENU** to display the main menu.

Use the buttons ◀/▶ to select the item **SETUP** in the main menu.




1. Using the buttons ▼/▲ select the item, which you want to set in the menu **SETUP**.
2. Press the button **OK**/◀/▶ and adjust the setting.
3. When you complete the setting, press **OK** to save it and return to the previous menu.

### 6.7.1. Menu language on the screen

Select the displayed language of the menu on the screen. English is the selected default menu language.

Use the buttons ▼/▲/◀/▶ to select the menu language.

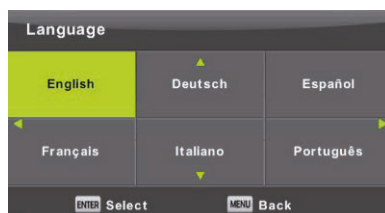

### 6.7.2. TT Language

Press ▼/▲ to select the item **TT Language** and then press **OK** to enter the submenu.

Use the buttons ▼/▲/◀/▶ to select the teletext language if the national alphabet is not correctly displayed.



### 6.7.3. Audio Language

Press ▼/▲ to select the item **Audio Languages** and then press **OK** to enter the submenu. Automatically selects a specific language if it is present in the broadcast. You can use two languages in order of primary and secondary. If there is no language selected by you, the language of the broadcaster will be selected.

Use the buttons ◀/▶ to select the primary/secondary language.

Use the buttons ▼/▲/◀/▶ to select the audio languages.



### 6.7.4. Subtitle Language

Press ▼/▲ to select the item **Subtitle Language** and then press **OK** to enter the submenu. Automatically selects a specific language if it is present in the broadcast. You can use two languages in order of primary and secondary. If there is no language selected by you, the language of the broadcaster will be selected.

Use the buttons ◀/▶ to select the primary/secondary language of the subtitles.

Use the buttons ▼/▲/◀/▶ to select the subtitle language.



### 6.7.5. Hearing Impaired, Impaired listening

Press ▼/▲ to select the item **Hearing Impaired** and then press **OK** to select the option **On** or **Off**. Depends on the program broadcasting.

### 6.7.6. PVR File System

It is an option to set recording (PVR) of digital broadcasts on your USB storage device. Due to the size of the data coming from digital broadcasting, the settings are more detailed. Press ▼/▲ to select the item **PVR File System** and then press **OK** to enter the submenu.

Press ▼/▲ to select the item **Check PVR File System** and then enter the settings by pressing **OK**. The speed of the USB device will be checked. The result determines what best broadcast is your USB device capable of holding. When the result is unsatisfactory, format the TV, which will attempt to adapt the USB device better to the digital broadcast recording. Due to the limit of the file size and recording choose lower values. Higher values rapidly increase the demands on your memory device, both on size and especially the speed.



**NOTICE:**


**Formatting permanently erases all contents of the memory device!**

**Note:**

First try each USB device for speed and the reliability of recording. When the result is unsatisfactory, replace it with another one, mainly faster. The speed of the USB memory is the basic parameter of the reliability of the recording and also of the time shift.

### 6.7.7. Aspect ratio

Press ▼/▲ to select the item **Aspect Ratio** and then press **OK** to enter the submenu. Use the buttons ▼/▲ to select the aspect ratio (available options: Auto, 4:3, 16:9, Zoom1, Zoom2)

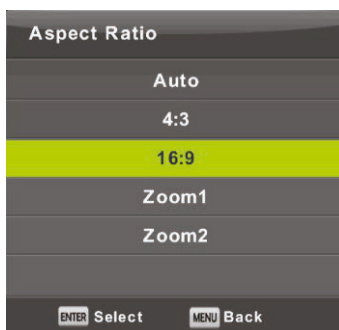

### 6.7.8. Blue screen

Press ▼/▲ to select the item **Blue Screen** and press **OK** to select the option **On** or **Off**. The function will apply if there is no useful picture signal to display.

### 6.7.9. First Time Installation

Press ▼/▲ to select the item **First Time Installation** and then press **OK** to enter the settings. You erase the previous settings and tuning and go through the whole process of putting the device into operation again.

### 6.7.10. Reset, Reset the default factory setting.

Press ▼/▲ to select the item **Reset** and then press **OK** to enter the submenu. The function performs return of TV settings to factory defaults, except for deletion of the list of tuned programs.

### 6.7.11. Software Update (USB)

Use the buttons ▼/▲ to select the item **Software Update (USB)**, insert the USB device in the USB slot and then press **OK**, to update the software.



#### ALERT:

**Update the new TV software only in case when you have the original software producer for the given type including the description of the changes. Any attempt to update with non-genuine software, even with small differences may end up causing irreversible damage to the TV, which is not covered by warranty.**

### 6.7.12. Environment

Choose between home use (Home/Off) or presentation use in a Shop (Shop/On).


Note: Use in presentation mode sets some parameters of the device to the highest values for demonstration in an environment with extreme lighting, accompanied especially by higher wear and tear and power consumption. Therefore switching to the presentation mode is accompanied by an inquiry by the device, where you have to confirm your intention separately.

We strongly recommend home use for common use.

### 6.7.13. HDMI CEC

The feature performs settings of special items of digital communication between devices at the HDMI interface. Follow the instructions in your external **HDMI CEC** to set the items and verify the correct communication.

Press ▼/▲ to select the item HDMI CEC and then press **OK** to enter the submenu.

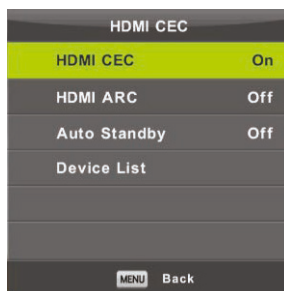

#### HDMI CEC HDMI ARC

Press ◀/▶ to switch on or off the HDMI CEC function.

Press ◀/▶ to switch on or off the HDMI ARC function.



### Auto Standby, Device Auto Power Off, TV Auto Power On.

Press ◀/▶ to turn on or off the auto standby mode for this TV set as well as for a connected device.


### Device List, Device Menu

Press the button **OK** to open the main menu of the device.

## 6.8. Screen menu (only in computer mode)

Press **MENU** to display the main menu.

Use the buttons ◀/▶ to select the item **SCREEN** in the main menu.

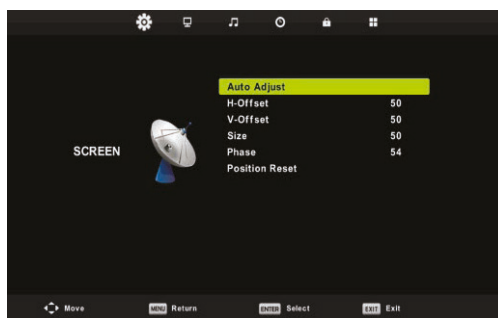

1. Using the buttons ▼/▲ select the item, which you want to set in the menu **SCREEN**.
2. Press the button **OK** and adjust the setting.
3. When you complete the setting, press **OK** to save it and return to the previous menu.

### 6.8.1. Automatic adjustment

Press **OK** to start automatic setting of the horizontal/vertical shift, size and phase.

### 6.8.2. Horizontal offset

Set the horizontal position of the picture.

Press ▼/▲ to select the item **H-Offset** and then press **OK** to enter the submenu.

### 6.8.3. Vertical offset

Set the horizontal position of the picture.

Press ▼/▲ to select the item **V-Offset** and then press **OK** to enter the submenu.

### 6.8.4. Size

Set the size of the picture.

Press ▼/▲ to select the item **Size** and then press **OK** to enter the submenu.

### 6.8.5. Phase

Setting of obtrusive horizontal lines.

Press ▼/▲ to select the item **Phase** and then press **OK** to enter the submenu.

### 6.8.6. Position Reset

Press ▼/▲ to select the item **Position Reset** and then press **OK** to enter the setting.

#### Note:

1. Item **Noise Reduction** in the menu **PICTURE** is not valid.
2. Item **AD Switch** in the menu **SOUND** is not valid.
3. The menu **TIME** and description are the same as in the antenna mode.
4. Items **Block Program** and **Parental Guidance** in the **LOCK** menu are not valid.
5. Items **Audio Languages**, **Subtitle Language**, **Hearing Impaired** and **PVR File System** in the menu **SETUP** are not valid.
6. The computer mode does not contain the **CHANNEL** menu.

## 7. USB

**Note:**

Before you use the menu **Media**, connect the USB device and then press the button **INPUT** and set the input source to **Media**. The TV set detects the majority of the USB devices and shortly offers you to switch to playback. When you will not respond, the offer disappears and the TV remains in the original mode.

Press **▼/▲** to select the item **Media** in the menu **Source** and press **OK** to enter the settings.




Press **◀/▶** to select in the main menu **Media** the item that you want to set and press **OK** to enter the settings.

## 7.1. Photo Menu


Press ◀/▶ to select in the main menu the item **PHOTO** and then enter the interface by pressing **OK**.

Press **Exit** to return to the previous menu and to exit menu.

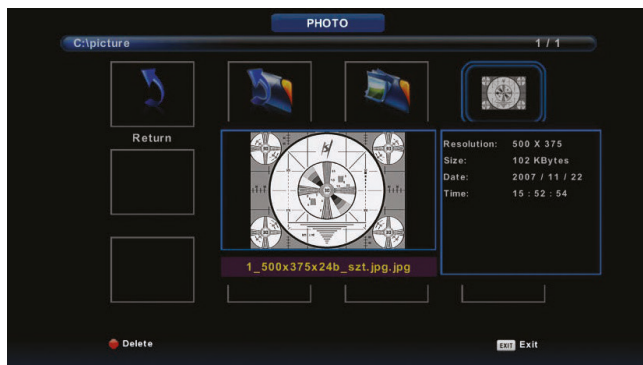

Press ◀/▶ to select in the file menu the file, which you want to view and press the button **OK** to display the picture. If you want to view only this image, press the button **Pause**, otherwise the slideshow of all the photos in the directory starts, beginning with the tagged picture. Press the **down** arrow to hide the information bar with slideshow controls. To resume the paused slideshow, press **Play/Pause**. Stop the slideshow by pressing **EXIT**, you will return to the directory list.


When you pause on an image in the directory list, after a while, the file information appears on the right, and a preview of the image is displayed in the middle.

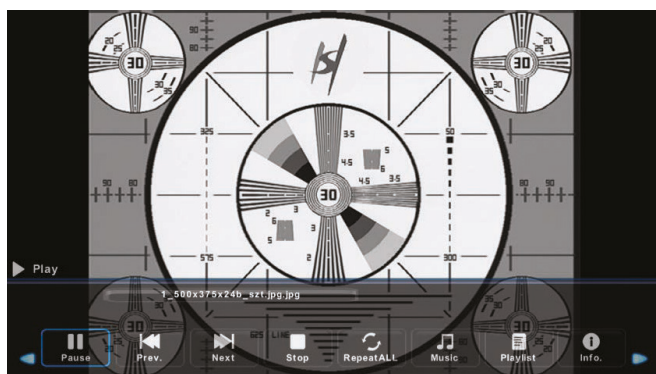

## 7.2. Music menu

Press ◀/▶ to select in the main menu the item **MUSIC** and then enter the interface by pressing **OK**.

Press **Exit** to return to the previous menu and to exit menu.

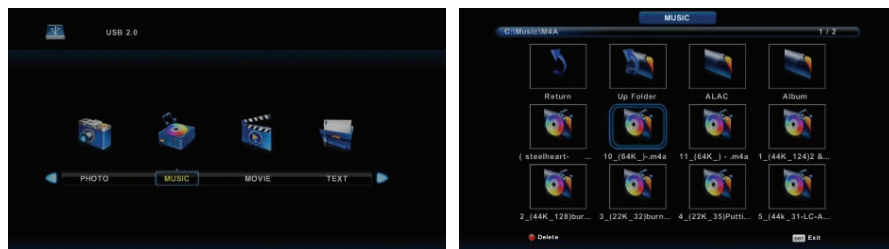

Press ◀/▶ to select the disc unit from which you want playback and press **OK** to enter the interface. Press the down arrow to hide the information bar with controls, resume the bar by pressing **OK**. End playback by pressing **EXIT**, you will return to the directory. When you pause in the directory on a music file, after a while the information about the file is displayed on the right and a playback starts.



Use the buttons ◀/▶ to select the item to return to the previous menu.

### 7.3. Movie menu

Press ◀/▶ to select in the main menu the item **MOVIE** and then enter the interface by pressing **OK**.

Press **Exit** to return to the previous menu and to exit menu.




Press ◀/▶ to select the disc unit from which you want playback and press **OK** to enter the interface. Press the media button to play the selected movie if it is acceptable for playback, especially its codec.

Press **INFO** to select the information bar which you want to start at the bottom and press **OK** to enter it.

If a file with external subtitles is present in the directory, with the same name as the movie, the device will play it (**SUBTITLE** button). You can select among national alphabets by pressing **CharSet** in the information bar. When you pause in the directory on a movie file, after a while information about the file is displayed on the right and the file starts playing.

Press **Exit** to return to the previous menu and press again **Exit** to exit the overall menu.

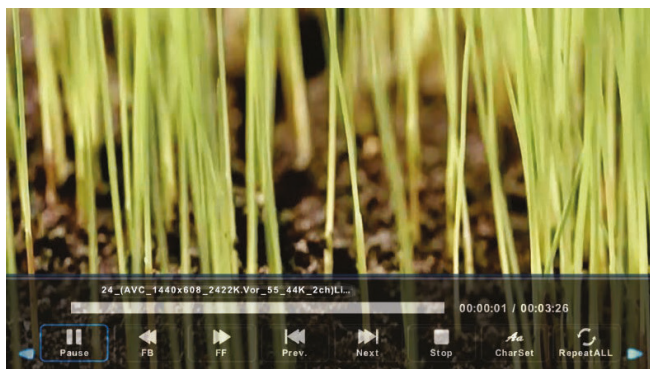

## 7.4. Text Menu


Press ◀/▶ to select in the main menu the item **TEXT** and then enter the interface by pressing **OK**.

Press **Exit** to return to the previous menu and to exit menu.




Use the buttons ◀/▶ to select the drive unit which you want to browse and press **OK** to enter the interface.

Use the buttons ◀/▶ to select the item to return to the previous menu.

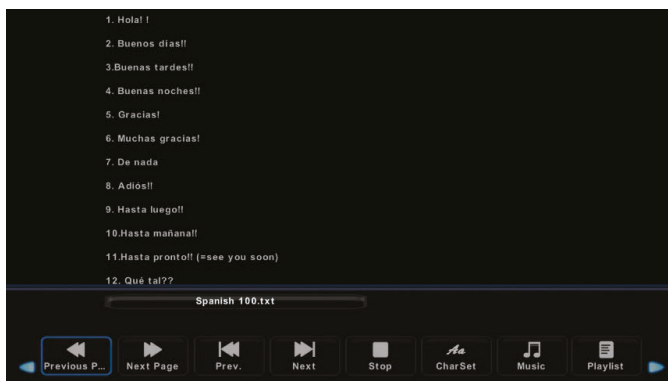

## 8. DVD player

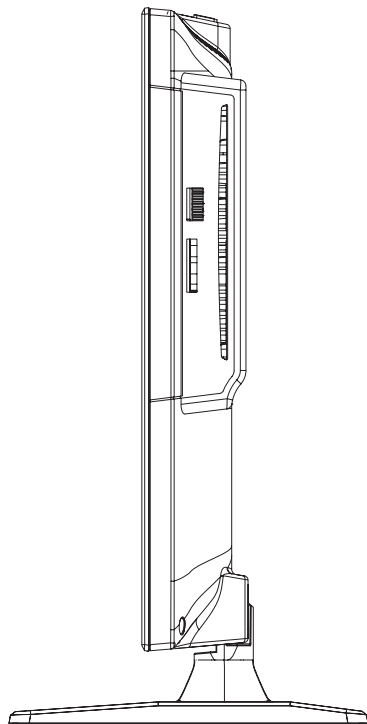

Insert about halfway only 12 cm diameter CD/DVD discs into the disc slot. Mirror side to the screen, Label side to the rear. The device pulls the disc in and starts playing. It ejects it in case of incompatible recording or disc error.

Press **D.SETUP (EXIT)** to enter the playback settings, navigate there using the arrows and set according to specific requirements. The factory settings are satisfactory in most cases. Disc playback controls are similar to media playback. Refer to the description of the remote controller.



### Supported DVD formats

- CD Digital Audio 12 cm / Dolby Digital AC-3
- CD-R/CD-RW/CD+RW
- VCD/SVCD
- DVD / DVD-R / DVD-RW / DVD+R / DVD+RW
- JPEG / AVI / MP4
- MPEG 1 / MPEG 2
- DivX 3.11 / 4.x / 5.x
- XviD

## 9. Troubleshooting



### ALERT:

**Under no circumstances should you try to repair the appliance yourself, the device does not contain parts that could be repaired by the user. Always take the device to an authorized service center if a repair or adjustment are necessary other than regular maintenance. Unauthorized interference with the device is considered a breach and the loss of warranty claim. The importer, supplier, distributor or vendor shall not be liable for any losses caused by a violation of regulations listed in this manual. Do not open the device, there is the danger of electric shock. In the case of device failure, first check the following list of problems and their solutions. If you fail to remove the defect according to the following tips, contact your vendor.**

Problems	Possible solutions
The TV set has no power.	Check the attached power cord and the functioning of the electrical outlet. Unplug the power cord, plug it in after 60 seconds and turn the TV set on again.
No picture.	Check the antenna connection. There could have been problems at the broadcasting station, try another station. Adjust contrast and brightness.
Good picture, but no sound.	Raise volume. Check that the sound is not muted (Mute function). Press MUTE on the remote controller. Check audio settings. If you use an external device, make sure that its volume is not muted or the sound is not switched off. If you use the A/V or a component input, make sure that the cables are correctly connected and are not loose. If you use a cable with DVI reduction on HDMI, you need a separate audio cable. Make sure that the headphones jack is not occupied.
Good sound, but an unusually colored picture or no picture.	Check the connection and the state of the antenna. If you use a component input, check the connection. Incorrect or loose connection can cause problems with colors or empty screen.

<b>Problems</b>	<b>Possible solutions</b>
The TV set does not respond to the remote controller.	The batteries in the remote controller might be empty. If it is necessary, replace them with new ones. Clean the lens of the remote controller. The distance between the LED TV set and the remote controller should be no more than 8 m, in the recommended operating angle and with no obstacles in the path of the beam. Prevent the impact of strong light (daylight, sunlight or fluorescent light lamps and fluorescent tubes) on the TV and remote controller.
The whole screen is flashing in the VGA mode.	Too high a value may be set of the V-HEIGHT. Restart the computer and switch to safe mode. Then set the parameters of the monitor to a correct value according to the description of the setting.
Horizontal lines in the VGA mode.	The sampling phase may be distorted. Adjust the phase according to the picture position.
There are color points on the screen.	Although the LED screen is made with high-precision technology and 99.99% or more of the pixels are operational, the screen can display permanently unlit or lit points of light (red, blue or green). This is a construction feature of the LED screen and is not a malfunction.
The picture falls apart.	Keep the TV set away from interfering sources of electricity, such as cars, hair-dryers, welders and any optional equipment. The disintegration of image may be caused by atmospheric phenomena, such as a local or distant thunderstorm. When installing optional equipment, leave a space between the optional equipment and the TV set. Check the antenna and the connection. Keep the antenna away from the power or input/output cables.
After automatic tuning only some channels are available.	Check if your area is covered by digital TV broadcasting. Try to retune or manually tune the missing channels. Check if you use the correct antenna type – see page 16 "Antenna connection".
Cannot select a channel.	Check if the channel is not blocked in the main menu settings.

<b>Problems</b>	<b>Possible solutions</b>
Cannot play from the USB device.	Check the connecting channel between the USB and power connection. The hard disc was not formatted. Make sure that the USB flash unit is compatible and contains supported formats of multimedia data.
The picture is distorted, contains macroblocks, microblocks, points, large pixels, etc.	Video compression can cause disruption, especially during rapid movement, e.g. in sports programs and action movies.
Speaker noise.	Check the cable connections, make sure that the video cable is not connected to video input. Sound distortion can be caused by a low level of the signal.
The TV set turns off automatically.	Make sure that the sleep timer or power save mode timer are not on.
The TV set turns on automatically.	Make sure that the timer to turn on is not on in the settings menu (Settings).
The picture is not displayed on the whole screen.	First make sure that the problem is not caused by the input signal. Then try to adjust the item Zoom in the Functions menu.

## **Picture defects and their causes**

### **Snowy screen**

Snowy screen is usually caused by a weak signal. Change the antenna setting or install an antenna booster.

### **Double images or ghosting**

Double image is usually caused by reflection from tall buildings. Adjust the antenna orientation or place it higher.

### **Radio frequency interference**

Waves are moving on the screen, which is usually caused by neighbouring radio transmitters or shortwave receiver.

### **Interference by electrothermal devices with high temperature**

Inclined or arrow shaped patterns appear on the screen or a part of the picture is missing. This is probably caused by electrothermic devices with high temperatures in a nearby hospital.

## 10. Technical specifications

<b>Model</b>	<b>SLE 2465DTC</b>
Panel size	23,6" / 60 cm
Power consumption (max.)	40 W
Standby consumption	<0.5 W
Rated voltage	230 V AC, 50/60 Hz
Remote controller	Yes
VESA wall mount	100 × 100
Dimensions with stand (w × d × h)	557 × 160 × 366 mm
Dimensions without stand (w × d × h)	557 × 86 × 336 mm
Net weight with stand	3.92 kg
<b>Connection</b>	
RF IN	1
AV input	1
SCART	1
Component YPbPr	1
VGA (D-Sub 15 pin)	1
HDMI	1
SPDIF coaxial	1
USB	1
Supported USB formats	MKV, AVI, MP4, WMV, MOV, DivX, XviD
CI slot	Yes
<b>Other functions</b>	
WXGA resolution	1366 × 768
Brightness (cd/m <sup>2</sup> )	180 cd/m <sup>2</sup>
Response time (ms)	8.5
Viewing angle	176°/176°
Video system	PAL/SECAM, DVB-T, DVB-C, DVB-T2 HEVC/H.265 (1080P 60 pic./s)
Audio system	BG/DK/I, L/L /MPEG-1 layer 1/2, DD, DD+, AAC, HE-AAC
Stereo sound	NICAM/A2
Audio output	Headphones output
PVR recording to USB	Yes
Correction of sound	No
Progressive scan	Yes
Timeshift	Yes
EPG	Yes
Teletext	Yes

Teletext pages	1000
Comb filter	3D
OSD menu	Yes
Zoom	Yes
Noise reduction	Yes
Timer OFF / ON / SLEEP	Yes
Subtitles	Yes
Audio language	Yes
Channel list	Yes
Favourites list	Yes
Image freeze	Yes
Radio	Yes
Lock	No
Parent lock	Yes
Hotel mode	Yes

**Note:**

Technical specifications may change without prior notice.  
The original version is in Czech.

Manufacturer address: FAST ČR, a.s., Černokostelecká 1621, 251 01 Říčany, Czech Republic

## Information sheet

**Importer: FAST ČR, a.s., Černokostelecká 1621, 251 01 Říčany**

<b>Symbol</b>		<b>Sencor</b>
<b>Model</b>		<b>SLE 2465DTC</b>
Energy efficiency class		A
Screen diagonal in cm / inches	[cm/"]	60 cm / 23,6"
Electric energy consumption when on	[W]	23
Annual electric energy consumption*	[kWh]	34
Electric energy consumption in standby mode	[W]	≤0.5 W
Screen resolution	[pixels]	1366 × 768

\* The electricity consumption of 34 kWh per year is based on the power consumption of the television operating 4 hours per day for 365 days. The actual electric energy consumption will depend on how the television is used.

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.



### DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES

The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product.

The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

#### For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

#### Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



Hereby, FAST ČR a.s. declares that the radio equipment type SLE 2465DTC is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: [www.sencor.eu](http://www.sencor.eu)

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.



# SENCOR®

## EN Warranty conditions

**Warranty card is not a part of the device packaging.**

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

**This warranty is void especially if apply as follows:**

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

**Authorized service centers**

Visit [www.sencor.eu](http://www.sencor.eu) for detailed information about authorized service centers.

