

SENCOR®

Let's live!



**SET TOP BOX
SDB 5104TD**

**USER'S MANUAL
EN**



Table of Contents

SAFETY INFORMATION	5
INTRODUCTION	
Front panel.....	9
Rear panel.....	9
Remote control	10
SYSTEM CONNECTION	
General information	11
Connecting to a television.....	11
GETTING STARTED	
Welcome	12
Installation.....	12
OPERATION	
Changing channels	14
Opening the Electronic programming guide (EPG)	14
EDITING CHANNELS	
Edit Channel menu	15
TV Channel List	15
Radio Channel List.....	16
Delete All.....	16
SYSTEM SETTINGS	
System Setup menu	17
Language.....	17
TV System	18
Local Time Setting.....	18
Timer Setting	19
Parental Lock.....	19
OSD Setting.....	20
Favourite.....	20
Audio Description Setting	21
Other	21

TOOLS	
Tools main menu	22
Information.....	22
Factory Settings.....	22
Software Upgrade	23
Remove USB device safely.....	23
NETWORK	
Network	24
GAMES	
Games.....	24
MULTIMEDIA PLAYER	
Multimedia player main menu	25
Media Playback.....	25
HDD Information	27
DVR Setting.....	28
TIME SHIFT / RECORDING	
Timeshift.....	29
Record	30
TROUBLESHOOTING.....	31
TECHNICAL SPECIFICATIONS.....	32

Safety Information

TO MINIMIZE FIRE HAZARD OR INJURY BY ELECTRICAL SHOCK, DO NOT EXPOSE THIS DEVICE TO RAIN OR HUMIDITY.



NOTE
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION

To minimize fire hazard or electric shock, do not remove the cover (or the rear panel) of the device. Have all repairs performed by qualified service technicians.



The lightning symbol located in an equilateral triangle informs the user about the existence of an uninsulated "dangerous voltage" inside the device, which can have such an intensity as to cause injury by electrical shock.



The exclamation mark symbol located inside an equilateral triangle informs the user about important instructions for operation and maintenance in the attached device documentation.



WARNING

TO MINIMIZE FIRE HAZARD OR ELECTRIC SHOCK, DO NOT EXPOSE THIS DEVICE TO RAIN OR HUMIDITY.



CAUTION

TO PREVENT FIRE HAZARD OR ELECTRIC SHOCK, ALIGN THE PLUG WIDE BLADE WITH THE SOCKET WIDE SLOT AND PUSH THE PLUG AS FAR AS IT GOES.



This symbol indicates that the device has double insulation between the dangerous mains voltage and the user serviceable parts. In the case of servicing, use only identical spare parts.

Do not expose the appliance to the effects of dripping or spraying water and do not place objects filled with a liquid such as vases on the appliance.

IMPORTANT SAFETY INSTRUCTIONS

During the manufacture of this set-top-box, great attention has been paid not only to meeting quality requirements, but also to providing safety which is a key factor in designing all of our products. Providing security, however, requires your actions as well. This document contains important information that will help you learn how to correctly use this set-top box and its accessories to your satisfaction. Please read them carefully before installation and using this set-top-box.

Installation

1. Read and observe the instructions - Please read all safety and operating instructions before using this set-top-box. Adhere to all instructions.
2. Retain the instructions - Keep the safety and operating instructions for future use.
3. Heed the warnings - Observe all warnings on the set-top-box and in the operating instructions.
4. Power supply - This set-top-box is powered from a DC power supply plug. To prevent a risk of electric shock, please make sure to connect the power supply to your power outlet correctly.
5. Sources of energy - To power this set-top-box, you may only use sources whose specifications meet the nameplate ratings on the set-top-box rear panel. If in doubt about the type of energy source at home or in your office, please contact your set-top-box dealer or an electrician. For set-to-boxes designed for battery operation or powering from other energy sources, please refer to the operating instructions.
6. Overloading - Do not overload the power outlets and extension cords to avoid risk of fire or electric shock. Overloaded power outlets and extension cords, frayed power cords, damaged or cracked conductor insulations and damaged plugs are dangerous and may lead to electric shock or fire. Inspect the cord on regular basis and if it appears that insulation damage or property deterioration may have occurred, ask a qualified service technician for a replacement.
7. Power cord protection - Route the power cords so they are not likely to be stepped on or damaged by placing objects on or against them, while paying extra attention to the points of their exit from the set-top-box.
8. Ventilation - Openings and holes in the unit's cabinet are designed for ventilation to ensure reliable operation of the set-top-box and its protection from overheating. These holes should not be covered or blocked. These holes should be never blocked by placing the set-top-box on bed, sofa, mat or an air heating appliance. Do not place this set-top-box in an enclosed space such as a fridge or a self unless proper ventilation is provided or it this is inconsistent with the set-to-box manufacturer requirements.

9. Accessories - To avoid any danger, do not use any accessories other than those recommended by this set-top-box manufacturer.
10. Do not expose the appliance to the effects of dripping or spraying water and do not place objects filled with a liquid such as vases on the appliance.
Attention: Ensure safety when using electric energy. Any equipment or accessories powered from the grid and connected to this unit must be marked with a certification label on the equipment itself and must not be modified to avoid locking the safety features. This will minimize potential risk of electric shock or fire. In case of any doubt, please contact a qualified service technician.
11. Accessories - Do not put this set-top-box on an unstable cart, stand, tripod, console or table. Otherwise, your set-top-box might fall on the floor, resulting in a serious injury to children, adults or a serious damage to itself. Use this set-top-box only with a cart, base, stand, console or table recommended by the manufacturer or supplied with the set-top-box. Any mounting of the unit must be carried out according to the manufacturer's instructions and the mounting accessories recommended by the manufacturer should be used.
- 11a. Take care while moving the cart with the set-top-box. Sudden stops, applying excessive force and uneven surfaces may lead to the set-top-box damage.
12. Outdoor aerial grounding - If an outdoor aerial or cable system is connected to this set-top-box, it's necessary that this aerial or cable system should be earthed to provide a certain protection against voltage surges and static charge formation. Section 810 of the National Electrical Code, ANSI/NFPA No. 70-1984 (Section No. 54 of the Canadian Electrical Code, Part 1) provides instructions on proper grounding of the pole and the supporting framework, grounding the connecting lead to the aerial's discharge unit, connecting to the grounding electrodes and grounding electrode requirements.
13. Power lines - The outdoor antenna system should not be located in the vicinity of overhead power lines, other electric lighting or power lines or in such locations where fall of the antenna system on such power lines or circuits could occur. When installing an outdoor antenna system, take extreme care not to touch and/or come close to such electric conductors or circuits as this might have lethal consequences. As installation of an outdoor aerial could be dangerous, have this task made by professional aerial installers.

Using

14. Cleaning - Prior to cleaning, please disconnect this set-to-box from your power outlet. Do not use liquid cleaning agents or cleaning agents in sprays. Use a dampened cloth for cleaning.
15. Objects which could get in touch with dangerous voltage points or "short-circuit" the parts may cause fire or electric shock. Avoid spilling any liquid on the set-top-box.
16. Lightning thunderstorms - For increased protection of this set-top-box during a lightning thunderstorm or for longer periods when the device will not be used, disconnect the power cord from the power socket and disconnect the antenna or cable system. This will protect your set-top-box from lightning and surge damage in the grid.

Repairs

17. Repairs - No not attempt to repair this set-top-box by yourself as opening the cabinet and removing the covers may expose you to a dangerous voltage or other risk. Have all repairs performed by qualified service technicians.
18. Damage requiring a repair - In the following situations, disconnect your set-top-box from the power outlet and have it repaired by qualified service technicians:
 - A. The power supply or power connecting lead has been damaged.
 - B. Liquid or foreign objects have fallen into the set-top-box.
 - C. The set-top-box has been exposed to rain or water.
 - D. The picture does not appear correctly even if the operating instructions are observed.

Only use the controls described in these user's manual. Incorrect settings of other controls may lead to damage, while restoring normal operating condition of the set-top-box involves a great deal of work of a qualified service technician.
 - E. The set-top-box has fallen on the ground or its cabinet has been damaged.
 - F. The set-top-box shows a apparent change in its operating behaviour which clearly indicates a need to make a repair.
19. Spare parts - If any spare parts are required, ask your service technician to verify if the used spare parts have the same safety specifications as the original ones. Using the spare parts as specified by the set-top-box manufacturer will protect your from the risk of fire, electric shock or other danger.
20. Safety check - After finishing any service job or repair of your set-top-box, ask your service technician to perform manufacturer recommended safety checks to verify the set-top-box safety operating condition.
21. Wall or ceiling mount - This unit can be mounted on the wall or under the ceiling only in a manner recommended by the manufacturer.
22. Heat - This device must be located away from any sources of heat such as radiators, air heaters, stoves or similar appliances (including amplifiers) that produce heat.


Introduction

Information about this STB

Front panel



Rear panel

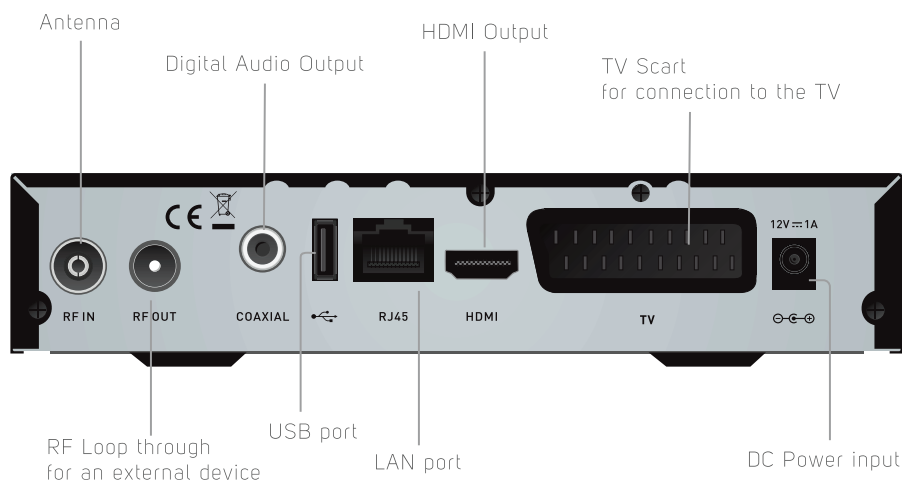

Remote control



1. **STANDBY** (Standby mode)
(Turning the STB on or switching to standby)
2. **INFO** (Information)
(Press to view information on the current channel)
3. **PLAY** (Playback)
4. **Previous/Next** (Previous/Next)
5. **PAUSE** (Pause / Enable the time-shift feature)


6. **Menu** (Menu)
(Open and close the menu screen)
7. **Cursor / CH+,-** (Previous/Next channel) / **VOL+,-** (Increase/decrease volume)
(Cursor: Navigation buttons to browse the menu items)
(CH +/-: Previous/Next channel)
(VOL +/-: Increase/decrease volume)
8. **OK button**
(Confirm a menu selection)
9. **RECORD** (Record)
(Recording a TV program)
10. **Numeric keys**
(To enter numeric values and select a channel by direct number entering)
11. **USB**
(Verify the Video menu)
12. **MEDIA** (Media)
(Verify the Record menu)
13. **TTX** (Teletext - verify interactive services)
14. **TIMER** (Timer)
(Setting the timer)
15. **MUTE** (Mute/unmute sound)
16. **SUBTITLE** (Subtitles on/off)
17. **Search backward /forward** (Searching backward /forward)
18. **EXIT** (Exit the menu)
19. **STOP** (Stop)
(Stop the playback or program recording)
20. **EPG** (Electronic programming guide)
(Opening the electronic programming guide menu)
21. **BACK** (Back)
(Switch to previous channel)
22. **TV/RADIO** (TV/radio)
(Switching between TV and radio modes)
23. **AUDIO** (Audio)
(Select the sound mode and track)
24. **RES** (Resolution - switch to the HDMI resolution)
25. **FAV** (Favourite)
(Open the list of favourites)
26. **RED/GREEN/YELLOW/BLUE button**
(For interactive features / Buttons of the nested menu features)

System connection

General information

There many various types of TV sets and other devices that can be connected to this STB. This manual describes the most common methods of connecting your equipment.


Connecting to a TV set

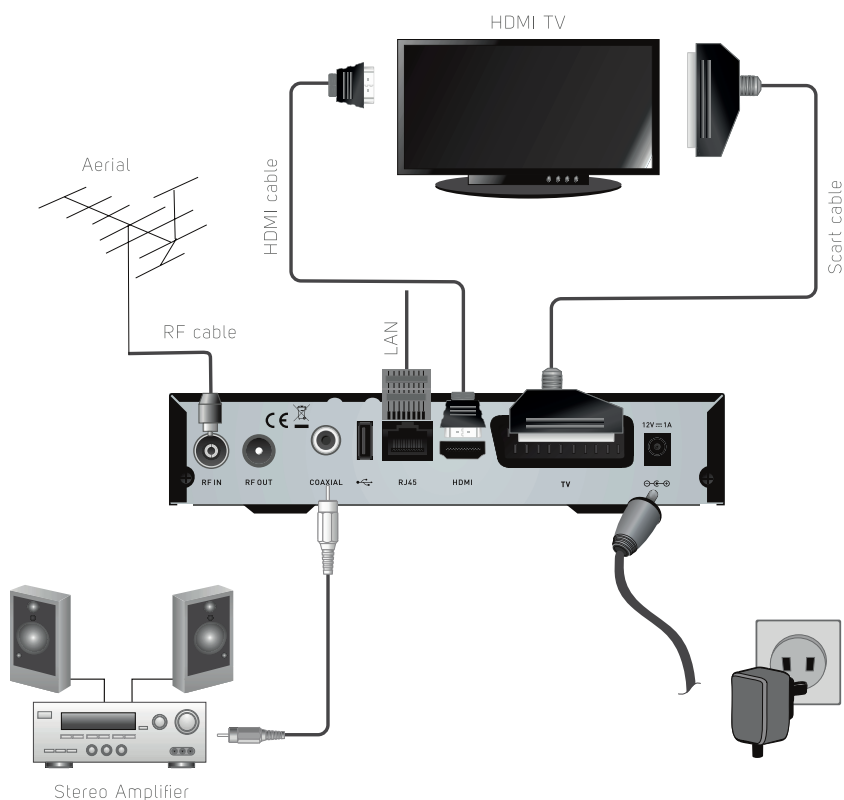

Getting Started

Welcome


When using this STB for the first time, "Welcome" menu will appear. Press the cursor keys to set Region, Language, Display Mode and Aspect Mode. Highlight "OK" and press "OK" to start searching the channels.

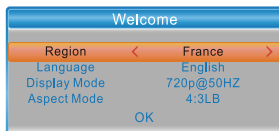

Installation

The Installation menu allows you to set channel searching and LCN Installation option.

1. Press the "MENU" button to show the main menu.
2. Press the "UP" or "DOWN" button to highlight "Installation" and press "RIGHT" to open the "Installation" menu.
3. Press the "UP" or "DOWN" cursor button to highlight the desired item, then press "OK" to open the nested menu.
4. Press the "EXIT" button to exit.

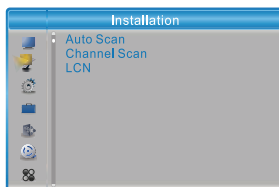

Auto Scan (Automatic search)


The "Auto Search" menu allows you to set automatic channel searching.

1. Select "Auto Scan" and press "OK" to open the "Auto Scan" menu.
2. Press the cursor buttons to set "FTA Only" (non-encoded only) and "T2 Signal Only".
3. Highlight the "Search" item and press "OK" to start the automatic scan.

Channel Scan

The "Channel scan" menu allows you to set manual channel searching.

1. Select "Channel Scan" and press "OK" to open the Channel Scan menu.
2. Press the cursor buttons to set Scan Mode, Scan Band, Channel No., Frequency or Bandwidth, then highlight "Search" and press "OK" to start the channel searching.

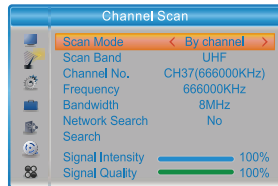

LCN (Logical channel numbering)

If the LCN (Logical channel numbering) feature is enabled, you cannot change the original TV channel numbers created by searching.

To enable/disable the LCN feature, set the "LCN" to on/off.

Operation

Changing channels

There are three channel selection methods available – step-by-step browsing the channel list, selecting by number and selecting from the screen channel list.

1. Step-by-step browsing the channel list:
To move in the channel list, press the arrow up or down button on the remote control.
2. Selecting by a number:
Enter the channel number directly using the numeric buttons, then press OK to select the desired channel.
3. Selecting from the screen channel list:
You can also select the desired channel number directly in the screen channel list. To display this list, use the main STB menu. For more details, please refer to "Editing channels" section in this manual.

Opening the Electronic programming guide (EPG)

To open the EPG for all channels:

1. Press "EPG" to open the EPG (Electronic programming guide) menu.
2. Press the cursor buttons to switch between the channel list and current/next events.
3. Press the GREEN button to set the event timer.
4. Press the RED button to display the "Time Bar" menu.
5. Press "OK" to display selected event information.
6. Press the "EXIT" button to return to the previous menu.

In the "Time bar" menu:


- ← To exit the time bar.
- ^ Back to the current time.
- ◀▶ Skip forward or backward in time in 30-minute steps.
- ◀▶ Skip forward or backward in time 2-hour steps.
- ◀▶ Skip forward or backward in time 24-hour steps.



Editing channels

Edit Channel menu

1. Press the "MENU" button to show the main menu.
2. Press the "UP" or "DOWN" button to highlight "Edit Channel" and press "RIGHT" to open the "Edit Channel" menu.
3. Press the "UP" or "DOWN" cursor button to highlight the desired item, then press "OK" to open the nested menu.
4. Press the "EXIT" button to exit.

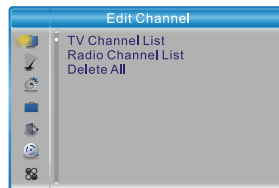

TV Channel List

1. In the Edit Channel menu, select "TV Channel List" and press "OK" to open the TV Channel List menu.
2. Press the "UP" and "DOWN" button to highlight the channel and then press OK to preview the desired TV channel.



Use this menu to set the favorites and to lock, skip, sort, delete or rename channels.

- Press the "FAV" button and then press "OK" to edit the FAV (Favorite) feature.
- Press the "RED" button to enable the "Lock" function. You will be prompted to enter a password (default password is "0000"); then press "OK" to lock the selected channels.

- Press the "GREEN" button to enable the "Skip" feature, then press "OK" to skip the selected channel.
 - Press the "YELLOW" button to enable the "Move" feature, highlight the desired channel and press OK to confirm. Press "UP" or "DOWN" button to select a new position, then press "OK". This will move the channel to a new position.
 - Press the "BLUE" button to open the nested Edit channel menu.
 - Press "OK" again to cancel the relevant function.
 - Press the "colour" button again to exit the relevant function.
3. Press "Exit" to save and return to the "Edit Channel" menu.

Radio Channel List

1. In the Edit Channel menu, select "Radio Channel List" and press "OK" to open the Radio Channel List menu.
2. Press the "UP" and "DOWN" button to highlight the channel and then press OK to listen to the desired radio channel.

Note:

Controlling in the "Radio Channel List" mode is basically the same as in the "TV Channel List" mode except for one thing: As no image information is available In the "Radio Channel List" mode, logo is always displayed on the right of the preview window.

Delete All

1. In the Edit Channel menu, select "Delete All" and press "OK".
You will be prompted to enter password (default password is "0000").
2. A warning message window will appear.
Select "Yes" and press "OK" to delete all channels.
To cancel the deletion, select No and press OK.




System Settings

System Setup menu

The System Setup allows you to set Language, TV System, Local Time Setting, Timer Setting, Parental Lock, OSD Setting, Favorite, Audio Description Setting and Other.

1. Press the "MENU" button to show the main menu.
2. Press the "UP" or "DOWN" button to highlight "System Setup" and press "RIGHT" to open the System Setup" menu.
3. Press the "UP" or "DOWN" cursor button to highlight the desired item, then press "OK" to open the nested menu.
4. Press the "EXIT" button to exit.

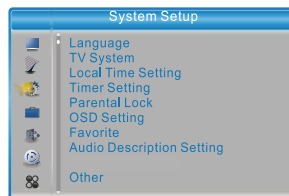

Language

This menu allows you to set the language of system, audio, subtitles and teletext and enable the subtitle function.



Subtitles: Off/Normal/Hard of Hearing

TV System

This menu allows you to set Video Resolution, Aspect Mode, Video Out and Digital Audio Out.

Video Resolution: Setting various video signal resolutions (recommended resolution is 1080p/50 Hz)

Aspect Mode: Auto / 4:3PS / 4:3LB / 16:9 Video Out:CVBS/RGB

Digital Audio Out: LPCM Out (LPCM output) / BS Out (BS output)

Local Time Setting

This menu allows you to make region and time settings.

Region: This menu is used to change the region settings.

GMT Usage: This menu is used to set the GMT Usage.

The following options are available: By Region / User Define / Off

GMT Offset: This menu is only active if

"User Define" value has been set in the GMT Usage menu.

The GMT Offset range is "-11:30 ~ +12:00" in 30-minute increments.

Summer Time: The following options are available:On/Off

Date: "Date" and "Time" menus are only active if the GMT Usage is set to "Off".

Time: Press the numeric buttons to set time.

Timer Setting

This menu enables you to set the program timers. You can set up to 8 timers.

Timer Mode: Off / Once / Daily / Weekly / Monthly

Timer Service: Channel / Record

Wakeup Channel: Allows you to set the channel to be tuned during the wakeup.

Wakeup Date: Press the numeric buttons to set the wakeup date.

Wakeup Time: Press the numeric buttons to set the wakeup time.

Duration: Press the numeric buttons to set the wakeup duration.

Parental Lock

This menu allows you to protect the menu a channels or to change your password.

1. In the "System Setup" menu, select "Parental Lock" and press "OK" - you will be asked to enter a password (default password is "0000").
2. When the correct password has been set using the numeric buttons, the child lock menu appears.

Menu Lock: To lock the Edit channel / Installation menu. To open these menus, you must enter a password.

The menu lock can be turned on/off.

Rating Lock: Off / AGE4 / AGE5 / AGE6 / AGE7 / AGE8 / AGE9 / AGE10 / AGE11 / AGE12 / AGE13 / AGE14 / AGE15 / AGE16 / AGE17 / AGE18

New Password: To change the password.

Confirm password: To confirm new password.

OSD Setting

This menu allows you to set the display duration and transparency of your OSD menu.

OSD Timeout: 1-10 seconds.

OSD Transparency: To set the OSD menu transparency to Off / 10% / 20% / 30% / 40%.

Favorite

This menu allows you to rename the favorite group.

1. In the System setup menu, select "Favorite" and press OK to open the Favorite menu.
2. Select the desired group and press "OK" to open the virtual keyboard. Press the cursor buttons to enter letters and numbers, then press OK to confirm. When the entering is finished, press the BLUE button to confirm. The Favorite group name has been changed successfully.
3. Press the "EXIT" button to exit the group rename menu.



Audio Description Setting

This menu allows you to set, Use AD as default and AD Volume Offset: This is only applicable to programs for which the sound description is broadcast by a TV station

Use AD as default: On/Off

AD Volume Offset: -3 ~ 3

Other

This menu allows you to set Antenna Power, Channel Play Type, Beeper, Auto Standby and Loophrough In Standby.

Antenna Power (Power supply to the antenna): On/Off

When the "Antenna Power" is set to "On", STB will provide 5V power supply to the antenna.

When set to "Off", this power supply will not be available.

Channel Play Type: All / Free / Scrambled

Beeper: On/Off

Auto Standby (Automatically switch to stand-by mode): 30Min /

1 Hour / 2 Hour / 3 Hour / Off Loophrough In Standby: On/Off

If no command is entered on the STB front panel or the remote control for 30 minutes - 3 hours and no timer event occurs, the STB will automatically switch to standby.

When Off is selected, the STB will not automatically switch to standby.

Tools

Tools main menu

1. Press the "MENU" button to show the main menu.
2. Press the "UP" or "DOWN" button to highlight "Tools" and press "RIGHT" to open the "Tools" menu.
3. Press the "UP" or "DOWN" cursor button to highlight the desired item, then press "OK" to open the nested menu.
4. Press the "EXIT" button to exit.



Information

This menu allows you to display some parameters of this STB.

1. In the "Tools" menu, select "Information" and press "OK" to open the information window.
2. Press the "EXIT" button to exit.

Factory Setting


This menu allows you to restore the factory settings of this STB, deleting all existing channels.

1. In the "Tools" menu, select the "Factory Setting" and press OK. You will be prompted to enter password (default password is "0000").
2. A confirmation window will pop up. To restore the factory settings and delete all channels, press "Yes". To cancel the factory settings restoration, select "No".
3. Press the "EXIT" button to exit.

Software Upgrade

This unit offers features for the user to update the software version - either wirelessly (OTA) or using a USB flash drive.

1. Open the "Tools" menu, select "Software Upgrade by OTA" or "Software Upgrade by USB" and press OK - Software Upgrade menu will be shown.
2. Press the cursor buttons to select a desired option and then highlight "Start" and press OK to start the upgrade.
3. Press the "EXIT" button to exit.

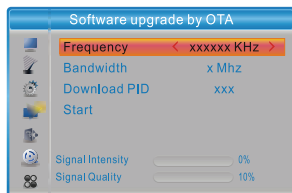


Remove USB device safely

In the "Tools" menu, select "Remove USB device safely".

Press OK to confirm. A window will pop up.

Press "OK" again.

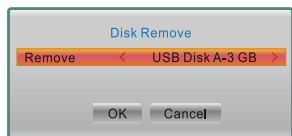


Network

Network

This menu allows you to set network options, watch weather forecast or listen to internet radio.

Network Setting:	Net choose (selecting the network connection method) Settings (setting network parameters)
Network Application:	Radio Channel (listening to internet radios) Weather Channel (displaying weather forecast)

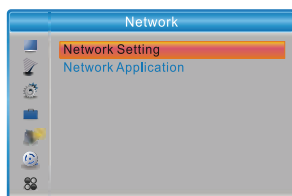

Games

Game (Games)

This menu allows you to play games.

1. Press the "MENU" button to show the main menu.
2. Press the "UP" or "DOWN" button to highlight "Game" and press "RIGHT" to open the Game menu.
3. Press the "UP" or "DOWN" cursor button to highlight the desired item, then press "OK" to open the game.
4. Press the "EXIT" button to exit.



Multimedia player

Multimedia player main menu

Make sure that external data storage device is connected to the USB port.

1. Press the "MENU" button to show the main menu.
2. Press the "UP" or "DOWN" button to highlight "Media Player" and press the "RIGHT" button to open the multimedia player menu.
3. Press the "UP" or "DOWN" cursor button to highlight the desired item, then press "OK" to open the nested menu.
4. Press the "EXIT" button to exit.




Media Playback

This feature allows you to play back files from the USB port.

Note:

Only the disc specified in the settings is available for the recordings, for other media, you can switch between front and rear USB input if both of them are in use.

1. In the "Media player" menu, press "1" to select "Record", "Video", "Music" or "Image" option.
2. Press "OK" to open Media Playback menu.
3. Press "UP" and "DOWN" cursor buttons to select a desired multimedia file and press "OK" to start playback.
4. Press the "EXIT" button to exit.

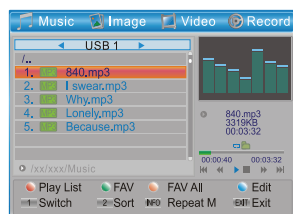

Record:

RED button: Press the RED button to open the rename window.

GREEN button: Move the highlight over a program to be locked. Press the GREEN button - you will be asked to enter a password. The default password is "0000". Once the correct password is set, the program is locked. To unlock the program, press the GREEN button again.

"YELLOW" button: Press the "YELLOW" button to delete a recorded file.

"1" button: Press to switch among Music /Image /Video /Record tabs.

EXIT (End) button: Return to the parent directory.

Video:

BLUE button: Press the "BLUE" button to open the nested Edit channel menu.

"1" button: Press to switch among Music /Image /Video /Record tabs.

"2" button: Press the button "2" to open the sorting. You can sort by Name / Time / Size.

EXIT (End) button: Return to the parent directory.

An external subtitle file's name must match the video file name. National alphabets use Unicode coding. Press the BLUE button for further selections.

To enable the video embedded subtitles, press SUBTITLE button.

Music:

"RED" button: Press the "RED" button to display and edit the playlist.

GREEN button: Move the highlight over the file to be added in the playlist, then press the GREEN button to add. Favorite icon will appear on the file. Press again to cancel the favorite and delete the file from the playlist.

YELLOW button: Press YELLOW button to add all files in the current directory in the playlist. Press this button again to delete all files in the current directory from the playlist.

BLUE button: Press the "BLUE" button to open the nested Edit channel menu.

"1" button: Press to switch among Music /Image /Video /Record tabs.

"2" button: Press the button "2" to open the sorting window.

You can sort by Name / Time / Size / Favorite.

"INFO" (Information) button: Press the "INFO" button to select a playback mode.

You can select from Repeat Folder / Random Folder / Repeat One.

EXIT (End) button: Return to the upper directory.

Image:

"RED" button: Press the "RED" button to display and edit the playlist.

GREEN button: Move the highlight over the file to be added in the playlist, then press the GREEN button to add. Favorite icon will appear on the file.

YELLOW button: Press YELLOW button to add all files in the current directory in the playlist. Press this button again to delete all files in the current directory from the playlist.

BLUE button: Press the "BLUE" button to open the nested Edit channel menu.

"1" button: Press to switch among Music /Image /Video /Record tabs.

"2" button: Press the button "2" to open the sorting window.

You can sort by Name / Time / Size / Favorite.

"INFO" (Information) button: Press "INFO" to open the image settings.

"3" button: Press "3" to display images in the multiple display mode
EXIT (End) button: Return to the parent directory.

HDD Information

This menu allows you to display some parameters of the exchangeable disc.

1. In the Media Player menu, select "HDD Information" and press "OK" to open the hard disc information window.
2. Press the "EXIT" button to exit.





Press the YELLOW button to open the Format menu.

- Format FAT/NTFS
Press "LEFT" or "RIGHT" cursor buttons to change the Disk Mode settings.
Press OK to format. Press "Cancel" to cancel the settings.

ATTENTION: The formatting will DEFINITELY erase the entire disc contents! Be cautious.

- DVR Set REC&TMS/Record/Timeshift
Press the BLUE button to open the DVR Set menu (DVR settings).
Press "LEFT" or "RIGHT" cursor buttons to change the DVR type settings.
Press "OK" to confirm. Press "Cancel" to cancel the settings.

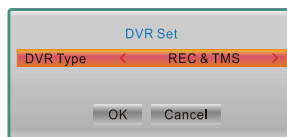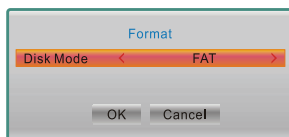

DVR Settings

This menu allows you to set the DVR Setting parameters.

In the "Media Player" menu, select "DVR Setting" and press "OK" to open the "DVR Settings" menu. Press the "UP" or "DOWN" cursor button to select the desired item, then press the "LEFT" or "RIGHT" cursor button to change the setting. Press the "EXIT" button to exit.

Timeshift:	Pause/Off/Auto
Jump:	30sec/1min/5min/10min/15min/20min/30min
Timeshift to Record (Recording time shift):	On/Off
PS Record:	On/Off
After Recording:	Watch TV/Go to Standby-mode



Time shift / recording

Connecting a Mass Storage Device to the USB port will enable the Time Shift/Record feature for a broadcast program.

- Pause the program being broadcast and resume the watching later on (Time Shift feature).
- Record the broadcast program.
- If the Mass Storage Device is out of free space, the broadcast recording operation will stop.

Note:

 
For recording or the time-shift feature, please use a USB 2.0 disc.

For the time-shift and recording feature, please use a USB flash disc with a higher capacity or a hard disc (> 2 GB).

Timeshift

Starting

- You can launch the Time Shift function in the view mode by pressing the "PAUSE" button (when the DVR Setting is set to Pause - recommended).
- Press the "RIGHT" or "LEFT" button to move the cursor to the time you want to display. Press OK to confirm.



Playback

During the playback, you can perform the following actions:

- Press "PAUSE" to stop the playback temporarily
- Press "FORWARD" to fast forward the playback
- Press "BACKWARD" to backward the playback

To stop the time-shift

To stop the TimeShift feature, press "STOP".

Note: The time shift is not available during playback.

Record

Instantaneous record

- To start recording the main channel immediately, press "RECORD" in the view mode.
- Press "RECORD" once again to set the time duration.
To stop the recording, press "STOP" - a confirmation window will appear. In 2 recordings are in progress, please select the one to be stopped.
- To stop the recording, select "Yes". To resume recording, select "No".

Timer recording

- You can open the timer setting menu and set the timer recording using EPG or the System Setup option.

Note:

You may perform up to 2 recordings from different multiplexes simultaneously. While the recording feature 1 is enabled, you can watch any other program.

While the recording feature 2 is enabled, you can watch another program from the same multiplex only.

Note:

For the recording and time-shift feature, please use a USB disc or a USB 2.0 flash disc from a reliable manufacturer, such as SAMSUNG, HITACHI or SONY. Some USB devices may not be supported because of low quality. For USB 3.0 devices, please always use a USB 2.0 connection cable.

Troubleshooting

Problem	Possible cause	What to do
Standby mode indicator is not lit	Power cord disconnected Blown power supply fuse.	Check the power cord Check the fuse
No signal has been captured	Disconnected antenna Damaged / incorrectly adjusted antenna You are outside the digital signal coverage area	Check the antenna cord Check the antenna Please consult your dealer
No picture and sound	No Scart/AV input has been selected on your TV	Switch to another channel
Encoded channel message	The channel is encoded	Select an alternate channel
No response to the remote control	The receiver is turned off The remote control is not pointing in the right direction The front panel is covered The batteries in the remote control are flat	Connect and turn it on Point the remote control at the front panel Check for obstacles Replace the batteries in the remote control
Forgotten code to lock the channels		To unlock the channels, please install the channels again
Forgotten code to lock the menu		Please contact the customer support
The remote control fails to control your STB	(1) The batteries in the remote control need to be replaced (2) There is an obstacle blocking the signal path between the remote control and the set-top-box.	(1) Replace the batteries (2) Please check if there is any barrier to the signal transmission between the remote control and the receiver.
When the STB is brought in another room, the digital broadcast cannot be received	The antenna new connection point may be part of a distribution system that may reduce the digital signal level received by the set-top-box.	Check the direct connection from the antenna

Technical specifications

TUNER AND CHANNEL	<ul style="list-style-type: none"> • VF INPUT CONNECTOR × 1 (IEC TYPE, IEC169-2, FEMALE TYPE) • VF OUTPUT CONNECTOR × 1 (IEC TYPE, IEC169-2, MALE (BYPASS LOOP)) • FREQUENCY BAND: 174MHz ~ 230MHz (VHF) 470MHz ~ 862MHz (UHF) • SIGNAL LEVEL: -15 ~ -70dBm
DECODER <ul style="list-style-type: none"> • Video decoder • Audio decoder • INPUT SPEED • VIDEO FORMATS • VIDEO OUTPUT • MODULATION 	<ul style="list-style-type: none"> • MPEG-2 MP@HL, AVC/H.264 HP @L4.1 • MPEG-4 ASP, HEVC/H.265 HP @L4.1 SUPPORT • MPEG-1 Layer 1,2/PCM/HE-AAC V1.0 • ICE958 SPDIF/Dolby D+ and Dolby D • MAX. 48 Mbit/s • 4:3/16:9 SWITCHABLE • HDMI, CVBS • QPSK, 16QAM, 64QAM, 256QAM
CONNECTION <ul style="list-style-type: none"> • TUNER • HDMI • DATA PORT • SCART • SPDIF 	<ul style="list-style-type: none"> • ANTENNA INPUT × 1, VF OUTPUT × 1 • HDMI OUTPUT × 1 • USB × 2 • DO TV × 1 • COAXIAL × 1
POWER SOURCE <ul style="list-style-type: none"> • INPUT VOLTAGE 	<ul style="list-style-type: none"> • 12 V_{ss}, 1 A

Note:

The design and technical specifications are subject to change without prior notice.



Manufactured under the license of Dolby Laboratories. Dolby and the double D symbol are the trademarks of Dolby Laboratories.

INSTRUCTIONS AND INFORMATION ON DISPOSING OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.



DISPOSING OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal and recycling, take these products to designated collection points. Or in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. Disposing of this product correctly helps save valuable natural resources and prevents damage to the environment by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

To dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



FAST ČR, a.s. hereby declares that the radio device type SDB 5104TD conforms to the 2014/53/EU directive.

For full version of the EU declaration of conformity, please refer to www.sencor.eu website.

The text, design and technical specifications may be changed without prior notice and we reserve the right to make these changes.

SENCOR®

EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Authorized service centers

Visit www.sencor.eu for detailed information about authorized service centers.