

**SENCOR®**

Let's live!


**BLUETOOTH SPEAKER**  
**SSS 3700**

**USER'S MANUAL**  
**EN**




## Description of the BT speaker

### Control panel:

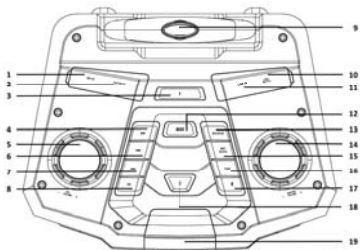

### Rear side:

 

<b>1</b>	Input socket, jack (6.5mm) – Microphone
<b>2</b>	Input socket, jack (6.5mm) – Guitar
<b>3</b>	LED light effect button
<b>4</b>	“Play/Pause” button
<b>5</b>	Microphone volume button
<b>6</b>	Previous track
<b>7</b>	Next track
<b>8</b>	Change the equalizer mode
<b>9</b>	Telescopic handle
<b>10</b>	USB slot
<b>11</b>	LINE-IN audio mini jack (3.5mm)
<b>12</b>	Bass boost
<b>13</b>	Select a Bluetooth/USB/FM/LINE-IN source
<b>14</b>	Volume dial
<b>15</b>	Microphone echo
<b>16</b>	TWS function
<b>17</b>	Fast Bluetooth regime option
<b>18</b>	Power button/battery status
<b>19</b>	Display
<b>20</b>	AC power socket ~ 100-240V 50Hz/60Hz

## Power supply/Charging

You can use the BT loudspeaker while it is plugged in or from the built-in rechargeable lead-acid battery (12V 4000mAh).

- **Network operation:** To start this unit, first plug the power cord into a 240V 50Hz power outlet and turn it on by pressing the Power Button on the top panel.
- **Battery operation:** Charge the unit fully for about 7 hours when using the BT Speaker from the battery (without a power connection). To check the battery level, briefly press the power button while the power is on. When fully charged, unplug the power cord from the AC outlet to operate on battery power. A charged battery provides power for several hours of operation at normal volume levels. A high volume consumes more battery power; therefore, we recommend listening at normal volume levels.

<5%	BATTERY EMPTY	The battery is dead
<20%	BATTERY LOW	Low battery level
<50%	BATTERY HALF	Half the battery charge
<80%	BATTERY HIGH	High battery level
<80%	BATTERY FULL	The battery is fully charged/the power cord is connected

### Recommendation:

If the unit is not to be used for an extended period of time, we recommend to fully charge the battery once every two to three months. We recommend to store the unit with the battery charged to prevent irreparable damage to the battery (loss of capacity).

**Warning:**

Never replace the battery in the device yourself.  
If necessary, contact an authorized service center.

**Attention:**

Prior to using, check that the voltage in your power socket corresponds to the voltage on the power adapter's rating label. For your own safety, please read the following instructions carefully before connecting this equipment to the power grid.

## Pairing devices via Bluetooth

Turn on the device and switch to Bluetooth mode using button 17 on the main figure. Find the Bluetooth name "SSS 3700" in the device to which you wish to pair and start the pairing process. If you are requested to enter a pairing code while your device and the BT speaker are pairing, use the code: "0000".

**Note:**

To ensure a stable Bluetooth connection, make sure that the distance between the BT speaker and your connected device is kept within 10m.

## TWS function

If you buy another Bluetooth speaker („SSS 3700"), you can pair both speakers together for optimum stereo sound. First, make sure your device is not connected to any BT speaker. Place the BT speakers close together (within 10 meters)

and turn them on. Use the Select source buttons to select Bluetooth mode, then press the TWS buttons on both speakers simultaneously. The speaker pairing status will show the status of the pairing in progress and use the Previous and Next track buttons to select "Host" (master speaker, left channel) and "Slave" (slave speaker, right channel). Wait a few seconds to complete the pairing process. To interrupt the connection, press and hold the TWS button.

**Note:**

If the BT speakers fail to be paired successfully to transfer stereo sound, turn all engaged units off and then on again. Then repeat the pairing procedure.

## Line-IN input

The BT loudspeaker is equipped with a 3.5 mm jack so you can connect your device to the BT loudspeaker using an audio cable. First connect the audio plug to your device and then to the BT speaker's jack. Use the Select Source button to select the Line function and play music from your device.

**Attention:**

Before connecting your device to the BT speaker, please make sure that the output signal from your device is set to minimum (minimum output volume). This will prevent the BT speaker from damage.

**Note:**

In this mode, not all functions of the BT speaker are available. The Bluetooth function is not automatically active if the audio jack is connected to the BT speaker.

## USB input/output

Connect the USB port and switch the BT speaker to USB mode using the Source Select button. The available content starts playing automatically.

The USB port can be used for emergency charging of mobile devices (charging will be slow and therefore not suitable for regular charging of your devices).

**Warning:**

To prevent undesired interference, always connect the USB memory directly to the unit. To connect the USB memory to the unit, do not use an extension USB cord. The USB port is designed for data transfer only. Other devices must not be connected to this port.

**Attention:**

Due to a number of devices on the market, compatibility and playback support are not guaranteed for all media. The memory devices you want to connect should be tested in advance and/or formatted as FAT32. The playback of protected media, files or content stored inside them may fail.

**Note:**

Media that have greater power consumption than flash memory should only be connected if they have their own power sources.

## FM radio

Use the Source Select button to switch the BT speaker to the TUN mode.

- **Manually selecting the frequencies:** Briefly press the Previous/Next Track button (down/up). Long press the Previous/Next track button to automatically move the playback frequency to the next busy frequency with strong reception.
- **Stored Stations:** Press and hold the Play/Pause button to automatically scan and store available FM channels. To switch between the saved stations, first press the Play/Pause button, then use the Previous and Next Track buttons to select another station from the stored list. All stored FM stations will remain in memory even if the unit is turned off.

**Note:**

For best reception, place the device in an open area where the FM band will not be inhibited.

## Connecting a guitar and/or microphone

There are inputs for the guitar and microphone on the BT speaker. Their functionality may not be active in all playback modes.



**Attention:**

Before connecting the audio jack, always make sure that both volume knobs are turned to the minimum level (speaker volume and input volume). This will prevent damage to the BT speaker and your hearing.

## Control the music being played

- **Play/Pause:** Press the Play/Pause button to start or pause music playback during Bluetooth and USB playback.
- **Volume:** The BT speaker volume is controlled by turning the volume knob.
- **Previous/next track:** While playing songs via Bluetooth and USB transfer, you can go to the next song by pressing the Next Song button. To select the previous track, press the Previous track button.
- **EQ:** The Change Equalizer Mode button allows you to switch between Jazz/Samba/Pop, etc.
- **Bass:** The Bass Boost button enhances both bass and volume.
- **LED:** The LED Light Effects button allows you to toggle between their 7 modes or turn them off.
- **Echo Microphone:** Press the Echo Microphone button to turn the function on/off. The function is only available when a microphone is connected.

## Telescopic handle

The BT speaker is equipped with wheels and a telescopic handle for easy movement of the BT speaker on flat surfaces. Press and hold the button on the handle to release it and then slide it to its full height. Release the button on the handle to lock the handle and remain extended until the button is pressed again.



### **Attention:**

Take extra care when using the handle.

## Technical specifications

Power output: 50 W  
LED display  
Flashing LED lighting  
TWS function (True Wireless Stereo)

### **Sound:**

Power output: 50 W  
2 Speakers (1 Mid-Range + 1 Treble)  
Frequency characteristic: 20 Hz - 17 kHz  
Total harmonic distortion:  $\leq 10\%$  (1 kHz)  
Pre-set equalizer modes (ROCK, POP, JAZZ, ...)  
SUPER BASS button

### **Lighting:**

Colourful light show  
7 light modes

### **Signal reception:**

PLL FM Radio (87.5 - 108 MHz)  
Pre-set stations: 30 FM

**Inputs:**

Bluetooth Audio 4.2

Audio connector (3.5mm stereo jack)

USB (for playback)

Microphone input (6.3mm jack)

Guitar input (6.3mm jack)

**Other:**

Built-in rechargeable battery 4000 mAh

Playback time of up to 9 hours (at 75% volume)

Karaoke function (Echo, Volume)

Accessories: instructions

Dimensions: 330x410x260mm

Weight: 8.45 kg

**FM radio**

Band range: 87.5MHz to 108MHz

**Bluetooth**

Version: 4.2

Maximum Transmitter Power: 100mW at 2,4GHz - 2,4835GHz

## **INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS**

Dispose of packaging material at a public waste disposal site.

## **DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES**



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

### **For business entities in the European Union**

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

### **Disposal in other countries outside the European Union**

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.

**CE** The product meets EU requirements.

Hereby, FAST ČR, a.s. declares that the radio equipment type SSS 3700 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: [www.sencor.com](http://www.sencor.com)

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

The original version is in Czech.

Address of the manufacturer: FAST ČR, a.s.,  
Černokostelecká 1621, Říčany CZ-251 01

# SENCOR®

## EN Warranty conditions

### **Warranty card is not a part of the device packaging.**

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

### **This warranty is void especially if apply as follows:**

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.

- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be identified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

### **Authorized service centers**

Visit [www.sencor.eu](http://www.sencor.eu) for detailed information about authorized service centers.

