


SENCOR®

SRD 1800

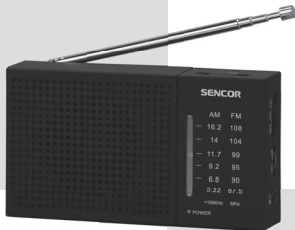

User's manual

**AM FM TUNING
POCKET RADIO**

Návod k obsluze

**KAPESNÍ RÁDIO
PRO PŘÍJEM V PÁSMU AM/FM**

Návod na obsluhu

**VRECKOVÉ RÁDIO
NA PŘÍJEM V PÁSMU AM/FM**

Használati útmutató

**ZSEBRÁDIÓ AM/FM
SÁV VÉTELÉRE**

Instrukcja obsługi

**RADIO KIESZONKOWE DO
ODBIORU NA FALACH AM/FM**


EN

CZ

SK

HU

PL

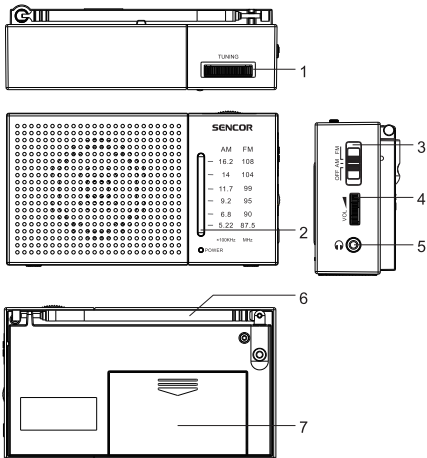

CONTROL LOCATION

1. FREQUENCY TUNING
2. FREQUENCY SCALE
3. RADIO BAND SELECTOR (FM / AM / OFF)
4. VOLUME CONTROL
5. HEADPHONE JACK
6. ANTENNA
7. BATTERY COMPARTMENT

OPERATING INSTRUCTION

POWER SUPPLY

DC (battery) Operation

Insert 2 batteries, type AA cells (not included) into battery compartment and then close the compartment door.

Note:

Check your batteries regularly. Old or discharged batteries should be replaced. If the unit is not to be used for sometimes, remove batteries from the battery compartment to avoid leakage.

Normal Operation

1. Select FM or AM wave band by switching **RADIO BAND SELECTOR**.
2. Adjust the sound level with using **VOLUME**.
3. Tune to a radio station with using **TUNING**.

To improve reception:

- For FM, pull out the telescopic aerial. To improve FM Reception incline and turn the aerial, reduce its length if the FM-signal is too strong (very close to a transmitter).
- For AM, the set is provided with a built-in aerial, so there is no need to use the telescopic aerial. Turn the set to find the best position.

Aux-out

You may connect headphone (not included) to 3.5mm **HEADPHONE JACK**. The loudspeaker is then muted.

Avoid listening to headphones at high volume levels

to prevent possible hearing damage.

SPECIFICATIONS

Speaker:	1.94 inches, 8 ohm dynamic speaker
Power Output:	0.5W RMS
DC Battery Operate:	DC 3V (2 x 1.5V AA)

PRECAUTIONS:

1. Do not leave the batteries in the compartment for a long time. Remove the batteries to avoid leakage and damage.
2. Do not expose the unit to extreme temperature nor high humidity to ensure normal functioning for a long lifetime.
For instances, never place the unit in bathing areas nor around stoves and radiators.
3. If you find the unit is not working properly, please take it to your nearest services center. Do not attempt to repair by yourself.

Warning:

- *To prevent fire or shock hazard, do not expose the unit to rain or moisture.*
- *To avoid electrical shock, do not open the cabinet, refer to service agent or qualified engineer only.*

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste.

Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or your seller.



The product meets EU requirements.

Hereby, FAST ČR, a.s. declares that the radio equipment type SRD 1800 is in compliance with Directive 2014/53/EU.

For the full version of the EU declaration of conformity, please refer to the following website: www.sencor.com

Changes in the text, design and technical specifications may change without prior notice and we reserve the right to make these changes.

The original version is Czech.

Manufacturer: FAST ČR, a.s., Černokostelecká 1621,
Říčany CZ-251 01

EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.

- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Authorized service centers

Visit www.sencor.com for detailed information about authorized service centers.