



EN ■ User Manual


USB MICRO SD DIGITAL FM
RECEIVER

INCLUDED CONTENTS

Package contents:

- Radio receiver SRD2215
- USB-C charging cable
- Rechargeable battery BL-5C
- User's manual

DESCRIPTION OF EQUIPMENT

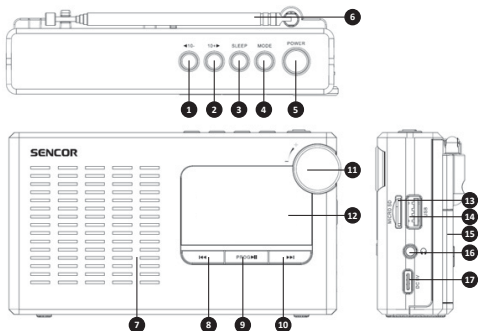

1. TUNING < 10-
2. TUNING > 10+
3. SLEEP (Automatic shut-off)
4. MODE (Mode switching)
5. POWER (ON/OFF – SRD 2215)
6. ROD ANTENNA
7. SPEAKER
8. PREVIOUS I◀◀
9. PLAY / PAUSE ▶▶II
10. NEXT ▶▶I

11. VOLUME control knob
12. DISPLAY
13. MicroSD CARD SLOT
14. USB CONNECTOR (Audio format playback)
15. BATTERY COMPARTMENT
16. HEADPHONE CONNECTOR (Audio jack 3.5 mm)
17. CHARGING/POWER CONNECTOR (USB-C, 5V)

OPERATING INSTRUCTIONS

ENERGY SOURCE

Power supply from mains adapter (Not included)

Connect one end of the AC adapter to the USB-C connector on the device and the other end to the power source. Once connected to the power supply, the unit will automatically switch into the standby mode.

If a 5 V 800 mAh rechargeable battery is inserted in the battery compartment, it will automatically charge while the device is connected to the mains power supply.

To fully disconnect the unit from power supply, unplug the power cord from the mains socket.

Warning:

Before using this device, check that the local mains power supply meets the requirements of this device. Do not connect or disconnect the power cord with wet hands.

If you will not be using the device for an extended period of time (e.g. on holiday), unplug it from the mains socket.

Power supply from rechargeable battery

Open the battery compartment on the back of the device and insert the included battery. The contacts of the device must touch the battery contacts. In case the battery needs to be replaced, always use the same type of 3.7V Li-ion BL-5C battery.

Charging the rechargeable battery

Connect your device using a USB cable – plug one end into the USB-C connector and the other end into a USB port or USB charging adapter. The charging time is approximately 2 hours. The charging indicator will flash while the battery is charging.

IMPORTANT

If you haven't used the device for a long time, the rechargeable battery may be fully discharged, which is a characteristic of all rechargeable batteries. In this case, we recommend charging the battery for 5 to 24 hours to regenerate the battery.

Controls

1. Press the **POWER** button for 3 seconds to turn on the radio
2. Press **MODE** to select FM, Micro SD or USB.
3. In radio mode, the display will show frequency information about the radio station.
4. Select a station using the **TUNING** < / > button.
5. Adjust the sound volume using the **VOLUME** button
6. Press the **POWER** button for 3 seconds to turn off the power.

Automatic shut-off function

1. Press the **SLEEP** button repeatedly to select the off time. For example, if the display shows 15 minutes, the radio will switch off automatically after 15 minutes.
2. To select a longer playback time, press the **SLEEP** button repeatedly to select 15/30/45/60/75/90 minutes or OFF.
3. You can switch off the radio at any time by pressing and holding the **POWER** button.

FM MODE

Tuning

Manual tuning

Press the **TUNING** < / > button briefly until you find the correct frequency.

Automatic scan

1. Press and hold the **TUNING** ◀ / ▶ button until the frequency on the display starts to change.
2. When a station with a strong enough signal is found, tuning stops. Alternatively, you can stop the automatic tuning by pressing the **TUNING** ◀ / ▶ button again-

Pre-settings

You can store the frequencies of up to 50 radio stations in the memory (50 stations in the FM band). You can erase a stored frequency from the memory by storing other frequency in its position.

Automatic saving to preset

1. Press and hold the **PROG** button until the frequency changes on the display.

Manual saving to preset

1. Tune into the desired station (see **Tuning**).
2. Press the **PROG** button once to activate the programming mode.
3. Press **◀◀** / **▶▶** select the desired memory location.
4. Press the **PROG** button again to confirm the selected station.
5. Listening to a preset station:
 - Press the **◀◀** / **▶▶** button to select the desired station.

Improved reception:

- To receive in the FM band, extend the telescopic antenna. To improve reception in the FM band, tilt and rotate the antenna; if the FM signal is too strong (you are very close to the transmitter), shorten its length.

PLAYBACK FROM USB AND MICRO SD CARD

The unit supports playback of MP3 files stored on storage media connected via the USB connector or memory card slot.

1. Press **MODE** to select USB or SD.
2. Before connecting a USB device to the device, make sure that the connector is turned correctly and connect it. Or insert the memory card with the contacts to the back of the device. The memory

card contacts will be directed to the device. Take extra care when inserting the memory card to avoid damaging it.

3. The system starts reading the MP3 files from a USB memory device or a memory card automatically.
4. Press the **◀◀ / ▶▶ / ▶||** buttons for the Previous / Next a Play/ Pause functions.

Warning: Due to a number of memory devices on the market, compatibility and playback support are not guaranteed for all media. The memory devices you want to connect should be tested in advance and/or formatted as FAT32. The playback of protected media, files or content stored inside them may fail.

External output

You can connect headphones to the 3.5 mm **HEADPHONE JACK** (not included). The speaker will automatically disconnect.

To prevent impairment of your hearing, please avoid listening at excessive volume levels with your headphones.

TECHNICAL SPECIFICATIONS

Frequency range:	FM: 87,5 – 108 MHz
Loudspeaker:	1.75", 4-ohm dynamic speaker
Power output:	1.2 W RMS (effective)
Mains power supply:	Adapter 5 V DC
Rechargeable battery:	DC (direct current) Li-Ion 3.7 V, 800 mAh

SAFETY PRECAUTIONS

1. Adapter is not supplied with accessories.
2. Always disconnect the charging cable from the USB-C connector when you are not using the device.
3. Do not leave the battery in the device for a long time. Remove the battery to prevent leakage and damage.

4. To keep your device working reliably for a long time, do not expose it to extreme temperature or high humidity. For example, never place the unit in areas designed for swimming or near kitchen ranges or radiators.
5. If the unit malfunctions, return it to the nearest service centre. Do not attempt to repair the appliance on your own.

Warning:

To prevent fire or electric shock, do not expose this appliance to rain or humidity.

To prevent electric shock, do not open the case of the device. Always have the unit repaired by a qualified service technician.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



The product meets EU requirements.

Hereby, FAST ČR, a.s. declares that the radio equipment type SRD 2215 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: www.sencor.com

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

The original version is Czech.

Manufacturer: FAST ČR, a.s., U Sanitasu 1621, Říčany 251 01, Czech Republic

SENCOR®

EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Manufacturer:

FAST ČR, a.s., U Sanitasu 1621, Říčany 251 01, Czech Republic

Visit **www.sencor.com** for detailed information about authorized service centers.

The original version of the instructions is in the Czech language, other language versions are made by the appropriate translation.

