

SENCOR®



SFP 7716

User's manual

Uživatelská příručka

Používateľská príručka

Felhasználói kézikönyv

Instrukcja obsługi

Εγχειρίδιο Χρήστη

EN

CZ

SK

HU

PL

GR

MP3 PLAYER

MP3 PŘEHŘÁVAČ

MP3 PREHRÁVAČ

MP3 LEJÁTSZÓ

ODTWARZACZ MP3

ΣΥΣΚΕΥΗ ΑΝΑΠΑΡΑΓΩΓΗΣ MP3

Before operating this unit, please read all instructions.

Please read this user's manual carefully for your own safety and to ensure proper use of this product and to prevent physical damage. While using this MP4 player, be careful to prevent explosions, electric shock, etc.

- Be aware of your health when using this player, especially when adjusting the playback volume.
- Do not leave this player in a humid place or in places with a temperature above 35° C or below 5° C
- Do not use headphones while driving or cycling.
- Do not repair this device yourself to avoid damage.
- Using headphones while walking can cause a traffic accident.
- Do not allow moisture or water to enter the player.
- Do not increase the volume level too much – doctors warn long-term hearing loss.
- If you experience hearing problems, stop using the device or turn the volume down.
- Please back up important data to your computer to avoid losing it.
- Always use accessories supplied or approved by our company.

NOTE:

Charge this digital player before use!

MOST IMPORTANT FEATURES:

Bluetooth support (connect Bluetooth speakers and headphones)

Supports MP3/WMA/WAV/APE/FLAC formats.


USB 2.0 support

Support for voice recording function.

Built-in FM radio

Supports micro SD cards

DESCRIPTION

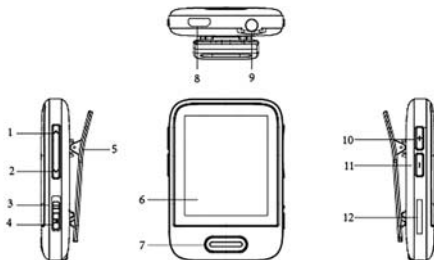

1. Backward 2. Forward 3. Power on/off 4. MENU/KEY LOCK 5. Clip 6. LCD display
7. Play/Pause 8. MicroUSB 2.0 9. Headphone jack 10. VOL+ 11. VOL- 12. Micro SD card slot

SAFE BATTERY CHARGING

1. Connect the USB cable to USB port on the device.
2. The battery icon on the screen will blink while charging; it will stop flashing when fully charged.
3. When the device is fully charged, disconnect the USB cable.

NOTE:

- Fully charge the device before first use.
- Do not charge the device excessively, otherwise the battery life will be shortened.
- After a long period of use, the battery life will be shortened. If you will not be using the device for an extended period of time, charge it once a month. (A lithium polymer battery is a consumable item. This battery needs to be recharged regularly, even if the device has been turned off for a long time.)

NOTE

Never disassemble, crush, short-circuit or incinerate the battery as it may cause fire, injury, burns or other hazards.

OPERATION

Button	Button functions
[Backward/Forward]	Press to move up/down, e.g. to select the previous or next file.
[VOL+/ VOL-]	Press briefly to adjust the volume and long press to quickly adjust.
[M] (Menu)	Press and hold to open the main menu or briefly to open the sub menu. Press the "M" button for 2 seconds to lock or unlock the main menu.
[Play/Pause]	Press briefly to play or pause, e.g. to start playing music/video/radio/recordings. Press and hold the "Play/Pause" button for 3 seconds to activate standby or wake up from standby.* **
[Power on/off]	Press to turn the appliance on/off.

* You can continue listening to music from where it was paused.

** Due to possibility of data loss, it is recommended to switch off the device by long pressing the "Play / Pause" button, e.g. initializing the date and time.

ADDING/REMOVING FILES/FOLDERS

Connect the micro USB cable supplied to your Mp4 player and computer so you can transfer music files and use the device as a removable USB storage device to the player.

DISCONNECTING THE DEVICE FROM A PC

To prevent damage to the device or loss of data, proceed as follows.

1. Left-click the taskbar icon in the lower-right corner of the desktop.
2. Click "Safely Remove USB Storage Device".
3. Disconnect the player from the computer.

NOTE

1. Do not disconnect the device while transferring files.
2. Do not press the [M/Play] button while transferring files to avoid losing data or damaging the unit.

MUSIC

1. Select "Music" in the main menu, press the "Play/Pause" button to open the sub menu, and then press the "Forward/Backward" button to select the desired mode and press the "Play/Pause" button to confirm.
2. Press the "Forward/Backward" button to select the music file and press the "Play/Pause" button.
3. Playing music.

- a. Press the "Play/Pause" button for the first time to play the music and a second time to pause the playback.
 - b. Press the Forward/Backward button to play the next/previous music.
 - c. While playing music, press and hold the "Forward/Backward" button to fast forward or rewind the music.
4. In the music playback mode, long press "M" to go directly to main menu.
 5. In music playback mode, briefly press the "M" button to open the sub menu.

VIDEO

1. Select "Video" in the main menu and press the "Play/Pause" button to display the list
 2. Press the "Forward/Backward" button to select the video file and press the "Play/Pause" button to confirm.
 3. Playback of video
 - a. Press the "Play/Pause" button for the first time to play the video and a second time to pause the playback
 - b. Press the "Forward/Backward" button to play the next/previous video.
 - c. While playing a video, press and hold the "Forward/Backward" button to fast forward or rewind the video.
 4. In the video playback mode, long press "M" to go directly to main menu.
 5. In video playback mode, briefly press the "M" button to open the sub menu.
 6. AMV and AVI formats are supported (a video converter is required, but can be played on a PC using a regular AVI player) * ** ***
- * video resolution support: 160x128
- ** support for the AMV format with the amv codec
- *** AVI support with the Motion JPEG Video (MJPEG) codec

RADIO

1. Select "Radio" in the main menu and press the "Play/Pause" button to activate this mode.
2. Receiving FM broadcasts.
 - a. Press "Forward/Backward" to select a required station.
3. In FM reception mode, long press "M" to go directly to the main menu.
4. In FM reception mode, briefly press the "M" button to open the sub menu.

NOTE:

1. While listening to the radio via Bluetooth, you must connect wired headphones that are used as an antenna.

IMAGES

1. Select "Pictures" in the main menu and press the "Play/Pause" button to display the list.
2. Press the "Forward/Backward" button to select the pictures and press the "Play/Pause" button to confirm.
3. A long press on the "M" button takes you directly to the main menu.
4. Briefly pressing the "M" button takes you directly to the sub menu.

RECORDER

1. Select "Recordings" in the main menu and press the "Play/Pause" button to display a pop-up menu.
2. Press the "Play/Pause" button for the first time to play the recording and a second time to pause the playback.
3. During recording, long press "M" to save the file.

E-BOOK

1. Select "E-books" in the main menu and press the "Play/Pause" button to confirm.
2. To view an E-book: While viewing the E-Book, press the "Forward/Backward" button to browse its contents.
3. In the E-book viewing mode, long press "M" to go directly to main menu.

CONNECT TO A BLUETOOTH RECEIVING DEVICE.

1. Turn Bluetooth on/off
 - a. Select "BT" (Bluetooth) in the main menu and press the "Play/Pause" button to confirm.
 - b. Select "BT control" and press the Play/Pause button to select "Turn BT on" or "Turn BT off" and press the "Play/Pause" button to turn Bluetooth on or off.
2. Pairing devices
 - a. Start the "Search Device" function and press the "Play/Pause" button to display the "Searching" message. Wait until all devices appear on the display.
 - b. Select the desired device and press the "Play/Pause" button to connect.
3. To disconnect a device, select Disconnect from the Device's list and press the "Play/Pause" button.
4. To unpair a Bluetooth device, select "Unpairing" in the Device's list sub-menu and press the Play/Pause button.

NOTE:

1. This MP4 player is a Bluetooth transmitter, not a receiver. While listening to the radio via Bluetooth, you must connect wired headphones that are used as an antenna.
2. If the device does not appear in the "Device list", go back and follow the instructions in "Pairing device".
3. Bluetooth compatibility between other devices may not be guaranteed.

PEDOMETER

1. Select "Pedometer" in the main menu and press the "Play/Pause" button to display a pop-up menu.
2. Press the "Play/Pause" button to start or pause it.
3. A long press on the "M" button takes you directly to the main menu.
4. Briefly pressing the "M" button takes you directly to the sub menu.

SETTING UP

Select "Settings" in the main menu and press the "Play/Pause" button to activate this mode.

01. Playback mode: Music playback settings.
02. Audio settings: Settings for audio.
03. Setting the automatic shut-off timer: Setting the auto-off timer.
04. Setting the display: Display settings.
05. Date and time: Setting the date and time.
06. Presentation settings.
07. Language: Select the menu language.
08. Information: Set system information.
09. To format your device: Internal memory formatting.
10. Factory settings: Restoring factory defaults.

TECHNICAL SPECIFICATIONS

Display	1.8" (128 x 160 pixels)
Micro SD card	up to 128 GB
USB interface	USB 2.0
Bluetooth	Supports Bluetooth speakers, stereo headphones
	Pairing, remembering the paired device
	Profile: A2DP, AVRCP
Power supply adapter output values	5 V, 500 mA
Dimensions	42 x 60 x 20 mm
Weight	25 g
Supported file systems	FAT32, exFAT
Battery	150mAh
FM radio	Range 87.5 MHz - 108 MHz
Bluetooth	Version 4.1
Maximum Transmitter Power	100mW at 2.4GHz - 2.4835GHz

NOTE:

The contents of this manual may change due to software updates. You will not receive any individual notification in case of any changes to the features or functions of this product. If some devices and procedures are not the same, consider your device as standard.

In case of long-term storage of batteries, recharge them at least once every three months to avoid leakage or deterioration due to self-discharging.

RECYCLING



This symbol means that the relevant electronic product or battery must not be discarded in common household waste in Europe. In order to correctly process the product and battery waste, please dispose of it in accordance with the local laws or requirements to regulate the disposal of electric and electronic equipment and batteries. This will help to protect natural resources and improve the environmental protection standards in view of ecological waste handling and disposal (The Waste Electrical and Electronic Equipment Directive).

CE MARKING



The product meets EU requirements.

FAST ČR, a.s. hereby declares that the radio device type SFP 7716 conforms to the 2014/53/EU directive.

The full text of the EU declaration of conformity is available at the following internet address: www.sencor.com

OTHER INFORMATION

The text, design and technical specifications may change without prior notice and we reserve the right to make changes.

The original version is Czech.

Address of the manufacturer: FAST ČR, a. s., Černokostelecká 1621, Říčany CZ-251 01

SENCOR®

EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).

- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be identified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Authorized service centers

Visit www.sencor.com for detailed information about authorized service centers.