

SENCOR®

Let's live!



LED TV

SLE 65US800TCSB

SLE 55US800TCSB

SLE 50US800TCSB

SLE 43US800TCSB

USER'S MANUAL

EN




PLEASE, READ THESE INSTRUCTIONS BEFORE STARTING TO OPERATE THE TELEVISION. STORE IT FOR LATER REFERENCE. NOTE DOWN THE MODEL NUMBER AND THE SERIAL NUMBER OF THE TV SET. LOOK AT THE LABEL ON THE BACK COVER AND PASS THE INFORMATION PROVIDED THERE TO YOUR DEALER IN CASE THAT YOU WOULD NEED SERVICING.

Contents

1.	Important safety instructions.....	3
1.1.	Important safety instructions.....	7
2.	Installation	8
2.1.	Attaching the stand.....	8
2.2.	Wall-Mounting Instructions.....	9
3.	Controls and connections	10
4.	Specifications.....	12
5.	Remote controller	13
5.1.	Using the Remote Control Button.....	13
6.	Getting Started with webOS TV	14
6.1.	Boot Guide	14
6.2.	Home Tutorial.....	14
6.3.	Manage Home	15
6.4.	Connecting to the Network.....	16
6.5.	Connecting to the Network.....	17
6.6.	Managing Your LG Account.....	18
7.	Enjoy Live TV	19
7.1.	Making the Most of Live Menu.....	19
7.2.	Viewing Guide	19
7.3.	Checking Programme Info.....	20
7.4.	Recording.....	20
7.5.	Using TV Scheduler.....	21
7.6.	Playing Recorded TV Programs	21
8.	Connecting external devices	24
8.1.	Using Home Dashboard	24
8.2.	Connecting USB	24
8.3.	Watching Computer Screen on TV.....	25
9.	Making the most of Smart TV	27
9.1.	Surfing the Internet on TV	27
10.	Settings	29
10.1.	Quick Settings	29
10.2.	Programmes	29
10.3.	Connection	31
10.4.	General.....	31
10.5.	Accessibility	34
10.6.	Support.....	35


1. Important safety instructions

To be able to use this product properly, read this user's manual carefully and keep it for future reference. If you plan to give (sell) this device to a third person, include all documentation, including this manual, with the transaction.

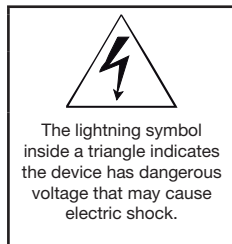

ATTENTION
RISK OF ELECTRIC SHOCK – DO NOT OPEN!

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK SIDE). THERE ARE NO PARTS INSIDE WHICH COULD BE REPAIRED BY THE USER. FOR REPAIRS AND SERVICE, CONTACT AN AUTHORIZED SERVICE CENTRE.

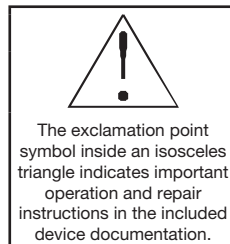

General safety instructions

- Please read this manual carefully before using the device. Follow this manual and the instructions inside.
- Heed all warnings.
- Follow all instructions.
- Use only the attachments and accessories specified by the manufacturer.
- **OPEN FLAMES, FOR EXAMPLE A BURNING CANDLE, SHALL NOT BE PLACED ON THE DEVICE. DO NOT PLACE HOT OBJECTS OR OBJECTS WITH AN OPEN FIRE ON THE DEVICE, FOR EXAMPLE CANDLES OR NIGHT LAMPS. HIGH TEMPERATURES MAY MELT PLASTIC COMPONENTS AND CAUSE FIRE.**
- Use the device in temperate climate.
- The manufacturer and vendor of the device are in not in any way liable for any direct or indirect damages caused by not following the instructions for installation, setup, operation, maintenance and cleaning of the device mentioned in this manual.
- Protect the device against impacts, falls, blows, shocks, vibration, moisture and dust.
- Prior to granting children consent to use the device, they shall become familiar with the proper and safe use of the player, corresponding to their age. If the device has a headphone jack, do not use headphones set to maximum volume. Risk of hearing damage or loss.

Installation, control

- Install the device according to the instructions in the manual.
- Leave free space around the device, it is necessary for proper air circulation. It helps to dissipate the heat generated by the operation of the device. By covering the air vents of the cabinet, you risk overheating and damage of the device. You must ensure that the air circulation will not be prevented by covering the air vents with e.g. newspaper, tablecloth, curtain, etc. Follow the installation instructions in the manual.

- This device shall not be kept in a closed area, such as a library or shelf, provided sufficient ventilation cannot be provided or the manufacturer's instructions cannot be followed.
- Do not place any objects into the air vents or any other holes. Risk of touching components with dangerous voltage or shorting parts that could cause fire or electric shock. Do not pour any liquids into the device. Do not install the device in direct sunlight, or close to heat sources, like radiators, heat exchangers, stoves or other appliances (including amplifiers) producing heat. High temperatures shorten the life of the electronic components of the device significantly. Do not use and do not leave the device near an open fire.
- The device must not be exposed to dripping or running water and you must not place upon it objects filled with liquid, e.g. vases. Protect the device against becoming wet, sprayed on or poured on by any liquid, do not leave or install the device outdoors. Do not use the device outdoors. You risk electric shock or fire by not adhering to these instructions.
- Do not use the device close to water.
- Handle the glass panels and cover of the device with care. The glass screen can break on impact and cause serious injury.
- Make sure the power cord is not stepped on or compressed, especially near the plug and point leading from the device or adapter. The power plug (adapter) is used to disconnect the system and must be easy to access.
- Do not use a device with a damaged power cord or plug. If the power cord or plug is damaged, turn off the device, disconnect it from the power supply and contact your authorized repair shop. Only a professional can replace a damaged power cord or plug. Under no circumstances should you attempt to replace the power cord or plug yourself.
- Do not attempt to bypass the safety function of the polarized plug. If the plug cannot be plugged into your socket, refer to an electrician to replace your obsolete socket. Before plugging the device into the socket make sure the voltage in your socket corresponds with the voltage on the label of the device or power adapter. If you are not sure of the type of power source you have in your home, refer to your vendor or local power company.
- Before switching, make sure that all network connections are made properly and in accordance with the manufacturer's instructions. Switch the device off and unplug it from the socket before plugging in or changing the connection of the device.
- Remember to always unplug the plug (adapter) from the socket before unplugging the power cord.
- Plug the power cord into an independent socket. Do not overload wall sockets using extension cords or unified sockets. Risk of electric shock.
- Hold the power cord by the plug and not by the cable when pulling out from the socket.

- Disconnect the power cord from the power outlet during thunderstorms, or when not in use for a longer period of time. Avoid carrying the device from a cool environment into a warm environment or vice versa, or operating the device in a moist environment. Air moisture may condense in some areas within the device case and may cause the device to become temporarily inoperable.
- In this case, leave the device in a warm and well-ventilated area and leave for 1–2 hours until the moisture evaporates. The device can be normally used again. Be especially cautious when using the device for the first time during a cool season immediately after purchasing. Do not place the device on an unstable cart, stand, console or table. The device can fall and cause serious injury to children or adults or seriously damage the device and other objects. Only carts, stands or tables defined by the manufacturer or sold with the device shall be used. Any assembly work with the device shall be carried out according to the manufacturer's instructions and shall use assembly accessories recommended by the manufacturer.
- Do not lean against the device, do not lean over or use the device as a step. Avoid quick movements. Make sure children do not play with the machine.
- Be careful when moving the device when placed on a cart. Suddenly stopping, using excessive force and uneven surfaces may cause the cart holding the device to tip over.
- Under no circumstances are the manufacturer or vendor liable for any direct or indirect damage caused by the failure to observe the instructions for installation, configuration, operation, treatment and cleaning of this device included within this manual.
- Protect the device against impacts, falls, blows, shocks, vibration, moisture and dust. Do not expose the device to extreme temperatures or humidity.

**Note:**

If the device is powered by an adapter, only use the AC adapter and power cord included with the device. Do not use defective sockets. Make sure the cord is properly plugged into the socket. If the cord is loose, an electric arc can cause fire. Refer to a qualified electrician to replace sockets.

Note:

Plug the device into a properly grounded sockets with protective grounding pin only.

Note:

If you plan to mount the device to a wall or ceiling, follow the instructions of the manufacturer and the user's manual for the given system.

Repairs and maintenance

- To avoid risks of electric shock or fire, do not remove the device from the case – the case does not contain components that the user could repair or adjust without the necessary equipment and qualification. Refer to a professional service centre if your device requires service.
- In the event of any unusual occurrences during the use of the device, e.g. smelling the characteristic smell of burning insulation or even seeing a smoke, turn the device off immediately, disconnect the power supply and wait with continuing use of the device until you learn the result of its inspection by the service personnel.
- Leave all service to qualified service personnel. Service is necessary when the device is damaged in any way, for example in case of damage to the power cord, spilling liquid on the device, intrusion of foreign objects into the device, when the device is exposed to rain or moisture, if the device does not function in the usual manner or if it fell.
- When repairing or replacing a component of the device, make sure the repair technician used spare parts defined by the manufacturer to ensure the replaced components have the same features as the original. Unauthorized replacements can cause fire, electric shock or other risks.
- Prior to cleaning, moving or other maintenance work, unplug the cord (adapter) from the socket.
- Clean the device with a dry cloth only. Do not use gasoline, thinner or other solvents or abrasives, scouring pads, or sponges with scouring pads to clean the device.

Note:

Do not throw the device into your common household waste. Respect laws and regulations when disposing of the machine.

Remote controller and battery

- Do not expose the remote controller or battery to direct sunlight, or close to heat sources, like radiators, heat exchangers, stoves or other appliances (including amplifiers) producing heat. Do not use and do not leave the device near an open fire. Make sure the sensor is not exposed to intense light (e.g. sunlight) or fluorescent tube light, which could lower the efficiency and reliability of the remote controller.
- The remote controller or battery must not be exposed to dripping or running water and objects filled with liquid, e.g. vases, shall not be placed on the device. Protect the remote controller against becoming wet, sprayed or poured on by any liquid. Do not use outdoors. Failure to respect these instructions can lead to the remote controller or battery becoming damaged.
- Do not use the device close to water.
- The impact the battery disposal has on the environment shall be monitored carefully.
- Using the batteries incorrectly can result in leakage and corrosion. Follow the following instructions to ensure proper remote control operation:
 - Do not insert the batteries in the wrong direction.
 - Do not charge, heat, open or short the batteries.

- Do not throw batteries into a fire.
- Do not leave dead batteries in the remote controller.
- Do not combine various types of batteries or old and new batteries.
- If you do not use the remote controller for a longer period of time, remove the batteries to prevent damaging the remote controller by the batteries leaking out.
- If the remote controller does not work correctly or its range decreases, replace all batteries with new ones.
- If there is an electrolyte leakage from the batteries, have the remote control serviced by an authorized technician.

**NOTICE:**

To prevent risk of fire or electric shock, do not expose the device to rain or moisture.

**NOTICE:**

The batteries must not be exposed to excessive heat, for example sunlight, fire, etc.



This symbol indicates the device has double insulation between dangerous voltage from the network and user-accessible parts. Replace parts with identical spare parts only.

1.1. Important safety instructions

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.
- Keep small accessories out of reach of children so they are not mistakenly swallowed.

2. Installation


Install the stand as described below, or if you want to mount it to a wall, please contact a professional installer.

Please ensure the TV is not plugged into the wall socket and furthermore we recommend to get another person to assist in the following task.

2.1. Attaching the stand

Step 1

Place a soft cushioned material on top of a flat surface to prevent damaging the screen panel. Then place the TV screen flat on top, with the screen side facing down, as illustrated on the right.

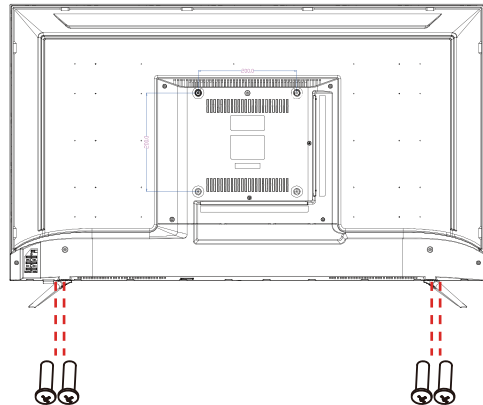

Step 2

Align the stand leg to the installation point, as illustrated below.

Step 3

Tighten the screws (supplied) with a panel, as illustrated on the right.



CAUTION!

Do not apply excessive force as this may damage the screw holes.


2.2. Wall-Mounting Instructions

Please ensure the TV is not plugged into the wall socket and furthermore we recommend to get another person to assist in the following task.

- We recommend you use a professional installer as we assume no liability for any eventual damage to the product or injury to yourself if you mount the TV on your own.


BACK OF TV


VESA PATTERN: 200 × 200 mm

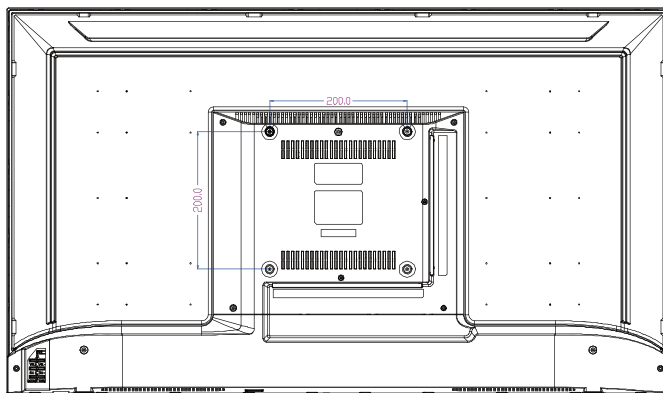
**Note:**

If you are wall-mounting the TV, this should be done by a qualified installer.

3. Controls and connections

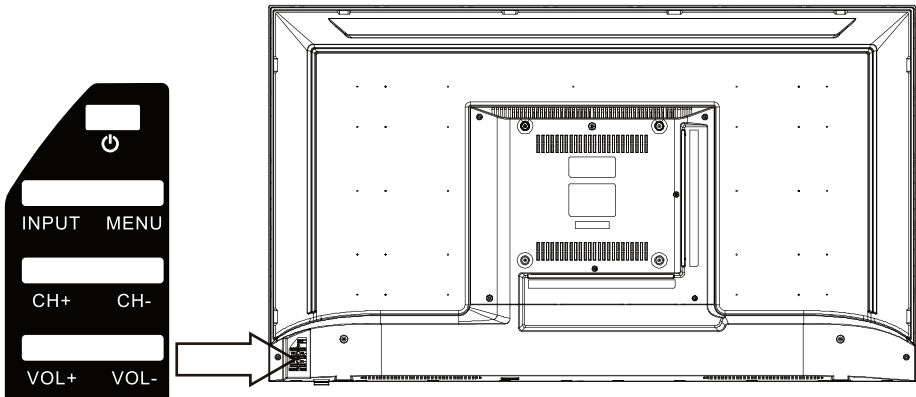

- 1  Turn on/off
- 2 **VOL-**]
- 3 **VOL+**] VOL+/-: Adjust Volume.
- 4 **CH-**]
- 5 **CH+**] VOL+/-: Adjust Volume.
- 6 **MENU** Into or exit from menu
(Use CH+/- button select item, VOL+/- button adjust item).
- 7 **INPUT** Source Select.

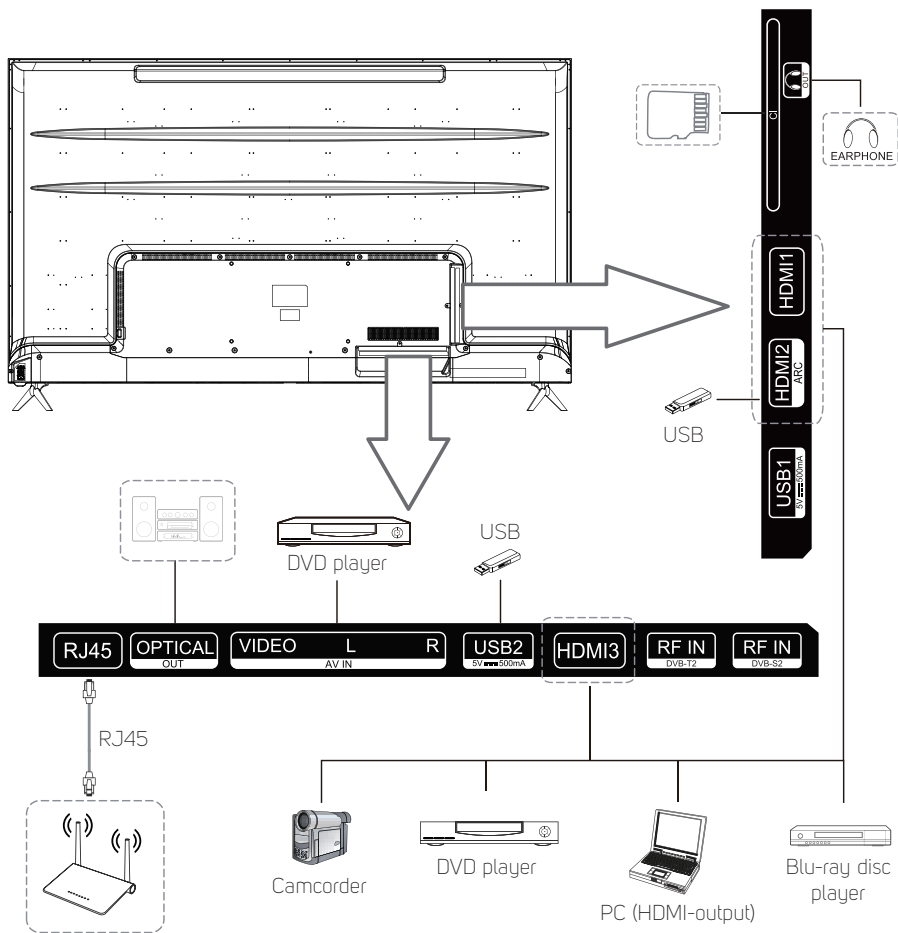

4. Specifications

Model	SLE 43US800TCSB	SLE 50US800TCSB	SLE 55US800TCSB	SLE 65US800TCSB
Display Size	43" Diagonal(max.)	50" Diagonal(max.)	55" Diagonal(max.)	65" Diagonal(max.)
Operating System	Powered by webOS 5.0			
Resolution	3840 x 2160			
Luminance	220 cd/m ²	220 cd/m ²	280 cd/m ²	300 cd/m ²
Colours	1.07 Billion			
Aspect Ratio	16 : 9			
Multimedia Playback Format under USB Mode	Music: MP3, M4A, AAC,WMA			
	Movie: AVI,MP4,MPG,MKV,MOV,DAT, VOB,RM,RMVB			
	Photo: JPG, BMP, PNG			
Power Source	100-240V~ 50/60Hz			
Power Consumption	75W	110W	150W	165W
Controller Power	DC 3V (Two AAA size batteries)			
Work Temperature	0 °C – 40 °C			

Note:

- Design and specification are subject to change without notice.
- Weight and Dimension shown are approximate.

5. Remote controller

5.1. Using the Remote Control Button



POWER: ON/OFF.

TV/RAD: Switch to TV or Radio.

Q : Search.

SUBTITLE: Enable/disable subtitles.

⚙️ : Enters the Quick Settings menu.

📺 : Selects an input source.

0-9: Number selection key.

LIST: The QUICK ACCESS edit screen appears.

... : It displays the additional buttons on the remote control.

🔊 : It adjusts the volume level.

📺 : You can change the programme.

AD: Turn the AD switch on or off.

GUIDE: You can check the programme.

🔇 : Mutes the sound.

▶ : Play.

🏠 : Displays the Home menu.

⏸ : Pause.

BACK: Move to the previous step.

EXIT: Closes the menu.

⊙ : Select current option that's highlighted.

△▽◀▶ : RIGHT/LEFT UP/DOWN buttons to navigate the on-screen menus.

TEXT: Open the TEXT.

T.OPT: Open the function menu of TEXT.

MOVIES: Search Movies

REC: Launch Record.

📺 : Launch Live Playback.

NETFLIX : go to Netflix.

prime video : go to prime video.


🔴 🟢 🟡 🔵 : Corresponds to various colour functions in the menu or teletext.

The marks and positions of the remote control buttons may vary depending on the model.

6. Getting Started with webOS TV

6.1. Boot Guide

6.1.1. Choose region and language

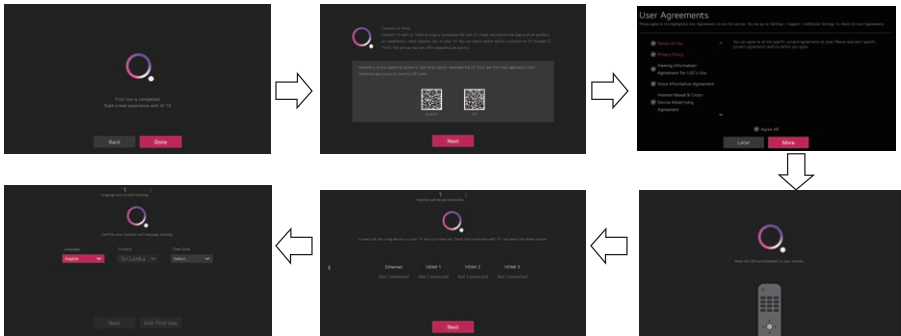


1. When you turn on the TV for the first time, the default country is UK and the language is English;
2. You can use the remote control to change the default country and language according to the boot prompt.

6.2. Home Tutorial

6.2.1. Using the Home Feature of the webOS TV


You can open the Home screen by pressing the  button on your remote control. You can combine frequently used apps on a single screen and use whichever you want at any time.

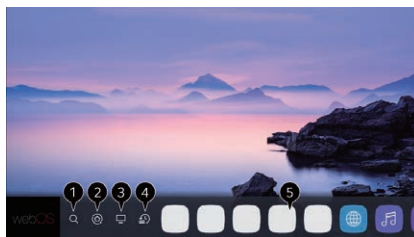

1. Launch Search.
To see the details, click the Enjoying Content Store Content Search in User Guide.
2. Move to the Home Dashboard.

You can select or control a device (mobile, external device, Home IoT Devices, etc.) connected to the TV.



For more information, see [Connecting External Devices Using Home Dashboard](#) in User Guide.


3. Move to the TV input you used recently.
4. Move to the recently used app.
Long-press the  button on the remote control or focus on the Recents.
You can run or close a recently used app in the list provided in the Preview area at the top.
5. You can run, move, and delete the apps installed on your TV.
Focus on each App area. It provides the Preview at the top.

6.3. Manage Home

6.3.1. Manage webOS TV Home

You can view a list of all apps installed on your TV, change their positions, or delete them.


1. Select the app you want to edit, and press and hold the Wheel (OK) button on the remote control.
This will activate the app edit mode.
Or you can select the Edit mode button at the right corner of the Home list to enter the App Edit mode.
2. To move the app to your desired position, go to the position and press the Wheel (OK) button.
To delete an app, select the App Delete icon above the app.
You can move and delete as many apps as you wish before exiting the edit mode.
You can also move apps with the  /  buttons on your remote control.
3. After the editing is done, press the Close at the top right to exit the App Edit mode.
The default TV app cannot be edited.

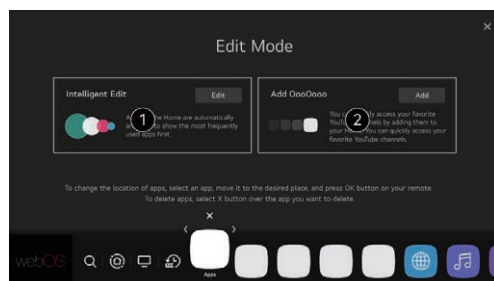



6.3.2. Live TV Preparation

1. Connect the broadcast antenna to the TV.
You can also connect a piece of equipment that can receive broadcasting such as a set-top box instead of the antenna.

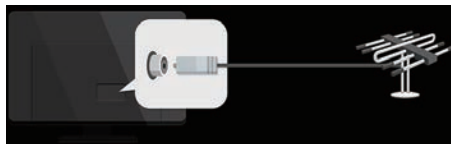Launch  →  Connection → Device Connection Settings Universal Control Settings




2. Start the  →  → Programmes Programme Tuning (Programme Tuning & Settings) Auto Tuning.
Finds and adds only programmes being broadcast.



6.4. Connecting to the Network

6.4.1. Connecting to the Network

If you configure settings for the network, you can use various services such as online contents and applications.

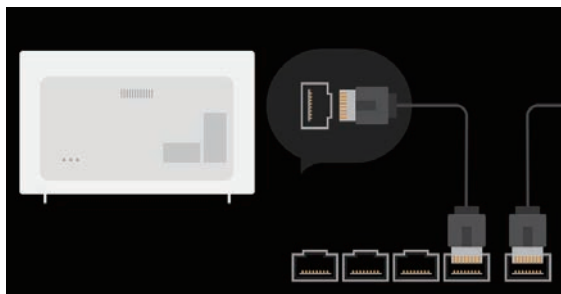6.4.2. Setting a Wired Network



1. Connect the LAN port of the TV and the router using a LAN cable.
The router should be connected to the Internet beforehand.
If the router supports DHCP, the TV is automatically connected to the network when you connect the TV to the network with a LAN cable.
If the Network Is Not Automatically Connected
2. Press the  button on the remote control.
3. Select →  Connection → Network Connection Settings Wired Connection (Ethernet).

6.4.3. Setting a Wireless Network



1. Turn on the power of the router connected to the Internet.
2. Press the Settings button on the remote control.
3. Select All Settings icon Connection Network Connection Settings Wi-Fi Connection.
4. When the network search is complete, the list of networks available for connection is shown.
5. Select a network to connect.
If your wireless LAN router is password protected, enter the password configured for the router.

6.5. Connecting to the Network

6.5.1. Network Setting Warnings

1. Use standard LAN cable (connect to Cat7 or higher with RJ45 connector, 10 Base-T, or 100 Base TX LAN port).
2. Resetting the modem may fix some network connection problems. Turn the power OFF, disconnect and reconnect it, and then turn the power on to solve the problem.
3. The manufacturer is not responsible for any network connection problems or any faults, malfunctions, or errors caused by network connection.
4. The network connection may not work properly because of network settings or the Internet service provider.
5. DSL service must use a DSL modem; and cable service must use a cable modem. Since only a limited number of network connections may be available, TV network setting may not be used depending on the contract with Internet service provider. (If the contract does not allow more than one device per line, only the already-connected PC may be used.)
6. A wireless network can experience interference from other devices that use the 2.4 GHz frequency (wireless phone, Bluetooth device, or microwave oven). Although interference can also happen when using the 5 GHz frequency, it is less likely to occur.
7. The wireless environment can make wireless network service run slowly. Failure to turn off all local home networks may cause excessive traffic on some devices. The access point device must support wireless connections and wireless connection feature must be enabled on the device to have AP (access point) connection. Contact the service provider for availability of wireless connections on the access point.

8. Check SSID and security settings of the AP. Refer to the appropriate documentation for SSID and security settings of the AP.
9. Invalid settings of network devices (wired/wireless line sharer, hub) can cause the TV to operate slowly or not operate properly. Install the devices correctly according to the appropriate manual and network.
10. The connection method may differ depending on the AP manufacturer.
11. To solve a problem related to this function, refer to the Troubleshooting section of User Guide

6.6. Managing Your LG Account

6.6.1. Creating LG Account

In Account Management, you can use your email address to create a new LG account. Alternatively, you can create and log in to an LG account using the ID and password of an external service account.

Press the  button on the remote control.

Select  → General Account Management → LG Account Sign In.

Select Create Account. Read and accept the Terms of Service.

Enter ID and password. Your ID must be your email address.

Enter your date of birth.

If you select OK, a verification link is sent to the email address you entered. Please complete the email verification within the validity period.

If email verification is successful, an LG account is created and you can log in with this account information.

Some models may not be supported.

Internet connection is required to create an account.


Required information may vary depending on the country.

You may be restricted from the service depending on your age.

To solve a problem related to this function, refer to the Troubleshooting section of User Guide.

Managing Your LG Account

You can manage the information of your LG account.

Press the  button on the remote control.

Go to  → General Account Management to log in.

Personal Information

You can view or edit your information of the account currently logged in.

You can change the password or press Edit to edit your personal information.

Some models may not be supported.

7. Enjoy Live TV

7.1. Making the Most of Live Menu

Using Live Menu

You can use the relevant features with ease when watching TV broadcasts.

Press the LIST button on the remote control.

Or press the Wheel (OK) button on the remote control and select Programmes.




7.2. Viewing Guide

Viewing TV Guide

You can view programmes and the schedule of each programmes.

Press the remote control's LIST button, and select the Guide tab on the left side of the screen.

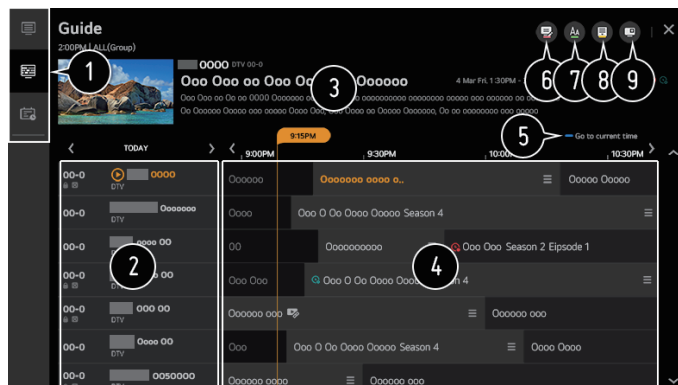


1. Click on each area, and you can move to the app.
2. You can view information on the programme and broadcaster.

3. You can view information about the programme you are currently watching as well as the focused programme information.
 4. Select the See Details button or the title of the desired programme. You can view more information on the programme and perform Watch/Record (only available on certain models) or Reminder/Scheduled Recording (only available on certain models), etc.
 5. You will be taken to the programme list for the current date and time.
 6. Launch Programme Manager.
 7. You can change the size of the programme list to adjust the number of programmes displayed on the screen.
 8. Sets the filter.
 9. You can turn on/off Mini TV.
- Programme information is not displayed for programmes with no provided broadcast information.

7.3. Checking Programme Info

Viewing Programme Information

During watch the Live broadcast, press the Wheel (OK) button. The Programme Banner appears.

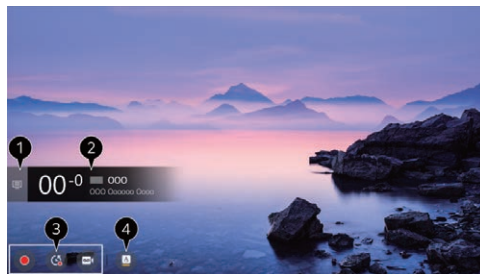

Move to the Programmes.

To see the details, click the Enjoy Live TV Making the Most of Live Menu in User Guide. It displays the information about the programme you are watching.


7.4. Recording

Using the Recording Functions

With the LG webOS TV, you can use recording functions.

Using Instant Recording

1. Connect a USB HDD or USB stick to a USB port.
 2. It is recommended that you record to a USB HDD.
 3. During watch the Live broadcast, press the Wheel (OK) button.
 4. Press the Start Recording button at the bottom of the screen.
- If you want stop the recording, press the Stop Recording button

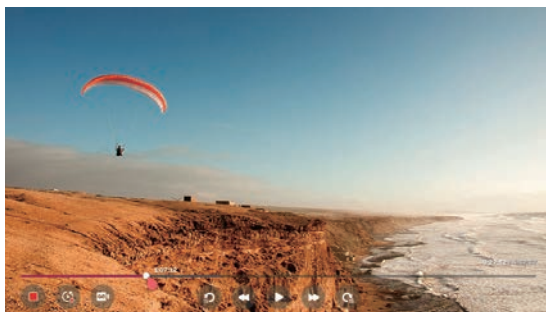


7.5. Using TV Scheduler

Using the TV Scheduler

You can enter the time and date of a programme to schedule watching or recording it at the set time.

Press the remote control's LIST button, and select the TV Scheduler tab on the left side of the screen.

Select the TV Scheduler at the top right.

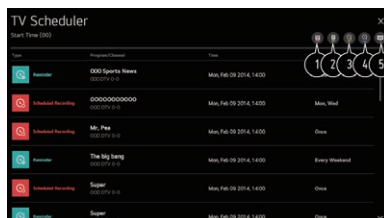

You can change the alignment order or apply the filter.

You can set the Delete Mode.

You can set the New Scheduled Recording.

You can set the New Reminder.

Launch Guide.


7.6. Playing Recorded TV Programs

Managing Recordings

You can view and play recordings stored on storage devices by using the Recordings app.

Press the remote control's LIST button, and select the Recordings tab on the left side of the screen.

Select the Recordings at the top right

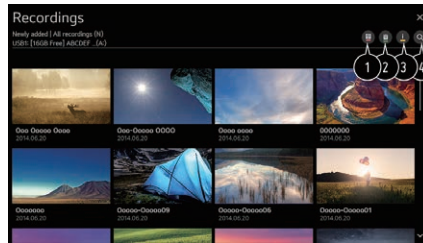

7.6.1. TELETEXT

To Use Teletext

Teletext is a free service provided by the TV station that offers text-based information about TV programmes, news and weather.

The teletext decoder of this TV can support the SIMPLE, TOP and FASTEXT systems. Press the More Actions button on the remote control.

Select Teletext.

The TELETEXT window appears.

To view TV broadcasts and TELETEXT at the same time, press the More Actions button on the remote control and select Teletext.

Colour button

To select the preceding or following page.

Number button

Enters the page number to move to.

Programmes (Programmes) Up/Down Button

To select the preceding or following page.

Some models may not be supported.

7.6.2. HbbTV

Learn More about HbbTV

HbbTV (Hybrid Broadcast Broadband TV) is a new broadcasting standard that enables super-teletext type services, delivered by a broadcast TV programme, to be integrated or linked to online services delivered over broadband to a connected Smart TV. Consumers are therefore able to access various online services such as catch-up TV, Video on Demand (VOD), programme related applications and other rich information services in addition to traditional digital teletext services, all directly on to the TV in a seamless experience. HbbTV services can be activated in a number of ways, the most popular being pressing the Red. Users typically explore services with the traditional navigation keys (including the OK button and the Red, Green, Yellow, Blue). The current version of the HbbTV specification also includes support for “adaptive streaming” of video over a broadband connection thus guaranteeing the best possible image quality for the viewer.

For more information about HbbTV, visit www.hbbtv.org

Some models may not be supported.

To Use HbbTV

Settings All Settings icon Programmes HbbTV

Sets HbbTV to On.

Enjoy a wide variety of content from HbbTV enabled services.

Service features may be limited when the TV is not connected to the internet.

The functionality and quality of the HbbTV service may vary depending on the quality of your broadband connection.

HbbTV services are not guaranteed to be available for all programmes – only those that your broadcaster chooses to support.

8. Connecting external devices


8.1. Using Home Dashboard

Using Home Dashboard

You can select or control a device (mobile, external device, Home IoT Devices, etc.) connected to the TV.

Press the  button on the remote control and select Home Dashboard.

You can also press and hold the  button on the remote control.

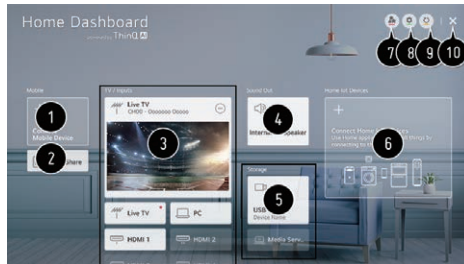

You can check and select the smart device connected with the LG ThinQ app.

Please refer to Connecting External Devices Connecting Smart Devices in User Guide for more information on the action.

You can play sound from a smart device connected via Bluetooth.

Please refer to Connecting External Devices Playing Sound from a Smart Device through the TV's Speakers in User Guide for more information on the action.

You can check and select the external device connected through the external input port or network.

The currently selected output speaker is displayed, and you can navigate to the output speaker settings screen.

You can view and select the connected storage device.

You can check and control the device connected via the Home IoT.

Please refer to Connecting External Devices Connecting Home IoT Devices in User Guide for more information on the action.

You can easily control your device by presetting the desired operations.

Sign In : You can log in/out to and from the LG ThinQ account you created on mobile.

Edit : You can edit the name of the device connected to Inputs or Home IoT Devices or configure the related settings.

It refreshes the device list.

Exit the Home Dashboard.

Available settings vary depending on the model or region

8.2. Connecting USB

Connecting USB

Connect a USB storage device (USB HDD, USB stick) to the USB port on the TV to enjoy the content files stored on the USB storage device on your TV.

Tips for Using a USB Storage Device

A USB storage device that has a built-in automatic recognition programme or uses its own driver might not be recognisable.

Some USB storage devices may not be supported or may not work properly.


If you use a USB extension cable, the USB storage device may not be recognised or may not work properly.

Please use only USB storage devices formatted with the FAT32 or NTFS file system provided by Windows OS.

It is recommended that you use an external USB HDD with a rated voltage of 5 V or less and a rated current of 500 mA or less. If you use a device requiring a higher voltage/current than the rated voltage/current, it may not operate properly due to lack of current. It is recommended that you use a USB hub or USB storage device with a power supply. We recommend using a storage device with a capacity of 32 GB for the USB memory and 2 TB or less for the USB hard disk.

If a USB HDD with power-saving function does not work, turn the hard drive off and on again to make it work properly. See the owner's manual for the USB HDD for more information.


Data on a USB storage device may be damaged, so it is recommended that you back up any important files. Users are responsible for data management. The manufacturer bears no responsibility.

Press the  button on the remote control. To remove the USB storage device, press the Eject button, which appears at the top when you focus on the USB storage device you want to remove.

If you disconnect the USB storage device without selecting Eject, an error may occur in your TV or storage device.

When you connect a USB storage device of a file system not supported by the TV to the USB IN port, the format message appears. To use the connected USB storage device, you should format the device first.

After format, all the data of USB storage device will be deleted and formatted as NTFS or FAT32 file system.

Press and hold the  button on your remote control. Select the connected USB from Home Dashboard → Storage and select the Format button to format the USB storage device.

When connecting a USB storage device, a random file/folder can be created to provide Smart TV services such as the saving and retrieving of thumbnail images.

8.3. Watching Computer Screen on TV

To See the PC Screen on the TV

Connect Wireless

Enable Screen Share mode on the PC. Your TV will be displayed in the list of available devices.

Select your TV and request connection.

After the connection is established, the TV will display the screen of the connected device.

It is recommended that you always update your device to be connected to your TV to the latest OS version for a reliable connection.

It is recommended that you use this function at close range.

Start Screen Share faster by having your mobile device or PC connected to the same network as the TV.

Though it can be connected without a wireless router, connecting your device to a 5 GHz router is recommended because the performance can be affected by the surrounding wireless environment.

The response rate may vary depending on the user's environment.

It's differ from Windows version. For more information on the device you want to connect to, refer to its user guide.

If connection fails repeatedly, turn off the TV and the device you want to connect to, then turn them back on and try again.

Connect wired

Connect the PC with TV by HDMI cable.

9. Making the most of Smart TV

9.1. Surfing the Internet on TV

Using the Web Browser


You can enter the website when you input the web address on the URL bar.

If you input the search word, it will find the information about search word base on the search engine.

Press the  button on the remote control.

Run the Web Browser application.

1. You can refresh the web page you are viewing.
2. You can type in a web address to navigate to a specific website or enter a search term directly.
3. You can view the tabs that are currently open.
4. You can block ads within the web page you are viewing.
However, this button is only displayed if Menu icons Settings Use Block Ads feature is set to On.
5. Split the screen to display the TV screen. You can browse web pages while watching TV.
6. You can zoom in or out on the screen while browsing the website.
Add to bookmarks : You can add the website you are currently viewing to your Favourites.
History : You can view and delete the website visit history.
Bookmarks : You can view and delete the list of websites you have added to your Favourites.
Settings : You can change the web browser settings.
7. Exit the Web Browser.
8. The new tab screen shows a list of Recommended Sites and Most Visited Sites.

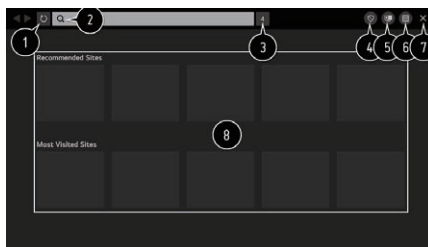

If you do not want Recommended Sites to be displayed, set Menu icons Settings Show Recommended Sites to Off.

Recommended Sites may vary by country and is only available in certain countries.

The Web Browser app on your TV is a browser for TV, so it may work differently than the browser for your PC.

Some contents may not be played properly.

Flash Plug-in is not supported, and only HTML5 media is supported.

Plug-in installation is not supported.

Media in formats other than JPEG/PNG/GIF may not be played.

Apps may be forced to shut down if the TV runs out of memory.

The fonts provided on the TV are used. Depending on the content, characters may look different from PC or mobile browsers.

File and font downloads are not supported.

Caution is required because malicious or phishing sites are not automatically blocked.

Some functions of Web Browser may not be supported temporarily due to external factors.

The website can be accessed through the TV's Web Browser app, so care needs to be taken about children's access to harmful online contents.

You can lock the Web Browser app to prevent access to harmful online contents.

Configure the settings in Settings All Settings icon General Safety Application Locks.

If you experience problems while using Web Browser, refer to Troubleshooting in User Guide.

10. Settings

10.1. Quick Settings

To Use Setting Function Quickly

Set of light-weight controls quickly and simply such as Picture Mode, Sound Out, Sleep Timer and so on.

Press the  button on the remote control.

You can set Picture Mode.

You can set Sound Mode.

You can choose Sound Out.


You can set Sleep Timer.

Move to the Connection screen.

You can set more options.

You can add/delete the quick setting items or change their order.

After entering each item, press and hold the Wheel (OK) button on the remote control to go to the corresponding menu

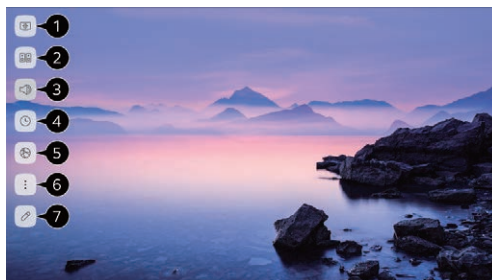

10.2. Programmes

Auto Tuning

Automatically Setting Up Programme

 →  → Programmes → Programme Tuning → Auto Tuning

Automatically tunes the programmes.

Initiate Auto Tuning.

Set Auto Tuning following screen instructions.



If Input Source is not connected properly, programme registration may not work.

Auto Tuning only finds programmes that are currently broadcasting.

If Safety is turned on, a pop-up window will appear asking for password.

Manual Tuning

To Use Manual Programme Tuning

 →  → Programmes → Programme Tuning (Programme Tuning & Settings) → Manual Tuning

This function is for manually searching and saving programmes.

For digital broadcasting, signal strength and signal quality can be checked.

Signal Test

To Use the Signal Test

⚙️ → ⓘ → Programmes → Programme Tuning (Programme Tuning & Settings) → Signal Test

Shows the MUX and Service information etc.

Signal test is only available in Antenna or Cable mode.

Programme Manager

Edit Programmes

You can edit the selected programmes from all the stored programmes or add/delete them to/from the favourite programmes.

Edit All Programmes List

⚙️ → ⓘ → Programmes → Programme Manager → Edit All Programmes

You can lock or unlock the selected programmes from all the stored programmes, or you can set them to be skipped when switching programmes.

1. Set the sorting option.
2. Lock/Unlock: Lock the selected programmes or unlock the locked programmes.

Skip / Restore : Set the selected programmes to be skipped when switching programmes, or disable the skipping option of the programmes previously set to be skipped.


Move : Move the selected programmes.

Edit Programme Numbers : Change the numbers of the selected programmes.

Delete : Delete the selected programmes.

Available features may vary depending on the broadcast signal.

For a model that supports satellite programmes, you can manage the satellite programmes in Edit Satellite Programmes (Advanced).

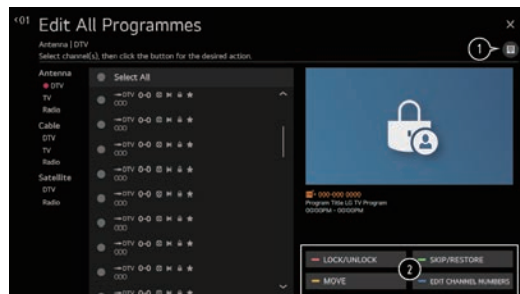


Edit Favourite Programmes List

⚙️ → ⓘ → Programmes → Programme Manager → Edit Favourites

You can add/delete desired programmes to/from the favourite programmes, change their positions, etc

1. Select the desired programmes from the all programmes list and press the button to add them to the favourite programmes list.

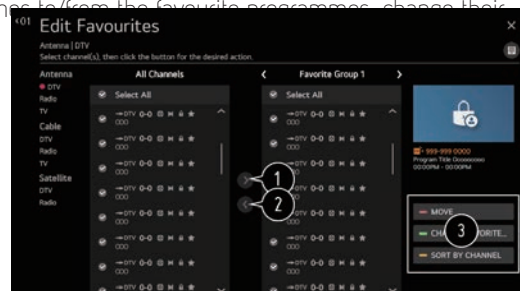

2. Delete the selected programmes from the favourite programmes list.
3. Move : Select one or more programmes in the Preferred Programmes list, press the Move button, and then select the position to move it to. The selected programmes will move to the position you selected. Change Group Name : Change the name of the favourite programmes list. Sort by Programme : Sorts the list of favourite programmes by programme.

Multi Feed

 →  → Programmes → Multi Feed

You can watch the desired angle on the TV through the broadcast that filmed from various angles.

Some models may not be supported.

HbbTV

Learn More about HbbTV

HbbTV (Hybrid Broadcast Broadband TV) is a new broadcasting standard that enables super-teletext type services, delivered by a broadcast TV programme, to be integrated or linked to online services delivered over broadband to a connected Smart TV.



To see the details, click the Enjoy Live TV → HbbTV in User Guide.

Some models may not be supported.

10.3. Connection

Network Connection Settings

Network Connection Settings

 →  → Connection → Network Connection Settings

If you configure settings for the network, you can use various services such as online contents and applications.

Setting a Wired Network

Select Wired Connection (Ethernet).

If the router connected to the network supports the DHCP feature, connecting the TV and router by wire will automatically connects to the network. If the automatic setup is not supported, you can select Edit to manually set up the network connection.

Setting a Wireless Network

Select Wi-Fi Connection.

If you have set the TV up for a wireless network, you can check and connect to the available wireless Internet networks.

10.4. General

Language

Configuring Language Settings

 →  → General → Language

You can choose the menu language displayed on the screen and the audio language of the digital broadcast.

Menu Language

You can select one of the menu languages to be displayed on the screen. The language for the speech recognition will be automatically set to the selected language for the menu. The speech recognition is only applied to some models.

Primary Audio Language / Secondary Audio Language

You can choose the language you want when watching a digital broadcasting programme, which includes multiple audio languages.

For programmes that do not support multiple languages, the default will be used.

Applies to Digital broadcasting.

Keyboard Languages

Select the language to use the on-screen keyboard.

To Set Teletext Language

Sets Teletext language.

To see the details, click the Enjoy Live TV TELETEXT in User Guide.

In Digital Mode Only

Location

Setting the Location

 →  → General → Location

You can change the location setting of your Smart TV.

Address Setting

You can set the Region and City of your TV.

Broadcast Country

You can set the broadcast country on your TV.

Service Area Postcode

This function is used to set the broadcast location of the TV by entering your postcode.

Services Country

If you don't set the Set Automatically, you can select the country manually.

You must set the country manually when you are not connected to the network.

The configurable items differ depending on model.

Time

 →  → General → Time

You can check the time or configure related settings.

Set Automatically

The TV time is automatically set to the time of digital broadcasting information sent from the broadcasting station or the time sent from the server.

Time / Date / Time Zone

You can manually set the time and date if the automatically set current time is incorrect.

If you set the time manually with the antenna connected, schedule information, programme guide, etc. may not function correctly.

Custom Time Zone

When select the Custom in Time Zone, Custom Time Zone menu is activated.

Timers

Sleep Timer

Sets the TV to turn off at a specified time.

If you do not want to use Sleep Timer, select Off.

Power On Timer

Set Power On Timer to On.

The TV is turned on and displays the set channel at the set time.

Time : Set the time at which to turn the TV on.

Timer Repeat : Set the day of the week. Set the option to None to operate the feature only once.

Input : Set an external input to display when the power is turned on.

Timer Programme : Set a channel to display when the power is turned on. This option can be set only when Input is set to TV.

Volume : Set audio volume to use when the power is turned on.

Power Off Timer

Set Power Off Timer to On.

The TV is turned off at the set time.

Time : Set the time at which to turn the TV off.

Timer Repeat : Set the day of the week. Set the option to None to operate the feature only once.

4 Hours Auto Power Off

If you do not press any button for 4 hours after the TV is turned on by a feature such as Power On

Timer, the TV will be turned off automatically.

To ensure the TV does not automatically turn off, set 4 Hours Auto Power Off to Off.

Some models may not be supported.

To use Power On Timer/Power Off Timer, set the time correctly.

If Timer Repeat of Power On Timer/Power Off Timer is set to None

If the time set in the Power On Timer is passed while watching TV, the power will turn on automatically when it reaches the set time and the TV is turned off on the next day or later.

If the time set in the Power Off Timer is passed while TV is in standby, the power will turn off automatically when it reaches the set time while watching TV on the next day or later.

Account Management

Managing Your LG Account

In Account Management, you can use your email address to create a new LG account.

For more information, see Getting Started with webOS TV Account Management in User Guide.

Home Settings

Home Settings

⚙️ → ⓘ → General → Home Settings

Home Auto Launch

You can set Home to launch automatically when turning on the TV.

Home Promotion

You can turn on or off the advertisements on the Home screen.


The configurable items differ depending on model.

Settings Help

To Use Settings Help

Settings All Settings icon General Additional Settings Settings Help

If you select the setting menus, you will see the hints of the settings. Turn on/off description box in Settings.

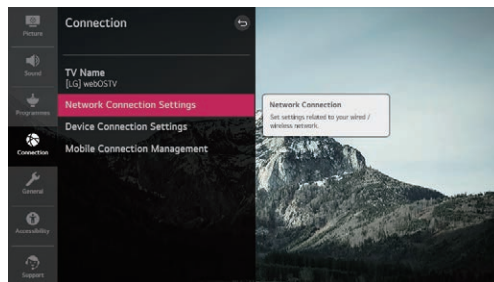

Eco Mode

Using ECO Mode

⚙️ → ⓘ → General → Additional Settings → Eco Mode

Set power options to reduce energy consumption.

Auto Power Off

Set the TV to turn off automatically when there has been no user input for a specified amount of time.

HDD Eco Mode

If you set the mode to On, the USB HDD connected to the TV will go into power-saving mode when it has been left unattended for an extended period of time.

The configurable items differ depending on model

10.5. Accessibility

Audio Description

Menu for the Visually Impaired

⚙️ → ⓘ → Accessibility → Audio Description

The contents on the screen will be described with voice for visually impaired viewers.

You can use this function if the broadcasting company supports Audio Description for the visually impaired.

Some models may not be supported.

High Contrast

Changing the Menu to High-Contrast Screen

 →  → Accessibility High Contrast

When this feature is set to On, it adjusts the background of some of the menus on the screen and font colours to highlight the contrast between the light and dark areas.

Grayscale


 →  → Accessibility → Grayscale

Change the colour of the menu on the screen to black and white tone to make its ambiguity very clear.

Set to On.

Hard of Hearing

To Set Hard of Hearing

Press the  button on the remote control.

Select  Accessibility.

Set Subtitles to On.

Set Hard of Hearing to On.

A caption will be provided for the hearing-impaired.

When the Hard of Hearing is turned On, it will be prioritized over the general captions.

Some models may not be supported.

Subtitles

To Set Subtitle

 →  → Accessibility Subtitles

View subtitles when the TV station provides subtitled programming.

Change Subtitles to On and select subtitle setting.

Some models may not be supported.

Applies to Digital broadcasting.

10.6. Support

Software Update

 →  → Support Software Update

Uses software update to check and obtain the latest version.

Allow Automatic Updates

If set to On, updates will be proceeded automatically without asking when there is a new update after a version check.

Check for updates

When checking for the latest update version, you can only perform updates if an update file of a later version is available. The TV automatically checks your software version but, if necessary, you can perform a manual check.

The configurable items differ depending on model.

The latest version can be obtained via digital broadcast signals or internet connections. Changing the programme while downloading the software via digital broadcast signal interrupts the download process. Returning to the initial programme allows downloading to resume.

If software is not updated, certain functions may not work properly.

In some countries, Allow Automatic Updates is not displayed if you are not connected to the Internet.

TV Information


 →  → Support → TV Information

You can view information including Model, Serial Number, Device Name.

You can check the details by selecting the desired item. If it supports shortcuts, you can launch the app.

You can delete notifications.

You can delete all notifications

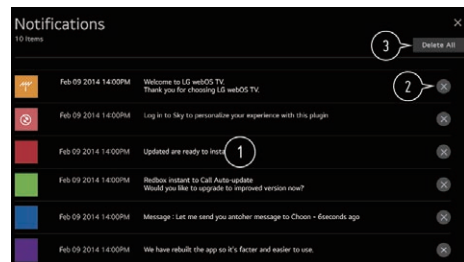

Additional Settings

 →  → Support Additional Settings

User Agreements

These are the terms and conditions for privacy for the use of Smart TV-related services.

Legal Notice

It's a legal notice for services provided via TV.

Open Source Software Notice

You can view the instructions for each item.

Reset to Initial Settings

Restoring the Default Settings

 →  → Support → Reset to Initial Settings

Return TV to its initial settings. This will revert all settings to their default values.

After reset, the TV will automatically turn off and on.

If Safety is set to On, you should type the password to Reset to Initial Settings.

Do not turn off the power during initialization.

We recommend that you reset the TV to Reset to Initial Settings before you sell it or transfer it to a third party.

11. Information sheet

Information	Value	Unit
1. Supplier's name or trademark	SENCOR	
2. Identification mark of the model	SLE 43US800TCSB	
3. Energy efficiency class for standard dynamic range (SDR)	G	
4. Power consumption in on state for standard dynamic range (SDR)	65.0	W
5. Energy efficiency class in High Dynamic Range (HDR) mode	G	
6. Power consumption in High Dynamic Range (HDR) mode	65.0	W
7. Off state, power input	0.0	W
8. Standby power input	0.3	W
9. Power consumption in mains standby mode	0.3	W
10. Electronic display category	Television receiver	
11. Aspect ratio	16 : 9	
12. Screen resolution (in pixels)	3,840 x 2,160	pixels
13. Screen diagonal	108.0	cm
14. Screen diagonal	43	inches
15. Visible screen area	4,982.7	cm ²
16. Panel technology used	LED LCD	
17. Available Automatic Brightness Control (ABC)	No	
18. Available voice recognition sensor	No	
19. Available room occupancy detector	No	
20. Image refresh rate	60	Hz
21. Minimum guaranteed availability of software and firmware updates (to)		
22. Minimum guaranteed availability of spare parts (to)		
23. Minimum guaranteed product support (up to):		
24. Type of power supply:	Internal	
i Standardized external power supply (as part of the product package), standard name	-	
Input voltage	-	V
Output voltage	-	V
ii Suitable standardized external power supply (if not included in the product package)	-	
Required output voltage	-	V
Required supplied current	-	A
Required current frequency	-	Hz

Information	Value	Unit
1. Supplier's name or trademark	SENCOR	
2. Identification mark of the model	SLE 50US800TCSB	
3. Energy efficiency class for standard dynamic range (SDR)	G	
4. Power consumption in on state for standard dynamic range (SDR)	77.0	W
5. Energy efficiency class in High Dynamic Range (HDR) mode	G	
6. Power consumption in High Dynamic Range (HDR) mode	84.0	W
7. Off state, power input	0.0	W
8. Standby power input	0.3	W
9. Power consumption in mains standby mode	0.3	W
10. Electronic display category	Television receiver	
11. Aspect ratio	16 : 9	
12. Screen resolution (in pixels)	3,840 x 2,160	pixels
13. Screen diagonal	126.0	cm
14. Screen diagonal	50	inches
15. Visible screen area	6,754.8	cm ²
16. Panel technology used	LED LCD	
17. Available Automatic Brightness Control (ABC)	No	
18. Available voice recognition sensor	No	
19. Available room occupancy detector	No	
20. Image refresh rate	60	Hz
21. Minimum guaranteed availability of software and firmware updates (to)		
22. Minimum guaranteed availability of spare parts (to)		
23. Minimum guaranteed product support (up to):		
24. Type of power supply:	Internal	
i Standardized external power supply (as part of the product package), standard name	-	
Input voltage	-	V
Output voltage	-	V
ii Suitable standardized external power supply (if not included in the product package)	-	
Required output voltage	-	V
Required supplied current	-	A
Required current frequency	-	Hz

Information	Value	Unit
1. Supplier's name or trademark	SENCOR	
2. Identification mark of the model	SLE 55US800TCSB	
3. Energy efficiency class for standard dynamic range (SDR)	G	
4. Power consumption in on state for standard dynamic range (SDR)	101	W
5. Energy efficiency class in High Dynamic Range (HDR) mode	G	
6. Power consumption in High Dynamic Range (HDR) mode	101	W
7. Off state, power input	0.0	W
8. Standby power input	0.3	W
9. Power consumption in mains standby mode	0.4	W
10. Electronic display category	Television receiver	
11. Aspect ratio	16 : 9	
12. Screen resolution (in pixels)	3,840 x 2,160	pixels
13. Screen diagonal	139.0	cm
14. Screen diagonal	55	inches
15. Visible screen area	8,486.2	cm ²
16. Panel technology used	LED LCD	
17. Available Automatic Brightness Control (ABC)	No	
18. Available voice recognition sensor	No	
19. Available room occupancy detector	No	
20. Image refresh rate	60	Hz
21. Minimum guaranteed availability of software and firmware updates (to)		
22. Minimum guaranteed availability of spare parts (to)		
23. Minimum guaranteed product support (up to):		
24. Type of power supply:	Internal	
i Standardized external power supply (as part of the product package), standard name	-	
Input voltage	-	V
Output voltage	-	V
ii Suitable standardized external power supply (if not included in the product package)	-	
Required output voltage	-	V
Required supplied current	-	A
Required current frequency	-	Hz

Information	Value	Unit
1. Supplier's name or trademark	SENCOR	
2. Identification mark of the model	SLE 65US800TCSB	
3. Energy efficiency class for standard dynamic range (SDR)	G	
4. Power consumption in on state for standard dynamic range (SDR)	111	W
5. Energy efficiency class in High Dynamic Range (HDR) mode	G	
6. Power consumption in High Dynamic Range (HDR) mode	131	W
7. Off state, power input	0.0	W
8. Standby power input	0.3	W
9. Power consumption in mains standby mode	0.3	W
10. Electronic display category	Television receiver	
11. Aspect ratio	16 : 9	
12. Screen resolution (in pixels)	3,840 x 2,160	pixels
13. Screen diagonal	164.0	cm
14. Screen diagonal	65	inches
15. Visible screen area	11,478.1	cm ²
16. Panel technology used	LED LCD	
17. Available Automatic Brightness Control (ABC)	No	
18. Available voice recognition sensor	No	
19. Available room occupancy detector	No	
20. Image refresh rate	60	Hz
21. Minimum guaranteed availability of software and firmware updates (to)		
22. Minimum guaranteed availability of spare parts (to)		
23. Minimum guaranteed product support (up to):		
24. Type of power supply:	Internal	
i Standardized external power supply (as part of the product package), standard name	-	
Input voltage	-	V
Output voltage	-	V
ii Suitable standardized external power supply (if not included in the product package)	-	
Required output voltage	-	V
Required supplied current	-	A
Required current frequency	-	Hz
Bluetooth	Version	5.0
	Maximum transmitter power	100mW at 2,4GHz – 2,4835GHz
WiFi	Band	2.4 GHz and 5GHz

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.



DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES

The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product.

The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



Hereby, FAST ČR a.s. declares that the radio equipment type SLE 65US800TCSB, SLE 55US800TCSB, SLE 50US800TCSB and SLE 43US800TCSB is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: www.sencor.eu

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.