



**EN ■ User Manual**

**DAB/ FM/ BLUETOOTH/RADIO**

**CZ ■ Uživatelská příručka**

**DAB/ FM/ BLUETOOTH/RÁDIO**

**SK ■ Používateľská príručka**

**DAB/FM/BLUETOOTH/RÁDIO**

**HU ■ Felhasználói kézikönyv**

**DAB/ FM/ BLUETOOTH/RÁDÍÓ**

**PL ■ Podręcznik użytkownika**

**DAB/FM/BLUETOOTH/RADIO**

## SAFETY INFORMATION

### IMPORTANT SAFETY INSTRUCTIONS



 
The exclamation mark symbol located inside an equilateral triangle informs the user about important instructions for operation and maintenance (repairs), which are found in the attached device documentation.

**WARNING:** TO PREVENT ELECTRIC SHOCK, DO NOT REMOVE THE PRODUCT COVER (OR THE BACK SIDE). THERE ARE NO SERVICEABLE PARTS INSIDE - PLEASE REFER ALL REPAIRS TO QUALIFIED SERVICE TECHNICIANS.

1. **READ THE INSTRUCTIONS** - Before starting to use this product, please read all safety instructions and the user's manual.
2. **RETAIN THE INSTRUCTIONS** - Keep the safety and operating instructions for future use.
3. **HEED WARNINGS** - Please heed all warnings stated on the product and in the user's instructions.
4. **OBSERVE THE INSTRUCTIONS** - Please observe all instructions for operation and use.
5. **WATER AND MOISTURE** - Do not use this product near water - for example, near bathtubs, washbasins, kitchen sinks or laundry tubs, in damp basements, near swimming pools, etc. This appliance must not be exposed to dripping or splashing water and no objects filled with liquid, such as vases, should be placed on it.
6. **CLEANING** - Prior to cleaning, please disconnect this product from your power outlet. Do not use liquid cleaning agents or cleaning agents in sprays. Use a damp cloth for cleaning.
7. **VENTILATION** - Openings and holes in the unit's cabinet are designed for ventilation to ensure reliable operation of the product and its protection from overheating. These openings must not be blocked or covered. These openings must never be blocked by placing the product on bed, sofa, rug or other similar surface. Do not place this product in an enclosed space, such as a bookcase or rack, unless required by the manufacturer's instructions or proper ventilation is provided.
8. **ACCESSORIES** - Use only manufacturer recommended accessories.
9. **ENERGY SOURCES** - Use only the power source specified on the type plate to power this product. If you are in doubt about the type of the power sources in your home, contact your vendor or the local energy company. For products that use the built-in battery power, please follow the instructions in the user's manual.


10. IF THE DEVICE IS TO BE LEFT UNUSED - If you plan to leave your device unused for a prolonged period of long time, unplug the product's power cord and turn the power switch OFF.
11. ENTRY OF FOREIGN OBJECTS AND LIQUIDS - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts which could result in a fire or electric shock. Protect this product from being spilt by liquids.
12. HEAT - This device must be kept out of sources of heat such as heaters, convection heaters, stoves or similar appliances (including amplifiers) that produce heat.
13. Position the power cord so that it cannot be stepped on or pinched, especially at plugs, convenience receptacles, and the point where they exit from the apparatus.
14. REPAIRS - Do not attempt to repair this product by yourself as opening the cabinet and removing the covers may expose you to a dangerous voltage or other risk. Please refer all repairs to qualified service technicians.
15. The device must not be exposed to dripping or splashing water.
16. Where the plug of the socket adapter is used to disconnect from the power supply, this disconnecting device must remain easily accessible.
17. WARNING: Do not open. There are no user serviceable parts inside. Please refer all repairs to qualified technicians.
18. WARNING: Never grease any part of this device.
19. WARNING: Place this unit on flat, firm and stable surface.
20. WARNING: Never put this device on other electrical equipment.
21. WARNING: Keep this unit out of direct sunlight, open flames and heat sources.


## SUPPLY CONTENT

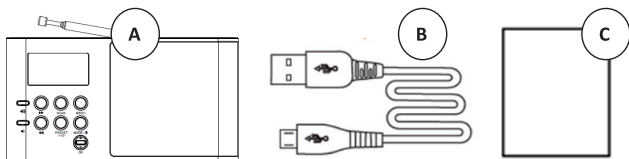

A	SRD 7100 unit
B	Micro-USB charging cable
C	User's manual

### Equipment description:

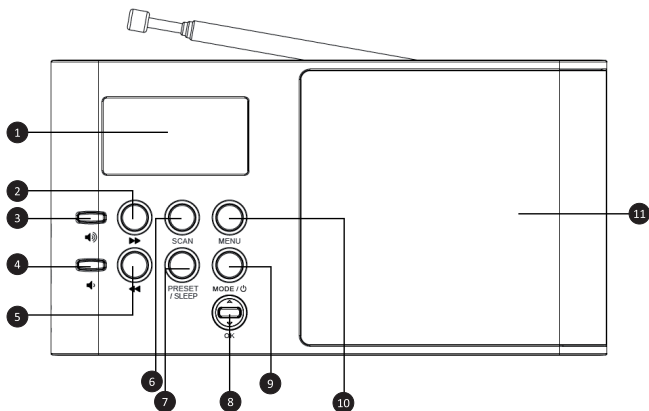 

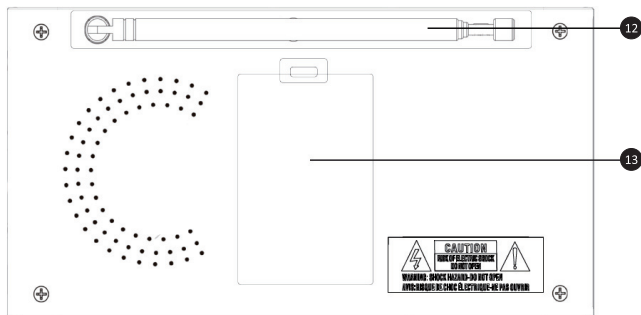 

1	Display
2	Skip "+" (forward)
3	Volume up "+"
4	Volume down "-"
5	Skip "-" (backward)
6	SCAN (search)
7	PRESET/SLEEP (Preset - short press / Sleep - long press)
8	OK (confirm button; in FM MONO/STEREO)
9	ON/OFF; MODE (on/off button; mode change)
10	MENU
11	Loudspeaker
12	Telescopic antenna
13	Battery compartment
14	AUX-IN (3.5mm audio jack)
15	Headphone mini jack (3.5mm)
16	Charging socket (micro USB)

## BASIC FUNCTIONS

### BASIC OPERATION

- Press "MODE" to turn the unit on in the standby mode.
- Press "MODE" briefly to switch to other FUNCTION. DAB / FM / Bluetooth / AUX-IN
- To power the unit off, hold down "MODE" for 2 seconds (regardless of a current function).
- To change the language settings, please refer to the DAB MENU SETTINGS section.

## LISTENING TO FM RADIO

### BASIC OPERATION

1. Press "MODE" to select the FM function.
2. To start the auto scan function, hold down "SCAN" for 2 seconds.
3. To start the automatic search for the nearest available station, press "SCAN" briefly. When an available station is found, the search will stop.
4. To switch between the FM band frequencies, press the button briefly ◀◀ / ▶▶.

#### RECEPTION IMPROVEMENT TIPS:

To improve the FM reception, extend the telescopic antenna and tilt it as needed. We recommend to place the receiver by the window or in a location with strong FM reception.

### PRESET STATIONS

 
1. Press ◀◀ / ▶▶ to select a desired broadcast station.
2. Long press "Menu", then press ◀◀ / ▶▶ to select "Save preset".
3. Press "OK" to save the preset, the display will show the preset number in the lower right corner.
4. Press ◀◀ / ▶▶ to select a desired preset location.
5. Press "OK" to confirm.

## CALLING PRESET STATIONS

1. Long press "Menu", then press ◀◀ / ▶▶ to select "Preset" or press "PRESET" to use a quick selection.
2. Press "OK" select the "Preset" mode (preset calling) and the display will show the preset number in the lower right corner.
3. Press ◀◀ / ▶▶ to select a desired preset station.
4. Press "OK" to confirm the selected desired station.

## RECEIVED STATION INFO

1. Press "MENU" briefly repeatedly to browse the received station information.

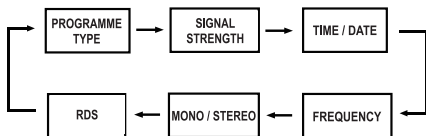

## DAB OPERATION

### BASIC OPERATION

1. Press "MODE" to select the DAB function.
2. The unit will find and save all available broadcast stations automatically.
3. Press ◀◀ / ▶▶ to select a desired station.

 
### RECEPTION IMPROVEMENT TIPS:

To improve the DAB reception, extend the telescopic antenna and tilt it as needed. We recommend to place the receiver by the window or in a location with strong DAB reception.

## DAB MENU SETTING

1. In the DAB mode, long press "MENU".
2. Press ◀◀ / ▶▶ to select the mode as follows.

### Quick menu sequence



**AUTO SCAN** (for reception relocation)

1. When OK is pressed, the unit will relocate the reception automatically.

**MANUAL TUNING** (manual fine tuning for better reception)

1. To use manual tuning, press "OK" briefly.
2. To improve reception, press ◀◀ / ▶▶.
3. Press OK briefly to confirm.

**PRUNE** (removing unavailable stations)

1. To set the PRUNE feature, press "OK" briefly.
2. Press ◀◀ / ▶▶ to select "YES" or "NO".
3. Press "OK" to confirm.

**DRC** (signal strength setting)

1. To set the DRC feature, press "OK" briefly.
2. Press ◀◀ / ▶▶ to select "Off", "Low" or "High".
3. Press "OK" to confirm.

**TA** (traffic information)

1. To set the TA feature, press "OK" briefly.
2. Press ◀◀ / ▶▶ to select "On" or "Off".
3. Press "OK" to confirm.

**PRESET** (reception of the preset DAB station list)

1. To select "Preset", press "OK" briefly.
2. Press ◀◀ / ▶▶ to select a desired preset station.
3. Press "OK" to confirm and start reception.

**SAVE PRESET** (saving a desired DAB station list)

1. To select the "Save preset", press "OK" briefly.
2. Press ◀◀ / ▶▶ to select a desired preset station location.
3. Press "OK" to confirm and save the station.

**TIME** (manual time and date setting)

1. To select Time, press "OK" briefly.
2. Press ◀◀ / ▶▶ to select the mode sequence as follows.
3. Press "OK" to select a mode.
4. Press ◀◀ / ▶▶ to enter date or format.
5. Press OK to confirm.



## SET LANGUAGE

1. To enter the Language option, press "OK" briefly.
2. Press left/right arrow buttons to select your language.

## SYSTEM RESET (to restore the system default settings)

1. Press OK briefly to select.
2. Press OK to confirm.

## USING BLUETOOTH

1. Press "OK" to select the Bluetooth mode. "Bluetooth" will appear on the display.
2. As soon as the display shows "Disconnected", the unit is ready to pair with your mobile device.
3. Enable Bluetooth on your device.
4. Find the unit named SRD 7100 and select the pairing function.
5. Upon successful connection, the display will show "Connected".

### Note:

To ensure a stable Bluetooth connection, keep the BT speaker within a distance of 10m from the connected device.

## OTHER FUNCTIONS

### Audio AUX-IN

1. Connect a 3.5mm jack cable to this unit and your device with a 3.5mm output jack.
2. Press "MODE" to select the AUX-IN function.
3. Start music playback on your device.

### Caution:

Before connecting your device to the BT speaker, please make sure that the output signal from your device is set to its minimum (minimum output volume). This will prevent the BT speaker from damage.

### Sleep (for any function)

1. Long press "Sleep". The display will show Off.
2. Press ">>" briefly to select 90 / 80 / 70 / 60...10 minutes till "SHUT OFF".
3. Press "OK" briefly to confirm.

## AUTO SHUT-OFF

This product is equipped with an automatic power saving function in the BLUETOOTH / AUX-IN mode, which shuts the unit off automatically after 10 minutes in the STOP or PAUSE mode.

Press "MODE" again to re-activate the unit.

## EARPHONES/HEADPHONES

Before connecting your headphones/earphones, turn down the volume to minimum to prevent hearing damage. Then connect your headphones/earphones to the 3.5mm audio jack on your device. While the headphones/earphones are connected, the main speaker in the unit is muted.

## TECHNICAL SPECIFICATIONS

FM radio	Band range	87.5MHz - 108MHz
DAB		174.928MHz - 239.200MHz
Bluetooth	Version	5.0
	Max. transmission power	100mW @ 2.4GHz - 2.4835GHz

Sound: Total power output (RMS): 2W

Frequency response: 60Hz - 15kHz

Total harmonic distortion:  $\leq 10\%$  (1kHz)

Preset stations: 80 (40 DAB and 40 FM)

Telescopic antenna

Inputs: AUX-IN (3.5mm jack)  
Headphone output (3.5mm jack)

Li-Ion rechargeable battery capacity: 1000mAh

Playback time: up to 9 hours @ 50% volume

Dimensions: 170 × 36 × 90mm

Weight: 0.3kg

## **INSTRUCTIONS AND INFORMATION ABOUT THE DISPOSAL OF DISCARDED PACKAGE**

Return the packaging to a collection centre for disposal.

## **DISPOSAL OF DISCARDED ELECTRICAL AND ELECTRONIC EQUIPMENT**



This symbol placed on the product, accessories or package notifies that the product must not be treated as household waste. Please dispose of this product in a collection centre designed for recycling electric and electronic equipment. In some EU or European countries, you can return your products to your local dealer when buying a new equivalent product. Correct disposal of this product helps save valuable natural resources and prevents possible adverse impacts on the environment and human health that might be caused by improper waste disposal. For further information, please contact your local authorities or the nearest waste disposal collection centre. Improper disposal of this type of waste may lead to penalties under the law.

### **For EU companies**

If you need to dispose of an electric or electronic device, ask your dealer your supplier for necessary information.

### **Disposal in countries outside the European Union**

To dispose of this product, please ask your local authorities or dealer for the necessary information on correct disposal.



This product complies with EU requirements.

Changes in the text, design and technical specifications may be made without prior notice and we reserve the right to make such changes.

The original version is in Czech.

Manufacturer's address:

FAST ČR, a. s., U Sanitasu 1621, Říčany CZ-251 01

# SENCOR®

## EN Warranty conditions

**Warranty card is not a part of the device packaging.**

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

### **This warranty is void especially if apply as follows:**

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

### **Authorized service centers**

Visit [www.sencor.com](http://www.sencor.com) for detailed information about authorized service centers.