



EN ■ User manual

CZ ■ Uživatelská příručka

SK ■ Používateľská príručka

HU ■ Felhasználói kézikönyv

PL ■ Instrukcja obsługi

Car adapter

Autoadaptér

Autoadaptér


Gépkocsi-adapter

Zasilacz samochodowy

1. Supply content

Car adapter
Two-sided adhesive tapes
User's manual

2. Device description

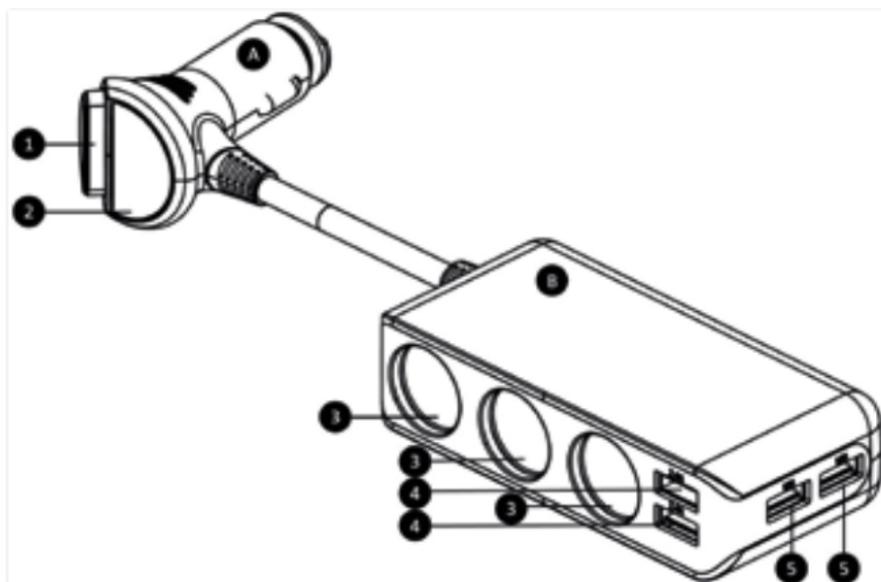

A	Input from 12V - 24V car socket
B	Outputs: 3x car socket; 4x USB-A to power portable devices

1	Mechanical on/off button
2	Display - showing the car on-board voltage
3	12V - 24V car socket
4	USB-A - 5V/2.4A
5	USB-A - 5V/1 A

3. Putting into operation

Before use, make sure that your car's on-board voltage matches the product specifications. Connect the device "A" part to your car socket. Attach the device "B" part to a location in your car where it will not pose danger do driving and will not become loose and cause injury to people in case of an impact. Two-sided adhesive tapes to fix the device are included in package. Press the on/off button to turn on the USB sockets and car adapters at the rear of the "B" device. The display will show the on-board system voltage level.

After each trip, always turn the device off with the on/off button. This will prevent the battery from being drained when the engine is turned off.

4. USB sockets

The car adapter incorporated four USB type A sockets - two of them are located on the top and two on the side.

The "4" - 5V / 2,4A ports are suitable for charging devices with higher power demands such as tablets, power banks and smart phones.

The "5" - 5V / 1A ports are suitable for charging basic, low-power devices such as MP players, flashlights and watches.

5. Car sockets

With this adapter, you can add up to three sockets to your existing car socket. Before loading all car sockets simultaneously, make sure that the total current drawn by all appliances (including those connected in the USB sockets) does not exceed the technical specified value.

6. Fuse

The fuse is located inside the device. If the specified value at the device output is exceeded, the fuse will irreversibly cut off and the device will stop working. In such case, please contact an authorised service centre.

7. Technical specifications

Charging and power supply
4x USB-A output
3x 12V output
Specifications
2x USB-A - 5V/2.4A
2x USB-A - 5V/1A
DC 12V - 120W max. / DC 24V - 200W max.
Maximum USB output current 5V / 4A (simultaneously)
Display
Battery voltage indicator (9V - 30V)
Warning indication (flashing display)
Others
8A embedded one-time fuse
Short-circuit, overvoltage and overcurrent protection
Power cord length: 1m

INSTRUCTIONS AND INFORMATION ON DISPOSING OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.



DISPOSING OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal and recycling, take these products to designated collection points. Or in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. Disposing of this product correctly helps save valuable natural resources and prevents damage to the environment by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of the applicable EU directives.

The text, design and technical specifications may be changed without prior notice and we reserve the right to make these changes.

Manufacturer's address: FAST ČR, a.s., U Sanitasu 1621, Říčany, Czech Republic. The original version is in the Czech language.

SENCOR®

EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Authorized service centers

Visit www.sencor.com for detailed information about authorized service centers.

