



EN ■ User Manual

CZ ■ Uživatelská příručka

SK ■ Používateľská príručka

HU ■ Felhasználói kézikönyv

PL ■ Podręcznik użytkownika

Party Wireless Waterproof Speaker

 
Párty bezdrátový voděodolný reproduktor

Párty bezdrótový vodovzdorný reproduktor

Vezeték nélküli vízálló parti hangszóró


Bezprzewodowy głośnik wodoodporny

SUPPLY CONTENT



A	BT speaker
B	3.5 mm audio jack
C	USB-C charging cable
D	User's manual

 BT SPEAKER DESCRIPTION

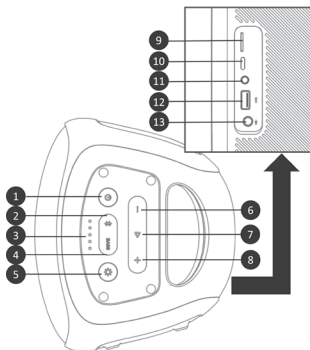

SSS 3500 top side	
1	On/off button, change the ECHO mode of the connected microphone
2	Change source (Bluetooth, memory card, USB, AUX-IN)
3	Battery status LED
4	Emphasise bass button
5	Light effects button (change/on/off)
6	Previous track button, volume down
7	PLAY / PAUSE / TWS button
8	Next track button, volume up
SSS 3500 back side	
9	Memory card slot
10	Charging socket (USB-C)
11	Audio AUX-IN mini jack (3.5 mm) / RESET button
12	USB-A for playback from memory device, power bank function
13	Microphone MIC-IN jack (6.3 mm)

PUTTING INTO OPERATION

Before first use, be sure to read the safety instructions contained in this user's manual carefully.

 
Before first use, please charge the BT speaker to a maximum level. Hold down the power on button to turn on the BT speaker. Turning on/off is indicated by a sound signal. To turn the BT speaker off, hold down the power on button. Changing the source of the music being played is done by briefly pressing "Change Source" in the on state.

Attention: After a longer period of inactivity, the appliance will turns itself off.

TRANSMISSION AND BT SPEAKER POSITION

To carry the BT speaker, use the two handles located on the shorter sides of the BT speaker.

The speaker offers 2 positioning options. Vertical "A" and horizontal "B" position. The side designated for the correct position is always fitted with rubber feet on the underside of the BT speaker.

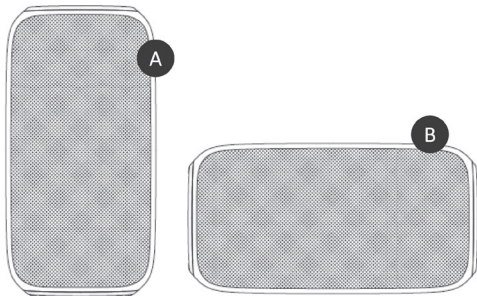

Caution: always position the equipment so that it does not endanger the health of persons in the vicinity or cause damage to property.

PAIRING DEVICES VIA BLUETOOTH

Turn on the BT speaker and search for its Bluetooth name "**SSS 3500**" in the device you want to pair and start the pairing process. If you are requested to enter a pairing code while your device and the BT speaker are pairing, use the code: "0000". To disconnect the paired device, end the

pairing session on your mobile device or long hold the “Change source” button. Disconnection will be indicated by the “Disconnected” voice signal

Note: To ensure a stable Bluetooth connection, make sure that the distance between the BT speaker and your connected device is kept within 10 meters.

Attention: Some connected devices support common volume setting. If some of the connected devices do not support this feature, the volume setting will operate separately on each device.

TWS FUNCTION

If you purchase another Bluetooth speaker (“**SSS 3500**”), you can pair them together for optimal stereo sound. First, make sure your device is not connected to any BT speaker. Switch on both BT speakers, press and hold the PLAY/PAUSE/TWS button (accompanied by “True wireless mode”) on one of the speakers and wait for the other speaker to connect. After successful pairing, you will be informed by the “True wireless paired” voice signal. Then connect your mobile device to the BT speaker.

Changing the volume level using the volume control buttons will take effect automatically on both paired BT speakers. Pressing and holding the power on button on one of the speakers will turn both paired speakers off. To exit TWS mode, press and hold the PLAY/PAUSE/TWS button on one of the participating BT speakers until you hear the message “True wireless disconnected”.

Caution: The TWS function is only available in the Bluetooth mode. It is not possible to pair the device with another type of BT speaker with TWS function, even within a re-edition of products with a different Bluetooth name.

AUDIO AUX IN

The BT speaker is equipped with a 3.5 mm jack. Your device can be connected to the BT speaker via the supplied audio cable. First connect the audio plug to your device and then to the BT speaker's jack.

Please note: before connecting your device and BT speaker, make sure that the output signal from your device is at the minimum level (minimum output volume). This will prevent the BT speaker from damage. When the audio cable is connected, the BT speaker does not meet the water ingress protection class.

Note: In this mode, not all functions of the BT speaker are available. The Bluetooth function is not active if the audio jack is connected to the BT speaker.

RESET BUTTON:

To reset the BT speaker, use a blunt, non-metallic object with a diameter of 3 mm and carefully insert it into the AUX-IN connector. Gently press into the connector until you feel the click of the button located behind the AUX-IN connector. Then switch on the BT speaker using the power button.

TIP: If there is an unexpected problem with the BT speaker connection or function, reset the BT speaker.

PLAY/PAUSE BUTTON

Press the Play/Pause button to start or pause music playback during a Bluetooth connection when a memory card or USB storage media is inserted.

VOLUME AND TRACK PLAYBACK CONTROL

To control the BT speaker's volume (+/- buttons), use the buttons on the BT speaker. During playback of songs from the storage media, you can skip to the next song by pressing and holding the "+" button. To select the previous track, press and hold the "-" button.

BASS BUTTON

The button is designed to emphasise the bass during music playback. Press the button briefly to change the mode.

Tip: A long hold on the button resets the BT connection and switches off. This function is useful if no device can be connected to the BT speaker via Bluetooth. If resetting via the BASS button does not work, follow the chapter "Reset button".

LIGHT EFFECTS

The BT speaker is equipped with light effects in the speaker area. Changing the light effect is done by pressing the "light effects" button, 6 light effects are preset. Two light effects illuminate the speaker only halfway, these special effects are used to position the SSS 3500 in horizontal or vertical position. To turn off the light effects, long hold the "light effects" button. To switch on the light effects, press the "light effects" button briefly.

PLAYBACK FROM USB STORAGE MEDIA / MEMORY CARD

USB-A playback

Insert the USB storage disc with audio content in the USB slot. Press the on/off button briefly to switch to the “USB mode”. The music playback from the connected storage will start automatically. Please record your music on the storage in the same order as it's to be played back from the BT speaker.

Memory card playback

Insert the memory card with the contacts towards the top of the BT speaker positioned horizontally. When you insert a memory card, the BT speaker will automatically start playing back its contents. If there is no file to play on the memory card, the BT speaker will switch to the last active source being played. To release the TF memory card, press it gently into the BT speaker with your fingernail or a blunt instrument and the card will release. Then you can carefully remove it with your fingernails (or with tweezers). Supported playback formats are listed in the technical specification.

Attention: Due to a number of devices on the market, compatibility and playback support are not guaranteed for all media. The memory devices you want to connect should be tested in advance and/or formatted as FAT32. The playback of protected media, files or content stored inside them may fail.

POWER BANK FEATURE

The BT speaker can be also used as a Power bank to charge another portable devices. Lift the protective cover of the sockets at the BT speaker's rear and connect your portable device's charging cable to the USB port. The charging will take place automatically as long as the BT speaker is turned on. This is a feature that does not replace charging as efficiently as charging a portable device from a charging adapter.

MICROPHONE INPUT

The BT speaker is equipped with one input for connecting one 6.3 mm jack microphone on the back. When the microphone is connected, the input is active. The microphone mode volume level is factory preset and cannot be adjusted. ECHO functions can be turned off/on by briefly pressing the “on/off” button.

Caution: Avoid feedback by keeping the microphone far enough away from the SSS 3500 speakers. If you get too close, feedback will occur and may result in damage to the speakers or the hearing of a person near the system.

CHARGING THE BT SPEAKER

A charged battery provides power for several hours of operation at normal volume levels. A high volume consumes more battery power; therefore, we recommend listening at normal volume levels. To charge the BT speaker, please connect the charging adapter to the mains and then to the BT speaker. Use your own 5 V, 2 A charging adapter. The battery status indicator will gradually indicate the battery status during charging. A low battery level will be indicated by an audible warning and a red LED status indicator.

LED indicator	Battery charge level
Red intermittent indicator	0%–10%
1	10%–30%
2	30%–45%
3	45%–60%
4	60%–85%
5	85%–100%

Attention: For charging, use only the original accessories supplied with the appliance. To achieve the maximum battery lifetime, it is best not to start charging until the low battery audible alert is output. Charge continuously until fully charged. When the battery operating time becomes very short, the battery lifetime has been used up; we recommend that you have the battery replaced at your authorized centre.

Recommendation: If the unit is not to be used for an extended period of time, we recommend to fully charge the battery once every two to three months. We recommend to store the unit with a the battery charged to prevent irreparable damage to the battery (loss of capacity).

INGRESSION PROTECTION (IPX4)

The device is waterproof, allowing you to listen to music near water. The IPX4 waterproof rating guarantees the functionality of the device in splashing water in all directions for a maximum of 5 minutes and a liquid pressure of 80–100 kN/m².

Caution: Always remember to seal the BT speaker inputs (No. 9–13 in the picture “BT speaker description”) with the original gasket and make sure that the gasket is not damaged. Never charge the unit during possible contact with fluids. The unit is designed for contact with clean water only without any additives. Avoid exposing the unit to contaminated or industrially treated fluids (such as lemonade, sea/salt water, oils, etc.).

TECHNICAL SPECIFICATIONS

Features

Waterproof speaker with IPX4 protection class

Light effects with the option to switch off

TWS function (True Wireless Stereo)

BASS boost button

Powerbank feature

Sound:

Maximum speaker output 80W

4 speakers (2 mid-bass, 2 tweeters)

Digital Sound Processor (DSP)

Frequency response: 40 Hz – 16 kHz

Total harmonic distortion: $\leq 1\%$

Inputs:

Bluetooth Audio 5.0

Connection distance: up to 15 m

AUX audio input (3.5 mm stereo connector)

USB playback (MP3 format supported)

TF card slot (MP3 format supported)

6.3 mm microphone input

Other:

Built-in rechargeable battery: 9,000 mAh Li-Ion

Playback time of up to 18 hours (at 50% volume)

Accessories: USB charging cable, 3.5 mm external cable (Aux),
user's manual

Dimensions: 397 × 205 × 180mm

Weight: 3,900 g

Bluetooth	Version	5.0
	Maximum Transmitter Power	100mW @ 2.4GHz - 2.4835GHz
	Codec	SBC
	Profiles	HFP V1.5; A2DP V1.2; AVRCP V1.4; GAVDP V1.2; AVDTP V1.2; SPP V1.2; AVCTP V1.2

INSTRUCTIONS AND INFORMATION ABOUT THE DISPOSAL OF DISCARDED PACKAGE

Return the packaging to a collection centre for disposal.

DISPOSAL OF DISCARDED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol placed on the product, accessories or package notifies that the product must not be treated as household waste. Please dispose of this product in a collection centre designed for recycling electric and electronic equipment.

In some EU or European countries, you can return your products to your local dealer when buying a new equivalent product. Correct disposal of this product helps save valuable natural resources and prevents possible adverse impacts on the environment and human health that might be caused by improper waste disposal. For further information, please contact your local authorities or the nearest waste disposal collection centre. Wrong disposal of this type of waste may be subject to a legal penalty.

For EU companies

If you need to dispose of an electric or electronic device, ask your dealer your supplier for necessary information.

Disposal in countries outside the European Union

To dispose of this product, please ask your local authorities or dealer for the necessary information on correct disposal.



This product complies with EU requirements.

FAST ČR, a.s. hereby declares that the radio equipment type SSS 3500 conforms to the 2014/53/EU Directive. For full version of the EU declaration of conformity, please refer to www.sencor.eu website.

Changes in the text, design and technical specifications may be made without prior notice and we reserve the right to make such changes.

The original version is in Czech.

Manufacturer's address:

FAST ČR, a. s., U Sanitasu 1621, Říčany CZ-251 01

SENCOR®

EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be identified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Authorized service centers

Visit www.sencor.com for detailed information about authorized service centers.