



EN ■ User Manual

**USB/MP3/CD/Radio
Portable Player**

CZ ■ Uživatelská příručka

**Přenosný radiopřijímač
s USB/MP3/CD přehrávačem**

SK ■ Používateľská príručka

**Prenosný rádioprijímač
s USB/MP3/CD prehrávačom**



HU ■ Felhasználói kézikönyv

**Hordozható rádió
USB/MP3/CD lejátszóval**

PL ■ Podręcznik użytkownika

**Przenośny radioodbiornik
z odtwarzaczem USB/MP3/CD**

WARNING

 
1. **WARNING:** Before installing or using this device, please read the electrical and safety information on the outside bottom of the unit.
2. **WARNING:** To prevent a fire hazard or injury by electric shock, do not expose this device to rain or humidity. Do not expose the appliance to dripping or spraying water effects and do not place objects filled with , a liquid such as vases on the appliance.
3. **WARNING:** Batteries and accumulators must not be exposed to extreme temperatures, for example the effect of direct sunlight, fire, etc.
4. **WARNING:** The power plug is used to disconnect the appliance from the power source and thus must remain easily accessible.
5.  If the device is opened and the safety mechanisms are overridden, there is a risk of invisible laser radiation. Do not expose yourself to the laser beam effects.
6.  Correct product disposal. This marking means that this product must not be disposed of with normal household waste in EU countries. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please recycle this product properly to promote the sustainable material reuse. Please return the discarded product to a collection yard or contact the dealer from whom you purchased it. The seller can take over this product to ensure its ecological recycling.
7. Do not place sources of an open flame such as lit candles on to the appliance.
8. Follow the fundamentals of environmental protection when disposing of batteries.
9. Use the unit in a mild climate zone.
10. The nameplate and the designation can be found at the bottom of the device.
11. Excessive sound pressure from earphones and headphones can cause hearing damage.
12. The mains plug of the appliance must not be blocked by other objects during use and must remain easily accessible.
13. Unplug the appliance from the mains socket to completely disconnect it from the mains.

NOTE

**Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.**


WARNING

TO PREVENT A FIRE HAZARD OR RISK OF ELECTRIC SHOCK, DO NOT EXPOSE THIS DEVICE TO RAIN OR HUMIDITY.

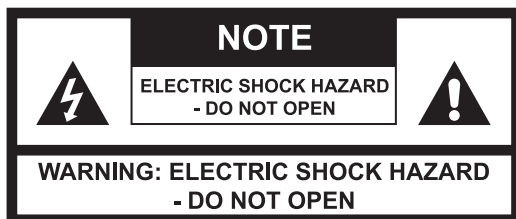

THE LIGHTNING SYMBOL located in an equilateral triangle informs the user about the existence of an uninsulated "dangerous voltage" inside the device, which can have such an intensity as to cause injury by electrical shock.

 The following label, attached to the device, contains the correct procedure for working with the laser beam:

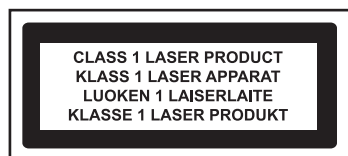

CLASS 1 LASER PRODUCT LABEL (CLASS 1 LASER PRODUCT)

This label is affixed to the location shown in the illustration to inform you of the existence of the laser device inside the machine.

RADIATION WARNING LABEL

This label is located inside the device. See figure. Warns against further steps performed on the device. This device contains a laser emitting beams in accordance with the limit for Class 1 laser products.

SAFETY INSTRUCTIONS

1. **READ THE INSTRUCTIONS** - Before starting to use this product, please read all safety instructions and the user's manual.
2. **RETAIN THE INSTRUCTIONS** - Keep the safety and operating instructions for future use.
3. **HEED THE WARNINGS** - Follow all warnings on the product and in the operating instructions.
4. **OBSERVE THE INSTRUCTIONS** - Please observe all instructions for operation and use.
5. **WATER AND HUMIDITY** - The appliance should not be used near water, for example near a bathtub, washbasin, kitchen sink, laundry containers, in swimming pools or damp environment.
6. **VENTILATION** - Place the appliance in such a location and position where proper ventilation is not blocked. Do not place the appliance on a bed, sofa, rug or similar surface that could block the ventilation openings; do not place the device in a confined space, such as a bookcase or cabinet, where the airflow through the vents may be impaired.
7. **HEAT** - This device must be located away from sources of heat such as heaters, convection heaters, stoves or similar appliances (including amplifiers) that produce heat.
8. **POWER SOURCES** - This device may only be connected to a power source of the type specified in the operating instructions or marked on the device.
9. **POWER CORD PROTECTION** - The power cord must be routed so that it is not likely to be walked on or pinched by items placed upon or against it.
10. **POWER LINE** - Keep the outdoor antenna out of reach of power lines.
11. **INGRESSION OF OBJECTS AND LIQUIDS** - Make sure that no objects or liquids enter the device through the ventilation openings.
12. **ELECTROSTATIC DISCHARGE WARNING** – Electrostatic discharge may cause the display to malfunction or cause the unit to stop responding to controls. Turn off the appliance and disconnect it from the mains. Reconnect the unit after several seconds.
13. **POŠKOZENÍ VYŽADUJÍCÍ OPRAVU** - The unit must be repaired by a qualified service engineer in the following cases:
 - a. If the power cord or power plug is damaged.
 - b. Foreign objects or liquids have entered the product.
 - c. The unit has been exposed to rain.
 - d. The unit has been dropped on the floor or damage to the cover has occurred.
 - e. The unit does not function normally.
14. **REPAIRS** - The user should not attempt to repair the device himself, except for the repairs listed in this manual. Any other repairs should only be done by a qualified service engineer.

Notes:

- a. Dirty or scratched CDs may skip. Please clean or replace the CD.
- b. If an error appears or if a malfunction occurs, disconnect the AC power cord (mains lead) and remove all batteries. Then turn the unit back on.

BEFORE TURNING ON

 
Notes: COMPACT DISCS (CDs).

As dirty, damaged or deformed discs can damage the unit, please pay attention to the following:



- a. Supported compact discs. Use only compact discs marked below.
- b. Compact CDs must contain only digital audio signals.



CONTROLS

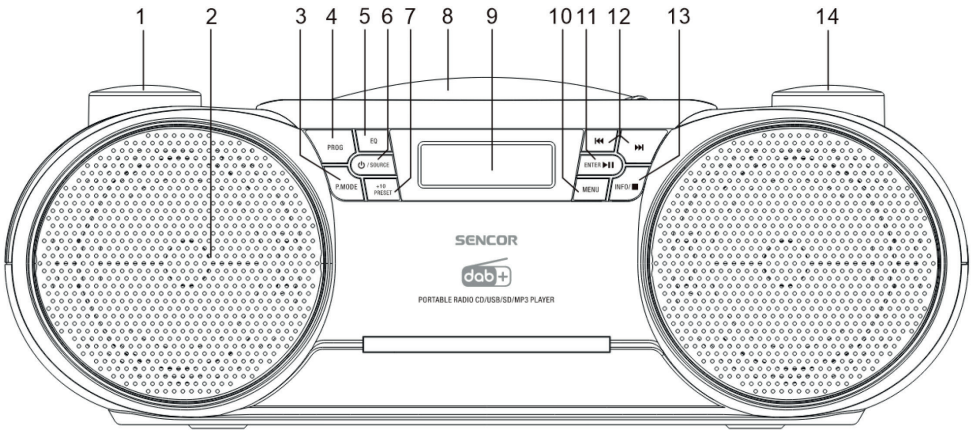


1. Volume knob
2. Speaker
3. P.Mode (Playback mode: Repeat, Repeat 1, Random)
4. PROG (CD Memory/Radio Preset)
5. EQ (Flat/Rock/Pop/Classic/Jazz)
6. ⏻ Standby/Source
7. PRESET/+10
8. CD door
9. LCD display
10. Menu (System menu, DAB menu, FM menu)
11. Enter/▶|| (Play/pause, Auto Scan, Pairing)
12. SKIP Back-/◀◀, SKIP Forward+/▶▶
13. Info/■
14. Tuning knob
15. Aux-in jack
16. Earphone jack
17. USB port
18. SD/MMC card slot
19. FM Antenna
20. AC socket
21. Battery compartment

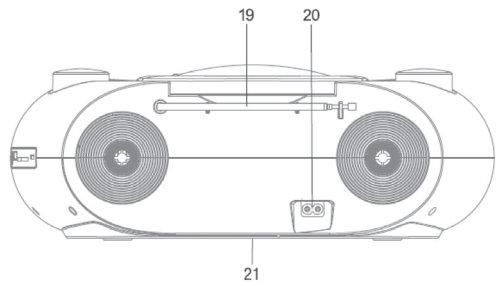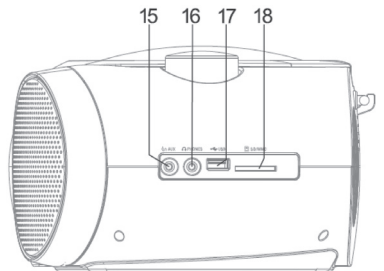  


REMOTE CONTROL

1. ⏻ Standby/Source
2. SLEEP
3. EQ
4. PROG/CLK.SET
5. SKIP Back-/⏮
6. PAIRING
7. FOLDER/STATION PRESET - BUTTON
8. MUTE
9. MENU
10. ENTER
11. TIMER
12. P.MODE (PLAYBACK MODE)
13. SKIP Forward+/⏭
14. ▶|| (Play/pause, SCAN)
15. PRESET/+10
16. STOP/INFO
17. FOLDER/STATION PRESET + BUTTON
18. VOL -
19. VOL +

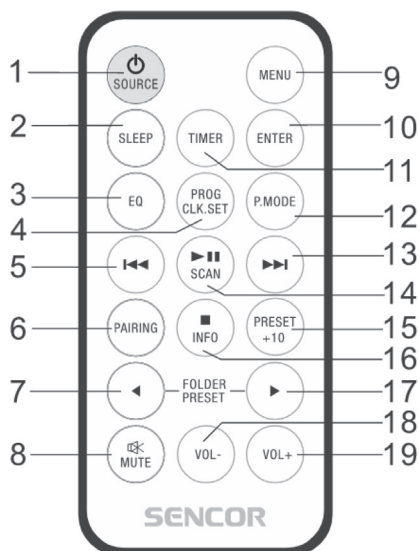 

 BATTERY INSTALLATION INTO THE REMOTE CONTROL

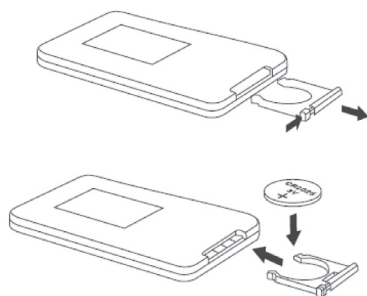

Press down on the compartment cover and slide the cover off to open the compartment. Place the one CR2025 battery in the remote control according to the polarity markings (“+” and “-”) inside the compartment and on the battery. Place the cover into the compartment, press down lightly, and push it inside until it snaps on.

Note:


1. If the remote control is not in use for long periods, the battery will become weak and the remote control will not function, please replace with a new one if the above happens.
2. The battery of remote control shall not be exposed to excessive heat such as sunshine, fire or the like.

OPTION 1: AC POWER

Connect the AC power cord to:

 - the AC~ MAINS socket on the unit.
- the wall socket.

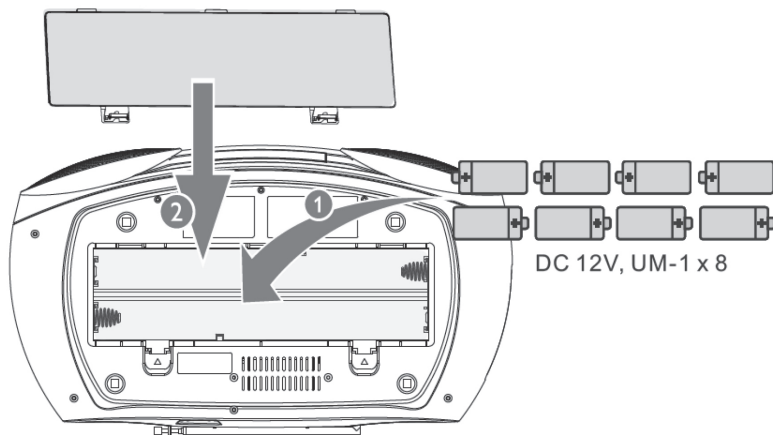

OPTION 2: BATTERY POWER




- Batteries contain chemical substances, so they should be disposed of properly.
- Batteries are not supplied with the accessories.

1. Open battery compartment.
2. Insert 8 batteries (type: R-20, UM-1 or D-cells) with correct polarity (+/-) as indicated.
3. Close the battery compartment.

TURN ON

Press /SOURCE button, the system switches to the last selected source.
To select another source, press /SOURCE button repeatedly.

SWITCH TO STANDBY MODE

1. Press and hold  button 2 seconds to switch the system to standby mode.
The clock (if set) appears on the display panel.
2. The display backlight becomes dim.

Note:

In CD, CARD, USB, Aux and Bluetooth mode, the product switches to standby mode automatically when there is no audio detected for over 15 minutes.

SET TIME

1. In standby mode, press MENU button to enable system menu, press ENTER to access.
2. Press ◀◀/▶▶ repeatedly to select TIME, press ENTER.
3. With the TIME menu, press ◀◀/▶▶ repeatedly you can:
[Set Time/Date]
[Auto update]: Update the time from
 - ↳ [Update from Any]
 - ↳ [Update from DAB]
 - ↳ [Update from FM]
 - ↳ [No Update][Set 12/24 hour]
[Set date format]
Press ENTER button to save the setting.
or press STOP button to previous step.
Or press MENU to exit the menu.

Note: If the system is idle for 30 seconds, it exits time setting mode automatically.

PLAY CD

1. Press **SOURCE** button to select CD source.
2. Lift up the disc tray.
3. Insert a disc with the printed side facing up, then close the disc tray.
 - ↳ Plays starts automatically.

PLAY FROM USB DEVICES/SD-MMC CARD

Make sure that the USB device or memory card contains playable audio content.

1. Press **SOURCE** button to select either USB or CARD source.
2. Insert the USB storage device into USB socket or memory card into card slot.
 - ↳ Plays starts automatically. If not, press ▶||.

Note:

Please do NOT use a USB extension cable to connect your USB flash drive.
Such cable can pick up additional interference which can corrupt the data flow.
Always connect your USB flash drive directly to the USB port without USB extension cable.
The maximum current for USB is 0.5A and not support charging function.

PLAY FROM BLUETOOTH-ENABLED DEVICES

- The effective operating range between the system and the paired device is approximately 10 meters (30 feet).
- Any obstacle between the system and the device can reduce the operational range.
- Compatibility with all Bluetooth devices are not guaranteed.
- This system is auto enabled Bluetooth pairing mode.

1. Press **SOURCE** button to select Bluetooth source.
 - ↳ [BLUETOOTH] is displayed.
 - ↳ The CD sound machine enters pairing mode, and [PAIRING] is displayed on the screen and blinks.
2. On your Bluetooth device, enable Bluetooth and search for Bluetooth devices that can be paired (refer to the user manual of the device).
3. When **[SPT 6500]** your device, select it to start pairing and connection.
After successful pairing and connection, the product plays music sound and [Bluetooth Connected] is displayed on the screen.
4. Play audio on your Bluetooth device.
 - ↳ Audio streams from your Bluetooth device to the product.
 - To skip to previous/next track, press **◀◀/▶▶**.
 - To pause or resume the playback, press **▶||**.

Note:

If you cannot find **[SPT 6500]** n your device, press and hold ENTER/▶|| button for 2 seconds to enter pairing mode, [PAIRING] is display on the screen.

DISCONNECT THE BLUETOOTH-ENABLED DEVICE

- ENTER/▶|| button for 2 seconds;
- Disable Bluetooth on your device; or
- Move the device beyond the communication range.

CONNECT ANOTHER BLUETOOTH-ENABLED DEVICE

Disable Bluetooth on the current device, and then connect another device.

PLAY FROM AN EXTERNAL DEVICE (AUX)

You can also listen to an external audio device such as an MP3 player through this product.

1. Press **SOURCE** button repeatedly to select [AUX] source.
2. Connect an audio cable (3.5mm, not supplied) to:
 - the AUX-in socket on the unit.
 - the headphone socket on an external device.
3. Play the external audio device (see the device's user manual).
4. Adjust the main volume on the external device and main unit.

Note:

After connecting and starting playback, increase the volume level on the external device to the maximum. Observe the note below. Otherwise, the main unit will switch to standby mode (ECO mode) as no audio signal input. This is not a mal-function.




Notice:

Before connecting your device to the BT speaker, ensure that the output signal from your device is at its minimum level (minimum output volume). This will prevent the BR speaker from damage.

PLAY OPTIONS




CONTROL PLAY

In CD, USB or CARD mode, you can control play through the following operations.

	Short press: Skip to the previous or next track; Press and hold: To fast forward or fast-reverse the track during playback, then release to resume play.
PRESET/+10	Press to skip the tracks in 10 multiples.
	Start or pause play.
	Stop play.
P.MODE	REP-1: Play the current track repeatedly. REP-DIR: Play the current music folder repeatedly. REP-ALL: Play all tracks repeatedly. RANDOM: Play tracks randomly.
Tip: Only REP-1 and ALL can be selected when you play the programmed tracks.	

PROGRAM TRACKS

In playing CD disc, you can program a maximum of 20 tracks CD-MP3, USB or CARD mode, you can program a maximum of 99 tracks.

1. Press  to stop playback.
2. Press **PROG** to active the programming mode.
↳ [MEM] [P-1 T—01] or CD-Mp3 contains folder(s) [P 01 F- -01 001] displayed and blinks.
3. Press  repeatedly to select a track, then press **PROG** to confirm.
4. Or press +10 to skip the tracks in 10 multiples, then press **PROG** to confirm.
5. Repeat steps 3-4 to program more tracks.
6. To play the programmed tracks, press .
- To erase the program, press STOP button twice.

ADJUST SOUND [EQ]

During play, you can adjust volume and select different sound effects.

- **VOLUME +/-**
Turns the volume knob on the top of product for increase or decrease volume level.
- **SOUND**
Press **EQ** button to select a pre-set sound effect:
[FLAT] > [ROCK] > [POP] > [JAZZ] > [CLASSIC]

LISTEN TO FM RADIO

TUNE TO FM RADIO STATIONS

For optimal reception, fully extend and adjust the position of the FM antenna.

1. Press **SOURCE** repeatedly to select FM source.
2. Press and hold **◀◀/▶▶** for 2 seconds.
 - ↳ [SCANNING] is displayed.
 - ↳ The product tunes to a station with strong reception automatically.
3. Repeat step 2 to tune to more stations.

To tune to a station with weak signal:

Turns the tuning knob until you find better reception.

STORE RADIO STATIONS AUTOMATICALLY

You can program a maximum of 30 pre-set FM radio stations.

1. In FM mode
2. Press and hold **ENTER ▶/||** button for 2 seconds.
 - ↳ [Auto Scanning...] is displayed.
 - ↳ The unit stores all the available FM radio stations.
 - ↳ The first stored radio station is broadcast automatically.

STORE RADIO STATIONS MANUALLY

You can program a maximum of 30 pre-set FM radio stations.

1. Tune to desired FM radio station.
2. Press and hold **PROG** for 2 seconds to activate the storing mode.
3. Press **◀◀/▶▶** or turns the tuning knob repeatedly to allocate a number (1 to 30) to this radio station, then press **ENTER** to confirm.
 - ↳ The [Preset number stored] are displayed.
4. Repeat the above of steps to store other stations.

Note:

To remove a pre-stored station, store another station in its place.

SELECT A PRESET RADIO STATION

1. In FM mode, press **PROG** button to enable station recall.
2. Press **◀◀/▶▶** or turns the tuning knob repeatedly to select a preset number
3. Press **ENTER** to confirm.

DISPLAY FM INFORMATION

On the display of FM broadcasting, the first line shows station name, and the second line shows the service information for the current station.

Press **INFO/■** repeatedly to cycle through the following information (if available).

- Radio text
- Program type (PTY)
- Ensemble name
- Stereo or mono reception
- Time
- Date

USE FM MENUS

1. In FM mode, press **MENU** to access the FM menus.
2. Press **◀◀/▶▶** or turns the tuning knob repeatedly to toggle through the menus:
[Scan setting]
 - ↳ [All stations]: Scan all the available FM stations.
 - ↳ [Strong stations only]: Scan the strong FM stations only.[Audio setting]
 - ↳ [Stereo allowed]: Stereo broadcast
 - ↳ [Forced mono]: to improve the reception, change to monaural sound
3. Press **ENTER** to enter the menu.

LISTEN TO DAB RADIO STATIONS

Note:

- For optimal reception, fully extend the antenna and adjust its position.
- You can program a maximum of 30 DAB radio stations.
- Check with local retailer or go to www.WorldDAB.org for applicable DAB radio frequencies in your area.

FOR THE FIRST TIME USE

1. Press **SOURCE** repeatedly to select the DAB source.
 - ↳ [Full scan] menu is displayed.
2. Press **ENTER** to activate the automatic search.
 - ↳ This product automatically stores radio stations with sufficient signal strength.
 - ↳ After the search is complete, the first stored radio station is broadcast automatically.
3. Press **◀◀/▶▶** or turns the tuning knob repeatedly to select a station, and then listening.

PROGRAM RADIO STATIONS

1. Tune to a DAB radio station.
2. Press and hold **PROG** for 2 seconds to activate the programming.
3. Press **◀◀/▶▶** or turns the tuning knob repeatedly to allocate a number (1 to 30) to this radio station, then press **ENTER** to confirm.
 - ↳ The radio station is stored with the selected sequence number.
4. Repeat the above of steps to program more DAB radio stations.

Note:

If you store a radio station with the sequence number of another one, the earlier one is overwritten.

DISPLAY DAB INFORMATION

On the display of DAB broadcasting, the first line shows station name, and the second line shows the service information for the current station.

Press **INFO/■** repeatedly to cycle through the following information (if available).

- Dynamic label segment (DLS)
- Signal strength
- Program type (PTY)
- Ensemble name
- Frequency
- Signal error rate
- Bitrate codec
- Time
- Date

USE DAB MENUS

1. In DAB mode, press **MENU** to access the DAB menus.
2. Press **◀◀/▶▶** or turns the tuning knob repeatedly to toggle through the menus.
 - ↳ [Full scan]: Scan for the DAB stations.
 - ↳ [Manual tune]: Tune to a station manually.
 - ↳ [DRC] (Dynamic range control): Reduces the volume of loud sounds or amplifies quiet sounds thus reducing or compressing an audio signal's dynamic range.
 - ↳ [Prune]: Remove invalid stations
 - ↳ [System]: Access system setting menu.
3. Press **ENTER** to enter the menu.

Tips: You can press **INFO/■** button back to previous step.

Or press **MENU** button to exit DAB menu.

RE-SCAN FOR STATIONS

[Full scan] is used to perform a wide range search for DAB radio stations.

- Press **ENTER** to activate the automatic search.
 - ↳ This product automatically stores radio stations with sufficient signal strength.

TUNE TO A STATION MANUALLY

With this feature, you can tune to a specific channel/frequency manually. In addition to antenna orientation for better radio reception, the optimal reception can also be obtained with this feature.

1. Press **ENTER** to access the station list.
2. Press **◀◀/▶▶** or turns the tuning knob repeatedly to select a station.
3. Press **ENTER** to confirm the option.

REMOVE INVALID STATIONS

This option lists active stations and removes any stations that are in the list but have no service in your area.

1. Press **ENTER** to access the [PRUNE] menu.
2. Press **◀◀/▶▶** or turns the tuning knob repeatedly to an option.
 - [N]: Return to the previous menu.
 - [Y]: Remove invalid stations from the station list.
3. Press **ENTER** to confirm the selection.

SYSTEM MENUS

1. Press **ENTER** to access system menu.
 2. Press **◀◀/▶▶** or turns the tuning knob repeatedly to select a sub-menus.
- For details, refer to the section '**Use system menus**'.

USE SYSTEM MENUS

With the system menus, you can:

- [Sleep]: Set the sleep timer
- [Alarm]: Set the Alarm time
- [Time]: Set the time
- [Backlight]: Adjust the display brightness
- [Language]: Czech, English, Polish, Slovak, Hungarian
- [Factory Reset]: Reset the product to factory default status.
- [Software Upgrade]: Upgrade the software.
- [SW version]: Check the version of current software of this product.

SET THE SLEEP TIMER

This unit can switch to standby automatically after a preset period.

When the unit is turned on, press **MENU** button and enter to [System] menu, select [SLEEP] then press **ENTER** to access.

Press **◀◀/▶▶** or turns the tuning knob repeatedly to select the sleep timer period (90, 60, 45, 30, 15, Off).

↳ When the sleep timer is activated, **S15** appears and **15** is remaining time.

To deactivate sleep timer:

- Access to [System] menu > [Sleep], Press **◀◀/▶▶** or turns the tuning knob repeatedly until [SLEEP OFF](sleep off) is displayed.
- When sleep timer is deactivated, **S15** disappears.

SET THE ALARM

1. Press **MENU** button access to [System] menu > [Alarm].
2. Press **◀◀/▶▶** or turns the tuning knob repeatedly until to set Alarm
 - ↳ On time.
 - ↳ Duration: 15>30>45>60>90 minutes
 - ↳ Source: Wake up source from Buzzer, DAB, FM, CD, USB, CARD
 - ↳ Daily > Once > Weekends > Weekdays
 - ↳ Alarm sound level
 - ↳ Alarm On/Off
3. Press **ENTER** to confirm the selection.
 - ↳ When the Alarm is activated, Alarm 1 icon appears.

When the ALARM sounds ON, press **⏏/SOURCE** button to turn off the alarm sound.
Or press **ENTER** button to snooze the alarm (9 minutes).

Note:

If CD,USB or CARD is selected as alarm source, yet there is no disc inserted or no USB/card connected, the system switches to the BUZZER source automatically.

If alarm source selected FM or DAB, please tune the desired broadcast stations in advance.

LISTEN THROUGH THE HEADPHONE

Plug a headphone into the 3.5mm socket on the unit.

TROUBLE SHOOTING

FAQ	Possible Cause
The radio makes unusual noises continuously.	<ul style="list-style-type: none"> Is the unit placed near the TV or computer? Is the FM antenna fully extended? Move the unit away from the AC adapter or wall socket if it is located nearby.
<ul style="list-style-type: none"> Disc playback does not start. Disc playback stops in the middle or is not performed properly. 	<ul style="list-style-type: none"> Is the disc loaded face down? Does the disc satisfy the standards? Is the disc distorted or scratched?
Disc playback sounds are skipped, or stopped in the middle of a track.	<ul style="list-style-type: none"> Is the unit located near excessive vibrations? Is the disc very dirty? Has condensation formed inside the unit?
USB device cannot be detected.	<ul style="list-style-type: none"> Is there any MP3/WMA file available? Is the device properly connected? Is it an MTP device? Does the device contain AAC file only?
USB playback does not start.	<ul style="list-style-type: none"> Is it a copyright protected WMA file? Is it a false MP3 file?
Bluetooth sound is interrupted or distorted.	<ul style="list-style-type: none"> Is the unit too near to a device that generates electromagnetic radiation? Is there any obstacle between the unit and the Bluetooth stereo audio source device?
No sound is heard.	<ul style="list-style-type: none"> Is the volume level set to the lowest level? Is the unit too far from the Bluetooth stereo audio source device? Is the unit paired with the Bluetooth stereo audio source device?
When a button is pressed, the unit does not respond.	Set the unit to the power stand-by mode and then turn it back on.

TECHNICAL SPECIFICATION

Boombox with DAB+

DAB+ Reception in High Quality

Bluetooth 5.0

Maximum Power Output 12W

Sound:

Maximum Power Output: 12W (2x 6W)

Equalizer Function (Rock, Pop, Jazz, Classic, Flat)

Frequency Response: 50Hz – 16kHz

Total Harmonic Distortion: L/P ≤ 10% (1kHz)

Reception:

DAB+ Tuner (Digital Audio Broadcasting)

FM PLL Radio Tuner

Radio Data System (RDS)

Station Presets: 30 (30 DAB and 30 FM)

Telescopic Antenna

Inputs and Outputs:

Bluetooth 5.0 - Wireless Audio Streaming

USB (Playback)

SD/MMC slot

CD-R/RW/MP3

AUX-IN Jack 3.5mm

AUX-OUT Jack 3.5mm (Headphones)

Others:

LCD Display

Clock

Sleep Timer

Waking Up with Buzzer or Music (Radio/CD/USB)

Remote Control

Power: AC 100-240V, 50/60Hz or 8 x 1.5V Battery Type D/LR20 (Not Included)

Consumption: 28W

Dimensions: (w/h/d) 389 x 142 x 227mm

Weight: 2kg

FM radio	Band range	87.5MHz - 108MHz
DAB	Band range	174.928MHz to 239.200MHz
Bluetooth	Version	5.0
	Maximum Transmitter Power	100mW @ 2.4GHz - 2.4835GHz
	Codec	SBC
	Profile:	A2DP

INSTRUCTIONS AND INFORMATION ABOUT THE DISPOSAL OF DISCARDED PACKAGE

Return the packaging to a collection centre for disposal.



DISPOSAL OF DISCARDED ELECTRICAL AND ELECTRONIC EQUIPMENT

This symbol placed on the product, accessories or package notifies that the product must not be treated as household waste. Please dispose of this product in a collection centre designed for recycling electric and electronic equipment. In some EU or European countries, you can return your products to your local dealer when buying a new equivalent product. Correct disposal of this product helps save valuable natural resources and prevents possible adverse impacts on the environment and human health that might be caused by improper waste disposal. For further information, please contact your local authorities or the nearest waste disposal collection centre. Wrong disposal of this type of waste may be subject to a legal penalty.

For EU companies

If you need to dispose of an electric or electronic device, ask your dealer your supplier for necessary information.

Disposal in countries outside the European Union

To dispose of this product, please ask your local authorities or dealer for the necessary information on correct disposal.



This product complies with EU requirements.

FAST ČR, a.s. hereby declares that the SPT 6500 type device conforms to the 2014/53/EU Directive. For full version of the EU declaration of conformity, please refer to the www.sencor.eu website

Changes in the text, design and technical specifications may be made without prior notice and we reserve the right to make such changes.

The original version is in Czech.

Manufacturer: FAST ČR, a.s., U Sanitasu 1621, Říčany 251 01, Czech Republic

SENCOR®

EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Authorized service centers

Visit www.sencor.com for detailed information about authorized service centers.