



EN ■ User Manual

RADIO

CZ ■ Uživatelská příručka

RÁDIO

SK ■ Používateľská príručka

RÁDIO

HU ■ Felhasználói kézikönyv

RÁDÍÓ

PL ■ Podręcznik użytkownika

RADIO

SAFETY INFORMATION

IMPORTANT SAFETY INSTRUCTIONS




The exclamation mark symbol located inside an equilateral triangle informs the user about important instructions for operation and maintenance (repairs), which are found in the attached device documentation.

WARNING: TO PREVENT ELECTRIC SHOCK, DO NOT REMOVE THE PRODUCT COVER (OR THE BACK SIDE). THERE ARE NO SERVICEABLE PARTS INSIDE - PLEASE REFER ALL REPAIRS TO QUALIFIED SERVICE TECHNICIANS.

1. **READ THE INSTRUCTIONS** - Before starting to use this product, please read all safety instructions and the user's manual.
2. **RETAIN THE INSTRUCTIONS** - Keep the safety and operating instructions for future use.
3. **HEED WARNINGS** - Please heed all warnings stated on the product and in the user's instructions.
4. **OBSERVE THE INSTRUCTIONS** - Please observe all instructions for operation and use.
5. **WATER AND MOISTURE** - Do not use this product near water - for example, near bathtubs, washbasins, kitchen sinks or laundry tubs, in damp basements, near swimming pools, etc. This appliance must not be exposed to dripping or splashing water and no objects filled with liquid, such as vases, should be placed on it.
6. **CLEANING** - Prior to cleaning, please disconnect this product from your power outlet. Do not use liquid cleaning agents or cleaning agents in sprays. Use a damp cloth for cleaning.
7. **VENTILATION** - Openings and holes in the unit's cabinet are designed for ventilation to ensure reliable operation of the product and its protection from overheating. These openings must not be blocked or covered. These openings must never be blocked by placing the product on bed, sofa, rug or other similar surface. Do not place this product in an enclosed space, such as a bookcase or rack, unless required by the manufacturer's instructions or proper ventilation is provided.
8. **ACCESSORIES** - Use only manufacturer recommended accessories.
9. **ENERGY SOURCES** - Use only the power source specified on the type plate to power this product. If you are in doubt about the type of the power sources in your home, contact your vendor or the local energy company. For products that use the built-in battery power, please follow the instructions in the user's manual.


10. IF THE DEVICE IS TO BE LEFT UNUSED - If you plan to leave your device unused for a prolonged period of long time, unplug the product's power cord and turn the power switch **(OFF)**.
11. ENTRY OF FOREIGN OBJECTS AND LIQUIDS - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts which could result in a fire or electric shock. Protect this product from being spilt by liquids.
12. HEAT - This device must be kept out of sources of heat such as heaters, convection heaters, stoves or similar appliances (including amplifiers) that produce heat.
13. Position the power cord so that it cannot be stepped on or pinched, especially at plugs, convenience receptacles, and the point where they exit from the apparatus.
14. REPAIRS - No not attempt to repair this product by yourself as opening the cabinet and removing the covers may expose you to a dangerous voltage or other risk. Please refer all repairs to qualified service technicians.
15. The device must not be exposed to dripping or splashing water.
16. Where the plug of the socket adapter is used to disconnect from the power supply, this disconnecting device must remain easily accessible.
17. WARNING: Do not open. There are no user serviceable parts inside. Please refer all repairs to qualified technicians.
18. WARNING: Never grease any part of this device.
19. WARNING: Place this unit on flat, firm and stable surface.
20. WARNING: Never put this device on other electrical equipment.
21. WARNING: Keep this unit out of direct sunlight, open flames and heat sources.

SUPPLY CONTENT

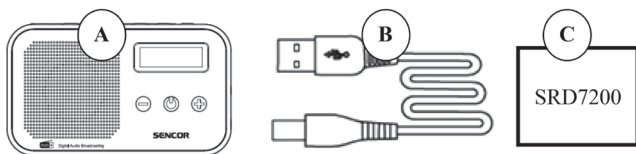

A	SRD 7200 UNIT
B	Power/charging cable
C	User's manual

Equipment description:

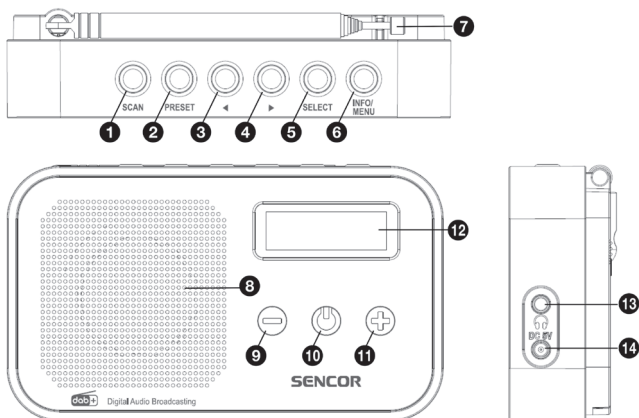

1	SCAN – search available stations
2	PRESET – set presets
3	LEFT (◀ TUNING -) – switch to the previous station
4	RIGHT (▶ TUNING +) – switch to the next station
5	SELECT– select (confirm the choice) / snooze the alarm
6	INFO/MENU – enter the menu
7	Rod antenna
8	Loudspeaker
9	VOLUME (-) – volume down
10	POWER/MODE – on/off button / change power supply (FM / DAB)
11	VOLUME (+) – volume up
12	Display
13	Power/charging socket (DC 5 V)
14	Headphone socket mini jack (3.5 mm)

OPERATING INSTRUCTIONS

Battery power ((built-in rechargeable battery)

Connect the device by inserting the charging cable into the DC 5 V IN connector and inserting the other end into your charging adapter. The charging time is approximately 3 hours depending on your charging adapter specifications. Charging will be indicated on the device display.

Power adapter

To use an external power supply, use your 5 V power adapter with USB input and connect the connecting power cable to port “13”.




Notice:

Do not charge the battery with the power adapter for more than 24 hours.

If you have not used this unit for a long time, the rechargeable battery may be completely drained. After prolonged inactivity, we recommend charging the battery for at least 5 hours.

Your power adapter should meet the following specifications:
5 V / 1 A.

Turning on the radio






1. Use a charged rechargeable battery for power or connect the unit to a mains adapter
2. Press and hold the **POWER**  button to start DAB/FM mode
3. In DAB/FM mode, press the **POWER**  button once to switch to standby mode or press and hold the **POWER**  button for 2 seconds to switch the unit on/off.

Notice:





Completely switching off the device will clear the set values. It is recommended to put the device in standby mode.

DAB mode





Automatic scan

1. Adjust the length and angle of the antenna for best reception.
2. Press the **POWER**  button to turn on the device.
3. When the radio is connected to a power source and turned on for the first time, DAB mode will be selected automatically and the quick scan of the DAB channels will be launched to find available stations. Please wait until this process is finished.
4. The first launch and station search will be in English. To change the user language, press and hold the **INFO/MENU** button. Press the **LEFT** () or **RIGHT** () button to select **LANGUAGE**, confirm with the **SELECT** button, select the desired language and confirm with the **SELECT** button.
5. Press the **LEFT** () or **RIGHT** () button to select the desired station.
6. Press **SCAN** to completely scan available channels again.

Manual scan

1. Hold down the **INFO/MENU** button, and select Manual Tuning, then press the **SELECT** button.
2. Press the **LEFT** () or **RIGHT** () button to select the desired channel (5A-13F) and press the **SELECT** button to select that channel.
3. Select a station using the **LEFT** () or **RIGHT** () button.

FM radio

1. Press and hold the **POWER**  button for 2 seconds to switch on the device.
2. Press **POWER**  to select the FM mode.
3. Select a station using the **LEFT** () or **RIGHT** () button.
4. Or press the **SCAN** button to start automatic tuning.
 - Press **SCAN** once to search for next station forward.
 - Hold down **SCAN** once to search for previous station backward.
5. Adjust the sound volume using the **VOLUME +** or **VOLUME -**.

DAB/FM radio station presets:

You can store up to 20 radio stations in memory. You can erase a stored frequency from the memory by storing other frequency in its position.


1. Tune a required station in the DAB mode.
2. Hold down the **PRESET** button until "**Preset**" (Preset Storage) appears with the number 1–20 (1–20 is the preset position number)
The preset number is empty, "**Preset**" (Preset Empty) will be shown.
If a station is stored at a given position, that station's frequency will be shown.
3. Press the **LEFT** (◀) or **RIGHT** (▶) button to select the desired memory location.
4. Press **SELECT** once to confirm and store the selected station.
5. Listening to a preset station:
 - Press **PRESET** once.
 - Press the **LEFT** (◀) or **RIGHT** (▶) button to select the desired station and press the **SELECT** button to confirm.

Setting the alarm

1. In stand-by mode
2. Press and hold the Info/Menu button. Press the **LEFT** (◀) or **RIGHT** (▶) button to select SET ALARM. Press the **LEFT** (◀) or **RIGHT** (▶) button to select Alarm 1 / Alarm 2 (flashes ON/OFF).
3. Press the **LEFT** (◀) or **RIGHT** (▶) button to select **OFF** or **ON**. Press **SELECT** to confirm.
4. Set the clock by pressing the **LEFT** (◀) or **RIGHT** (▶) button while the display is still flashing. Press **SELECT** to set the minutes.
5. Set the minutes by pressing the **LEFT** (◀) or **RIGHT** (▶) button while the display is still flashing. Press **SELECT** to confirm.
6. Alarm mode: Daily, Once, Weekends, Weekdays will flash. Press the **LEFT** (◀) or **RIGHT** (▶) button to select the desired alarm mode and press the **SELECT** button to confirm.

7. Alarm type: **BEEPER**, FM, DAB options will flash. Press the **LEFT** (◀) or **RIGHT** (▶) button to select the desired alarm type and press the **SELECT** button to confirm.
8. Press the **LEFT** (◀) or **RIGHT** (▶) button to select the desired alarm type and press the **SELECT** button to confirm.

Snooze function

1. When the alarm clock goes off, you can cancel it temporarily by pressing **SELECT/ SNOOZE**. The alarm clock goes off again in 9 minutes. (The snooze interval is 9 minutes).
2. The Snooze will repeat until you press **POWER** .

Sleep timer

1. In stand-by mode
2. Press and hold the **INFO/MENU** button. Press the **LEFT** (◀) or **RIGHT** (▶) button to select **SLEEP**.
3. Press the **LEFT** (◀) or **RIGHT** (▶) button to select **OFF** or the amount of time the device will be off, 10minutes, 30minutes, 60minutes, 90minutes. Press **SELECT** to confirm.

Restoring factory defaults

In DAB or FM mode, press and hold the **INFO/MENU** button, preset **SELECT** to open “Factory Reset” and display the “No” or “Yes” options. Press the **LEFT** (◀) or **RIGHT** (▶) button to select “Yes” and press the **SELECT** button to confirm – the device will reset to its original settings.

Volume

Adjust the sound volume using the **VOLUME +** or **VOLUME –** buttons.

Headphone connection

You can connect headphones with a 3.5mm connector to the “14” jack. The speaker will be automatically muted.

Locking the buttons

Press and hold the **SELECT** button for five seconds to activate the button lock feature (lock icon appears on the display), which locks all buttons. Press and hold the **SELECT** button for five seconds to deactivate the button lock feature (lock icon will disappear).

TECHNICAL SPECIFICATIONS

Digital radio

DAB+ station reception in maximum quality

Easy automatic station tuning

Power supply via built-in battery

Sound

Total power output (RMS): 1W

Frequency response: 84 Hz–16 kHz

Total harmonic distortion: $L/R \leq 10\%$ (1 kHz)

Display

Dot-Matrix LCD display with a backlight

Reception

DAB+ tuner (Digital Audio Broadcasting)

FM PLL radio tuner

Radio Data System (RDS)

Preset stations: 40 (20 DAB and 20 FM)

Telescopic antenna

Others

Time, alarm clock, automatic shut down

Automatic time updates

Headphone output (3.5 mm connector)

Built-in rechargeable Li-Ion battery with 800 mAh capacity

Up to 7 hours of playback time at 50% volume

DC 5V 3.5mm power connector

Dimensions: 125 × 27 × 733mm

Weight: 0.2 kg

Accessories: power cord, manual

FM radio	Band range	87.5 MHz - 108 MHz
DAB		174.928 MHz - 239.200 MHz

INSTRUCTIONS AND INFORMATION ABOUT THE DISPOSAL OF DISCARDED PACKAGE

Return the packaging to a collection centre for disposal.

DISPOSAL OF DISCARDED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol placed on the product, accessories or package notifies that the product must not be treated as household waste. Please dispose of this product in a collection centre designed for recycling electric and electronic equipment. In some EU or European countries, you can return your products to your local dealer when buying a new equivalent product. Correct disposal of this product helps save valuable natural resources and prevents possible adverse impacts on the environment and human health that might be caused by improper waste disposal. For further information, please contact your local authorities or the nearest waste disposal collection centre. Improper disposal of this type of waste may lead to penalties under the law.

For EU companies

If you need to dispose of an electric or electronic device, ask your dealer your supplier for necessary information.

Disposal in countries outside the European Union

To dispose of this product, please ask your local authorities or dealer for the necessary information on correct disposal.



This product complies with EU requirements.

Changes in the text, design and technical specifications may be made without prior notice and we reserve the right to make such changes.

The original version is in Czech.

Manufacturer's address:

FAST ČR, a. s., U Sanitasu 1621, Říčany CZ-251 01

SENCOR®

EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Authorized service centers

Visit www.sencor.com for detailed information about authorized service centers.