



EN ■ User Manual

Digital Alarm Clock With Quick Wireless Charger

CZ ■ Uživatelská příručka

Digitální budík s rychlou bezdrátovou nabíječkou

SK ■ Používateľská príručka

Digitálny budík s rýchlou bezdrôtovou nabíjačkou

HU ■ Felhasználói kézikönyv

Digitális ébresztőóra vezeték nélküli gyorsöltővel

PL ■ Podręcznik użytkownika

Cyfrowy budzik z szybką ładowarką bezprzewodową

SAFETY DATA

- We strongly recommend that you read this “User Guide” and keep it in a safe place.
- Do not expose this unit to excessive force, shock, dust, temperature or moisture.
- Do not cover the vents with objects such as newspapers, curtains, etc.
- Do not immerse this unit in water. If you spill liquid on it, dry it immediately with a soft, lint-free cloth.
- Do not clean the unit with abrasive or corrosive materials.
- Do not damage the internal components of the unit. This would mean that the warranty would be terminated.
- Use only new batteries. Do not combine old batteries with new ones.
- Use only manufacturer recommended accessories.
- The images in this manual may differ from the actual appearance.
- When disposing of this product, ensure that it is taken for special disposal.
- Dispose of discarded batteries as directed.
- This product is intended for use only with the supplied adapter.
- CAUTION! There is a risk of explosion if the battery is replaced with the wrong type.
- Batteries must not be exposed to high or low extreme temperatures and low air pressure when used, stored or transported at high altitudes. Failure to follow this instruction may result in an explosion or leakage of flammable liquid or gas.
- Disposing of the battery by throwing it into a fire, placing it in a hot oven, or mechanically crushing or cutting the battery can cause an explosion.
- Do not swallow the battery, there is a risk of chemical splashes.
- Keep new and old batteries out of the reach of children.
- If the battery compartment cannot be safely closed, stop using the product and keep it out of the reach of children.
- If you suspect that batteries have been swallowed or that a battery has gotten into any part of the body, seek medical attention immediately.
- The mains socket must be located close to the unit and must be easily accessible.
- It is forbidden to reproduce the contents of this manual without the manufacturer's permission.
- The technical data and contents of the user manual of this product are subject to change without notice.
- If replacement parts must be used, make sure the service technician uses manufacturer specified replacement parts that have the same characteristics as the original parts. Unauthorised replacements may cause fire, electric shock or other hazards.
- This product is not a toy. Keep it out of children's reach.

Please read this manual carefully and thoroughly to become as familiar as possible with the functions and features of your new alarm clock.

This unit requires power from a 9V/2A mains adapter. Once connected to the power supply, the unit will automatically switch into the standby mode.

To fully disconnect the unit from power supply, unplug the power cord from the mains socket.

Warning: Before using this device, check that the local mains power supply meets the requirements of this device. Do not connect or disconnect the adapter with wet hands.

If you will not be using the device for an extended period of time (e.g. on holiday), unplug the adapter from the mains socket.

DC (DC) battery for clock backup: Connect two 1.5V AAA batteries (not included) to the battery terminals in the BATTERY COMPARTMENT. They help to maintain proper clock operation in the event of a mains power failure.

During a power failure, the display will not show the time, but the clock will still keep the correct time.

Wireless charging: Place your wireless charging-enabled smartphone on the WIRELESS CHARGER.

After about a second, the wireless charging icon will light up. If this icon does not light up, adjust the position of your smartphone so that its charging coil is aligned with the WIRELESS CHARGER.

If there is a metal object on the wireless charger and it is not a wireless charging device, the wireless charging icon will flash.

DO NOT use in environments with high temperature, humidity or corrosives.

DO NOT place the wireless charger too close to magnetic strips or smart cards. Do not place this alarm clock in the close proximity to magnetic cards (ID cards, bank cards etc.) with magnetic strips or chips to avoid damage to the card.

Using the USB charging output: The USB 5V/2A charging port can be widely used for charging other mobile devices.

USB charging delivers a maximum of 1–2 A to mobile devices, depending on the specific specifications of the mobile devices.

SAFETY PRECAUTIONS: To ensure a long-term and reliable service, do not expose the unit to extreme temperatures or high humidity. For example, never place the unit in areas designed for swimming or near kitchen ranges or radiators.

If the unit malfunctions, return it to the nearest service centre. Do not attempt to repair the appliance on your own.

To prevent fire or electric shock, do not expose this appliance to rain or humidity.

To prevent electric shock, do not open the case of the device. Always have the unit repaired by a qualified service technician.

Keep out of the reach of children. Ensure that children are kept a safe distance away from this alarm clock.


 
Please keep a distance of at least 20 cm between this wireless charger and medical implants (pacemakers, cochlear implants, etc.) to prevent damage to medical devices.

Ensure that the power supply is disconnected before cleaning this alarm clock. Always use a slightly dampened soft cloth for cleaning. Do not use cleaning products or abrasive cleaners.

Operating temperature: 0–40°C.


Operating humidity: 20–85%.

DESCRIPTION OF EQUIPMENT

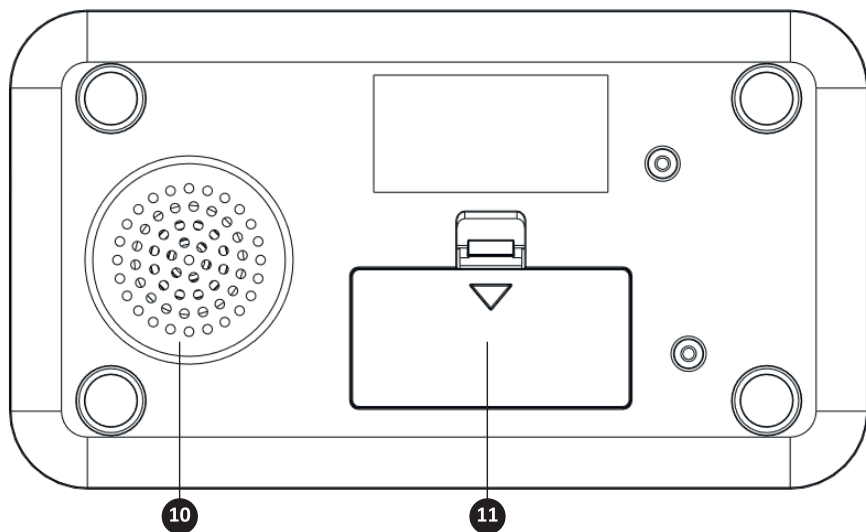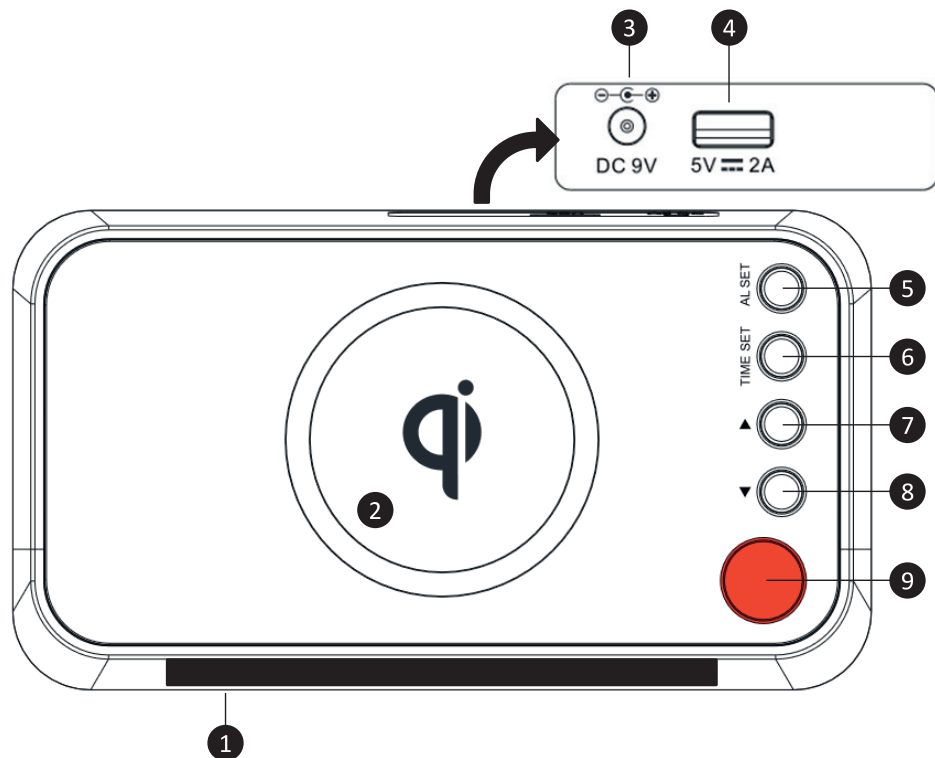

1	Display
2	Area for wireless mobile phone charging (Qi standard)
3	Connector for power adapter (DC 9 V)
4	USB-A for mobile device charging (5 V / 2 A)
5	ALARM SET button
6	TIME SET button
7	Up arrow button
8	Down arrow button
9	Display brightness adjustment button / snooze alarm
10	Alarm speaker
11	Battery compartment (2 x 1.5 V; AAA)

 DESCRIPTION OF THE DISPLAY

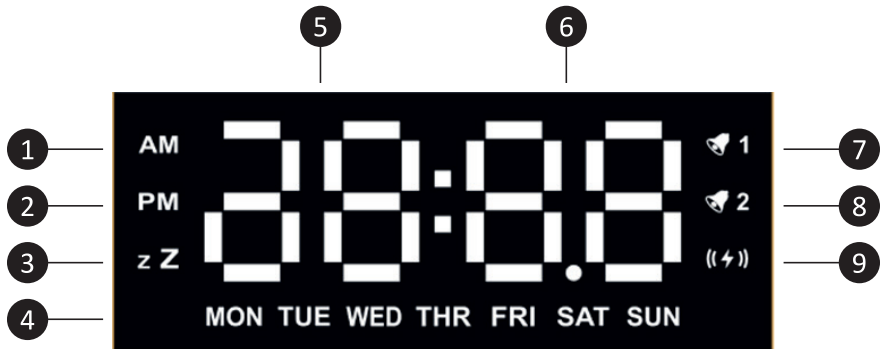

1	Morning (AM)
2	Afternoon (PM)
3	Snooze alarm
4	Days of the week (MON – Monday TUE – Tuesday WED – Wednesday THR – Thursday FRI – Friday SAT – Saturday SUN – Sunday)
5	Hours
6	Minutes
7	Alarm clock 1 (AL1)
8	Alarm clock 2 (AL2)
9	Wireless charging

PUTTING INTO OPERATION

Read the safety instructions in this manual before using and starting the wireless charging alarm clock for the first time.

Connect the AC/DC power adapter first to the alarm clock and then to the 100–240 V 50/60 Hz mains. The alarm switches to standby mode – the display lights up.

Please note: The alarm clock/power adapter may make beeping sounds depending on the load (phone charging, display lighting up, etc.).

BACKUP BATTERY

Insert 2 AAA 1.5 V batteries into the alarm clock on the bottom to back up the time. Observe the battery polarity and the displayed contact polarity as shown outside the battery compartment. Do not use rechargeable batteries. Check the batteries several times a year at your discretion. Replace the batteries if they show any damage to the pack or any sign of electrolyte leakage.

WIRELESS CHARGING

The alarm clock enables Qi charging function for mobile phones that support wireless charging. First, make sure your phone supports wireless charging and find out the exact location of the charging coil. Then place the phone in the charging coil location as close as possible to the wireless charging area on the alarm clock. The charging process will be indicated on the display in the bottom right corner by icon No. 9 in the “display description” picture. At the same time, the mobile phone should indicate the charging process. If the battery gets significantly hot during charging, the charging process will be terminated. Remove the phone from the charging area and return it to the charging area once it has cooled down to complete the charging process.

Wireless charging ICONS

- Not lit – no phone is put on / charging has been completed
- Lit – Charging process in progress
- Flashing – Unauthorised device is placed (phone does not support wireless charging)

Warning:

Do not have any device that could be magnetically affected, such as magnetic cards, watches, etc., around the induction coil. During wireless charging, both the phone and the alarm clock itself naturally heat up. Overheating your phone can significantly reduce the battery life of your phone. For some mobile devices, the indication may not correctly show the status of completed wireless charging.

USB – CHARGING PORT

On the back of the alarm clock there is a USB-A port which is used to power/charge various devices up to 5 V / 2 A. Connect the device to be charged or powered by the USB port.

Warning:

It is not recommended to keep your device permanently plugged into the port, always remove your device from the charging port when charging is finished.

DISPLAY INTENSITY SETTING

In the basic state, press the red button No.9 (device description) repeatedly to change the illumination intensity. The alarm clock offers 5 light intensity options and the option to turn off the display.

TIME/DATE SETTING

1. Press and hold the **TIME SET** button for about a second to open the clock setting mode.
2. Set the year by pressing the **UP (Up Arrow)** or **DOWN (Down Arrow)** button, and press the **TIME SET** button to confirm.
3. Set the month by pressing the **UP (Up Arrow)** or **DOWN (Down Arrow)** button, and press the **TIME SET** button to confirm.
4. Set the day by pressing the **UP (Up Arrow)** or **DOWN (Down Arrow)** button, and press the **TIME SET** button to confirm.
5. Select 24H or 12H by pressing the **UP (Up Arrow)** or **DOWN (Down Arrow)** button, and press the **TIME SET** button to confirm.
6. Set the number of hours by pressing the **UP (Up Arrow)** or **DOWN (Down Arrow)** button, and press the **TIME SET** button to confirm.
7. Set the number of minutes by pressing the **UP (Up Arrow)** or **DOWN (Down Arrow)** button, and press the **TIME SET** button to confirm.
8. Confirm termination by pressing the **TIME SET** button.

Remark:

After setting the time, the display will show the current time. Press the **TIME SET** button once to display the current date for 5 seconds.

SETTING THE ALARM

1. There are two alarm settings – AL1 and AL2.
2. Press and hold the **ALARM SET** button for approximately one second to start the alarm setting mode.
3. The AL1 icon starts flashing. Set the AL1 alarm clock by pressing the **UP (Up Arrow)** or **DOWN (Down Arrow)** button, and press the **ALARM SET** button to confirm.
4. Set the number of minutes of the AL1 alarm by pressing the **UP (Up Arrow)** or **DOWN (Down Arrow)** button, and press the **ALARM SET** button to confirm.
5. Alarm mode selection: Press the **UP (Up Arrow)** or **DOWN (Down Arrow)** button to select Once / Every Days / Weekdays / Weekends, and press the **ALARM SET** button to confirm.
6. Repeat steps 3~5 above to set the AL2 alarm.
7. After the setup is complete, both AL1 and AL2 alarms are activated. Both AL1 and AL2 will be lit.
8. Press the **ALARM SET** button repeatedly to select the desired alarm mode. When the alarm function is switched off, the AL1 or AL2 icon will go out.

SPECIFICATIONS

Wireless fast charger:	Qi 5W~10W
Power output of the wireless charger:	10W (max.)
Supported devices:	Qi compliant products.
Charging efficiency:	70%
Charging distance:	≤ 8mm
Frequency:	110–205 kHz
USB charger:	5 V/2 A (USB-A)
USB output power:	10W (max.)
Power adapter:	DC 9 V / 2 A (included)
Power consumption:	18W (max.)
Backup battery:	2× 1.5 V type AAA (batteries not included)
Package contents:	power adapter, digital alarm clock, user manual
Dimensions:	165 × 92 × 72 mm (W × H × D)
Weight:	355 g (without adapter)

CHARGING ADAPTER

Manufacturer's name or trademark, trade registration number and address:	Dongguan Jiayi Electric Co., Ltd., No. 356, Fuli West Road, Libeiling Village, Dalang Town, Dongguan, 523773, Guangdong, P.R. China
Identification mark of the model:	JY18-090-200
Input voltage:	AC100 – 240V
Input frequency:	50/60 Hz
Output voltage:	DC9.0V
Output current:	2.0A
Power output:	18.0W
Average efficiency in active mode:	85.16%
Efficiency at low load (10%):	80.09%
No-load power consumption:	≤0.08 W

INSTRUCTIONS AND INFORMATION ON THE DISPOSAL OF DISCARDED PACKAGING MATERIALS

Take the packaging material to a collection yard for disposal.

DISPOSAL OF DISCARDED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the product, accessory or packaging indicates that the product must not be treated as normal household waste. Please dispose of this product in a collection yard designated for the recycling of electrical and electronic equipment. In some EU countries or in some European countries, you can return your products to your local retailer when you buy an equivalent new product. Correct disposal of this product helps save valuable natural resources and prevents possible adverse impacts on the environment and human health that might be caused by improper waste disposal. Please contact your local authority or the nearest waste collection yard for further details. Improper disposal of this type of waste may be subject to a legal fine.

For companies in the European Union

If you need to dispose of electrical or electronic equipment, ask your dealer or supplier for the necessary information.

Disposal in countries outside the European Union

To dispose of this product, please ask your local authorities or dealer for the necessary information on correct disposal.



This product complies with EU requirements.

FAST ČR, a. s. hereby declares that the radio device type SDC 7600 Qi complies with Directive 2014/53/EU. For full version of the EU declaration of conformity, please refer to the website: www.sencor.cz

Changes in the text, design and technical specifications may be made without prior notice and we reserve the right to make such changes.

The original version is in Czech.

Manufacturer: FAST ČR, a.s., U Sanitasu 1621, Říčany 251 01, Czech Republic

Authorized service centers: Visit www.sencor.com for detailed information about authorized service centers.

SENCOR®

EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Authorized service centers

Visit www.sencor.eu for detailed information about authorized service centers.

