



**EN ■ User Manual**

**CZ ■ Uživatelská příručka**

**SK ■ Používateľská príručka**

**HU ■ Felhasználói kézikönyv**

**PL ■ Podręcznik użytkownika**

**Party Wireless Waterproof Speaker**

**Párty bezdrátový voděodolný reproduktor**

**Párty bezdrótový vodovzdorný reproduktor**

**Vezeték nélküli vízálló parti hangszóró**

**Bezprzewodowy głośnik wodoodporny**

# SAFETY INSTRUCTIONS

This product has been designed with the utmost safety in mind. However, incorrect use may lead to electric shock or fire. This is why users should observe the following instructions when using this device.

This device uses a semiconductor unit and contains no user serviceable parts. Do not disassemble this device, otherwise you are exposed to the risk of electric shock. If any damage to this product occurs, please have this product repaired by a qualified service technician.

## Power

Power supply of this unit must be match the serial plate data.

## Heat source

Keep this unit out of heat sources like stove or direct sunlight.

## Cleaning

Prior to cleaning, please disconnect power first. For cleaning, don't use liquid detergents or caustic liquids - just clean the unit with a soft cloth.

## Heavy objects

Do not place heavy objects on the unit, otherwise damage might occur.

## Connecting other devices

Before connecting other devices to this unit, please make sure to disconnect power. Otherwise damage to the unit or personal injury might occur.

## Faults to be repaired

If any of the following problems occurs, please disconnect power to the unit and contact a qualified service technician.

- A. Power cord or plug is damaged.
- B. Liquids or other foreign objects have penetrated inside the product.

- C. If the unit does not work even if it's being operated according to the instructions, don't press any buttons other than those described in these instructions. Otherwise, damage to this unit may occur along with a more demanding repair.
- D. This unit has fallen on the ground from a big height.
- E. Burns can be smelled from the product inside.

## **Maintenance**

If you don't have enough technical knowledge necessary to maintain this unit, don't attempt to repair it by yourself. By removing the cover, you are exposed to a risk of electric shock. If needed, please contact a qualified service technician.

## **Replacement of parts**

If you need to replace any part of this unit, ask your service technician to make a replacement for equal spare part models. If other spare part models are used for replacement, serious damage, electric shock or shortening the unit's lifetime may occur.

 
## **Safety check**

After completing maintenance, ask your service technician to perform an on-site safety check to ensure that the unit is operating safely.

### **Remark:**


Before using this product, read these instructions carefully and keep it well for future use.

## SUPPLY CONTENT



A	BT speaker
B	3.5mm audio jack
C	USB-C charging cable
D	User's manual

## BT SPEAKER DESCRIPTION

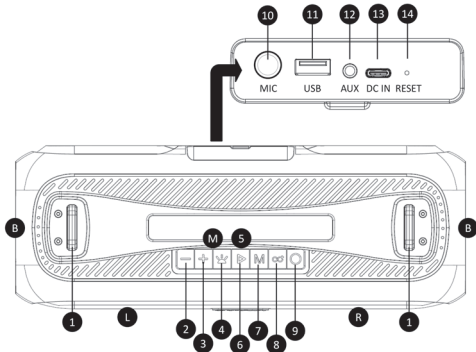

<b>SSS 3100 top side</b>	
1	Strap eyelet
2	Previous track, volume down, go to lower FM station button
3	Previous track, volume down, go to higher FM station button
4	Change a disable LED light effects button
5	Battery status LED
6	PLAY / PAUSE / FM station search button
7	"M" button - mode switching (BT, FM, AUX – IN, USB), enable/disable BT speaker messages, enable/disable voice notifications
8	TWS button
9	On/off button
<b>SSS 3100 back side</b>	
10	Microphone MIC-IN jack (6.3mm)
11	USB-A for playback from memory device
12	Socket for audio AUX IN mini jack (3.5mm)
13	Charging socket (USB-C)
14	RESET button

<b>Audio SSS 3100</b>	
L	Left audio channel
R	Right audio channel
B	Passive radiator
M	Integrated microphone

## PUTTING INTO OPERATION

Before first use, be sure to read the safety instructions contained in this user's manual carefully.

Before first use, please charge the BT speaker to a maximum level. Hold down the power on button to turn on the BT speaker. Turning on/off is indicated by a sound signal. To turn the BT speaker off, hold down the power on button. To switch the source of the music being played, press "Change Source" briefly in the on state.

**Attention:** After a longer period of inactivity, the appliance will turn itself off.

## CARRYING THE BT SPEAKER

To carry the BT speaker, use the handle located on top of the BT speaker.

**Caution:** always position the equipment so that it does not endanger the health of persons in the vicinity or cause damage to property.

## PAIRING DEVICES VIA BLUETOOTH

Turn on the BT speaker and search for its Bluetooth name "SSS 3100" in the device to be paired, then start the pairing process. If you are requested to enter a pairing code while your device and the BT speaker are pairing, use the code: "0000". To disconnect a paired device, end the pairing session on your mobile device or hold down the "TWS" button. Disconnection will be indicated by the "Disconnected" voice signal

**Remark:** To ensure a stable Bluetooth connection, make sure that the distance between the BT speaker and your connected device is kept within 10 meters.

## TWS FUNCTION

If you purchase another Bluetooth speaker (“SSS 3100”), you can pair them together for optimal stereo sound. First, make sure your device is not connected to any BT speaker. Switch on both BT speakers, hold down the TWS button (accompanied by the “True wireless mode” message) on one of the speakers and wait for the other speaker to connect. Connecting both BT speakers may take some time depending on searching for the slave BT speaker. After successful pairing, you will be informed by the “True wireless paired” voice signal. Then connect your mobile device to the BT speaker. Changing the volume level using the volume control buttons will take effect automatically on both paired BT speakers. To exit TWS mode, press the TWS button on one of the participating BT speakers until message “True wireless disconnected” sounds.

**Recommendation:** To ensure correct positioning of the BT speakers in the TWS mode, always make sure that left channel is on the left and right channel on the right side.

**Left channel** - master BT speaker selected by the TWS button

**Right channel** - slave BT speaker

**Warning:** The TWS function is only available in the Bluetooth mode. The connected microphone will transfer voice only into the BT speaker to which it's connected. It is not possible to pair the device with another type of BT speaker with TWS function, even within a re-edition of products with a different Bluetooth name.

## AUDIO AUX IN

The BT speaker is equipped with a 3.5mm jack. Your device can be connected to the BT speaker via the supplied audio cable. First connect the audio plug to your device and then to the BT speaker's jack.

**Please note:** before connecting your device and BT speaker, make sure that the output signal from your device is at the minimum level (minimum output volume). This

will prevent the BT speaker from damage. When the audio cable is connected, the BT speaker does not meet the water ingress protection class.

**Note:** In this mode, not all functions of the BT speaker are available. The Bluetooth function is not active if the audio jack is connected to the BT speaker.

## RESET BUTTON

To reset the BT speaker, insert a thin, flat non-metallic object carefully into the RESET socket on the back. Press lightly until the button click is heard. Then switch on the BT speaker using the power button.

**RECOMMENDATION:** If there is an unexpected problem with the BT speaker connection or function, reset the BT speaker.

## “M” BUTTON

**Switching playback sources:**

press briefly to change the playback source (BT, FM, AUX-IN, USB).

**To disable BT speaker notification and messages:**

Hold down the button to disable or enable notification and warning BT speaker messages. When turned off and on, the BT speaker will remember the last selected mode.

**Caution:** in the off state, no messages notifying about the BT speaker state will be shown. Charge the BT speaker as a preventive measure. Avoid using the sound at a maximum level.

## PLAY/PAUSE BUTTON

Press the Play/Pause button to start or pause music playback during Bluetooth connection or while a USB memory media is inserted. In FM mode, the button is used to scan and save found FM stations.



## VOLUME AND TRACK PLAYBACK CONTROL

To control the BT speaker's volume (+/- buttons), use the buttons on the BT speaker. During playback of songs from the storage media, you can skip to the next song by pressing and holding the "+" button. To select the previous track, press and hold the "-" button. In FM mode, long press the button to go to next "+" / previous "-" FM station.

## LIGHT EFFECTS

The BT speaker is equipped with light effects in the speaker area. To change the light effect, press the "light effects" button. There are 4 light effects preset. To disable the light effect, press "light effects" repeatedly until the LEDs go out.

**Warning:** In FM radio mode, the LED effects are unavailable because of possible interference.

## PLAYBACK FROM USB STORAGE MEDIA

### USB-A playback

Insert the USB storage disc with supported audio content in the USB slot. The USB source activates automatically and playback begins. Or, press "Mode switch" briefly to select "USB mode". The music playback from the connected storage will start automatically. Upload your music to the storage in the order in which it will be played by the BT speaker.

**Attention:** Due to a number of devices on the market, compatibility and playback support are not guaranteed for all media. The memory devices you want to connect should be tested in advance and/or formatted as FAT32 file format. The playback of protected media, files or content stored inside them may fail.

## FM RADIO

Press the “Mode switch” to switch the BT speaker to FM radio mode. Long press the „PLAY / PAUSE / FM station search” button to start the FM station scan.

Once the stations are found and stored into the BT speaker’s memory, you can switch between the stations found by holding down the “+” / “-” button (the next/previous stations in sequence).

**Remark:** For best reception, place the device in an open area where the FM band will not be inhibited.

## MICROPHONE INPUT

The BT speaker is equipped with one input for connecting one 6.3mm jack microphone on the back. When the microphone is connected, the input is active. The microphone mode volume level is factory preset and cannot be adjusted.

**Warning:** Avoid feedback by keeping the microphone far enough away from the SSS 3100 speakers. If you get too close, feedback will occur and may result in damage to the speakers or the hearing of a person near the system.

## CHARGING THE BT SPEAKER

A charged battery provides power for several hours of operation at normal volume levels. A high volume consumes more battery power; therefore, we recommend listening at normal volume levels. To charge the BT speaker, please connect the charging adapter to the mains and then to the BT speaker.

Use your own 5V, 2A charging adapter. The battery status indicator will indicate the charging progress. A low battery level will be indicated by an audible alert.

LED indicator	battery charge level
1	0%–25%
2	25%–50%
3	50%–75%
4	75%–100%

**Attention:** For charging, use only the original accessories supplied with the appliance. To achieve the maximum battery lifetime, it is best not to start charging until the low battery audible alert is output. Charge continuously until fully charged. When the battery operating time becomes very short, the battery lifetime has been used up; we recommend that you have the battery replaced at your authorized centre.

**Recommendation:** If the unit is not to be used for an extended period of time, we recommend to fully charge the battery once every two to three months. We recommend to store the unit with a the battery charged to prevent irreparable damage to the battery (loss of capacity).

## INGRESSION PROTECTION (IPX5)

The device is waterproof, allowing you to listen to music near water. IPX5 ingress protection - Water passing through a 6.3mm jet is aimed at all angles at a flow rate of 12.5 litres per minute, at a pressure of 30 kN/m<sup>2</sup> for 3 minutes and from a 3m distance.

**Warning:** Always remember to seal the BT speaker inputs (No. 10–14 in the picture “BT speaker description”) with the original gasket and make sure that the gasket is not damaged. Never charge the unit during possible contact with fluids. The unit is designed for contact with clean water only without any additives. Avoid exposing the unit to contaminated or industrially treated fluids (such as lemonade, sea/salt water, oils, etc.).

## TECHNICAL SPECIFICATIONS

### SSS 3100 KIDS

#### Wireless speaker

#### Features:

Water-resistant speaker with IPX5 ingress protection

Light effects with the option to switch off

TWS function (True Wireless Stereo)

#### Sound:

Maximum speaker output 60W

2 speakers + 2 passive radiators

Frequency response: 85Hz - 16kHz

Total harmonic distortion:  $\leq 1\%$

#### Inputs:

Bluetooth Audio 5.1

AUX audio input (3.5mm stereo connector)

Playback from USB (up to 32GB) MP3, FLAC

FM radio

6.3mm microphone input

#### Other:

Built-in rechargeable battery: 3,600mAh Li-Ion

Playback time of up to 7 hours (@ 50% volume)

USB-C power

Accessories: USB charging cable, 3.5mm external cable (AUX), user's manual

Dimensions: 360×135×184mm

Weight: 2,100 g

FM radio	Band range	87.5MHz - 108MHz
Bluetooth	Version	5.1
	Maximum Transmitter Power	100mW @ 2.4GHz - 2.4835GHz
	Codec	SBC
	Profiles	A2DP/AVRCP/HFP

## **INSTRUCTIONS AND INFORMATION ON THE DISPOSAL OF DISCARDED PACKAGING MATERIALS**

Take the packaging material to a collection yard for disposal.

## **DISPOSAL OF DISCARDED ELECTRICAL AND ELECTRONIC EQUIPMENT**



This symbol on the product, accessory or packaging indicates that the product must not be treated as normal household waste. Please dispose of this product in a collection yard designated for the recycling of electrical and electronic equipment. In some EU countries or in some European countries, you can return your products to your local retailer when you buy an equivalent new product. Correct disposal of this product helps save valuable natural resources and prevents possible adverse impacts on the environment and human health that might be caused by improper waste disposal. Please contact your local authority or the nearest waste collection yard for further details. Improper disposal of this type of waste may be subject to a legal fine.

### **For companies in the European Union**

If you need to dispose of electrical or electronic equipment, ask your dealer or supplier for the necessary information.

### **Disposal in countries outside the European Union**

To dispose of this product, please ask your local authorities or dealer for the necessary information on correct disposal.



This product complies with EU requirements.

FAST ČR, a.s. hereby declares that the radio device type SSS 3100 conforms to the 2014/53/EU directive. The full text of the EU Declaration of Conformity is available at: [www.sencor.eu](http://www.sencor.eu).

Changes in the text, design and technical specifications may be made without prior notice and we reserve the right to make such changes.

The original version is in Czech.

Manufacturer's address:

FAST ČR, a. s., U Sanitasu 1621, Říčany CZ-251 01

# SENCOR®

## EN Warranty conditions

### Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

### This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be identified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

### Authorized service centers

Visit [www.sencor.com](http://www.sencor.com) for detailed information about authorized service centers.



**FAST ČR, a.s.**, U Sanitasu 1621, Říčany CZ-251 01