

SENCOR®

SLE 65MUS700TCSB
SLE 55MUS700TCSB
SLE 43US700TCSB



EN ■ User Manual

CZ ■ Uživatelská příručka

SK ■ Používateľská príručka

HU ■ Felhasználói kézikönyv

PL ■ Podręcznik użytkownika

VIDAA SMART TV

VIDAA SMART TV

VIDAA SMART TV

VIDAA SMART TV

VIDAA SMART TV

Tip: Operating your TV is facilitated by the context help in the menu. The user's manual can be found under **Settings/Support** (this may not be available for all menu languages).

Disclaimer:

Images throughout this document are for illustrative purposes only and may differ from the actual product. Parts of the software function change with the system upgrade.

Contents

Safety instructions	4
Assembling the stand and connection	4
Insert batteries	4
Remote Key Function	5
Live TV	6
Channel Scan	6
Channel List	7
Channel Edit	7
Favourite	8
Guide (EPG)	8
Multi-screen	9
Screen Sharing	9
Content Sharing	9
Smart Functions	10
Getting Familiar with the Home Screen	10
Using a VIDAA Account	11
Media	11
App	12
Installing Mobile App to Control your TV	12
Picture and Sound	13
Adjusting the Picture Quality	13
Game Mode Settings	14
Adjusting the Sound Quality	14
Speakers Settings	15
Using Headphones	15
Accessibility and System	16
Accessibility	16
Setting Time	16
Using Timer	16
Using Parental Controls	16
Setting Language and Location	17
Setting Usage Mode	17
Checking the Software Version	17
Software Upgrade	17
HbbTV	18
Setting the TV Name	18
Reset to Factory Default	18
Technical Specifications	19

Safety instructions

To be able to use this product properly, read this user's manual carefully and keep it for future reference. If you plan to give (sell) this device to a third person, include all documentation, including this manual, with the transaction.



The lightning symbol inside a triangle indicates the device has dangerous voltage that may cause electric shock.



The exclamation point symbol inside an isosceles triangle indicates important operation and repair instructions in the included device documentation.

ATTENTION

RISK OF ELECTRIC SHOCK – DO NOT OPEN!

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK SIDE). THERE ARE NO PARTS INSIDE WHICH COULD BE REPAIRED BY THE USER. FOR REPAIRS AND SERVICE, CONTACT AN AUTHORIZED SERVICE CENTRE.

WARNING:

To prevent risk of fire or electric shock, do not expose the device to rain or moisture. The batteries must not be exposed to excessive heat, for example sunlight, fire, etc.




This symbol indicates the device has double insulation between dangerous voltage from the network and user accessible parts. Replace parts with identical spare parts only

- Do not leave a static image on the LCD panel for more than 2 hours. This may result in a damaged panel.
- LCD screens are made using precision technology to provide even the finest image details. Several defective pixels can appear on the screen from time to time, indicated as red, blue, green or black dots (up to 0.001% of the total pixel count of the screen). This does not affect the characteristics and the effectiveness of your TV set.

Before using, read the detailed safety information in full user manual available at websites www.sencor.com

Assembling the stand and connection

For stand attach use the supplied or recommended screws. Make sure that the supports are connected correctly so that the TV is stable. You can then connect the TV to the power supply.

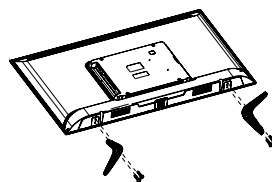


Insert batteries

To open the battery compartment, remove the back cover. Insert two batteries size AAA. Replace the cover.

The incorrect use of batteries can result in leaks or bursting. Be sure to follow these instructions:

- Place "AAA" batteries matching the (+) and (-) signs on each battery to the (+) and (-) signs of the battery compartment.
- Do not mix battery types.
- Do not combine new batteries with used ones. It causes shorter life or leakage of batteries. • Remove the dead batteries immediately to prevent them from liquid leaking in the battery compartment. Don't touch exposed battery acid, as it can damage your skin.
- If you do not intend to use the remote control for a long period, remove the batteries.

Functions of the remote control

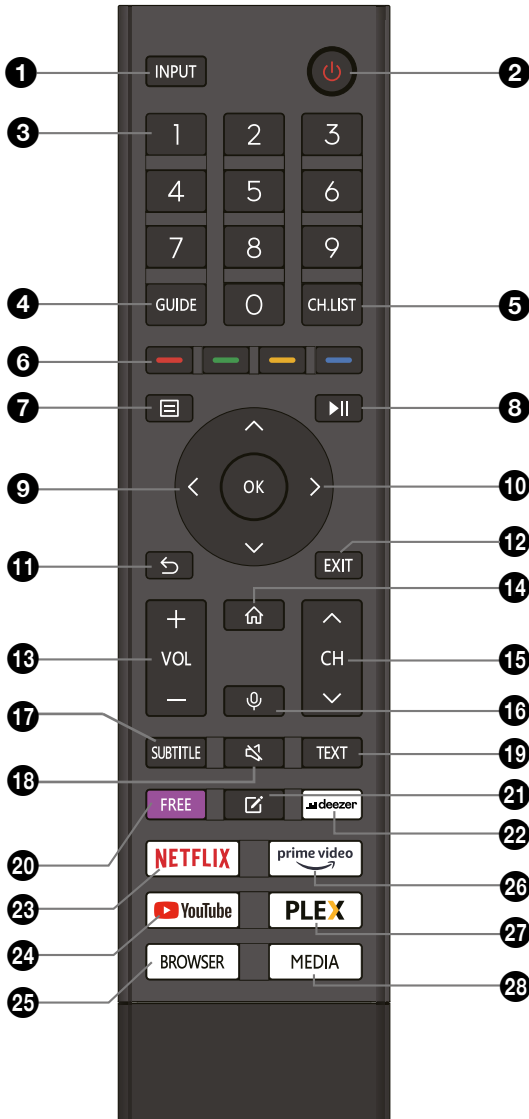

1. **INPUT:** Select input source
2. **POWER:** Switch stand-by on/off
3. **NUMBER KEYS:** Direct station selection
4. **GUIDE:** Display programme information of the current programme and subsequent programmes
5. **CH.LIST:** In TV mode: Open channel list
6. **COLOUR BUTTONS:**
In the menu: Menu functions as shown.
In TV Teletext mode: Teletext functions as displayed.
7. **MENU:** Open on-screen menu
8. **▶||:** Playback control during media playback (without function in TV mode)
9. **ARROW KEYS:** Move in the menus
10. **OK:** Confirm selection
11. **BACK:** Back to the previous menu.
12. **EXIT:** To exit the menu or a SMART function Exit.
13. **VOL+/-:** To adjust the volume
14. **HOME:** Open Internet functions
15. **CH ▲/▼:** To change the programmes
16. **VOICE:** Holding down the Voice button activates the VIDAA-enabled microphone on the remote, and initiates voice input. Releasing the Voice button ends voice input. With VIDAA, you can use your voice to search for content, control playback, and more. (VIDAA Voice Service requires Internet connection)
17. **SUBTITLE:** To switch between different subtitles
18. **MUTE:** Mute Sound
19. **TEXT:** In TV mode: Open Teletext
20. **FREE:** Open VIDAA Free Portal
21. **EDIT:** Open editing menu
22. **DEEZER:** Open Deezer
23. **NETFLIX:** Open Netflix
24. **YouTube:** Open YouTube
25. **BROWSER:** Open Internet Browser
26. **Prime Video:** Open Prime Video
27. **PLEX:** Open Plex
28. **MEDIA:** Open all units

Live TV

Channel Scan

You can scan for channels automatically or manually.

NOTE

- Satellite/antenna/cable function may not be applicable in some models/countries/regions.

Auto Scan

Automatic channel scan.

INPUT > TV

Alternatively, in Live TV,  /  > **Settings** > **Channel** > **Auto Scan**.

If no TV channels were saved before, you will be prompted to do a channel search.

● Satellite

- **Single satellite:** You can use single satellite if you only have one satellite equipped.
- **DiSEqC:** You can choose DiSEqC if you have DiSEqC equipment.

Up to four satellites in DiSEqC 1.0 mode can be installed.

If you are using a motorised antenna, you can use DiSEqC 1.2 mode.

- **Unicable:** If your home is equipped with Unicable satellite distribution, you should use this option.

Please make sure that you know the Unicable band and frequency to be used. The information should be available on the equipment or the landlord can provide it.

● Antenna

- **Channel:** Select from **All Channels** or **Free Channels**. This option may not be available depending on countries/regions/operators.
- **Scan Mode:** Select from digital channels only (DTV), digital and analogue channels (DTV+ATV) or analogue channels only (ATV).

If you receive DVB-T or DVB-T2 signal, you can use DTV.

- **LCN:** Switch on/off LCN (Logical Channel Number).

Please note that some operators are restricted to manually change the channel order. If you switch off LCN, then the channel list can be edited after channel scan.

This function may not be applicable in some models/countries/regions.

● Cable

- **Channel:** Select from **All Channels** or **Free Channels**. This option may not be available depending on countries/regions/operators.
- **Scan Mode:** Select from digital channels only (DTV), digital and analogue channels (DTV+ATV) or analogue channels only (ATV).
- **LCN:** Switch on/off LCN (Logical Channel Number).

Please note that some operators are restricted to manually change the channel order. If you switch off LCN, then the channel list can be edited after channel scan.

This function may not be applicable in some models/countries/regions.

Manual Scan



Manually scan for channels for DTV or ATV.

In Live TV,  /  > **Settings** > **Channel** > **Advanced Settings** > **Manual**

Scan

● DTV Manual Scan

Manually scan for DTV services.

When the DTV Manual Scan screen appears, press  /  button to select **Antenna**, **Cable** or **Satellite**, and select **Start** to commence the search of that channel. When the signal has been tuned, signal strength will be displayed on the screen.

● ATV Manual Scan



Manually scan for ATV services.



- **Frequency:** Input the channel frequency you want.
- **Picture System:** Select the Colour System.
- **Sound System:** Select the Sound System.



Live TV tutorial


After channel scanning has completed for the first time, the Live TV operating tutorial will be displayed, this will include:

 /  : Load the info bar

 /  : Load the channel list

 /  : Open the electronic programme guide (only available in some models/countries/regions)

 /  : Load on-screen menu

 : Jump to the previous channel

NOTE

- The remote control buttons may vary depending on models/countries/regions.

Live TV

Channel List

Displaying the channel list

In Live TV, press the **OK** / **CH.Lst** button to display the Channel List menu.


Alternatively, in Live TV, **☰** / **☰** > **Channel List**.

Entering the sub-menu of channel list

In Live TV, **OK** / **CH.Lst** > **➤**

Introducing the sub-menu

In Live TV, **OK** / **CH.Lst** > **➤**

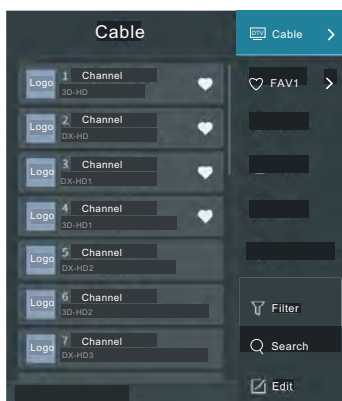

● TV List

Display Live TV channel categories, such as **Cable** and **Antenna**.

● Fav

Display favourite lists 1 to 4.

● Filter

Select channels by **Content**, **HD**, **Child Lock**, **Scrambled** and **Sort**.

Some options in **Filter** may not be available in some models/ countries/regions.

● Search

Call up search function.

● Edit

Edit the channel list.

📌 NOTE

- The sub-menu options may vary depending on models/ countries/regions.


Channel Edit

Manually edit the channel list to your preference.

Editing Live TV channels

In Live TV, press **OK** / **CH.Lst** > **➤** to select a Live TV channel category such as **Antenna** or **Cable**, then use D-pad to select **Edit**.

Alternatively, in Live TV, press **☰** / **☰** button, select **Settings** > **Channel** > **Channel Edit**, and select a Live TV channel category such as **Antenna** or **Cable**.

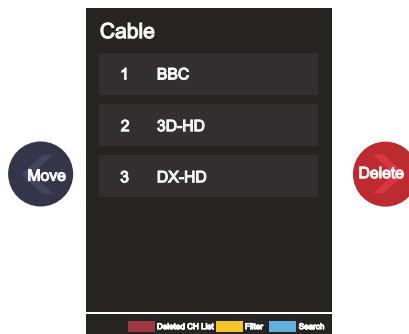

- Press **OK** button on the selected channel, then a checkbox will appear.
You can select multiple channels at the same time to move or delete.
- Move: Press **◀** button to move the selected channel.
Moving the channels could be restricted by the operator. If you want to be able to move channels, it is not recommended to choose an operator during channel scan, and LCN should be set to Off.
- Delete: Press **➤** button to delete the selected channel.
- Restore: Press **[RED]** button, or press **🌈** / **123** button to display the colour menu and select RED to enter the list of deleted channels. Press **◀** button to restore the deleted channel.
- Filter: Press **[YELLOW]** button or press **🌈** / **123** button to display the colour menu and select YELLOW, the filter screen will pop up. Press **OK** button to select options, the channel list can then be updated.
- Search: Press **[BLUE]** button or press **🌈** / **123** button to display the colour menu and select BLUE to search for a channel.

Exporting to USB

The current channel list can be exported to a USB storage device.

In Live TV, **☰** / **☰** > **Settings** > **Channel** > **Channel Edit** > **Export to USB**

Live TV

Importing from USB

Previously exported channel lists can be imported via a USB storage device.

In Live TV, press / > **Settings** > **Channel** > **Channel Edit** > **Import from USB**

Favourite

Adding a channel to a favourite list

- 1 In Live TV, press / button to display the channel list.
- 2 Press / button and select the channel(s) you want to add to the favourite list.
- 3 Select **Add to Favourite**, and choose from **FAV1-FAV4**.
- 4 Then, a heart-shape icon will appear next to the added channel.

Viewing your favourite list


In Live TV, press / > > **Fav** to display the favourite list.

Editing the favourite list

In Live TV, press / > > **Fav** > to select **FAV1-FAV4**, then use D-pad to select **Edit**.

Alternatively, go to / > **Settings** > **Channel** > **Channel Edit**, and select **FAV1 - FAV4**.

You can add, move, or remove favourite channels.

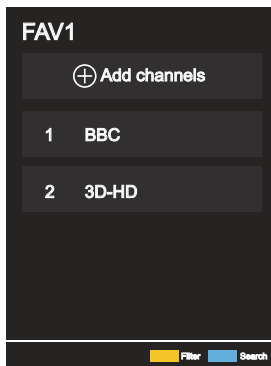

- Select **Add channels** to add the selected channel to the favourite list.
- Select a channel in a favourite list, and press button to move it.
- Select a channel in a favourite list, and press button to remove it.

NOTE

- These steps should be operated under the TV input.
- Before you edit the favourite lists, Channel Scan must be completed first.
- You can add channels from various reception types to the favourite list.

Guide (EPG)

The Guide (EPG) provides a convenient way to check TV programmes for the upcoming 7 days. The information displayed by the Guide (EPG) is made available by the commercial television networks for digital channels only. The Guide (EPG) also provides a simple way to record your favourite programmes and a reminder function, which can switch channels automatically at a scheduled time, so that you will not miss programmes of interest. The availability and amount of programme information will vary depending on the broadcaster.

NOTE

- The Guide (EPG) function is only available for digital channels. Analogue channels are not supported.

In Live TV, press / button, or press / > **Guide (EPG)** to display channel information Guide.

• **Watch**

In Guide (EPG), when a current programme is selected, press > **Watch** to switch to the channel you want to see.

• **Reminder**

In Guide (EPG), press / button to select the channels. Press / button to select programme based on the time schedule.

Press button to select **Reminder**.

NOTE

- Reminder in the Guide (EPG) is only available for programmes that have not been aired yet.
- **Schedule**
In Guide (EPG), press [RED] button or press / button to display the colour menu and select RED, to view a list of scheduled reminders.

• **Programme Colour**

In Guide (EPG), press [GREEN] button or press / button to display the colour menu and select GREEN, to choose colours to indicate different genres in the Guide (EPG) for quick and easy viewing.

(This function may not be applicable in certain countries/regions.)

• **24h-**

In Guide (EPG), press [YELLOW] button or press / button to display the colour menu and select YELLOW to select programmes of the previous day.

• **24h+**

In Guide (EPG), press [BLUE] button or press / button to display the colour menu and select BLUE to select programmes of the next day.

Multi-screen

Screen Sharing

Mirror your mobile device screen to the TV.


Before using Screen Sharing, please set your TV to the wireless network connection.

INPUT > Screen Share

- 1 Turn on the casting function of your Android/Windows10 device.
The setting icon may vary depending on the device. The feature may be called "Wireless display", "Smartview", "Wireless projection", etc.
- 2 Find the TV name in the searching list of your device and select it. Wait for the connection progress to complete and the content on your device will be displayed on the TV.

NOTE

Some mobile devices may not support casting.

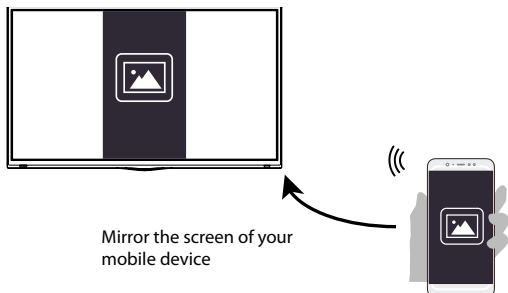

Content Sharing

Content Sharing allows you to view media content, like videos, music or photos saved in your Android/iOS/PC device on your TV screen.

Sharing media content from your Android/iOS/PC device

- 1 Connect your TV and Android/iOS/PC device to the same network.
- 2 Turn on Content Sharing at **Settings > System > Application Settings > Content Sharing**.
- 3 Turn on the content sharing function in your Android/iOS/PC device.
- 4 Find the TV name in the searching list of your device and select it.
Wait for the connection progress to complete.
- 5 On your Android/iOS/PC device, choose the media content you want to share on your TV.



Playing media content from your Android/iOS/PC device on the TV

You can connect media content saved in your Android/iOS/PC device to your local network and play the content on your TV.



- 1 Connect your TV and Android/iOS/PC device to the same network.
- 2 Turn on Content Sharing at **Settings > System > Application Settings > Content Sharing**.
- 3 Make sure your media content in your Android/iOS/PC device are visible through local network.
- 4 On your TV, select a device with media content at **Input**, or **My Apps > Media**.
The media content list in your Android/iOS/PC device appears.
- 5 Select a media content item from the list to play.

NOTE


- Some Android/iOS/PC devices may not support content sharing function. If your device does not support content sharing, you can download an app that supports the function to connect to your TV.
- Content may not be played depending on the file format.
- Content may not be played smoothly or the function may not work properly due to the network condition.

Smart Functions

Getting Familiar with the Home Screen

Press  /  button on your remote control to enter the Home screen.

All TV functions can be accessed from the Home screen.

To exit the Home screen, press **INPUT** button on your remote or use the navigation buttons to move the cursor to the  **Input** icon on the top of the screen, press **OK** button to enter, and select your desired input source.

Using the navigation bar

The navigation bar refers to indicators and icons on the top of the Home screen.

NOTE

- Indicators or icons may vary depending on models/countries/regions.

Search

Search the content you want.

Input

Select the Input source depending on the device you have connected to your TV.

Settings

Manage TV configuration.

Notifications

Allow pop-up notifications to appear for useful information and events that occur with your TV, including: **Advertising, New Arrivals, Warnings and Legal Statements, System Messages and Alexa Notification**. You can enable/disable each of these notifications at Settings in the notification centre.

You can view the list of event messages generated by the TV.

To delete all notifications, select **Clear All**.

NOTE

- The Alexa Notification may not be applicable in some models/countries/regions.

VIDAA Account



Sign in to your VIDAA account.

A VIDAA account provides all the best features of your smart TV and ensures that all services are kept to date.

Time

You can always view the current time at the top of the Home screen.



Network

Connect your TV to the Internet through a wireless connection  or an Ethernet cable , and the corresponding icon will appear.



Using the Shortcuts

You can add inputs, channels and websites to the Home screen to have quick access to them for your convenience.




Add inputs to the home screen

- Press **INPUT** button.
- Move the focus to an input you want to add to the Home screen, and press  /  > **Add to home** > **OK**. The input icon will appear in Shortcuts on the Home screen.



NOTE

- Some options in inputs source page cannot be added to the Home screen.
- To remove inputs from Shortcuts, just move the focus to a shortcut and press  /  button on your remote control.


Add channels to the home screen

- In Live TV, press **OK** /  button to access the channel list.
- Press  /  button and press **OK** button to tick channel(s) that you would like to add on the Home screen.
- Select **Add to home**. The channel icon will appear in Shortcuts on the Home screen.



NOTE

- To remove the channel from Shortcuts, just move the focus to the shortcut and press  /  button on your remote control.

Add webpages to the home screen



- In Browser, visit a website you would like to add on the Home screen.
- Use the D-pad to move the focus to  **Add to home** icon in the top Browser navigation bar and select it.
- Select **Add**, and this webpage will appear in Shortcuts on the Home screen.

NOTE

- To remove webpages from Shortcuts, just move the focus on a shortcut page and press  /  button on your remote control.

Managing apps

/ > **My Apps**

Select the item you want to move, press  /  button to manage, then use the D-pad to select the desired position and press **OK** button to store the new position.

NOTE




- Some Apps may not be moved.

Smart Functions

Using a VIDAA Account

Signing into an account




Before signing into your VIDAA account, make sure your TV is connected to the network.

- 1 After the network is connected, press  /  button on your remote and select  **VIDAA Account** icon in the top navigation bar on the Home screen.
- 2 Register your device to your VIDAA Account. After entering your E-mail and password, select **Sign In**.

Creating a new account

If you do not have a VIDAA account, create a new one to enjoy the best features of your Smart TV.

Before creating a new account, make sure your TV is connected to the network.

- 1 After the network is connected, press  /  button on your remote and select  VIDAA Account icon in the top navigation bar on the Home screen.
- 2 Select Create an Account on screen.
- 3 Enter your first name, last name, E-mail address and password. First Name and Last Name are optional.
- 4 Select Create an Account.

Media

 /  > **My Apps > Media**

Media is a central location for you to view or listen to different types of content, such as photos, music and movies. You can view media content through the following methods:


- A USB thumb drive or hard drive.
- Compatible mobile phone, tablet or other personal devices: you can stream movies, music and photos that are stored on compatible personal device and play or view the content on your TV.

By default, there is **Content Sharing** displayed on the Media screen. If your mobile device is connected to the TV, its name also appears on the Media screen.

Playing media contents

 /  > **My Apps > Media > connected devices**

Select the content you want to play on the screen, like pictures, videos and music.

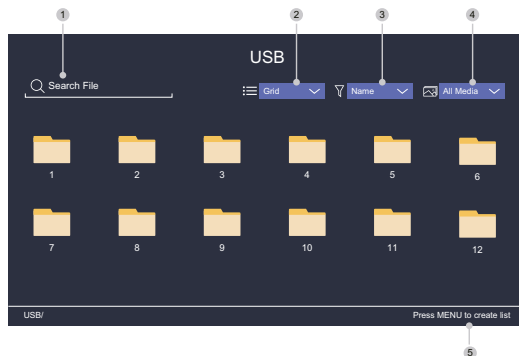



- 1 Search the content you want to play.
- 2 Arrange the content list by **Grid, List**.
- 3 Sort the content list by **Name, Date modified, Size**.
- 4 Filter the content list by **All Media, Photo, Video, Music, Recorded**.
- 5 Create a photo, music, or video playlist.

NOTE

- Some options in the above table may not be available in some models/countries/regions.

Playing background music during viewing pictures

- 1 Choose a picture to display.
- 2 Press  /  button to call out playbar.
- 3 Select Background Music and choose your music to create a Music Playlist.

Now you can play the background music during viewing pictures.

Media format list

Due to differences in programming tools and other factors, some of the file formats that are listed may not be supported.

Video Format

Container	Video Codec	File Extension Name	Resolution and Frame Rate
MPEG	Mpeg1/2	.mpg .mpeg .vob	1920 × 1080p @ 120fps
	Mpeg4		
MP4	Mpeg4	.mp4 .mov	1920 × 1080p @ 120fps
	H.264 (AVC)		1920 × 1080p @ 60fps
	H.265 (HEVC)		
MKV	Mpeg1/2	.mkv	1920 × 1080p @ 120fps
	Mpeg4		
	H.264 (AVC)		1920 × 1080p @ 60fps
	H.265 (HEVC)		
AVI	Mpeg1/2	.avi	1920 × 1080p @ 120fps
	Mpeg4		
	H.264 (AVC)		1920 × 1080p @ 60fps
WMV	WMV3	.asf .wmv	1920 × 1080p @ 60fps
	H.264 (AVC)		
FLV	H.264 (AVC)	.flv	1920 × 1080p @ 60fps
TS	H.265 (HEVC)	.ts	1920 × 1080p @ 60fps

Smart Functions

Audio Format

Container	Audio Codec	File Extension Name
WAV	Mpeg1/2 Layer 1	.wav
MP3	Mpeg1/2 Layer 2	.mp3
	Mpeg1/2 Layer 3	
AAC	AAC, HEAAC	.m4a .aac
WMA	WMA	.wma
	WMA Pro	
PCM	LPCM	N/A
	ADPCM	
AC-3	AC-3	.ac3 .m4a
FLAC	FLAC	.flac
OPUS	OPUS	.opus

Photo Format

Container	File Extension Name	Mode of Operation	Resolution
JPEG	.jpg .jpeg	base-line	15360 × 8640
		progressive	1024 × 768
PNG	.png	no-interlace	3840 × 2160
		interlace	1200 × 800
BMP	.bmp	-	3840 × 2160
GIF	.gif	-	6400 × 4800

App



/ > My Apps

Numerous factory-installed apps are available for you to choose for your entertainment preferences.

Installing an app

Even though your TV has numerous factory-installed apps, there may be others that you would like to download.








To install an app:

- 1  /  > **My Apps > APP STORE.**
- 2 Use the navigation buttons on your remote to select the app that you want to install.
- 3 Select Install. The selected app is installed on the TV.

NOTE

- To use this function, your TV must be connected to the Internet.
- Adding apps is free, but it might cost you money when using some apps.

Sorting apps in My Apps




- 1 In **My Apps** select the app you want to sort, and then press  /  button to select **Sort**.
- 2 Press  /  /  /  button to move it.
- 3 Press  button to store the new position.

NOTE

- Some Apps may not be moved.

Removing an app in My Apps

You can only delete apps that you have installed to the TV. Factory-installed apps cannot be deleted.







- 1 In **My Apps** select the app you want to remove, and then press  /  button to select **Remove**.
- 2 Select . The selected app is deleted.

Installing Mobile App to Control your TV

Press  /  button to select  **Settings** icon, and select **Support > Mobile App Download**.

Scan the Mobile App download QR code on screen to install the app on your mobile device. It is possible to control your TV, such as turning the TV on or off, inputting characters with your mobile's keyboard and sharing pictures or videos from your mobile device to the TV. This app is available on both Android and iOS.

To connect your TV after installing the mobile app:

- 1 Agree with end user license, and disclaimer and privacy policies on TV. If you are not sure whether you have agreed, check at  /  >  **Settings > Support > Disclaimer and Privacy**.
- 2 Make sure your mobile phone and TV are connected to the same network environment.
- 3 To use this function, switch on **Content Sharing** at  /  >  **Settings > System > Application Settings > Content Sharing**.
- 4 Open the mobile app and select the TV device you want to connect.

Picture and Sound

Adjusting the Picture Quality

Adjust picture mode, picture size and other advanced picture settings.

Choosing a picture mode

 /  >  **Settings > Picture > Picture Mode**

Select a pre-set picture mode to best suit the content you are viewing.

Options may differ depending on your model/country/region and the content you are watching. Please refer to the specific product.

- **Standard**
Use Standard mode for watching normal content, such as News, Drama or Documentaries.
- **Cinema Day**
Use Cinema Day for watching movies in a bright environment.
- **Cinema Night**
Use Cinema Night for watching movies in a dark environment.
- **Dynamic**
Use Dynamic mode for content that requires vivid picture quality.
- **Sports**
Optimised picture for watching sports.

Changing the aspect ratio

 /  >  **Settings > Picture > Aspect Ratio**


Adjust the Aspect Ratio to stretch or zoom the picture.

- **Automatic**
Automatically switch Aspect Ratio between 16:9 and 4:3 based on the signal information.
- **16:9**
Best suited for 16:9 Widescreen content. This will also stretch 4:3 content to Widescreen.
- **4:3**
Best suited for 4:3 content.
- **Panoramic**
Provides a full-screen image by stretching the edges of the picture, the middle section of the picture will not be stretched.
- **Movie Zoom**
Fill the entire screen by zooming in to remove horizontal black bars from the top and bottom of the picture.
- **Direct**
Point to point display also known as 1:1 Pixel Mapping.

Configuring advanced picture settings

 /  >  **Settings > Picture > Picture Mode Settings**

Adjust display settings for each Picture Mode. You can personalise the picture quality by adjusting the following settings.

- **Apply Picture Settings**
Adjust current picture mode to apply to all sources or just current source.
- **Backlight**
Set the overall brightness of the screen.
 **NOTE**
 - The function name may vary depending on models.
The following option may differ depending on models. Please refer to the actual product.
- **Dynamic Backlight Control**
Enhance the contrast ratio between light and dark areas of the picture.
This function may not be applicable in some models/countries/regions.
- **Backlight**
Adjust how bright you want images to appear, lower settings create darker images (only when **Dynamic Backlight Control** is off).
This function may not be applicable in some models/countries/regions.
- **Brightness**
Adjust the Brightness level to generate lighter or darker images.
- **Contrast**
Adjust the Contrast level to increase or decrease how bright images appear.
- **Colour Saturation**
Adjust the colour intensity of the picture for a more vibrant image.
- **Sharpness**
Adjust how sharp or soft edges of images appear.
- **Adaptive Contrast**
Automatically adjust dark areas and light areas of the image to see more detail.

Picture and Sound

● Noise Reduction

Improve the picture quality by reducing noise.

● MPEG Noise Reduction

Reduce MPEG block noise to provide clearer edge transitions.

● Colour Temperature

Adjust how warm (red) or cool (blue) the white areas of an image appears.

● Expert Settings

Adjust advanced picture settings based on your viewing preference.

● Overscan

Change the video size setting to crop the edges of the displayed image.

This function may not be applicable in some models/countries/regions.

● Reset Current Mode

Restore all the picture settings in the current picture mode to the factory default values.

Configuring expert settings

 /  >  **Settings > Picture > Picture Mode Settings > Expert Settings**

Advanced picture settings.

● Colour Tuner

Adjust the Hue, Saturation and Brightness of colour settings.

● White Balance

Adjust the intensity of red, green and blue lights to view the true colours of all images in the picture.

● Black Level

Adjust the HDMI Black Level to enhance current content.

● Gamma Adjustment

Adjust the Gamma to alter how the TV will respond to grayscale content. In low ambient light choose a higher number, in brighter ambient light select a lower number. The default setting of 2.2 is recommended for most ambient light conditions.

This function may not be applicable in some models/countries/regions.

● Gamma Calibration

Adjust selected Gamma curve.




This function may not be applicable in some models/countries/regions.

● RGB Only Mode

RGB filter for adjustment and control of colour space and colour saturation.

Game Mode Settings

Enabling game mode

 /  >  **Settings > Picture > Game Mode**

Enable **Game Mode** to optimise the TV's settings to enjoy a better gaming experience with a PC or a game console connected to the TV.

Game Mode will allow:

- Reducing input lag to make sure every press or click matches what is happening on the screen;
- Improving responsiveness to produce very little motion blur;
- Processing YUV 4:4:4 format signals precisely to present accurate image colours.




NOTE

- This function may not be applicable in some input sources or applications.

Adjusting the Sound Quality

Adjust sound mode and other advanced sound settings.

Choosing a sound mode

 /  >  **Settings > Sound > Sound Mode**

Select a pre-set sound mode to suit the type of content you are listening to.

● Standard

In Standard mode, the TV delivers a flat frequency response, which preserves the natural characteristics of the original sound.

● Theatre

Theatre mode increases the surround sound effect and provides a more prominent bass response.

● Music

In Music mode, low and high frequencies are emphasised to enhance musical instrument reproduction.

● Speech

In Speech mode, low and high frequencies are attenuated to improve the reproduction and clarity of the human voice.

● Late Night

In Late Night mode, the TV will improve the reproduction and clarity of the human voice with a low volume level.

● Sports

Optimised sound for watching Sports events.

Picture and Sound

Configuring advanced sound settings

/ > **Settings > Sound > Sound Mode Settings**

Adjust the audio settings of the TV. You can personalise the sound quality by adjusting the following settings.

● **Apply Audio Settings**

Adjust current sound mode to apply to all sources or just the current source.

● **Equalizer**

Boost the volume at different frequencies.

This function is only applicable when **TV Speakers** is selected at

 /  >  **Settings > Sound > Speakers > Audio Output.**

● **Wall Mount Setup**

Automatically optimise the sound based on the position of the TV.

This function may not be applicable in certain models/countries/regions.

● **Auto Volume Control**

Activate to prevent the volume from changing when switching TV channels.

This function may not be applicable in certain models/countries/regions.

● **Reset Current Mode**

Restore all of the audio settings in the current audio mode to the factory default values.

NOTE

- Some models may not support decoding of DTS CD bitstreams. Playback of this format may produce undesirable noise.

Speakers Settings

/ > **Settings > Sound > Speakers**

Adjust the settings of speakers.

Audio Output




Select the speakers which you want to use.

Digital Audio Output

Select the digital audio output format that best suits the audio device type.

- **Auto:** the audio device automatically outputs in a supported format.
- **Pass Through:** the audio device outputs without any processing.
- **PCM:** the audio device outputs PCM (pulse code modulation) format.
- **Dolby Digital:** the audio device outputs Dolby Digital audio when connected to the TV via optical port.
- **Dolby Digital Plus:** the audio device outputs Dolby Digital Plus audio when connected to the TV via HDMI (ARC/eARC) port.




NOTE

- This function is only applicable when  /  >  **Settings > Sound > Speakers > Audio Output** is set to **ARC** or **SPDIF Only**.

- When external audio devices are connected to the TV via optical, **PCM** and **Dolby Digital** are suggested.

Digital Audio Delay

Adjust the digital audio output delay time to sync audio from an external speaker with the images on the TV.

This function is only applicable when  /  >  **Settings > Sound > Speakers > Audio Output** is set to **ARC** or **SPDIF Only**.

Lip Sync

Synchronise the video and audio.

This function may not be applicable in some Audio Output modes.

Balance

Adjust the left and right speaker level to optimise audio for a specific location.

This function may not be applicable in some Audio Output modes.

Using Headphones

/ > **Settings > Sound > Headphone**

Set the sound output mode through headphones.

After connecting your headphone, or other external audio amplifiers, you can set up your TV to your preference.

This function may not be applicable in some models/countries/regions.

Headphone Mode

Change Headphone audio settings.

Headphone Only, the TV speakers will be muted when the headphones are being used. Any other connected audio devices will also be muted when headphones are in use.

Headphone with Speakers, the TV speakers, headphones and other connected audio devices will have audio output.

Headphone Volume

Independently adjust the volume of the Headphones.

In **Headphone Only** mode, you can adjust the volume by the remote or in Headphone Volume menu on screen.

In **Headphone with Speakers** mode, the TV speaker volume can be adjusted by the remote. The volume of headphone can be adjusted in Headphone Volume menu on screen.

Accessibility and System

Accessibility

/ > Settings > Accessibility

Accessibility function provides menu options and audio description to aid the visually or hearing impaired.

- **Menu Scheme**
Select menu scheme style from **Dark, Light**.
- **High Contrast Menu**
Improve contrast for visually impaired.
- **Menu Transparency**
Select menu transparency from **Off, Medium, High**.
- **Closed captions**
Specialised captions can be switched on or off if broadcast along with your program.
- **Audio Type**
Audio Type
Accessibility audio settings.
Voiceover Volume
Independently adjust voiceover level.

NOTE

- The above functions may not be applicable in some models/countries/regions.

Setting Time

/ > System > Time

Set the current time based on your location.

- **Time Format**
Set the time display to be 12 or 24-hour format.
- **Date/Time**
Set the Date and Time. You can set the date and time to automatically sync with Internet/broadcast or manually setup by yourself.
This function may not be applicable in some models/countries/regions.
- **Time Zone**
Select your time zone.
This function may not be applicable in some models/countries/regions.
- **Daylight Saving**
Select whether to apply Daylight Saving Time to the TV.
This function may not be applicable in some models/countries/regions.

Using Timer

/ > Settings > System > Timer Settings

Adjust the timer settings to suit your preference.

- **Sleep Timer**
Set the sleep timer to automatically turn the TV off at the specified time.
- **Power On Timer**
Set the time you want the TV to turn on automatically. You can set the same time each day or set a different time on different days.
- **Power Off Timer**
Set the time you want the TV to turn off automatically. You can set the same time each day or set a different time on different days.
- **Menu Timeout**
Set the amount of time you would like the menu to remain on the screen.
- **Auto Sleep**
Set the amount of time that you would like the TV to auto power off after a period of no activity.
This function may not be applicable in some models/countries/regions.
- **Auto Standby with No Signal**
TV will go to standby if there is no signal after the set time.

Using Parental Controls

/ > Settings > System > Parental Control

Turn on Parental Control to prevent children from being able to view certain content.

If you have not set the PIN code before, create and confirm PIN window displays. Using the D-pad on your remote, create the PIN code.

If you have set the PIN code before, enter PIN window will be displayed.

Set PIN code at  /  >  Settings > System > System PIN.

- **Locks**
Turn on Locks to enable the Parental Control function.
You will see other Parental Control settings change from a greyed out state to highlighted. When this occurs, **Block Time**, **Channel Block**, **Content Block**, **Input Block**, **App Block**, or **Reset to Default** features are available to set.
- **Block Time**
Block the whole TV usage for a defined period of time, including Live TV, HDMI and apps.
- **Channel Block**
Block all or individual channels when you turn on the Parental Control feature.

Accessibility and System

● Content Block

Certain programmes are blocked by age rating. This is controlled by the broadcaster.

● Input Block

Block content from devices that are connected to external inputs.

● App Block

Block access to certain apps.

● Reset to Default

Restore Parental Control back to the factory default setting.

Setting Language and Location

 /  >  **Settings > System > Language and Location**

Select the language used for this TV and your location.

● Location

Choose the location from where you will watch your TV.

● Menu Language

Set the default language for the TV menu.

● Primary Audio

Set the default audio output language for the type of digital broadcast content that you are viewing.

● Secondary Audio

Set the secondary audio output language for digital broadcast content.

● Primary Subtitle

Set the default subtitle language for digital broadcast content.




● Secondary Subtitle

Set the secondary subtitle language for digital broadcast content.

● Digital Teletext

Adjust Teletext decoding.

Setting Usage Mode




 /  >  **Settings > System > Usage Mode**

Set the TV to use in Home or Store mode.

● Home Mode



Select Home Mode for normal TV usage.

If you want to switch to Store Mode when the TV is in Home




Mode, press  /  button to select  **Settings**, and select **System > Usage Mode**, and choose **Store Mode**.

● Store Mode

Select Store Mode to setup the TV in a retail setting. This mode enables E-Pos and other demo functions and is only intended for use in retail stores.

When Store Mode is selected, press  /  button on your remote control to enter store mode settings.

If you want to switch to Home Mode when the TV is in Store

Mode, press  /  button to select  **Settings**, and select **System > Usage Mode**, and choose **Home Mode**.

NOTE

- Enabling Store Mode could increase energy consumption.

Checking the Software Version

To check the current software version of your TV:

Access  /  >  **Settings > Support > System Info > Version**.

Software Upgrade

 /  >  **Settings > Support > System Upgrade**

Set your TV to receive the latest firmware.

● Auto Firmware Upgrade

Set your TV to automatically receive the latest firmware.

● Check Firmware Upgrade

Check to ensure that your TV has received the latest firmware.

Please ensure your TV is connected to the Internet.

● Check OAD Upgrade

Check to ensure that your TV has received the latest firmware via the tuner.

NOTE

- Please ensure your TV is connected to the Internet.
- This function is only applicable when Thailand and Malaysia are selected in Location.

● System App Auto Upgrade

Set your system applications to automatically upgrade to the latest version. App auto upgrade will be completed in the background, confirmation on new Privacy Notices may be required to complete any upgrades.

● Upgrade from USB

Upgrade TV software from USB device.

NOTE

- Please ensure the USB flash drive insert to USB 2.0 port of the TV.
- The update files must be located in the root directory of the update USB device.
- The format of the USB must be FAT32 and the partition table type must be MBR.

Accessibility and System

HbbTV

Access service from providers through HbbTV.

 /  >  **Settings > System > Application Settings**

> HbbTV

Enable or disable HbbTV functionality for all channels (only available for digital channels).

In Live TV, press  /  button to select **HbbTV**.




Enable or disable HbbTV functionality for the current channel (only available for digital channels).

When HbbTV service is enabled and the programme supports HbbTV, follow the instructions on the TV screen to select the corresponding button on the remote control to access the service.

NOTE

- This function may not be applicable in some models/countries/regions.
- Some channels may not support the HbbTV service.

Setting the TV Name


 /  >  **Settings > System > Advanced Settings > TV Name**

You can edit the name for your TV to be used on the network.

NOTE

- Up to 18 characters can be entered.

Reset to Factory Default

 /  >  **Settings > Support > Reset to Factory Default**

Restore your TV to the factory default. Reset will clear your personal settings, information and data.

Technical Specifications

Model	SLE 65MUS700TCSB	SLE 55MUS700TCSB	SLE 43US700TCSB
Panel size	65" (164 cm)	55" (139 cm)	43" (108 cm)
Power consumption	300 W	230 W	100 W
Standby consumption	<0.5 W	<0.5 W	<0.5 W
Rated voltage	AC 220-240 V ~ 50/60 Hz	AC 220-240 V ~ 50/60 Hz	AC 220-240 V ~ 50/60 Hz
Remote controller	Yes	Yes	Yes
VESA wall mount	400 x 300	400 x 300	200 x 200
Dimensions with stand (w x h x d)	1447*243*905 mm	1230*783*245 mm	955.5 x 606.5 x 207 mm
Dimensions without stand (w x h x d)	1447*71*838 mm	1230*718*71 mm	955.5 x 559.5 x 97.5 mm
Net weight with stand	21.5 kg	15 kg	6.5 kg
Connection			
RF IN	1	1	1
HDMI	3 (1xARC)	3 (1xARC)	3 (1xARC)
Optical	1	1	1
AV in	1	1	1
Composite in	1	1	1
Headphone out	1	1	1
USB	2	2	2
RJ45	1	1	1
Earphone Output	1	1	1
Supported USB formats	AVI, MP4, MPG, MKV, MOV, DAT, VOB, MP3, M4A, AAC, WMA, JPEG, JPG, PNG	AVI, MP4, MPG, MKV, MOV, DAT, VOB, MP3, M4A, AAC, WMA, JPEG, JPG, PNG	AVI, MP4, MPG, MKV, MOV, DAT, VOB, MP3, M4A, AAC, WMA, JPEG, JPG, PNG
CI slot	1	1	1
Other functions			
Resolution	3840 x 2160	3840 x 2160	3840 x 2160
Viewing angle	178°/178°	178°/178°	178°/178°
Embedded tuner	DVB-T/T2, DVB-C, DVB-S2	DVB-T/T2, DVB-C, DVB-S2	DVB-T/T2, DVB-C, DVB-S2
Video system	PAL/SECAM BG/DK/I	PAL/SECAM BG/DK/I	PAL/SECAM BG/DK/I
Progressive scan	Yes	Yes	Yes
Timeshift	Yes	Yes	Yes
EPG	Yes	Yes	Yes
Comb filter	Digital	Digital	Digital
OSD menu	EN, CZE, POL, HUN, SVK, GER, FRE, ITA, SPA, GRC, HRV, SRP, BUL, SLV, LIT, RUS, ROM	EN, CZE, POL, HUN, SVK, GER, FRE, ITA, SPA, GRC, HRV, SRP, BUL, SLV, LIT, RUS, ROM	EN, CZE, POL, HUN, SVK, GER, FRE, ITA, SPA, GRC, HRV, SRP, BUL, SLV, LIT, RUS, ROM
Zoom	Yes	Yes	Yes
Noise reduction	Yes	Yes	Yes
Timer OFF / ON / SLEEP	Yes	Yes	Yes
Subtitles	Yes	Yes	Yes
Audio language	Yes	Yes	Yes
Channel list	Yes	Yes	Yes
Favourites list	Yes	Yes	Yes
Image freeze	Yes	Yes	Yes
Radio	Yes	Yes	Yes
Lock	Yes	Yes	Yes
Parent lock	Yes	Yes	Yes
Hotel mode	Yes	Yes	Yes

INSTRUCTIONS AND INFORMATION ABOUT THE DISPOSAL OF DISCARDED PACKAGE

Return the packaging to a collection centre for disposal.

DISPOSAL OF DISCARDED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol placed on the product, accessories or package notifies that the product must not be treated as household waste. Please dispose of this product in a collection centre designed for recycling electric and electronic equipment. In some EU or European countries, you can return your products to your local dealer when buying a new equivalent product. Proper disposal of this product helps save valuable natural resources and prevents possible adverse impacts on the environment and human health that might be caused by improper waste disposal. For further information, please contact your local authorities or the nearest waste disposal collection centre. Wrong disposal of this type of waste may be subject to a legal penalty.

EU Battery Regulation



This symbol on the battery(ies) or on the packaging indicates that the battery(ies) provided with this product shall not be treated as household waste. Instead, please separate battery(ies) from other types of waste and recycle it(them) through your local recycling system to protect environment and health. The chemical symbol for lead (Pb) is added under this symbol if the battery(ies) contains more than 0.004 % lead. For more detailed information about recycling of this battery(ies), please contact your local authority or the shop where you purchased the product or battery(ies).

For EU companies

If you need to dispose of an electric or electronic device, ask your dealer your supplier for necessary information.

Disposal in countries outside the European Union

To dispose of this product, please ask the ministry or your dealer for the necessary information on correct disposal.



The product meets the respective EU requirements.

FAST ČR, a.s. hereby declares that the radio device type SLE 65MUS700TCSB, SLE 55MUS700TCSB, SLE 43US700TCSB conforms to the 2014/53/EU directive.

For full version of the EU declaration of conformity, please refer to www.sencor.com website.

Changes in the text, design and technical specifications may be made without prior notice and we reserve the right to make such changes.

Manufacturer's address: FAST ČR, a.s., U Sanitasy 1621, Říčany CZ-251 01






The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Dolby Audio

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation.

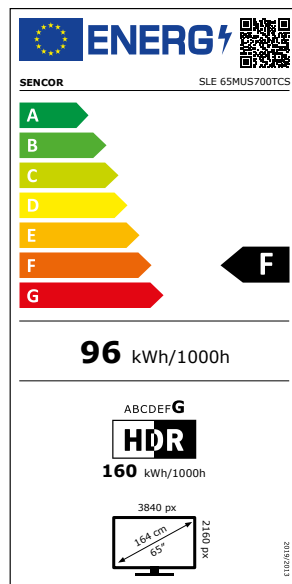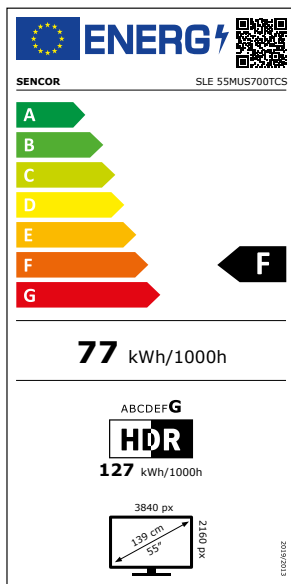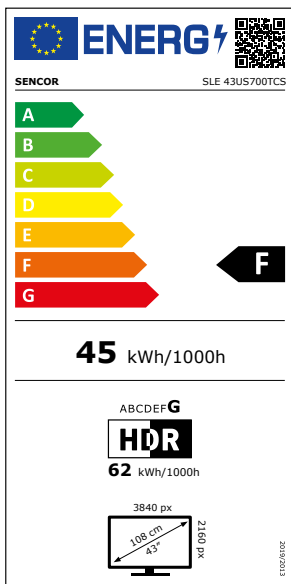

Product Information Sheet

COMMISSION DELEGATED REGULATION (EU) 2019/2013 with regard to energy labelling of electronic displays

	Parameter	Parameter or value and precision			Unit
1.	Supplier's name or trademark.	SENCOR			
	Supplier's address.	-			
2.	Model identifier	SLE 43US700TCS			
3.	Energy Efficiency Class for Standard Dynamic Range (SDR)	F			
4.	On mode power demand in SDR	45,0			W
5.	Energy Efficiency Class for High Dynamic Range (HDR)	G			
6.	On mode power demand in HDR, if implemented	62,0			W
7.	Off mode, power demand, if applicable	0,0			W
8.	Standby mode power demand, if applicable	0,3			W
9.	Networked standby mode power demand, if applicable	0,8			W
10.	Electronic display category	Television			
11.	Size ratio	16	:	9	
12.	Screen resolution	3 840	x	2 160	pixels
13.	Screen diagonal	108,0			cm
14.	Screen diagonal	43			inches
15.	Visible screen area	49,8			dm ²
16.	Panel technology used	LED LCD			
17.	Automatic Brightness Control (ABC) available	No			
18.	Voice recognition sensor available	No			
19.	Room presence sensor available	No			
20.	Image refresh frequency rate (default)	60			Hz
21.	Minimum guaranteed availability of software and firmware updates (from the date of end of the placement on the market)	8			Years
22.	Minimum guaranteed availability of spare parts (from the date of end of the placement on the market)	7			Years
23.	Minimum guaranteed product support	8			Years
	Minimum duration of the general guarantee offered by the supplier	2			Years
24.	Power supply type	Internal			
25.	External power supply (non standardized and included in the product box)				
	<i>i</i>	-			
	<i>ii</i>	Input voltage	-		V
	<i>iii</i>	Output voltage	-		V
26.	External standardised power supply (or suitable one if not included in the product box)				
	<i>i</i>	-			
	<i>ii</i>	Required output voltage	-		V
	<i>iii</i>	Required delivered current (minimum)	-		A
	<i>iv</i>	Required current frequency	-		Hz

Product Information Sheet

COMMISSION DELEGATED REGULATION (EU) 2019/2013 with regard to energy labelling of electronic displays

	Parameter	Parameter or value and precision			Unit
1.	Supplier's name or trademark.	SENCOR			
	Supplier's address.	-			
2.	Model identifier	SLE 55MUS700TCS			
3.	Energy Efficiency Class for Standard Dynamic Range (SDR)	F			
4.	On mode power demand in SDR	77,0			W
5.	Energy Efficiency Class for High Dynamic Range (HDR)	G			
6.	On mode power demand in HDR, if implemented	127			W
7.	Off mode, power demand, if applicable	n.a.			W
8.	Standby mode power demand, if applicable	0,4			W
9.	Networked standby mode power demand, if applicable	0,9			W
10.	Electronic display category	Television			
11.	Size ratio	16	:	9	
12.	Screen resolution	3 840	x	2 160	pixels
13.	Screen diagonal	139,0			cm
14.	Screen diagonal	55			inches
15.	Visible screen area	82,4			dm ²
16.	Panel technology used	LED LCD			
17.	Automatic Brightness Control (ABC) available	No			
18.	Voice recognition sensor available	No			
19.	Room presence sensor available	No			
20.	Image refresh frequency rate (default)	60			Hz
21.	Minimum guaranteed availability of software and firmware updates (from the date of end of the placement on the market)	8			Years
22.	Minimum guaranteed availability of spare parts (from the date of end of the placement on the market)	7			Years
23.	Minimum guaranteed product support	8			Years
	Minimum duration of the general guarantee offered by the supplier	2			Years
24.	Power supply type	Internal			
25.	External power supply (non standardized and included in the product box)				
	<i>i</i>	-			
	<i>ii</i>	Input voltage			- V
	<i>iii</i>	Output voltage			- V
26.	External standardised power supply (or suitable one if not included in the product box)				
	<i>i</i>	-			
	<i>ii</i>	Required output voltage			- V
	<i>iii</i>	Required delivered current (minimum)			- A
	<i>iv</i>	Required current frequency			- Hz

Product Information Sheet

COMMISSION DELEGATED REGULATION (EU) 2019/2013 with regard to energy labelling of electronic displays

	Parameter	Parameter or value and precision			Unit
1.	Supplier's name or trademark.	SENCOR			
	Supplier's address.	-			
2.	Model identifier	SLE 65MUS700TCS			
3.	Energy Efficiency Class for Standard Dynamic Range (SDR)	F			
4.	On mode power demand in SDR	96,0			W
5.	Energy Efficiency Class for High Dynamic Range (HDR)	G			
6.	On mode power demand in HDR, if implemented	160			W
7.	Off mode, power demand, if applicable	0,0			W
8.	Standby mode power demand, if applicable	0,2			W
9.	Networked standby mode power demand, if applicable	0,7			W
10.	Electronic display category	Television			
11.	Size ratio	16	:	9	
12.	Screen resolution	3 840	x	2 160	pixels
13.	Screen diagonal	164,0			cm
14.	Screen diagonal	65			inches
15.	Visible screen area	114,8			dm ²
16.	Panel technology used	LED LCD			
17.	Automatic Brightness Control (ABC) available	No			
18.	Voice recognition sensor available	No			
19.	Room presence sensor available	No			
20.	Image refresh frequency rate (default)	60			Hz
21.	Minimum guaranteed availability of software and firmware updates (from the date of end of the placement on the market)	8			Years
22.	Minimum guaranteed availability of spare parts (from the date of end of the placement on the market)	7			Years
23.	Minimum guaranteed product support	8			Years
	Minimum duration of the general guarantee offered by the supplier	2			Years
24.	Power supply type	Internal			
25.	External power supply (non standardized and included in the product box)				
	<i>i</i>	-			
	<i>ii</i>	Input voltage	-		V
	<i>iii</i>	Output voltage	-		V
26.	External standardised power supply (or suitable one if not included in the product box)				
	<i>i</i>	-			
	<i>ii</i>	Required output voltage	-		V
	<i>iii</i>	Required delivered current (minimum)	-		A
	<i>iv</i>	Required current frequency	-		Hz

SENCOR®

EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Manufacturer:

FAST ČR, a.s., U Sanitasu 1621, Říčany 251 01, Czech Republic

Visit www.sencor.com for detailed information about authorized service centers.

The original version of the instructions is in the Czech language, other language versions are made by the appropriate translation.

