



EN ■ User Manual

CZ ■ Uživatelská příručka

SK ■ Používateľská príručka

HU ■ Felhasználói kézikönyv

PL ■ Podręcznik użytkownika

DVD player

DVD přehrávač

DVD prehrávač

DVD lejátszó

Odtwarzacz DVD

TABLE OF CONTENTS

1. Important safety instructions.....	3
1.1 General safety instructions.....	3
1.2 Installation, operation.....	3
1.3 Service and maintenance.....	4
1.4 Remote control and batteries.....	4
1.5 DVD player.....	6
2. Elements of the appliance.....	8
3. Remote Control.....	9
4. Settings menu.....	11
5. Technical Data.....	13
6. Troubleshooting.....	14

1. Important safety instructions

If you want to use this product correctly, carefully read this user's manual and store it for future reference.

1.1 General safety instructions

- Read this user's manual. Keep the user's manual in a safe place for future reference. If you sell or give this product to a third party, hand over the user's manual together with the product.
- Follow the instructions contained in this user's manual.
- Heed all warnings.
- Adhere to all instructions.
- Use only accessories determined by the manufacturer.
- An open flame must not be placed on the appliance, e.g. burning candle.
- Use the appliance in a temperate climate zone.
- Under no condition does the manufacturer or the vendor of the appliance take responsibility for any direct or indirect damages caused by not adhering to the instructions for installation, set-up, use, repair or cleaning of this appliance as described in this user's manual.
- Protect the appliance against being knocked, dropped, hit and shaken and against vibrations, humidity and dust.
- Before allowing children to use the appliance, they must be appropriately to their age, informed about the correct and safe use of the player.

1.2 Installation, operation

- Install the appliance according to the instructions in the user's manual.
- Leave free space on all sides of the appliance necessary for proper air circulation. This removes the heat created during operation. Covering the ventilation openings of the appliance's case creates a risk of overheating or damaging the appliance. It is necessary to ensure that the ventilation openings are not blocked, e.g. by a newspaper, table cloth, curtain, etc. Follow the installation instructions in the user's manual.
- Do not install the appliance in direct sunlight or near sources of heat, such as heaters, heat exchangers, stoves or other appliances (including amplifiers) producing heat.
- High temperatures significantly reduce the lifetime of electronic components in the appliance.
- Do not use or leave the appliance in the vicinity of an open fire.
- The appliance must not be exposed to dripping or running water and objects filled with water must not be placed on it, e.g. vases. Protect the appliance against rain, spray or contact with any other liquid; do not leave or install the appliance outdoors. Do not use the appliance outdoors. Not adhering to these instructions creates a risk of electrical shock or fire hazard.
- Do not use this appliance near water.

- Do not try to circumvent the polarised power plug safety feature. If the power plug cannot be inserted into your power socket, contact a qualified electrician to replace the old type of power socket.
- Before connecting the appliance into a power socket, check that the voltage in your power socket corresponds to the voltage on the rating label of the appliance.
- Make sure that the mains or power cord is not stepped on or compressed, particularly near the power plug, power socket and at the point where it exits the appliance. The power plug (adapter) is used as a disconnection appliance and must be easily accessible.
- Remember to always disconnect the power plug (adapter) from the power socket before disconnecting the power cable from the rear side of the appliance.
- Disconnect the appliance from the power socket during storms or if you will not be using it for a longer time.
- Avoid moving the appliance from a cold environment to a warm one or vice versa, or when using the appliance in a very humid environment. Air humidity may condense on some components inside the case of the appliance and the appliance may stop working temporarily. If this occurs leave the appliance in a warm and well ventilated place and wait 1 – 2 hours until the moisture evaporates and the appliance can once more be used as usual. Take care especially during the first use of the player immediately after its purchase during a cold season.

1.3 Service and maintenance

- To prevent risk of injury through electric shock or the creation of a fire, do not take the appliance out of the case – there are no parts inside the case repairable or adjustable by the user without appropriate equipment and qualifications. Should the appliance require adjustment or repair, contact a professional service centre.
- In the case of any unusual events occurring during the use of the appliance, e.g. if there is a distinct smell of burning insulation or smoke comes out of the appliance, immediately turn off the appliance, disconnect the appliance from the power source and do not use the appliance until you have received the results of an inspection by the employees of the professional service centre.
- Have all repairs carried out by qualified personnel. Repairs are necessary if the appliance has been damaged in any way, for example if the power cord is damaged, liquid was poured on the appliance, foreign objects have entered the appliance, the appliance has been exposed to rain or moisture, if the appliance is not working as usual or if it has fallen.
- Clean the appliance only with a dry cloth.

1.4 Remote control and batteries

- Do not expose the remote control or the batteries to direct sunlight or sources of heat, such as heaters, heat exchangers, stoves or other appliances (including amplifiers) that produce heat. Do not use or leave the device near an open flame.
- Neither the remote control nor the batteries may be exposed to dripping or running water and objects filled with water must not be placed on them, e.g.

vases. Protect from getting wet, splashing or spilling any liquid. Do not use outdoors. Failure to follow these instructions may result in damage to the remote control or batteries.

- Do not use this appliance near water.
- It is necessary to pay attention to the environmental impact aspects of battery disposal.
- The incorrect use of batteries may cause the leakage of the electrolyte and corrosion. Follow the instructions below to ensure that the remote control works properly:
 - Make sure when inserting batteries to correctly align the polarities.
 - Do not recharge, heat, open or short circuit the batteries.
 - Do not throw batteries into a fire.
 - Do not leave flat batteries in the remote control.
 - Do not combine various types of batteries or new and old batteries.
 - If you will not be using the remote control for a long period of time, remove the batteries to prevent potential damage caused by a subsequent battery leakage.
 - If the remote control is not working correctly or its operational range is reduced, change all batteries for new ones.
 - If electrolyte leaks out from the batteries, have the remote control cleaned at an authorised service centre.

NOTICE

To prevent a fire hazard or injury by electrical shock, do not expose this appliance to rain or humidity.

NOTICE

Batteries must not be exposed to excessive heat, for example sunlight, fire, etc.



This symbol indicates that there is dangerous voltage inside this appliance, which presents a risk of injury by electrical shock.



 
This symbol indicates important operating or repair instructions in the appliance's documentation.



To reduce the risk of injury by electrical shock, do not open the cover. Have all repairs or adjustments performed by qualified service personnel.

1.5 DVD player

This appliance uses a laser system. In order to learn about the correct operation of the appliance, please carefully read this user's manual and store it for future use. For safety reasons the disc drive opening is located on the side of the appliance, thus preventing exposure to laser radiation. Under no circumstances should you in any way attempt to modify or change the disc drive opening. Do not look into the disc drive opening when inserting a disc into the disc drive or during playback. An emission of visible laser radiation could occur. Do not look into laser beams.



CAUTION:
THIS DVD PLAYER IS A CLASS 1 LASER PRODUCT.

WHEN USING THE CONTROL ELEMENTS OR CARRYING OUT SETTINGS AND PROCEDURES, WHICH ARE NOT INCLUDED IN THIS USER'S MANUAL YOU OR THOSE AROUND YOU MAY BE EXPOSED TO DANGEROUS LASER RADIATION. BECAUSE THE LASER BEAM USED IN THIS APPLIANCE IS DAMAGING TO HUMAN EYE SIGHT DO NOT ATTEMPT TO DISASSEMBLE THE CASE OF THE DEVICE. LEAVE ALL REPAIRS TO A QUALIFIED SERVICE CENTRE.

WARNING:

ACCORDING TO FCC REGULATIONS, ANY TYPE OF CHANGE OR MODIFICATION OF THE APPLIANCE THAT IS NOT EXPLICITLY APPROVED BY THE MANUFACTURER OR HIS AUTHORISED REPRESENTATIVE MAY LEAD TO THE USER LOSING THE RIGHT TO USE THIS APPLIANCE.

 
This product is equipped with copyright protection technology, which is protected by USA patents and other intellectual property laws of ROVI. Reverse engineering and disassembly are forbidden.

Notes on the USB connector:

- The USB memory device must be plugged directly into the device.
- To prevent data transmission failure or its interference, do not use USB extension cables. Electrostatic discharges may cause the unit to malfunction. In such an event, the user must restart the unit. From USB the appliance can playback the same file formats and types as from discs. Before using a USB memory devices test its ability to communicate with the appliance and its data reading speed. Please keep in mind that reading data through an external connector may be slower and that files with high data flow rates may not be played back smoothly. To achieve maximum reading speed we recommend that you keep disk space defragmented. Use the FAT32 file system, a single partition, without protection. If reading from the USB memory device is not continuous, undesirable effects may occur such as partial image loss (distortions/checkering effects) or complete image loss, audio defects, and in extreme cases the operation will be stopped. Unexpected behaviour of the connected storage device or the presence of viruses and other malicious software can cause the device to stop functioning and even need to be restarted. The USB connector is the standard type and is not able to power a USB device with a high power usage (e.g. hard disk drives HDD). Use self-powered devices and power them from their own power supplies. The unit has been designed to achieve maximum compatibility with memory devices. Due to the variety of devices on the market, compatibility with every USB device cannot be guaranteed. In case of problems, try formatting the memory device. If the problem persists, use another storage device.


2. Elements of the appliance

FRONT PANEL

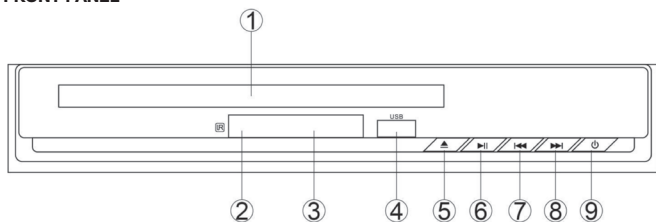


1. DVD DOOR
2. CONTROL SENSOR
3. DISPLAY
4. USB
5. OPEN/CLOSE BUTTON
6. PLAY/PAUSE
7. PREV
8. NEXT
9. POWER

 REAR PANEL

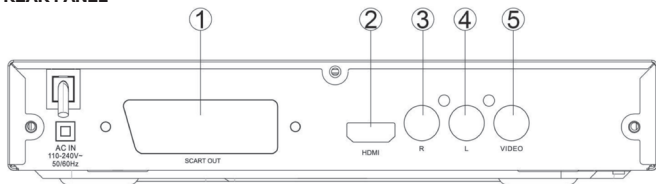


1. SCART
2. HDMI
3. AUDIO RIGHT
4. AUDIO LEFT
5. VIDEO

 3. Remote Control

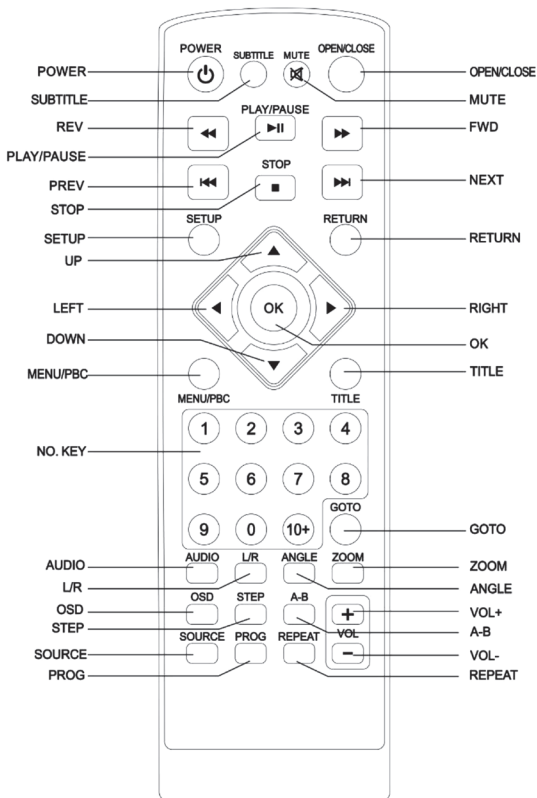

10+	for entering numbers greater than 10 (e.g. 12, press 10+ and then 2)
SETUP	enter the settings menu, exit from it
OK	confirm a selection in a menu.
MENU /PBC	go to main DVD menu.
GOTO	go to required location, title or chapter.

REV	fast rewind. Press repeatedly to set the speed (x2 → x4 → x8 → x20 → PLAY). Press PLAY for normal playback.
STOP	press once to stop and remember the location for continued playback by pressing RESUME (if not forbidden), press again to delete the memory with this stored location.
FWD	move quickly forward. Press repeatedly to set the speed (x2 → x4 → x8 → x20 → PLAY). Press PLAY for normal playback.
TITLE	return to the DVD title menu.
RETURN	return to the normal playback menu, and then return to normal playback from the root menu.
ANGLE	viewing angle selection on DVD discs that support it.
ZOOM	increase or decrease the size of the picture. When zoomed in, movement possible using the direction arrows. DVD/VCD: repeatedly press ZOOM to change magnification: 2x → 3x → 4x → normal size
	Open/Close the disc drive.
SUBTITLE	repeatedly press to select from the subtitles available on the disc
OSD	show playback time and status information.
PROG	set playback sequence of the contents on the inserted disc (DVD/VCD/CD). Press PROGRAM to show the program menu. Enter track/chapter numbers and select option START. To playback in the normal sequence, press PROG and select STOP.
SOURCE	select the source DVD/USB.
MUTE	silence/renew the volume.
REPEAT	replay. Repeatedly press REPEAT to select the repetition of a single item, all items, a folder or to cancel repetition; depending on what is available.
PREV	skip to previous item, track, chapter.
PLAY/PAUSE	start or pause playback.
NEXT	skip to next item, track, chapter.
VOL+/-	volume adjustment
A-B	repetition between two points. Press once to designate point A, press again to designate point B and start repetition between them. Press a third time to cancel A-B mode.
STEP	step playback of DVD.
AUDIO	switch soundtrack on the DVD (if available on the disc.), or audio on CD/VCD channels (left, right, mix, stereo).

4. Settings menu

Press the **SETUP** button to enter the settings. Use the **LEFT/RIGHT** arrows to move to the desired page. Use the **DOWN** arrow to select an item, its current value will be shown, if available. Use the **RIGHT** arrow or **OK** to go to the item values. Use the **UP/DOWN** arrows to select a new value and use **OK** to confirm it. Use the **LEFT** arrow to return to item selection and press again to go to page selection. Set all items to your requirements, then press **SETUP** to leave the appliance settings.

TV TYPE — select the side aspect ratio and its appearance on a connected television.

4:3 PANSKAN — wide-angle picture is cropped to fill the entire screen 4:3.

4:3 LETTERBOX — wide-angle picture is shown on a 4:3 ratio with black bands above and below so that the entire original picture is shown.

16:9 — widescreen display. On a 4:3 screen the width of the picture may be stretched out.

POWER RESUME — When ON, the player will attempt to resume playback where you left off.

OSD LANGUAGE — menu language selection from those available in the appliance.

DOWNMIX — settings for your DVD player's stereophonic analogue output. LT/RT for a connected Dolby Pro Logic decoder or Stereo for playback of only the audio from the first two channels.

Video Output (VIDEO) — video output in SCART, CVBS, RGB.

COLOUR SETTINGS

Brightness, Contrast, Hue, Saturation

— set picture according to your preferences. The hue option is intended only for NTSC sources.

Caution:

Proceed carefully with the following items, also using your TV's user's manual. It may happen that the picture on your TV will not appear and a return to working settings will only be possible with an analogue connection (e.g. SCART).

Resolution (HD OUTPUT) — select HDMI output resolution for your TV.

HDMI AUDIO — select advanced HDMI output options according to your TV. Audio transmission can be force selected to PCM or automatically depending on the source being played.

TV type (TV SYSTEM) — picture colour output system selection, PAL, NTSC or Auto (depending on the disc).

AUDIO LANG — select your preferred audio language; if it is found on the disc being played, it will be set preferentially.

Subtitles (SUBTITLE LANG) — select your preferred subtitle language; if it is found on the disc being played, it will be set preferentially.

Disc menu (MENU LANG) — select your preferred control menu language; if it is found on the disc being played, it will be set preferentially.

Accessibility (RATING) — parental control for discs containing information about the recommended minimum viewing age; age group can be set. May forbid the playback of certain discs, which are not suitable for children or allow certain discs with alternative scenes to be played. You can enter your password (PASSWORD) to access locked disks.

DEFAULT — Restore all settings to factory settings.

5. Technical Data

SDV 2513H

Power supply:	100-240 V, 50/60 Hz
Power input:	<8 W
Frequency range:	20 Hz to 20 kHz (1 dB)
Signal to noise ratio:	more than 80 dB (analogue output)
Dynamic range:	more than 85 dB (DVD/CD)
VIDEO output:	1 V _{P-P} (75 Ω)
AUDIO output:	2 V _{RMS} (1 kHz, 0 dB)
Laser:	Semiconductor laser, 650 nm
Standard:	NTSC / PAL
Operating humidity:	5 % to 90 %
Operating position:	horizontal
Dimensions (W × H × D):	225×50×235mm
Weight:	0.95kg

Note:

The design and technical specifications are subject to change without prior notice.

6. Troubleshooting

Symptom	Causes	Remedy
Picture No picture is shown or is distorted.	• The video cable is not firmly connected.	• Connect the video cable firmly.
	• The video input mode of the appliance connected to the television is not set correctly.	• Set the appropriate video input mode.
Sound No audio can be heard or it is distorted.	• The audio cables are not connected properly.	• Connect the audio cables firmly.
	• Volume is set to a lower level.	• Increase the volume.
	• Audio is turned off.	• Turn the audio on by pressing the MUTE button on the remote control.
	• The disc is in the fast playback / reverse playback mode.	• Press the [PLAY/ PAUSE] button.
Disc cannot be played.	• The disc is incorrectly placed inside the disc drive.	• Check that the disc is inserted in the disc drive with the printed side facing upwards.
	• The disc's rating is higher than the rating set under the parental control item.	• Restore the parental control settings.
	• The appliance is not compatible with the disc. The disc is dirty.	• Clean the disc.
Buttons on the appliance are not working.	• Appliance is suffering from static electricity interference, etc.	• Turn off the appliance and disconnect it from the power source.
		• Then insert the plug into the power source and turn the appliance on again.
Remote Control does not work or does not work properly.	• There are no batteries in the remote control.	• Insert two type AAA / 1.5 V batteries into the remote control.
	• Batteries are flat.	• Replace the batteries with new ones.
	• The remote control is not pointing at the remote control receiver.	• Check that the remote control is pointing at the remote control receiver.
	• The remote control is outside of the operating range.	• Check that the remote control is within operating range.
	• A strong light (e.g. sunlight) or fluorescent light (e.g. fluorescent tube) is shining on the front panel.	• Shield the remote control sensor on the appliance from the light source.

INSTRUCTIONS AND INFORMATION ON DISPOSING OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSING OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal and recycling, take these products to designated collection points. Or in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. Disposing of this product correctly helps save valuable natural resources and prevents damage to the environment by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.

CE This product meets all the basic requirements of the applicable EU directives.

The text, design and technical specifications may be changed without prior notice and we reserve the right to make these changes.

The original version is in the Czech language.

Manufacturer's address:

FAST ČR, a.s., Černokostecká 1621, Říčany CZ-251 01

SENCOR®

EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be identified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Manufacturer:

FAST ČR, a.s., U Sanitasu 1621, Říčany 251 01, Czech Republic

Visit www.sencor.com for detailed information about authorized service centers.

The original version of the instructions is in the Czech language, other language versions are made by the appropriate translation.

