



EN ■ User Manual

CZ ■ Uživatelská příručka

SK ■ Používateľská príručka

HU ■ Felhasználói kézikönyv

PL ■ Podręcznik użytkownika

Bluetooth speaker

Bluetooth reproduktor

Bluetooth reproduktor

Bluetooth hangszóró

Głośnik Bluetooth

Table of Contents

| | |
|---|----|
| Safety Instructions..... | 3 |
| Included Contents..... | 6 |
| Description of the BT Speaker | 6 |
| Putting into Operation | 7 |
| Charging..... | 7 |
| LED Indicators..... | 8 |
| Pairing Devices via Bluetooth..... | 9 |
| “M” Button | 10 |
| Power Bank Feature | 12 |
| Audio AUX-IN | 12 |
| USB Playback | 13 |
| Play/Pause Button | 14 |
| Volume and Track Playback Control..... | 15 |
| Ingression Protection (IPX6) | 15 |
| SSS 6701 Technical Specifications | 16 |
| INSTRUCTIONS AND INFORMATION ON THE DISPOSAL OF DISCARDED PACKAGING MATERIALS..... | 18 |
| DISPOSAL OF DISCARDED ELECTRICAL AND ELECTRONIC EQUIPMENT | 18 |

Safety Instructions

This product has been designed with the utmost safety in mind. However, incorrect use may lead to electric shock or fire. This is why users should observe the following instructions when using this device.

This device uses a semiconductor unit and contains no user serviceable parts. Do not disassemble this device, otherwise you are exposed to the risk of electric shock. If any damage to this product occurs, please have this product repaired by a qualified service technician.

Power

Power supply of this unit must be match the serial plate data.

Heat source

Keep this unit out of heat sources like stove or direct sunlight.

Cleaning

Prior to cleaning, please disconnect power first. For cleaning, don't use liquid detergents or caustic liquids - just clean the unit with a soft cloth.

Heavy objects

Do not place heavy objects on the unit, otherwise damage might occur.

Connecting other devices

Before connecting other devices to this unit, please make sure to disconnect power. Otherwise damage to the unit or personal injury might occur.

Faults to be repaired

If any of the following problems occurs, please disconnect power to the unit and contact a qualified service technician.

- A. Power cord or plug is damaged.
- B. Liquids or other foreign objects have penetrated inside the product.
- C. If the unit does not work even if it's being operated according to the instructions, don't press any buttons other than those described in these instructions. Otherwise, damage to this unit may occur along with a more demanding repair.
- D. This unit has fallen on the ground from a big height.
- E. Burns can be smelled from the product inside.

Maintenance

If you don't have enough technical knowledge necessary to maintain this unit, don't attempt to repair it by yourself. By removing the cover, you are exposed to a risk of electric shock. If needed, please contact a qualified service technician.

Replacement of parts

If you need to replace any part of this unit, ask your service technician to make a replacement for equal spare part models. If other spare part models are used for replacement, serious damage, electric shock or shortening the unit's lifetime may occur.

Safety check

When done with the maintenance, ask your service technician to perform an on-site safety check to make sure that the unit's operation is safe.

Note:


Before using this product, read these instructions carefully and keep it well for future use.

Included Contents

Package contents:

- BT speaker
- 3,5mm audio jack
- USB-C charging cable
- Shoulder strap
- User's manual

Description of the BT Speaker

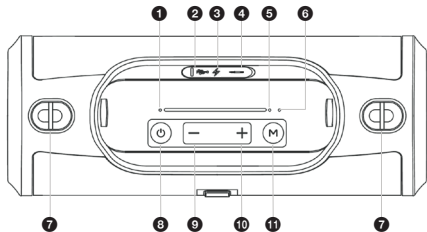

- 1 LED indicator
- 2 5V / 2A USB-A output (designed for charging portable devices / music playback from a USB storage)
- 3 USB-C BT speaker charging input
- 4 Socket for audio AUX-IN mini jack (3.5 mm)
- 5 TWS LED indicator
- 6 Microphone

- 7 Loops for detachable fabric band
- 8 Power on/off and Play/Pause button
- 9 Volume decrease button “-”/previous track
- 10 Volume increase button “+”/next track
- 11 “M” button – TWS / EQ / turn notification tones off and on / change light effects

Putting into Operation

Before first use, be sure to read the safety instructions contained in this user's manual carefully.

Before first use, please charge the BT speaker to a maximum level. Hold down the power on button to turn on the BT speaker. Turning on/off is indicated by a sound signal. To turn the BT speaker off, hold down the power on button. Long press the Power on/off button to restart the whole BT speaker. You can use this mode if the BT speaker gets stuck during playback or cannot be paired to your device.



Caution:

After a longer period of inactivity, the appliance will turn itself off.

Charging

A charged battery provides power for several hours of operation at normal volume levels. A high volume consumes more battery power; therefore, we recommend listening at normal volume levels. To charge the BT speaker, please connect the charging adapter to the mains and then to the BT speaker.

**Caution:**

For charging, use only the original accessories supplied with the appliance. To achieve the maximum battery lifetime, it is best to start charging the battery after the low battery power notification. Charge continuously until fully charged. When the battery operating time becomes very short, the battery lifetime has been used up; we recommend that you have the battery replaced at your authorized centre.

Recommendation:

If the unit is not to be used for an extended period of time, we recommend to fully charge the battery once every two to three months. We recommend to store the unit with a the battery charged to prevent irreparable damage to the battery (loss of capacity).

LED Indicators

The Bluetooth connection LED (No.1 on the figure) shows the following speaker statuses:

- **Flashing blue** - the unit is ready to be paired via Bluetooth and the audio signal source is not connected.
- **Solid blue** - the BT speaker is paired to another device via Bluetooth.
- **Solid green** - audio jack is connected to the device.
- **Solid red** - the BT speaker's battery is being charged.

TWS LED indicator (No.5 on the figure):

- **Flashing white** – the unit is ready for pairing to a second BT speaker.
- **Solid white** - the units are connected together and the TWS function is enabled.

Pairing Devices via Bluetooth

Turn on the BT speaker and search for its Bluetooth name "SSS 6701" in the device to which you wish to pair and start the pairing process. If you are requested to enter a pairing code while your device and the BT speaker are pairing, use the code: "0000". To disconnect a paired device, press the Power on/off button twice until the LED indication on the device changes.

Note:

To ensure a stable Bluetooth connection, make sure that the distance between the BT speaker and your connected device is kept within 10 meters.



Caution:

Some connected devices support common volume setting. If some of the connected devices do not support this feature, the volume setting will operate separately on each device.

 
“M” Button

TWS function

If you buy another Bluetooth speaker (“SSS 6701”), you can pair both speakers together for optimum stereo sound. First, make sure your device is not connected to any BT speaker. Place the BT speakers close together (within 10 meters) and turn them on. Long-press the “M” button on both BT speakers to start the TWS function and wait until the speakers have paired together automatically. The TWS LED indicator stops blinking and turns into solid white to show the BT speakers are paired. The master BT speaker’s LED indicator (left channel) is flashing blue while pairing and the slave BT speaker (right channel) is marked by solid blue LED indication. Use the volume buttons to change the level automatically on both paired BT speakers.

Note:

If the BT speakers fail to be paired successfully to transfer stereo sound, turn all engaged units off and then on again.



Note:

If the BT speakers fail to be paired successfully to transfer stereo sound, turn all engaged units off and then on again.

**Caution:**

The TWS function is only available in the Bluetooth mode. The connected microphone will transfer voice only into the BT speaker to which it's connected. It is not possible to pair the device with another type of BT speaker with TWS function, even within a re-edition of products with a different Bluetooth name.

EQ function

Press "M" shortly twice to switch the playback modes among Standard, Outdoor and 3D sound effect. The mode change will be indicated by either by flashing blue (in Bluetooth mode) or flashing green (in AUX-IN mode) LED.

Light effects function

The BT loudspeaker is equipped with light effects in the area of passive light emitters. Changing the lighting effect is done with one short press of the "M" button. There are 3 preset light effects. To disable the light effect, press "M" repeatedly until the LEDs go out.

To disable BT speaker notification and messages

Press the "M" button 3 times to switch the BT speaker notification and alert messages off or on. When turned off and on, the BT speaker will remember the last selected mode.

**Caution:**

In the off state, no messages notifying about the BT speaker state will be shown. Charge the BT speaker as a preventive measure. Avoid using the sound at a maximum level.

Power Bank Feature

The BT speaker can be also used as a Power bank to charge another portable devices. Lift the protective cover of the sockets at the BT speaker's rear and connect your portable device's charging cable to the USB port. The charging will take place automatically as long as the BT speaker is turned on.

**Caution:**

The power bank feature is not primarily designed to charge your mobile device. Make sure that your mobile phone is switched to the charging mode, otherwise the BT audio transmission will be stopped during charging.

Audio AUX-IN

The BT speaker is equipped with a 3.5mm jack. Your device can be connected to the BT speaker via the supplied audio cable. First connect the audio plug to your device and then to the BT speaker's jack.

**Caution:**

Before connecting your device to the BT speaker, please make sure that the output signal from your device is set to its minimum (minimum output volume). This will prevent the BT speaker from damage. When the BT audio cable is connected, the speaker does not meet the IPX6 protection class and is not water-resistant.

Note:

In this mode, not all functions of the BT speaker are available. The Bluetooth function is not automatically active if the audio jack is connected to the BT speaker.

USB Playback

Insert the memory device with the contacts pointing towards the BT speaker top (button side). After connecting a memory storage device, the BT speaker will automatically play back its contents. If there are no files for playback on the storage, the BT speaker will switch to another playback mode (such as Bluetooth connection).

**Caution:**

Due to a number of memory devices on the market, compatibility and playback support are not guaranteed for all media. The memory devices you want to connect should be tested in advance and/or formatted as FAT32. The playback of protected media, files or content stored inside them may fail.

Play/Pause Button

- Press Play/Pause shortly to start or stop music playback during a Bluetooth connection / USB playback.
- The incoming call to a Bluetooth connected and paired device will be accompanied by an acoustic signal which will interrupt the music being played back. To answer/hang up an incoming call, press the Play/Pause button briefly. To reject the incoming call, double-press the button quickly.

Note:

The reception of the BT speaker's microphone may be attenuated due to the device's water resistance. To improve the reception, please speak loud and in the vicinity of the BT speaker.

Volume and Track Playback Control

To control the BT speaker's volume (+/- buttons), use the buttons on the BT speaker. During music playback, you can press and hold the "+" button to jump to the next track playback. To select the previous track, press and hold the "-" button.

Ingress Protection (IPX6)

The unit has an increased protection class. The IPX6 water ingress protection ensures that the unit is protected against splashing water.

**Caution:**

Remember to always seal the BT speaker's inputs with the original blind plug (No.2-4 on figure "BT speaker description") and make sure the plug is not damaged. Never charge the unit during possible contact with fluids. The unit is designed for contact with clean water only without any additives. Avoid exposing the unit to contaminated or industrially treated fluids (such as lemonade, sea/salt water, oils, etc.).

SSS 6701 Technical Specifications

Bluetooth speaker with IPX6 protection class

Features

Water-resistant speaker with IPX6 protection class

The speaker cover is made of premium fabric

TWS function (True Wireless Stereo)

Powerbank feature

LED speaker backlight

Sound

Maximum speaker output 60W

4 speakers (2 mid-bass, 2 treble) + 2 passive radiators

Digital Sound Processor (DSP)

Frequency response: 65Hz–20kHz

Total harmonic distortion: $\leq 1\%$

Inputs

Bluetooth Audio 5.0

Connection distance: up to 10 m

AUX audio input (3.5mm stereo connector)

Others

Equalizer (3 presets)

Textile strap for easy handling

Handsfree Function

Built-in rechargeable battery: 7,200 mAh Li-Ion

Playback time of up to 9 hours (@ 50% volume)

USB-C charging

Max. charging time 5 hours

Accessories: USB-C charging cable, 3.5mm external cable

(AUX), user's manual

Dimensions: 310×175×123mm

Weight: 2,200g

Bluetooth

Version: 5.0

Maximum transmitter power: 100mW @ 2.4GHz–2.4835GHz

Bluetooth codec: SBC; profile: A2DP/AVRCP

INSTRUCTIONS AND INFORMATION ON THE DISPOSAL OF DISCARDED PACKAGING MATERIALS

Take the packaging material to a collection yard for disposal.

DISPOSAL OF DISCARDED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the product, accessory or packaging indicates that the product must not be treated as normal household waste. Please dispose of this product in a collection yard designated for the recycling of electrical and electronic equipment. In some EU countries or in some European countries, you can return your products to your local retailer when you buy an equivalent new product. By disposing of this product properly, you are helping to protect valuable natural resources and prevent the potential negative environmental and human health impacts that could result from improper waste disposal. Please contact your local authority or the nearest waste collection yard for further details. Improper disposal of this type of waste may be subject to a legal fine.

For companies in the European Union

If you need to dispose of electrical or electronic equipment, ask your dealer or supplier for the necessary information.

Disposal in countries outside the European Union

If you wish to dispose of this product, please ask the Ministry or your dealer for the necessary information on the correct disposal method.

 The product meets the EU requirements.

FAST ČR, a.s. hereby declares that the radio equipment type SSS 6701 conforms to the 2014/53/EU Directive. For full version of the EU declaration of conformity, please refer to www.sencor.eu website.

Text, design and technical data are subject to change without notice and we reserve the right to make changes.

The original version is in Czech.

Manufacturer's address: FAST ČR, a.s., U Sanitasu 1621,
Říčany CZ-251 01

SENCOR®

EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Manufacturer:

FAST ČR, a.s., U Sanitasu 1621, Říčany 251 01, Czech Republic

Visit www.sencor.com for detailed information about authorized service centers.

The original version of the instructions is in the Czech language, other language versions are made by the appropriate translation.

