



**EN ■ User Manual**

**CZ ■ Uživatelská příručka**

**SK ■ Používateľská príručka**

**HU ■ Felhasználói kézikönyv**

**PL ■ Podręcznik użytkownika**

**Party Wireless Waterproof Speaker**

**Párty bezdrátový voděodolný reproduktor**

**Párty bezdrótový wodoodporny reproduktor**

**Vezeték nélküli vízálló parti hangszóró**

**Bezprzewodowy głośnik wodoodporny**

# SAFETY INSTRUCTIONS

This product has been designed with the utmost safety in mind. However, incorrect use may lead to electric shock or fire. This is why users should observe the following instructions when using this device.

This device uses a semiconductor unit and contains no user serviceable parts. Do not disassemble this device, otherwise you are exposed to the risk of electric shock. If any damage to this product occurs, please have this product repaired by a qualified service technician.

## Power

Power supply of this unit must be match the serial plate data.

## Heat source

Keep this unit out of heat sources like stove or direct sunlight.

## Cleaning

Prior to cleaning, please disconnect power first. For cleaning, don't use liquid detergents or caustic liquids - just clean the unit with a soft cloth.

## Heavy objects

Do not place heavy objects on the unit, otherwise damage might occur.

## Connecting other devices

Before connecting other devices to this unit, please make sure to disconnect power. Otherwise damage to the unit or personal injury might occur.

## Faults to be repaired

If any of the following problems occurs, please disconnect power to the unit and contact a qualified service technician.

- A. Power cord or plug is damaged.
- B. Liquids or other foreign objects have penetrated inside the product.

- C. If the unit does not work even if it's being operated according to the instructions, don't press any buttons other than those described in these instructions. Otherwise, damage to this unit may occur along with a more demanding repair.
- D. This unit has fallen on the ground from a big height.
- E. Burns can be smelled from the product inside.

## **Maintenance**

If you don't have enough technical knowledge necessary to maintain this unit, don't attempt to repair it by yourself. By removing the cover, you are exposed to a risk of electric shock. If needed, please contact a qualified service technician.

## **Replacement of parts**

If you need to replace any part of this unit, ask your service technician to make a replacement for equal spare part models. If other spare part models are used for replacement, serious damage, electric shock or shortening the unit's lifetime may occur.

## **Safety check**

After completing maintenance, ask your service technician to perform an on-site safety check to ensure that the unit is operating safely.


### **Note:**

Before using this product, read these instructions carefully and keep it well for future use.

## INCLUDED CONTENTS

- 1x BT speaker
- 1x USB-C charging cable
- 1x User's manual

## BT SPEAKER DESCRIPTION

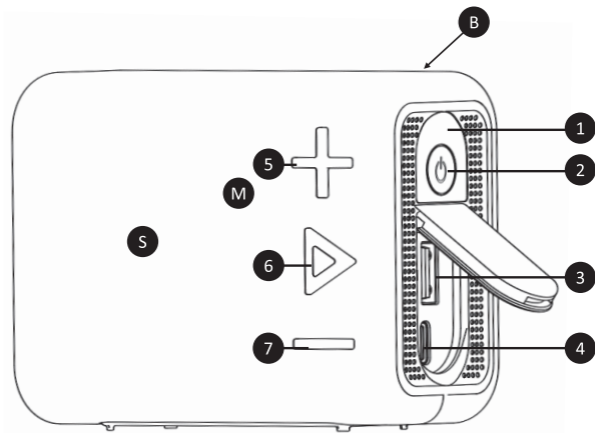

|   |  |
|---|--|
| 1 | LED indicator  |
| 2 | On and off button / change mode / turn off and on BT speaker announcements |
| 3 | USB-A for playback from memory device                                      |
| 4 | Charging socket (USB-C)  |
| 5 | "+" previous track, volume down, go to higher FM station button            |
| 6 | PLAY / PAUSE / FM station search button                                    |
| 7 | "-" previous track, volume down, go to lower FM station button             |
|   |  |
| S | Left and right channel (MONO)  |
| B | Passive emitter (rear side)  |
| M | Integrated microphone  |

## PUTTING INTO OPERATION

Before first use, be sure to read the safety instructions contained in this user's manual carefully.

Before first use, please charge the BT speaker to a maximum level. Press and hold the "on/off" button to turn on the BT speaker. Turning on and off is indicated by a sound signal. To turn the BT speaker off, press and hold the "on/off" button. Changing the source of the music being played is done by briefly pressing the "on/off" button when the power is on.

**Attention:** After a longer period of inactivity, the appliance will turn itself off.

## PAIRING DEVICES VIA BLUETOOTH

Turn on the BT speaker and search for its Bluetooth name "**SSS 1400**" in the device to be paired, then start the pairing process. If you are requested to enter a pairing code while your device and the BT speaker are pairing, use the code: "0000". To disconnect the paired device, end the pairing session on your mobile device or long hold the "Play / Pause" button. Disconnection will be indicated by an acoustic signal.

**Note:** To ensure a stable Bluetooth connection, make sure that the distance between the BT speaker and your connected device is kept within 10 meters.

## TWS FUNCTION

If you purchase another speaker ("**SSS 1400**"), you can pair them together for optimal stereo sound. Switch on both BT speakers, press and hold the + and - "volume down and up" buttons on one of the BT speakers together and wait until the BT speakers are connected. Connecting both BT speakers may take some time depending on searching for the slave BT speaker. You will be informed of a successful pairing by the voice signal "True wireless paired". Then connect your mobile device to the BT speaker. Changing the volume level will automatically affect both paired BT speakers simultaneously. To exit TWS mode, press and hold the + and - "volume down and up" buttons together until the message "True wireless disconnected" appears.

**Caution:** The TWS function is only available in the Bluetooth mode. The connected microphone will transfer voice only into the BT speaker to which it's connected. It is not possible to pair the device with another type of BT speaker with TWS function, even within a re-edition of products with a different Bluetooth name.

## RESET BUTTON

To reset the BT speaker, press and hold the “on/off” button until the BT speaker turns off. Then switch on the BT speaker using the power button.

**RECOMMENDATION:** If there is an unexpected problem with the BT speaker connection or function, reset the BT speaker.

## PLAY/PAUSE BUTTON

**In the music being played:** Press the “Play / Pause” button to start or pause music playback during Bluetooth connection or while a USB memory media is inserted.

**In the FM mode:** Press the button to start the autoscan function (search for available FM stations).

**Incoming calls:** An incoming call will be accompanied by an acoustic signal. Press the button to answer/end the call.

## VOLUME AND TRACK PLAYBACK CONTROL

The volume of the BT speaker is controlled using the + and - “volume down and up” buttons on the BT speaker. During playback of songs from the storage media, you can skip to the next song by pressing and holding the “+” button.

To select the previous track, press and hold the “-” button. In FM mode, long press the button to go to next “+” / previous “-” FM station.

## PLAYBACK FROM USB STORAGE MEDIA

### USB-A playback

Insert the USB storage disc with supported audio content in the USB slot. The USB source activates automatically and playback begins. Or, press “change mode” briefly to select “USB mode”. The music playback from the connected storage will start automatically. Upload your music to the storage in the order in which it will be played by the BT speaker.

**Attention:** Due to a number of devices on the market, compatibility and playback support are not guaranteed for all media. The memory devices you want to connect should be tested in advance and/or formatted as FAT32 file format. The playback of protected media, files or content stored inside them may fail.

USB-A does not have a power bank function – it is not used to charge mobile devices.

## FM RADIO

Press the “change mode” to switch the BT speaker to FM radio mode. Long press the „PLAY / PAUSE / FM station search“ button to start the FM station scan.

Once the stations are found and stored into the BT speaker's memory, you can switch between the stations found by holding down the “+” / “-” button (the next/previous stations in sequence).

**Note:** For best reception, place the device in an open area where the FM band will not be inhibited.

## TO DISABLE BT SPEAKER NOTIFICATION AND MESSAGES

Press the “on and off” button 3 times to turn notifications and alerts off or on. When turned off and on, the BT speaker will remember the last selected mode.



**Caution:** in the off state, no messages notifying about the BT speaker state will be shown. Charge the BT speaker as a preventive measure. Avoid using the sound at a maximum level.

## CHARGING THE BT SPEAKER

A charged battery provides power for several hours of operation at normal volume levels. A high volume consumes more battery power; therefore, we recommend listening at normal volume levels. To charge the BT speaker, please connect the charging adapter to the mains and then to the BT speaker.

Use your own 5V, 1A charging adapter. The battery status indicator will indicate charging in orange continuously during charging. A low battery level will be indicated by an audible alert.

**Attention:** For charging, use only the original accessories supplied with the appliance. To achieve the maximum battery lifetime, it is best not to start charging until the low battery audible alert is output. Charge continuously until fully charged. When the battery operating time becomes very short, the battery lifetime has been used up; we recommend that you have the battery replaced at your authorized centre.

**Recommendation:** If the unit is not to be used for an extended period of time, we recommend to fully charge the battery once every two to three months. We recommend to store the unit with a the battery charged to prevent irreparable damage to the battery (loss of capacity).

## INGRESSION PROTECTION (IPX6)

The device is waterproof, allowing you to listen to music near water. Ingression Protection IPX6 Protected against intense water spray. Water is coming from a 12.5mm jet at all angles at a flow rate of 100 litres per minute and a pressure of 100 kN/m<sup>2</sup> per square meter for at least 3 minutes from a 3m distance.

**Caution:** Always remember to seal the BT speaker inputs (No. 3–4 in the picture “BT speaker description”) with the original gasket and make sure that the gasket is not damaged. Never charge the unit during possible contact with fluids. The unit is designed for contact with clean water only without any additives. Avoid exposing the unit to contaminated or industrially treated fluids (such as lemonade, sea/salt water, oils, etc.).

## TECHNICAL SPECIFICATIONS

### SSS 1400

**Water-resistant bluetooth speaker with IPX6 protection class**

#### **Features:**

Water-resistant speaker with IPX6 protection class

The speaker cover is made of premium fabric

TWS function (True Wireless Stereo)

#### **Sound:**

Maximum speaker output 5 W (Impedance: 3  $\Omega$ )

1 speaker + 1 passive radiator

Frequency response: 80Hz–16kHz

Total harmonic distortion:  $\leq 10\%$

#### **Inputs:**

Bluetooth Audio 5.1

Playback from USB (up to 32GB / MP3)

#### **Other:**

FM PLL radio

Handsfree Function

Built-in rechargeable battery: 1,800 mAh Li-Ion

Playback time of up to 25 hours (@ 50% volume)

USB-C charging

Max. charging time 4 hours

Accessories: USB charging cable, user's manual

Dimensions: 99×76×50mm

Weight: 200g

|           |                           |                          |
|-----------|---------------------------|--------------------------|
| FM radio  | Band range                | 87.5 MHz – 108 MHz       |
| Bluetooth | Version                   | 5.1                      |
|           | Maximum Transmitter Power | 100mW @ 2.4GHz–2.4835GHz |
|           | Codec                     | SBC                      |
|           | Profiles                  | A2DP/AVRCP/HFP           |

## **INSTRUCTIONS AND INFORMATION ON THE DISPOSAL OF DISCARDED PACKAGING MATERIALS**

Take the packaging material to a collection yard for disposal.

## **DISPOSAL OF DISCARDED ELECTRICAL AND ELECTRONIC EQUIPMENT**



This symbol on the product, accessory or packaging indicates that the product must not be treated as normal household waste. Please dispose of this product in a collection yard designated for the recycling of electrical and electronic equipment. In some EU countries or in some European countries, you can return your products to your local retailer when you buy an equivalent new product. Correct disposal of this product helps save valuable natural resources and prevents possible adverse impacts on the environment and human health that might be caused by improper waste disposal. Please contact your local authority or the nearest waste collection yard for further details. Improper disposal of this type of waste may be subject to a legal fine.

### **For companies in the European Union**

If you need to dispose of electrical or electronic equipment, ask your dealer or supplier for the necessary information.

### **Disposal in countries outside the European Union**

To dispose of this product, please ask your local authorities or dealer for the necessary information on correct disposal.



This product complies with EU requirements.

FAST ČR, a.s. hereby declares that the radio device type SSS 1400 conforms to the 2014/53/EU directive. The full text of the EU Declaration of Conformity is available at: [www.sencor.eu](http://www.sencor.eu).

Changes in the text, design and technical specifications may be made without prior notice and we reserve the right to make such changes.

The original version is in Czech.

Manufacturer's address:

FAST ČR, a. s., U Sanitasu 1621, Říčany CZ-251 01

# SENCOR®

## EN Warranty conditions

**Warranty card is not a part of the device packaging.**

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

**This warranty is void especially if apply as follows:**

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be identified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

**Manufacturer:**

FAST ČR, a.s., U Sanitasy 1621, Řitany 251 01, Czech Republic

Visit [www.sencor.com](http://www.sencor.com) for detailed information about authorized service centers.

The original version of the instructions is in the Czech language, other language versions are made by the appropriate translation.

