



- |      |                        |   |
|------|------------------------|---|
| EN ■ | User Manual            | Digital Alarm Clock with Thermometer    |
| CZ ■ | Uživatelská příručka   | Digitální hodiny s budíkem a teploměrem |
| SK ■ | Používateľská príručka | Digitálne hodiny s budíkom a teplomerom |
| HU ■ | Felhasználói kézikönyv | Digitális óra ébresztővel és hőmérővel  |
| PL ■ | Podręcznik użytkownika | Zegar cyfrowy z budzikiem i termometrem |

## SAFETY DATA

- We strongly recommend that you read this “User Guide” and keep it in a safe place.
- Do not expose this unit to excessive force, shock, dust, temperature or moisture.
- Do not cover the vents with objects such as newspapers, curtains, etc.
- Do not immerse this unit in water. If you spill liquid on it, dry it immediately with a soft, lint-free cloth.
- Do not clean the unit with abrasive or corrosive materials.
- Do not damage the internal components of the unit. This would mean that the warranty would be terminated.
- Use only new batteries. Do not combine old batteries with new ones.
- Use only manufacturer recommended accessories.
- The images in this manual may differ from the actual appearance.
- When disposing of this product, ensure that it is taken for special disposal.
- Dispose of discarded batteries as directed.
- This product is intended for use only with the supplied adapter.
- CAUTION! There is a risk of explosion if the battery is replaced with the wrong type.
- Batteries must not be exposed to high or low extreme temperatures and low air pressure when used, stored or transported at high altitudes. Failure to follow this instruction may result in an explosion or leakage of flammable liquid or gas.
- Disposing of the battery by throwing it into a fire, placing it in a hot oven, or mechanically crushing or cutting the battery can cause an explosion.
- Do not swallow the battery, there is a risk of chemical splashes.
- Keep new and old batteries out of the reach of children.
- If the battery compartment cannot be safely closed, stop using the product and keep it out of the reach of children.
- If you suspect that batteries have been swallowed or that a battery has gotten into any part of the body, seek medical attention immediately.

- The mains socket must be located close to the unit and must be easily accessible.
- It is forbidden to reproduce the contents of this manual without the manufacturer's permission.
- The technical data and contents of the user manual of this product are subject to change without notice.
- If replacement parts must be used, make sure the service technician uses manufacturer specified replacement parts that have the same characteristics as the original parts. Unauthorised replacements may cause fire, electric shock or other hazards.
- This product is not a toy. Keep it out of children's reach.

Please read this manual carefully and thoroughly to become as familiar as possible with the functions and features of your new alarm clock. DO NOT use in environments with high temperature, humidity or corrosives.

**SAFETY PRECAUTIONS:** To ensure a long-term and reliable service, do not expose the unit to extreme temperatures or high humidity. For example, never place the unit in areas designed for swimming or near kitchen ranges or radiators.

If the unit malfunctions, return it to the nearest service centre. Do not attempt to repair the appliance on your own.

To prevent fire or electric shock, do not expose this appliance to rain or humidity.

To prevent electric shock, do not open the case of the device. Always have the unit repaired by a qualified service technician.

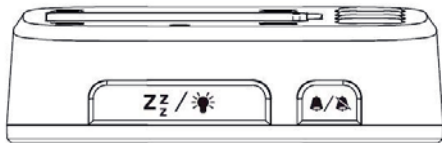 
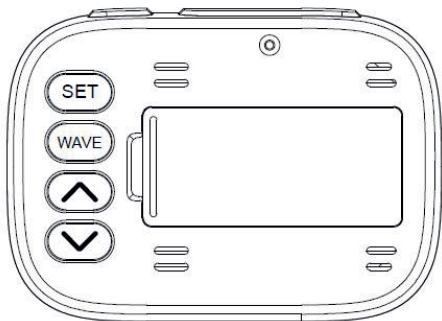 
Keep out of the reach of children. Ensure that children are kept a safe distance away from this alarm clock.

Ensure that the power supply is disconnected before cleaning this alarm clock. Always use a slightly dampened soft cloth for cleaning. Do not use cleaning products or abrasive cleaners.

Operating temperature: 0–40°C.

Operating humidity: 20–85%.

# PRODUCT DRAFT



## MAIN FUNCTIONS

- 6 Buttons: SET, WAVE, UP, DOWN, SNOOZE/LIGHT, ALARM
- 6-digit time display: hours, minutes,seconds
- Calendar tracks month, day and weekday
- RCC-DCF
- Time Zone Setting
- 8 languages: English, Italian, French, Dutch, Spanish, Danish, Russian, German
- Indoor temperature display in °C/°F
- Current time in 12/24hA
- Alarm with snooze function
- Key tone on/off
- White backlight
- Low Battery alert

## POWER ON OR RESET

- When starting up or resetting, the LCD full image will be displayed for 3 seconds, and the backlight will be on for 3 seconds at the same time. After the buzzer sounds BI, it will enter the standard mode, detect the temperature, and start RCC signal searching for 7 minutes.

## BUTTON FUNCTION

- In standard mode, press the “Alarm” button to turn on or off the alarm clock
- In standard mode, press and hold the “SET” button for 2 seconds to enter the time setting
- In standard mode, press and hold the “Alarm” button for 2 seconds to enter the alarm setting
- In standard mode, press the “DOWN” button to switch between °C/°F
- In standard mode, press the “°C/°F” button to switch between °C/°F

- In standard mode, press the “SNOOZE/LIGHT” button, the backlight will be on for 5 seconds
- When the alarm clock is ringing, press the “SNOOZE/LIGHT” button to enter the snooze mode (5 minutes), and press any other button to stop the alarm
- In standard mode, press and hold “WAVE” button to set RCC and time zone.

## RC SIGNAL

### **RC signal searching condition:**

The clock will start search the signal automatically when powering on or resetting. Press ‘WAVE’ button to stop the RC signal searching.

Under normal time displaying mode, press ‘WAVE’ button to enter into RC signal searching.

RC signal searching will start everyday automatically.

To turn off RCC eternally, press and hold “WAVE” to chose ON/OFF, when you chose off, the RCC will be turned off forever, unless the clock is re-powered on or re-set. In this case, press “Wave” , no function. If on is chosen, the clock will start searching RCC signal everyday, setting order as: on-time zone-confirm. In this case, press “wave” will turn on/off RCC signal searching immediately.


### **Automatically searching radio signal to adjust time:**


1:00 am, 2:00 am, 3:00 am, 4:00 am, and 5:00 am. If the signal is received successfully once a day, the remaining radio signals on that day will be ignored. The process will be repeated every day. RC time searching will last 7 minutes.

## RCC Receiving Icon:

When signal received, RC icon  will be flashing by "1HZ";

When signal received, RC icon  will be flashing by "1HZ";

When signal is weak and adjust the right signal, icon of  will be flashing by "1HZ" as well;


When signal successfully received, LCD will display complet RC icon , and exist RC searching.

## TIME SETTING FUNCTION

 

- In standard mode, press and hold the "SET" button for 2 seconds to enter the time setting.
- The setting item flashes at a frequency of 1HZ, press the "SET" button to select the setting item, the order is: 24/12HR → setting the time zone, which is set to 0 for the Czech Republic → hour → minute → year → MD /DM → month → day → language → exit
- When the setting item flashes at a frequency of 1HZ, press the "UP" button to add 1, and long press the "UP" button to quickly accumulate at 8 steps/second.
- When the setting item flashes at 1HZ frequency, press the "DOWN" button to decrease by 1, and long press the "DOWN" button to quickly decrease by 8 steps/second.
- In setting process, if there is no operation for 30 seconds, it will automatically exit and save the current set value.

## ALARM SETTING FUNCTION

- In standard mode, press and hold the "Alarm" button for 2 seconds to enter the alarm clock setting, the setting sequence: hour→minute→exit
- When the setting item flashes at 1HZ frequency, press the "UP" button to add 1, and long press the "UP" button to quickly accumulate at 8 steps/ second

- When the setting item flashes at 1HZ frequency, press the “DOWN” button to decrease by 1, and long press the “DOWN” button to quickly decrease by 8 steps/second
- If there is no operation for 30 seconds during the setting process, it will automatically exit and save the current setting value
- Press Alarm to turn on/off alarm. When the alarm clock is turned on,  is displayed on the screen on the right up corner of minute. When alarm is on, it will ring every day when the setting alarm time is up.

## ALARM FUNCTION

- Alarm ring time is 2 minutes, snooze ring time is 5 minutes
- Alarm format:  
 0-10 seconds: BI once per second  
 10-20 seconds: BI BI twice per second  
 21-30 seconds: BI BI BI BI fourth per second  
 31-120 seconds: continuous BI BI sounds
- When the alarm is ringing, press the “SNOOZE” button to enter snooze, the number of snooze is unlimited,  and  flash together when snoozing, press any other button to stop the snoozing ringing,

## BACKLIGHT FUNCTION

- Press the “SNOOZE/LIGHT” button to turn on the backlight for 5 seconds
- Indoor Temperature Detection Function
- Temperature detection range: -9.9°C~50.0°C, LL.L is displayed when the lower value is exceeded, and HH.H is displayed when the upper value is exceeded
- Detection cycle: 30 seconds



# OTHER FUNCTION

## Weekdays in 8 languages

Language	German	English	Italian	French	Dutch	Spanish	Denmark	Russian
Display	GER	ENG	ITA	FRE	DUT	SPA	DAN	RUS
SUNDAY	SON	SUN	DOM	DIM	ZON	DOM	SON	BOC
MONDAY	MON	MON	LUN	LUN	MAA	LUN	MAN	NOH
TUESDAY	DIE	TUE	MAR	MAR	DIN	MAR	TIR	BTO
WEDNESDAY	MIT	WED	MER	MER	WOE	MIE	ONS	CPE
THURSDAY	DON	THU	GIO	JEU	DON	JUE	TOR	4ET
FRIDAY	FRE	FRI	VEN	VEN	VRI	VIE	FRE	NRT
SATURDAY	SAM	SAT	SAB	SAM	ZAT	SAB	LOR	Cy6

## Environmental Protection



### Disposal of electrical & electronic equipment

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate collection point. If you are unsure of where this is contact local authority. Improper disposal may be harmful to the environment.

# TECHNICAL SPECIFICATIONS

## **Digital Alarm Clock with Thermometer**

Radio Controlled Clock by Signal DCF77

LCD Display with Short White Backlight

Indoor Temperature Reading

Digital Time, Date and Weekday

12 / 24 Hours Selectable Format

Calendar with 8 Weekday Languages

Wake Up with Buzzer

Alarm with Snooze Function

Low Battery Indicator

Indoor Temperature Range:  $-9.9^{\circ}\text{C} \sim +50^{\circ}\text{C}$

Temperature Display with  $^{\circ}\text{C} / ^{\circ}\text{F}$  Selectable

Desktop Usable

Power: 2 x 1,5 V type AAA ( Batteries Not Included )

Dimensions: ( w / h / d ) 96 x 69 x 32 mm

Weight: 88 g

## **INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS**

Dispose of packaging material at a public waste disposal site.

## **DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES**



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

### **For business entities in the European Union**

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

### **Disposal in other countries outside the European Union**

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



The product meets EU requirements.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

The original version is in the Czech language.

Address of the manufacturer: FAST ČR, a.s., Černokostelecká 1621, Říčany CZ-251 01

# SENCOR®

## EN Warranty conditions

**Warranty card is not a part of the device packaging.**

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

### **This warranty is void especially if apply as follows:**

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be identified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

### **Manufacturer:**

FAST ČR, a.s., U Sanitasu 1621, Říčany 251 01, Czech Republic

Visit **[www.sencor.com](http://www.sencor.com)** for detailed information about authorized service centers.

The original version of the instructions is in the Czech language, other language versions are made by the appropriate translation.

**FAST ČR, a. s., U Sanitasu 1621, Říčany CZ-251 01**