



EN ■ User Manual

CZ ■ Uživatelská příručka

SK ■ Používateľská príručka

HU ■ Felhasználói kézikönyv

PL ■ Podręcznik użytkownika

**Karaoke Party Microphone
with Speaker**

**Karaoke party mikrofón
s reproduktorem**

**Karaoke party mikrofón
s reproduktorem**

**Karaoke party mikrofón
hangszórával**

**Mikrofon imprezowy
karaoke z głośnikiem**

Safety Instructions

This product has been designed with the utmost safety in mind. However, incorrect use may lead to electric shock or fire. This is why users should observe the following instructions when using this device.

This device uses a semiconductor unit and contains no user serviceable parts. Do not disassemble this device, otherwise you are exposed to the risk of electric shock. If any damage to this product occurs, please have this product repaired by a qualified service technician.

Power

Power supply of this unit must be match the serial plate data.

Heat Source

Keep this unit out of heat sources like stove or direct sunlight.

Cleaning

Prior to cleaning, please disconnect power first. For cleaning, don't use liquid detergents or caustic liquids - just clean the unit with a soft cloth.

Heavy Objects

Do not place heavy objects on the unit, otherwise damage might occur.

Connecting Other Devices

Before connecting other devices to this unit, please make sure to disconnect power. Otherwise damage to the unit or personal injury might occur.

Faults to Be Repaired

If any of the following problems occurs, please disconnect power to the unit and contact a qualified service technician.

A. Power cord or plug is damaged.

- B. Liquids or other foreign objects have penetrated inside the product.
- C. If the unit does not work even if it's being operated according to the instructions, don't press any buttons other than those described in these instructions. Otherwise, damage to this unit may occur along with a more demanding repair.
- D. This unit has fallen on the ground from a big height.
- E. Burns can be smelled from the product inside.

Maintenance

If you don't have enough technical knowledge necessary to maintain this unit, don't attempt to repair it by yourself. By removing the cover, you are exposed to a risk of electric shock. If needed, please contact a qualified service technician.

Replacement of Parts

If you need to replace any part of this unit, ask your service technician to make a replacement for equal spare part models. If other spare part models are used for replacement, serious damage, electric shock or shortening the unit's lifetime may occur.

Safety Check

When done with the maintenance, ask your service technician to perform an on-site safety check to make sure that the unit's operation is safe.

Note:

Before using this product, read these instructions carefully and keep it well for future use.

Included Contents


1x SSS K1000

1x USB-C charging cable

1x audio cable (audio jack 3.5 mm)

1x user manual

SSS K1000 Description

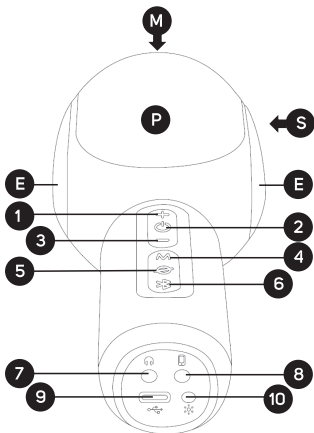

1	Next track button (long press), volume down (short press)
2	On/off button, change the active volume setting (microphone/audio source), LED charging indicator (red indication), LED device on indicator (white indication)
3	Previous track button (long press), volume down (short press)
4	Microphone voice setting change button
5	Button to suppress/restore vocals in the music being played, PLAY/PAUSE (press twice)
6	TWS button (long press) / pair and disconnect Bluetooth (press twice)
7	Input for connecting headphones, audio jack 3.5 mm
8	Input for AUX-IN audio jack 3.5 mm
9	USB-C input for charging
10	Change button (short press) / turn on and off the light effect (long press)
M	Sound sensor (microphone) – upper part of the device
E	Light effects – left and right side of the device
P	Passive radiator – front side of the device
S	Speaker (MONO) – rear side of the device

Putting into Operation

Before first use, be sure to read the safety instructions contained in this user's manual carefully.

Before using the SSS K1000 for the first time, charge the integrated battery to the maximum level. Press and hold the power button to turn on the SSS K1000. Turning on/off is indicated by a sound signal. To turn the BT speaker off, hold down the power on button.

Pairing Devices via Bluetooth

Turn on the SSS K1000 and search for its Bluetooth name "SSS K1000" in the device you want to pair and start the pairing process. If you are requested to enter a pairing code while your device and the BT speaker are pairing, use the code: "0000". To disconnect the paired device, end the pairing session on your mobile device or press the "TWS button" twice.

Note:

To ensure a stable Bluetooth connection, make sure that the distance between the BT speaker and your connected device is kept within 10 meters.

TWS Feature

If you purchase other identical devices ("SSS K1000"), you can pair both speakers together for optimum stereo sound. First, make sure that your device is not connected to any SSS K1000. Turn on both SSS K1000s by pressing and holding the "TWS Button", wait until the device automatically connects. Successful connection.

Changing the volume level using the volume control buttons will take effect automatically on both paired devices. Press and hold the power button on one of the devices to turn off both paired SSS K1000s.

Note:

In TWS mode, not all functions of the SSS K1000 are available to each other. TWS mode can only be used in Bluetooth mode.

Audio AUX IN

The SSS K1000 is equipped with a 3.5 mm jack. Your device can be connected to the SSS K1000 using the included audio cable. Then connect your headphones to the SSS K1000. Music will always be routed from your device via the AUX IN port directly to the headphones. Music via AUX IN will not be transferred to the SSS K1000 speaker.

**Caution:**

Before connecting your device and the SSS K1000, please make sure that the output signal from your device is set to minimum (minimum output volume). This will prevent the BT speaker from damage. When the audio cable is connected, the BT speaker does not meet the water ingress protection class.

Note:

Not all functions of the SSS K1000 are available in this mode. The Bluetooth function is not active when the audio jack is connected to the SSS K1000.

Headphone Input

Connect your headphones to the SSS K1000 for direct listening. Connecting headphones will automatically turn off the speaker and all audio will be directed to them.

**Caution:**

before putting the headphones in your ears, make sure that the output volume is set to the minimum level. This will prevent damage to your hearing.

PLAY/PAUSE

To call up the PLAY/PAUSE function, press the "PLAY/PAUSE" button twice. Function is only available in the Bluetooth mode. Make sure that an audio player is running on your smartphone.

Volume Control

First, use the "on/off, change active volume setting" button to select which volume you want to control:

- **Microphone control** – the selected microphone volume control function controls only the input from the voice sensor.

- **Audio content control** – the selected function controls the volume of the audio source that plays the audio content. For example, music played via Bluetooth.

Use the buttons on the SSS K1000 to control the volume (+/-). During music playback, you can press and hold the “+” button to jump to the next track playback. To select the previous track, press and hold the “-” button.

Light Effects

The SSS K1000 is equipped with light effects. The light effect is switched on/off by long pressing the “Light effects” button. To change the light effect, briefly press the “Light effects” button on the bottom of the device in the on state.

Charging the SSS K1000

A charged battery provides power for several hours of operation at normal volume levels. A high volume will consume the battery energy faster. To charge the SSS K1000, connect your minimum 5 V, 2 A charging adapter to the mains and then to the SSS K1000. The battery status indicator will glow red during charging until the battery is fully charged (In the on state, the indicator will be affected by the white on LED – the charging process will be indicated in pink). A low battery level will be indicated by an audible alert.

**Caution:**

For charging, use only the original accessories supplied with the appliance. To achieve the maximum battery lifetime, it is best not to start charging until the low battery audible alert is output. Charge continuously until fully charged. When the battery operating time becomes very short, the battery lifetime has been used up; we recommend that you have the battery replaced at your authorized centre.

Recommendation:

If the unit is not to be used for an extended period of time, we recommend to fully charge the battery once every two to three months. We recommend to store the unit with a the battery charged to prevent irreparable damage to the battery (loss of capacity).

SSS K1000 Technical Specifications

Karaoke Party Microphone with Speaker

Bluetooth wireless connection

LED lights

TWS function (True Wireless Stereo)

4 Voice Modes

- Speech
- Original sound
- Karaoke
- Professional

4 Light Modes

- Dynamic
- Dynamic breathing
- RGB
- Monochrome

Sound

Digital Sound Processor (DSP)

Maximum speaker output 10 W (Impedance: 3 Ω)

Frequency response: 130 Hz–20 kHz

1 wideband loudspeaker

Deep bass

Low distortion microphone diaphragm

Inputs

Bluetooth Audio 5.0

Audio Aux output for headphones or recording

Others

Built-in rechargeable battery: 2,500 mAh Li-Ion

Playback time up to 10 hours (50% volume level)

USB-C charging

Accessories: USB-C charging cable, 3.5 mm Aux cable, user manual

Dimensions: 204×75×72 mm

Weight: 340 g

Bluetooth	Version	5.0
	Maximum Transmitter Power	100mW @ 2.4GHz–2.4835GHz
	Codec	SBC
	Profiles	AVRCP, A2DP

INSTRUCTIONS AND INFORMATION ON THE DISPOSAL OF DISCARDED PACKAGING MATERIALS

Take the packaging material to a collection yard for disposal.

DISPOSAL OF DISCARDED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the product, accessory or packaging indicates that the product must not be treated as normal household waste. Please dispose of this product in a collection yard designated for the recycling of electrical and electronic equipment. In some EU countries or in some European countries, you can return your products to your local retailer when you buy an equivalent new product. By disposing of this product properly, you are helping to protect valuable natural resources and prevent the potential negative environmental and human health impacts that could result from improper waste disposal. Please contact your local authority or the nearest waste collection yard for further details. Improper disposal of this type of waste may be subject to a legal fine.

For Companies in the European Union

If you need to dispose of electrical or electronic equipment, ask your dealer or supplier for the necessary information.

Disposal in Countries Outside the European Union

If you wish to dispose of this product, please ask the Ministry or your dealer for the necessary information on the correct disposal method.

 The product meets the EU requirements.

FAST ČR, a.s. hereby declares that the radio equipment type SSS K1000 conforms to the 2014/53/EU Directive. For full version of the EU declaration of conformity, please refer to www.sencor.eu website.

Text, design and technical data are subject to change without notice and we reserve the right to make changes.

The original version is in Czech.

Manufacturer's address: FAST ČR, a.s., U Sanitasu 1621,
Říčany CZ-251 01

SENCOR®

EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be identified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Manufacturer:

FAST ČR, a.s., U Sanitasu 1621, Říčany 251 01, Czech Republic

Visit www.sencor.com for detailed information about authorized service centers.

The original version of the instructions is in the Czech language, other language versions are made by the appropriate translation.

