



**EN ■ User Manual**

**BT speaker**

**CZ ■ Uživatelská příručka**

**BT reproduktor**

**SK ■ Používateľská príručka**

**BT reproduktor**

**HU ■ Felhasználói kézikönyv**

**BT hangszóró**


**PL ■ Podręcznik użytkownika**

**Głośnik BT**

## INCLUDED CONTENTS

- 1x BT speaker SIRIUS 2 MICRO
- 1x USB-C charging cable
- 1x User's manual

## BT SPEAKER DESCRIPTION

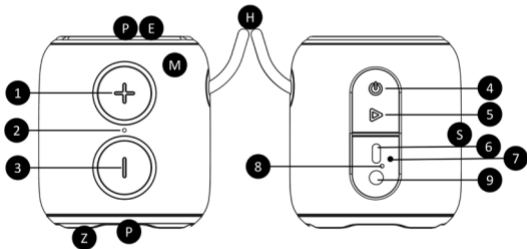

1	Next track button (long press), volume up button (short press)
2	BT speaker status LED
3	Previous track button (long press), volume down button (short press)
1+3	switching off / switching on / changing the LED effect (short press of the "+" and "-" buttons), switching off / switching on / changing the volume of the alert tone mode (long press of the "+" and "-" buttons)
4	BT speaker on / off button (long press), change source (short press)
5	Press PLAY/PAUSE/TWS button, accept and reject incoming call
6	Charging socket (USB-C)
7	RESET button
8	LED charging indicator
9	Socket for audio AUX IN mini jack (3.5 mm)
S	Speaker – common channel (MONO)
P	Passive radiator
E	LED effect
H	BT speaker carrying loop
M	Microphone
Z	BT speaker feet

## PUTTING INTO OPERATION

Before first use, be sure to read the safety instructions contained in this user's manual carefully.

Before first use, please charge the BT speaker to a maximum level. Hold down the power on button to turn on the BT speaker. Turning on/off is indicated by a sound signal. To turn the BT speaker off, hold down the power on button.

**Attention:** After a longer period of inactivity, the appliance will turns itself off.

## PAIRING DEVICES VIA BLUETOOTH

Turn on the BT speaker and search for its Bluetooth name "**SIRIUS 2 MICRO**" in the device to be paired, then start the pairing process. If you are requested to enter a pairing code while your device and the BT speaker are pairing, use the code: "0000". To disconnect a paired device, end the pairing session on your mobile device or briefly press the "On/Off" button twice. Disconnection will be indicated by an acoustic signal.

**Note:** To ensure a stable Bluetooth connection, make sure that the distance between the BT speaker and your connected device is kept within 10 meters.

**Attention:** Some connected devices support common volume setting. If some of the connected devices do not support this feature, the volume setting will operate separately on each device.

## TWS FEATURE

If you purchase another **SIRIUS 2 MICRO** Series speaker, you can pair them together for stereo sound. First, make sure your device is not connected to any BT speaker. Switch on both BT speakers, press and hold the PLAY/PAUSE/TWS button (this will be accompanied by an acoustic signal) and wait until the speakers automatically pair together. Successful pairing will also be accompanied by an acoustic signal. Then connect your mobile device to the BT speaker.

Changing the volume level using the volume control buttons will take effect automatically on both paired BT speakers. Pressing and holding the Power On button on one of the speakers will turn both paired speakers off. To exit TWS mode, hold down the PLAY/PAUSE/TWS button on one of the participating BT speakers until an acoustic signal sounds.

**RECOMMENDATION:** For optimal stereo sound, we recommend always pairing the same BT speaker types (SIRIUS 2 MICRO with SIRIUS 2 MICRO; SIRIUS 2 MINI with SIRIUS 2 MINI; SIRIUS 2 with SIRIUS 2; SIRIUS 2 MAXI with SIRIUS 2 MAXI).

**Warning:** The TWS feature is only available in the Bluetooth mode. It is not possible to pair the device with another type of BT speaker with TWS function, even within re-editions of products with a different name than (SIRIUS 2 MICRO, SIRIUS 2 MINI, SIRIUS 2, SIRIUS 2 MAXI).

## AUDIO AUX IN

The BT speaker is equipped with a 3.5mm jack. Your device can be connected to a BT speaker using an audio cable. First connect the audio plug to your device and then to the BT speaker's jack.

**Please note:** before connecting your device and BT speaker, make sure that the output signal from your device is at the minimum level (minimum output volume). This will prevent the BT speaker from damage. When the audio cable is connected, the BT speaker does not meet the water ingress protection class.

**Note:** In this mode, not all functions of the BT speaker are available. The Bluetooth function is not active if the audio jack is connected to the BT speaker.

## PLAY/PAUSE BUTTON

- Press the Play/Pause button to start or pause music playback during Bluetooth connection or when the memory card is inserted.
- The incoming call to a Bluetooth connected paired device will be announced with a tone which will interrupt the music being played back. To answer/hang up an incoming call, press the Play/Pause button briefly. Long press the Play/Pause button to reject an incoming call.

**Note:** Microphone reception in the BT speaker may be attenuated due to the waterproof nature of the device. To improve reception, turn the BT speaker microphone (“M” in the main picture) towards you and speak loudly near the BT speaker.

## VOLUME AND TRACK PLAYBACK CONTROL

To control the BT speaker’s volume (+/- buttons), use the buttons on the BT speaker. During music playback, you can press and hold the “+” button to jump to the next track playback. To select the previous track, press and hold the “-” button.

## TURNING OFF BT SPEAKER NOTIFICATIONS AND ALERTS

The BT speaker offers 2 volume levels for notification and alert messages and the option to switch off completely. By pressing and holding the volume down and volume up buttons together for 3 seconds, you can change the volume level, turn off or on the BT speaker’s notification and alert messages. The mode change will be accompanied by an acoustic tone. When turned off and on, the BT speaker will remember the last selected mode.

**Caution:** in the off state, no messages notifying about the BT speaker state will be shown. Charge the BT speaker as a preventive measure. Avoid using the sound at a maximum level.

## LIGHT EFFECTS

The BT speaker is equipped with a light effect on the top. The light effect is switched on/off/changed by briefly pressing the volume down and volume up buttons simultaneously.

## RESET BUTTON

Use a blunt and thin object to reset the BT speaker. Insert it into the hole marked RESET. Press lightly until the button click is heard.

**RECOMMENDATION:** If there is an unexpected problem with the BT speaker connection or its functions. Reset the BT speaker.

## CHARGING THE BT SPEAKER

A charged battery provides power for several hours of operation at normal volume levels. A high volume consumes more battery power; therefore, we recommend listening at normal volume levels. To charge the BT speaker, plug your charging adapter into the mains and then into the BT speaker. A low battery level will be indicated by an audible alert. At the first sign of a low battery, connect your rechargeable adapter. The charging process will be indicated by a red LED until the battery is de-energized or fully charged.



**Attention:** For charging, use only the original accessories supplied with the appliance. To achieve the maximum battery lifetime, it is best not to start charging until the low battery audible alert is output. Charge continuously until fully charged. When the battery operating time becomes very short, the battery lifetime has been used up; we recommend that you have the battery replaced at your authorized centre.

**Recommendation:** If the unit is not to be used for an extended period of time, we recommend to fully charge the battery once every two to three months. We recommend to store the unit with a the battery charged to prevent irreparable damage to the battery (loss of capacity). For optimal charging, use a 5V 2A charging adapter.

## INGRESSION PROTECTION (IPX7)

The unit is resistant against water thus allowing you to listen to your music in bath, shower, on the beach or by the pool. IPX7 water resistance guarantees the unit's function with slight splashing or immersing in water 1 m deep for up to 30 minutes. Full immersion is not recommended because of possible loss of the audio playback signal.

**Warning:** Always remember to seal the BT speaker inputs (No. 6–9 in the picture “BT speaker description”) with the original gasket and make sure that the gasket is not damaged. Never charge the unit during possible contact with fluids. The unit is designed for contact with clean water only without any additives. Avoid exposing the unit to contaminated or industrially treated fluids (such as lemonade, sea/salt water, oils, etc.).

## TECHNICAL SPECIFICATIONS

### SIRIUS 2 MICRO

Water-resistant Bluetooth speaker with IPX7 protection class

#### Features:

Water-resistant speaker with IPX7 protection class

The speaker cover is made of premium fabric

TWS function (True Wireless Stereo)

LED speaker illumination

#### Sound:

Maximum speaker output 5 W (Impedance: 4  $\Omega$ )

1 speakers + 1 passive radiators

Frequency response: 60 Hz – 20 kHz

Total harmonic distortion:  $\leq 1\%$

#### Inputs:

Bluetooth Audio 5.0

AUX audio input (3.5mm stereo connector)

#### Other:

Handsfree Function

Built-in rechargeable battery: 1200 mAh Li-Ion

Playback time of up to 10 hours (@ 50% volume)

USB-C charging

Max. charging time 3 hours

Accessories: USB charging cable, user's manual

Dimensions: 89×80×80 mm

Weight: 175 g

<b>Bluetooth</b>	Version	5.0
	Maximum Transmitter Power	100mW @ 2.4GHz– 2.4835GHz
	Codec	SBC
	Profiles	HFP V1.5; A2DP V1.2; AVRCP V1.4; HSP V1.2

## **INSTRUCTIONS AND INFORMATION ON THE DISPOSAL OF DISCARDED PACKAGING MATERIALS**

Take the packaging to a collection centre for recycling.

## **DISPOSAL OF DISCARDED ELECTRICAL AND ELECTRONIC EQUIPMENT**



This symbol on the product, accessory or packaging means that the product must not be disposed of in normal household waste. Please dispose of this product in a collection yard designated for the recycling of electrical and electronic equipment. In some EU countries or other European countries, you can return the old product to your local retailer when you buy a new equivalent product. By disposing of this product correctly, you help protect valuable natural resources and prevent potential negative environmental and human health impacts that could result from improper disposal. For more information, contact your local authorities or the nearest collection centre. You may be fined by law for improper disposal of this type of waste.

### **For companies in the EU**

If you need to dispose of electrical or electronic equipment, ask your dealer or supplier for the necessary information.

### **Disposal in countries outside the European Union**

Ask your local authorities or your dealer for information on proper disposal.



This product meets the EU requirements.

FAST ČR, a.s. hereby declares that the type of radio equipment SIRIUS 2 MICRO complies with the Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at: [www.sencor.eu](http://www.sencor.eu).

Text, design and technical data are subject to change without notice; we reserve the right to make such changes.

The original version is Czech.

Manufacturer: FAST ČR, a. s., U Sanitasu 1621, Říčany 251 01,  
Czech Republic

# SENCOR®

## EN Warranty conditions

### Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

#### **This warranty is void especially if apply as follows:**

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be identified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

#### **Manufacturer:**

FAST CR, a.s., U Sanitáru 1621, Říčany 251 01, Czech Republic

Visit [www.sencor.com](http://www.sencor.com) for detailed information about authorized service centers.

The original version of the instructions is in the Czech language, other language versions are made by the appropriate translation.



**FAST ČR, a.s.**, U Sanitasu 1621, Říčany CZ-251 01