

Electric Hot Plate

Instruction Manual

EN



SENCOR®

SCP 1500

SCP 2250

SCP 2251

Do read these instructions before using your hot plate and retain them for future reference, always follow them carefully.

Electric Hot Plate

SCP 1500, SCP 2250, SCP 2251

Safety instructions

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they will not play with the appliance.
- First check that the voltage marked on the product corresponds with your supply voltage.
- Choose a position convenient to an electrical socket but away from sources of water. Do not use the appliance in the immediate surroundings of a bath, a shower, or a swimming pool.
- The work surface must be heat resistant, dry and approximately 75cm high. A gap of at least 5cm must be left around the sides of the appliance, since the sides of the appliance may become hot during use. Do not place the appliance on window sills.
- Do not switch on the cooking plate without container on top.
- This appliance must not be positioned beneath cupboards.
- Do not attempt to move hot plate until it cooled down completely.
- Ensure that pans are situated centrally on the cooking plate(s) and the handles are safely positioned.
- Care must be taken when using oil or fat for cooking. Do ensure that overheating does not occur, by maintaining close supervision at all times.
- Once the cooking is over, turn the switch to "min" position. Ensure to unplug the hot plate from the electrical socket after use. Do not leave the appliance unattended in the presence of children.
- Do not place the unit near the flammable material such as curtains that may cause fire.
- Make sure that the electrical cable and plug cannot come in contact with water or humidity.
- Do not spray the appliance with any liquid. Never immerse any part of the appliance in water, or any other liquid.
- This appliance is for domestic use only and should not be used industrially. Do not use the appliance outdoors.
- Exercise extreme care whenever the appliance is to be used near the children. Always keep the appliance away from the children.



• **Caution! Hot surface! The temperature of accessible surfaces may be high when the appliance is in operation. Be careful and avoid touching hot surface which could result in skin burns. Unplug the appliance after each use and before handling of the appliance let it cool down as the accessible surfaces remain hot for a while even though the appliance is in operation no longer.**

- Disconnect the appliance from the power supply if it is to be moved, cleaned, or not to be used.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Do not use the appliance if the electrical cable is damaged or whenever any possible internal failure or incorrect operation has been detected.
- Do not attempt to make any repairs yourself. Always contact the official repair services for either mechanical or electrical repairs.
- Do not hold the electrical cable in hands and make sure it is not caught between furniture or any other object. Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Unplug the appliance by holding the plug; do not pull on the electrical cable.
- Do not use appliance for other than intended use.

Electric Hot Plate

SCP 1500, SCP 2250, SCP 2251

NE

How to use

- Select a suitable position close to an electric socket.
- Having suitably positioned the appliance ensure the control(s) are in the „min“ position.
- When using the hot plate for the first time, an invisible protective coating may still not be removed. It may cause some smoke, but it is normal reaction.
- Ensure that there are not any foreign articles such as water, food etc. on the heating element before switching on.
- The hot plate is now ready for use.
- Always use flat-bottomed saucepans/containers that ensure good contact with the cooking plates.
- The hot plate(s) have a range of temperatures. Use the lower heat settings (min to 3) for simmering and gentle heating. Use the higher settings (4 to MAX) for boiling.
- Due to the cooking plate(s) construction, a certain amount of residual heat will remain after switching off. This may be used to keep some foods warm for a short period.
- **Once the cooking is over, turn the switch to „min“ position. Ensure to unplug the hot plate from the electrical socket after each use.**

Maintenance & Cleaning

Ensure the plug is removed from the mains socket before attempting any cleaning.

All the surfaces may be cleaned simply by wiping over with a soft, damp cloth. For hard stains, we recommend using a non-scratch cream cleanser.

Do not immerse this appliance in water.

Do not use any abrasive cleaning agents, scourers etc. to clean the appliance.

The steel surface may be cleaned by using metal cleaning agent. Follow the recommendation mentioned on the label of the cleaning agent.

For ease of cleaning it is recommended that food spillage will be removed with a damp cloth while the cooking plate is still softly warm, but not hot.

Electric Hot Plate

SCP 1500, SCP 2250, SCP 2251

Technical features:

SCP 1500

230 V ~ 50 Hz, 1500 W

SCP 2250/SCP 2251

230 V ~ 50 Hz, 2250 W

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.