

 **Catler**[®]

2 SLICE TOASTER

400 SERIES
CLASS GRADE TOOLS

Instructions
for use



TS 4010

**2 SLICE
TOASTER**

CONTENTS

- 2 Congratulations
- 3 Catler recommends safety first
- 6 Know your TS 4010 Toaster
- 7 Operating your TS 4010 Toaster
- 8 Care and cleaning



Congratulations

on the purchase of your new TS 4010 Toaster

CATLER RECOMMENDS SAFETY FIRST

We at Catler are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions:

READ ALL INSTRUCTIONS BEFORE OPERATING AND SAVE FOR FUTURE REFERENCE

- Ensure that the power source is the same as the voltage requirements of the product.
- Bread may burn, therefore this toaster must not be used near or below curtains or other combustible material and it must be supervised at all times when in use.
- Keep appliance clear of walls and other heat sensitive materials. Minimum 200mm distance.
- Always turn the power off at the power outlet and then remove the plug from the power outlet before attempting to move the appliance, when the appliance is not in use and before cleaning or storing.
- Always use the appliance on a dry, level surface.
- Do not touch hot surfaces. Use side areas for lifting and carrying the appliance.
- Never immerse the power supply cord or appliance in water or any other form of liquid.
- At no time should the appliance be left unattended during toasting.
- This appliance is not intended for use by young children or infirm persons without supervision.
- Close supervision is required at all times when operating the appliance near children.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not leave the appliance where children can touch hot surfaces.
- Do not let the power supply cord touch hot surfaces or become knotted, or hang over the edge of a table or counter.
- Do not place on, or near a gas burner, electric element, or in a heated oven.
- This appliance is intended for household use only. Do not

use this appliance for other than its intended use.

- Not intended for use in moving vehicles or boats.
- Do not use outdoors.
- Ensure that bread to be toasted is the correct size for the toaster and does not protrude above the bread slice opening and is not too thick or long that it will jam or wedge the bread carriage.
- Never cover the appliance whilst it is plugged into the mains or while hot.
- Do not place cold toast on top of toasting slots to warm toast as this may prevent correct air circulation and damage the appliance.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- Regularly inspect the power supply cord, plug and actual appliance for any damage. If

found damaged in any way, immediately cease use of the appliance and return unit to the nearest authorised Breville centre for examination, replacement or repair.

- **WARNING:**
THE TEMPERATURE OF ACCESSIBLE SURFACES MAY BE HIGHER IF THE APPLIANCE IS IN OPERATION.
- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers. Children must not play with the appliance. Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision.

This TS 4010 Toaster is electronically controlled and will not lock down into the toast position until the toaster is plugged into a 230 volt power point and switched on.

NOTE



**FOR DOMESTIC USE ONLY.
DO NOT SUBMERGE IN WATER.
FULLY UNWIND THE POWER CORD BEFORE USE.**



**NEVER OPERATE TOASTER ON ITS SIDE. NEVER
ADD ANY FOOD SUBSTANCE TO THE BREAD, MUFFINS
OR CRUMPETS AS THIS CAN LEAD TO ELECTROCUTION
OR FIRE.
THIS TOASTER IS FOR TOASTING BREAD, CRUMPETS
AND MUFFINS ONLY. PLACING OTHER ITEMS IN THE
TOASTER CAN LEAD TO ELECTROCUTION OR FIRE.**

KNOW YOUR TS 4010 TOASTER



OPERATING YOUR TS 4010 TOASTER

- Before first use, remove any promotional material attached to your toaster.
- Insert the power plug into a 230 volt power outlet and then turn the power on.
- Place up to 2 slices of bread, muffins or bagels into the bread slots.
- Select the desired browning setting using the browning control dial. Colour settings range from '1' lightest to '9' darkest.
- When using the toaster for the first time, we suggest you toast on setting No. 4. Varying types of bread and personal preference may require a different browning setting, eg: raisin toast and white light textured breads may require a lower setting, whilst heavier textured rye breads may require a darker setting.

The toaster will remember your desired setting. When the power is turned off to the toaster, the digital control will default to your original desired setting when next switched on.

NOTE

- Press the high lift lever down until it clicks into place. Toasting cycle will automatically commence. As the toasting cycle progresses the LCD display will count down and the toasting progress indicator bars will go out until toasting is complete.

If the toaster is not plugged in and switched on at the power outlet, the high lift lever will not click into place.

NOTE



DO NOT LEAVE UNATTENDED WHEN IN USE AS TOAST MAY JAM.

„Lift and Look“

- The TS 4010 Toaster has a 'Lift and Look' feature which does not interrupt the cooking cycle. To check on the toasting progression during the cooking cycle, simply use the high lift lever to raise and lower toast.
- The toaster turns off when the desired toast colour is achieved and automatically raises the toast. The toasting process can be stopped at any time by pressing the 'Cancel' button located on the side of the toaster.

When the toasting cycle is complete, the toaster will 'beep' to indicate that the toast is ready. No need to wait while the toast cooks.

NOTE

„High Lift“

To remove smaller items such as crumpets and muffins, lift the high lift lever approximately 20mm above the starting position.



In the unlikely event that the bread or crumpet becomes jammed, switch the power off at the power outlet. Remove the power plug from the power outlet and then carefully ease the bread out of the toaster, ensuring that you do not damage the element.

Toasting frozen bread

To toast frozen bread, place the bread into the toasting slots, select the desired browning setting, lower the high lift lever until it clicks into place then press the defrost button, this will extend cooking time. The light will illuminate behind the defrost button when selected.

Reheating toast

This function allows you to reheat toast without additional toasting. To reheat, place toast into toasting slots, lower the high lift lever until it clicks into place and press the reheat button. The light will illuminate behind the reheat button when selected.

Toasting crumpets

This function adjusts heating elements to perfectly toast golden crumpets without burning the bottom. To toast crumpets, place crumpets into toasting slots with the tops facing inwards toward the middle of the toaster. Lower the high lift lever until it clicks into place and press the crumpet setting. This setting when activated adjusts the heating elements to produce additional heat to the centre elements to cook the top of your crumpet faster than the bottom. The light will illuminate behind the crumpet button when selected.

Crumpets must always face inwards towards the middle of the toaster. The toaster always reverts back to the bread toast setting after each toasting cycle, unless the crumpet control setting is activated again.

NOTE

Extender for toasting bakery

Put the extender onto the toasting slots and place the bread that you would like to toast. Select the desired browning setting and lower the high lift lever until it clicks into the place. Toasting starts automatically. During the toasting, the LCD illumination shows the countdown of toasting process. As soon as the process has been finished, the illumination will disappear.



NEVER ATTEMPT TO EXTRACT JAMMED TOAST, CRUMPETS OR MUFFINS OR ANY OTHER ITEM WITH A KNIFE OR ANY OTHER OBJECT, AS CONTACT WITH LIVE ELEMENTS MAY NOT ONLY DAMAGE THE ELEMENT, BUT CAUSE ELECTROCUTION.

CARE AND CLEANING

- The crumb tray should be cleaned out regularly. Do not allow breadcrumbs to accumulate in the bottom of the toaster.
- Always switch the power off at the outlet and then remove the plug from the outlet before cleaning the toaster.
- To remove any crumbs from the toaster, slide out the crumb tray from under the toaster, empty and replace it before using the toaster again.
- Wipe the outside of the toaster with a slightly dampened cloth and polish with a soft dry cloth.
- To clean the interior, turn the toaster upside down over the sink or rubbish bin and shake crumbs free.

Storage

Always switch off, then unplug from mains and allow to cool completely before storing.



DO NOT USE THE TOASTER WITHOUT THE SLIDE OUT CRUMB TRAY IN PLACE DO NOT ALLOW CRUMBS TO BUILD UP IN CRUMB TRAY. CRUMB TRAY SHOULD BE CLEANED OUT REGULARLY.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

The original version is in the Czech language.

Address of the manufacturer: FAST ČR, a.s., Černokostelecká 1621, Říčany CZ-251 01.

 Catler®

2 SLICE TOASTER

400 SERIES

CLASS GRADE TOOLS

Due to continued product improvement, the products illustrated/photographed in this brochure may vary slightly from the actual product.



W W W . C A T L E R . E U

CUSTOMER SERVICE

I N F O @ C A T L E R . E U