

KITCHEN SCALE

USER'S MANUAL

EN



SENCOR®

SKS 5300

Before first use, please read all instructions contained in this user manual carefully, even if you are already familiar with using similar products. Only use this product in accordance with the instructions described in the user manual. Keep the user's manual in a safe place for future use.

Save the original packaging, material, warranty card and proof of purchase receipt, at least for the duration of the warranty policy. If you need to ship this product back, pack it in the original cardboard box to ensure maximum protection during shipping or transport (e.g. when moving or when you need to send this product for repair)

KITCHEN SCALE

SKS 5300

CONTENTS

| | |
|---|---|
| IMPORTANT SAFETY NOTICE | 3 |
| INSTRUCTIONS FOR USE..... | 4 |
| CLEANING AND MAINTENANCE | 5 |
| DISPOSAL OF USED BATTERIES | 5 |
| TROUBLESHOOTING..... | 5 |
| TECHNICAL SPECIFICATIONS | 5 |
| DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES | 5 |
| INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS | 5 |

IMPORTANT SAFETY NOTICE

- 1) This appliance must not be used by persons (including children) with physical or mental disabilities or by inexperienced persons, unless properly trained or schooled in the safe use of the appliance, or unless they have been properly supervised by a qualified person who will be responsible for their safety.
- 2) Children must be supervised to ensure that they do not play with the appliance.
- 3) Under no circumstances should you repair or alter the product yourself. Entrust all repairs and adjustments to a specialised company/service. Failure to do so will void the warranty policy.
- 4) Only store and use the appliance away from flammable or volatile liquids.
- 5) Keep the scale away from extreme temperatures, direct sunlight and excessive humidity. Do not use in a dusty environment.
- 6) Do not place the product near heaters, open fires or other sources of heat.
- 7) This appliance is designed for household use. Do not use in industrial surroundings or outdoors!
- 8) Do not use the appliance for other purposes than those intended.
- 9) Do not spray the device with water or any other liquid. Do not submerge the appliance in water or any other liquid.
- 10) If you will not be using the product for an extended period of time, remove the batteries. Otherwise they may leak inside the product and cause irreparable damage.
- 11) Do not use rechargeable batteries in this product.

INSTRUCTIONS FOR USE

Turning on for the first time

- 1) Remove the battery compartment cover on the bottom part of the scale.
- 2) Remove the transparent insulation strip that prevents battery depletion, and put the cover back on.
- 3) Place the scale on a flat, dry surface.
- 4) Turn the scale on by touching the "ON/OFF" symbol.

Setting the weight unit

Your scale is equipped with a weight unit switch which enables it to display different weight units. If you would like to switch between units, repeatedly press the "UNIT" symbol (g --> fl.oz --> oz --> ml).

**Note:**

Weight units can be changed only if the scale has been set to zero and is at rest.

Query function (TARE)

- 1) Onto the scale, place a container whose contents you wish to weigh and press the "TARE" symbol to set the display to zero.
- 2) After zeroing out the display, place the ingredient to be weighed inside the container. The weight of the ingredient is displayed. If you wish to weigh more contents in the same container, press the "TARE" symbol again to zero out the display, and then you can weigh more contents. Place the ingredient to be weighed inside the container. Repeat this process as many times as you like.

**Note:**

- If you set the scale to zero with a container that weighs less than 50 g, the display will show "0 g" and will not take the container's weight into account.
- If you set the scale to zero with a container that weighs more than 50 g, the display will show "0 g" and the informational indicator "TARE" at the upper left of the display.

Overload indicator

If the scale is overloaded (max. capacity 5 kg), the display will show the symbol "EEEE".

Automatic shut-off function

Your scale is equipped with an automatic shut-off function. This function will turn the scale off if no activity is detected within 1 minute.

Turning the scale off manually

You can turn off the scale by pressing the "ON/OFF" symbol for 2 seconds.

Changing the batteries

If the display shows the dead battery icon, it is time to change the batteries.

- 1) Remove the battery compartment cover on the bottom part of the scale.
- 2) Remove the old batteries.
- 3) Place two 3V type CR2032 lithium batteries into the battery compartment. Pay attention to the polarity. The positive pole must always be upwards.

**Warning:**

- If you will not use the scale for a long time, always store it in a horizontal position. This position better protects the sensitive sensors located in the scale footings.
- Do not place or leave any objects on the scale that may place unnecessary stress on the sensors.
- Strong electromagnetic fields may negatively influence the weighing precision. Do not use the scale in environments with strong magnetic fields.

KITCHEN SCALE

SKS 5300

CLEANING AND MAINTENANCE

To clean the outer parts of the appliance, use a soft cloth dipped in lukewarm water. Do not use harsh cleaning fluids, paint thinners or solvents. These can damage the surface of the appliance.

DISPOSAL OF USED BATTERIES

This product comes with one alkaline battery. Do not place used batteries into regular household waste. Instead, use appropriate waste collection and recycling centres.

TROUBLESHOOTING

If the scale is displaying random values or if it is not turning off automatically, you need to restart it. In such cases, remove the batteries for about 10 seconds and place them back again. The scale should start to work normally.

TECHNICAL SPECIFICATIONS

Voltage: 2 × 3V lithium batteries (CR2032)
Maximum measurable weight: 5000 g
Precision: 1 g/0.1 fl.oz/0.1 oz/1 ml
Switching between weight units: g --> fl.oz --> oz --> ml
Dimensions: 200 × 17 mm

Changes in text and technical parameters reserved.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

HANDLING INSTRUCTIONS FOR DISPOSAL OF USED PACKAGING MATERIAL

Dispose of the packaging material in the designated place for waste disposal.



This product is in compliance with the requirements of the regulations of EU on electromagnetic compatibility and electrical safety.

