

# KITCHEN SCALE

USER MANUAL

EN



**SENCOR®**

SKS 5700

Before first use, please read all instructions contained in this user manual carefully, even if you are already familiar with using similar products. Only use this product in accordance with the instructions described in the user manual. Keep the user manual in a safe place for future use.

Save the original packaging, material, warranty card and proof of purchase receipt, at least for the duration of the warranty. If you need to ship this product, pack it in the original cardboard box to ensure maximum protection during shipping or transport (e.g., when moving or when you need to send this product for repair).

**CONTENTS**

IMPORTANT SAFETY INSTRUCTIONS .....	3
INSTRUCTIONS FOR USE .....	3
CLEANING AND MAINTENANCE .....	5
DISPOSAL OF USED BATTERIES .....	5
TROUBLESHOOTING .....	5
TECHNICAL DATA.....	5
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT .....	6
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS.....	6

## IMPORTANT SAFETY NOTICE

- 1) This appliance must not be used by persons (including children) with physical or mental disabilities or by inexperienced persons, unless properly trained or schooled in the safe use of the appliance, or unless they are properly supervised by a qualified person who will be responsible for their safety.
- 2) Children must be supervised to ensure that they do not play with the appliance.
- 3) Under no circumstances should you repair or alter the product yourself. Entrust all repairs and adjustments to a specialised company/service. Failure to do so will void the warranty.
- 4) Store and use the appliance away from flammable or volatile materials and substances.
- 5) Keep the scale away from extreme temperatures, direct sunlight and excessive humidity. Do not use in a dusty environment.
- 6) Do not place the product near heaters, open fires or other sources of heat.
- 7) This appliance is designed for household use. Do not use in industrial surroundings or outdoors!
- 8) Do not use the appliance for purposes other than those intended.
- 9) Do not spray the device with water or any other liquid. Do not submerge the appliance in water or any other liquid.
- 10) If you will not be using the product for an extended period of time, remove the batteries. Otherwise they may leak inside the product and cause irreparable damage.
- 11) Do not use rechargeable batteries in this product.

## INSTRUCTIONS FOR USE

### Turning on for the first time

- 1) Remove the battery compartment cover on the bottom part of the scale.
- 2) Insert two AAA batteries into the battery compartment. Place them on top of the removal strip, which will help you take them out later. Place them according to the polarity (plus and minus) positions indicated on the bottom of the battery compartment.
- 3) Close the cover.
- 4) Mount the metal rack onto the wall or kitchen unit with the prongs pointing away from the wall. Use the fasteners and screws included. When installing on drywall or similar material, use special anchoring material (not included).
- 5) Hang the scale on the rack by touching it to the rack and moving it downward. It will lock into a secure position.
- 6) Fold the weighing surface downward.
- 7) Turn the scale on by pressing the "ON/OFF" button. The "HI" sign will appear on the display. Within 2 seconds, the scale will be ready to use, and the display will show the numerical weight value. If necessary, you can zero it out by pressing the "TARE" button.

### Setting the weight unit

This scale can switch between weight units. If you would like to switch between units, repeatedly press the "UNIT" button (g --> lb.oz.).



**Note:**

Weight units can be changed only if the scale is at rest.

### Query function (TARE)

- 1) Onto the scale, place the container in which you would like to weigh the individual ingredients and press the "TARE" button to zero out the display.
- 2) Place the ingredient to be weighed inside the container. The ingredient's weight will appear on the display. If you wish to weigh more than one ingredient in the same container, press the "TARE" button again, and then you can weigh another ingredient. Repeat this process as many times as you like until you have weighed all of your ingredients.

### Overload indicator

If the scale is overloaded (max. capacity 3 kg), the display will show the symbol "EEEE".

### Setting the clock

- 1) Press and hold the "SET" button for 2 seconds. The indicator "TM" will blink on the display.
- 2) Set the hour by repeatedly pressing the "HRS" button.
- 3) Set the minutes by repeatedly pressing the "MINS" button.
- 4) Press the "SET" button again. When the "TM" indicator stops blinking, the clock is set.
- 5) The values entered will be set even if you don't press the "SET" button. This will occur automatically after 20 seconds.

**Note:**

- If you have set the unit "g", the time data will display in a 24-hour format.
- If you have set the unit "lb", the time data will display in a 12-hour format.

### Setting the timer

- 1) Press the "SET" button. The display will show the value "00:00" and the "TMR" indicator.
- 2) Press and hold the "SET" button for 2 seconds. The "TMR" indicator will blink.
- 3) Set the minutes by repeatedly pressing the "HRS" button.
- 4) Set the seconds by repeatedly pressing the "MINS" button.
- 5) Press the "SET" button again. The "TMR" indicator will stop blinking, and the entered time will immediately begin counting down.
- 6) After the countdown has ended, the scale will give off an acoustic signal for 20 seconds.
- 7) You can stop the signal by pressing the "SET", "HRS" or "MINS" button. The scale will go into standby mode, and the display will show the clock.
- 8) If you don't stop the signal as explained above, the scale will automatically go into clock mode after 40 seconds.

### Automatic shut-off function

This scale is equipped with an automatic shut-off function that will turn it off automatically if you have not used it for more than one minute. The time will appear on the display.

### Turning the scale off manually

Turn the scale off by pressing the "ON/OFF" button.

### Changing the batteries

If the display shows the dead battery icon, it is time to change the batteries.

- 1) Remove the battery compartment cover located on the bottom of the scale, and remove the old batteries by pulling the removal strip.
- 2) Remove the battery compartment cover on the bottom part of the scale.
- 3) Insert two AAA batteries into the battery compartment. Place them on top of the removal strip, which will help you take them out later. Place them according to the polarity (plus and minus) positions indicated on the bottom of the battery compartment.
- 4) Close the cover.

**Note:**

- 1) If you will not be using the scale for a long time, always store it in the folded position. This is easier on its very delicate sensors.
- 2) Do not place or leave any objects on the scale that may put unnecessary stress on the sensors.
- 3) Strong electromagnetic fields may negatively influence the weighing precision. Do not use the scale in environments with strong magnetic fields.

# KITCHEN SCALE

SKS 5700

EN

## CLEANING AND MAINTENANCE

To clean the outer parts of the appliance, use a soft cloth dipped in lukewarm water. Do not use aggressive cleaning agents, paint thinners or solvents. Using these solutions could damage the surface of the appliance.

## DISPOSAL OF USED BATTERIES

This product comes with alkaline batteries. Do not place used batteries into regular household waste. Discard them at facilities intended for disposal of used batteries.

## TROUBLESHOOTING

If the scale is displaying random values or if it is not turning off automatically, you need to restart it. In such cases, remove the batteries for about 10 seconds and place them back again. The scale should work normally again.

## TECHNICAL SPECIFICATIONS

Voltage:.....2x AAA batteries  
Maximum measurable weight:.....3,000 g  
Precision:..... 1 g / 0.1 oz.  
Switching between weight units: ..... g --> lb. oz.  
Maximum timer duration: .....99 minutes 59 seconds  
Dimensions (width x depth x height):..... 158 x 225 x 286 mm

### Disposal of Used Electrical & Electronic Equipment



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

### INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site intended for waste collection.



This product is in compliance with the requirements of the regulations of EU on electromagnetic compatibility and electrical safety.