

Digital scale

User's manual

EN



SENCOR[®]

SBS 2600

Before first use, please read all instructions contained in this user manual carefully, even if you are already familiar with using similar products. Only use this product in accordance with the instructions described in the user manual. Keep the user's manual in a safe place where it can be easily retrieved for future use.

Save the original packaging, material, warranty card and proof of purchase receipt, at least for the duration of the warranty policy. If you need to ship this product, pack it in the original cardboard box to ensure maximum protection during shipping or transport (e.g., when moving or when you need to send this product for repair).

CONTENTS

IMPORTANT SAFETY NOTICE	9
USER INSTRUCTIONS	10
MAINTENANCE AND CLEANING	11
TROUBLESHOOTING	11
DISPOSAL OF USED BATTERIES	11
TECHNICAL SPECIFICATIONS	11
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT	12
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS ...	12

IMPORTANT SAFETY NOTICE

- 1) Carefully unpack the product and take care not to throw away any part of the packaging before you find all the parts of the product.
- 2) This product must not be used by persons (including children) with mental disabilities, weak strength or by inexperienced persons, unless properly trained or schooled in the safe use of the product, or unless they have been properly supervised by a qualified person who will be responsible for their safety.
- 3) Children must be supervised to ensure that they do not play with the appliance.
- 4) Under no circumstances should you try to repair or alter the product on your own — danger of electric shock! Entrust all repairs and adjustments to a specialised company/service. If you open the product during the warranty period, you run the risk of voiding the warranty.
- 5) Never use this product if you have wet feet. Danger of injuries from slipping
- 6) Only store and use the product away from flammable or volatile materials and solutions.
- 7) Keep the product away from extreme temperatures, direct sunlight and excessive humidity. Do not use in a dusty environment.
- 8) Do not place the appliance near heaters, open fires and other sources of heat.
- 9) This product is designed for household use. Do not use in industrial surroundings or outdoors!
- 10) Do not use the product for purposes other than those intended.
- 11) Do not spray the product with water or any other liquid. Do not pour water or any other liquids into the product. Do not submerge the product in water or any other liquid.
- 12) Never jump on the scale.
- 13) The scale is designed only for the weighing of persons.
- 14) Do not use rechargeable batteries in this product.
- 15) If you will not be using the product for an extended period of time, remove the batteries. Otherwise they may leak inside the product and cause irreparable damage.
- 16) The manufacturer is not responsible for damages caused by incorrect use of this appliance or its accessories. Such damages include food spoilage, injuries, burns, scalding, fire, etc.


USER INSTRUCTIONS

Before first use

- 1) To ensure precise weighing, place the scale on a flat and hard surface such as a parquet floor, tiles, linoleum, etc. We do not recommend weighing on carpet.
- 2) Always take off your shoes before weighing.
- 3) We recommend checking your weight always at the same time, best in the morning after waking up. In the morning you eliminate any differences in your weight due to food intake, digestive process or physical activities.
- 4) The measured result may be misleading if weighing is done after intensive exercise, dieting or during extreme dehydration.
- 5) Stand still during measuring.
- 6) If you will not use the scale for a long time, store it in a horizontal position. This position better protects the sensitive sensors located in the scale footings.
- 7) Do not place or leave any objects on the scale that may place unnecessary stress on the sensors.
- 8) Strong electromagnetic fields may negatively influence the weighing precision. Do not use the scale in environments with strong magnetic fields.

Battery

Remove the battery compartment cover located on the under side of the scale (see picture) and remove the insulation tape, which prevents the discharge of the battery during transport.

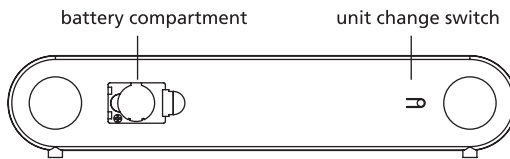

USE

This scale has a patented function "Auto-on". It is not necessary to tap or to otherwise activate into the operational mode before weighing. If you wish to find out your weight, simply step on the scale, which will immediately display your current weight without the need to wait.

Protection against overload

This scale is equipped with a sensor against overload. If any overload occurs, the display will show the warning symbol "----".

Automatic shut off function

Your scale is equipped with an automatic shut off function. This function will turn the scale off if no activities are detected within 10 seconds.

Switching between weight units

Your scale is equipped with a weight unit switch, which enables you to display the weight in different units. If you want to switch between metric (kilograms) and imperial units (pounds or stones), move the switch on the rear of the scale to the applicable position (kg --> lb --> st). The change in units will be shown on the display of the scale.

Note

1 lb (pound) = 0,45 kg

1 st (stone) = 6,35 kg

Changing the battery

If "Lo" is displayed, you need to replace the battery.

Open the battery compartment located on the under side of the scale and replace the battery for a new one. Ensure to maintain the correct polarity (the positive pole of the battery must always point in the upward direction).

MAINTENANCE AND CLEANING

To clean the outer parts of the scale, use a soft cloth dipped in lukewarm water. Do not use harsh cleaning fluids, paint thinners or solvents. These can damage the surface of the appliance.

TROUBLESHOOTING

If the scale is displaying random values or if it is not turning off automatically, you need to restart it. In such cases, remove the battery for about 10 seconds and place it back again. The scale should start to work normally.

DISPOSAL OF USED BATTERIES

This product comes with an alkaline battery. Used batteries do not belong in domestic waste. Instead, use the appropriate waste collection and recycling centres.

TECHNICAL SPECIFICATIONS

Power supply	3V lithium battery (CR2032)
Measuring range:	2.5 – 150 kg
Weighing precision:	100 g
Switching between weight units:	kg --> lb --> st
Visible display size	69 x 32 mm
Dimensions (w x l x h)	321 x 302 x 18 mm
Weight	1.56 kg

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material in a location determined by the town council for the disposal of wastes.



This product is in compliance with the requirements of the regulations of EU on electromagnetic compatibility and electrical safety.