

# HAIR STRAIGHTENER

User's manual

EN



## SENCOR®

SHI 650WD

Before turning on the appliance, please, read the user's manual, even if you already know how to use similar types of devices. Only use the appliance in the manner described in this user manual. Keep the user's manual in a safe place where it can be easily retrieved for future use.

## CONTENTS

IMPORTANT NOTICES.....	2
DESCRIPTION OF THE PRODUCT .....	4
INSTRUCTIONS FOR USE.....	4
CLEANING AND MAINTENANCE .....	6
TECHNICAL DETAILS.....	6
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT .....	6
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS ..	6

## IMPORTANT SAFETY NOTICE

- 1) We recommend saving the original shipping cardboard box, packaging material, receipt and warranty card for the duration of warranty. In the case of transportation, pack the product using the original packaging materials only.
- 2) This product may not be used by any persons (including children) with mental disabilities, weak strength or by inexperienced persons, unless they have been properly trained or schooled in the safe use of the product, or unless they are properly supervised by a qualified person who is responsible for their safety.
- 3) Children must be supervised to ensure that they do not play with the product.
- 4) Before connecting this product to the socket outlet, make sure the voltage stated on the label of the product corresponds to the voltage in your wall socket.
- 5) Never use accessories, which have not been supplied with this product or which are not designed for this product.
- 6) Do not place the power cord near hot places or sharp objects. Do not place heavy objects on the power cord. Position the cord so that it will not be stepped on or tripped over. Make sure the power cord is not touching a hot surface.
- 7) If the power cord of the product is damaged have it repaired by an authorised service technician to prevent causing a dangerous situation. It is forbidden to use the product if it has a damaged power cord or plug.
- 8) Do not disconnect the power cord from the wall outlet by pulling the cord.
- 9) In no case should you attempt to repair the unit yourself, do not make any amendments to it - danger of electric shock! Entrust all repairs and adjustments to a specialised company/service. Failure to do so will expose you to a danger of voiding the warranty policy.
- 10) Never use the product if you have wet hands or feet.
- 11) Only store and use the product away from flammable or volatile materials and solutions.
- 12) This product is designed for indoor use, do not use outdoors.
- 13) Do not use the product for purposes other than those intended.
- 14) Do not spray the product with water or any other liquid. Do not pour water or any other liquids onto the product. Do not submerge the product in water or in any other liquid.
- 15) Make sure the product will not come in contact with water. Never use the product near a bathtub, wash basin or any other containers filled with water.
- 16) If you are not using the product, or if you know that you will not be using it soon, turn it off and disconnect the power cord from the wall socket. Prior to cleaning, proceed in the same manner.
- 17) Never leave the product switched on without supervision.
- 18) Before storing always allow the product to fully cool down.
- 19) If the product is operating or has not fully cooled down, do not place it on soft underlays (e.g. carpets, bed linen, towels, etc.) and never cover it.
- 20) Do not use the product in an environment with excessive dust.

# HAIR STRAIGHTENER

SHI 650WD

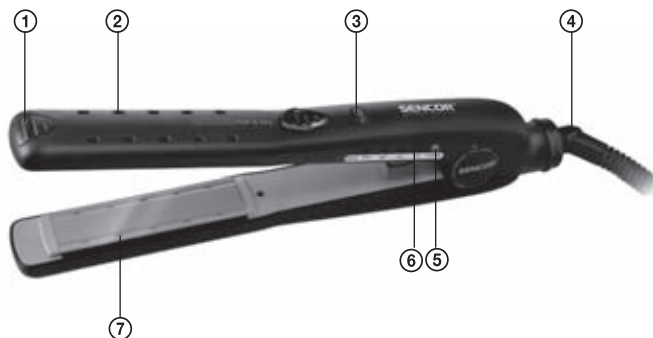
EN

- 21) Use extra care if the product is used near children. Always keep the product out of the reach of children.
- 22) Prevent the product from coming into contact with skin.
- 23) Never use the iron on synthetic hair or on animal fur.
- 24) Thoroughly clean dust, fats and hairdressing agents (e.g. gels, mousse, sprays, etc.) from the flattening plates after each use – these lower the performance and lifetime of the plates.
- 25) For increased safety we recommend you install a protective device against residual voltage with a sensitivity up to 30 mA (talk to your electrician about installation options).

# HAIR STRAIGHTENER

SHI 650WD

## PRODUCT DESCRIPTION

**A**

- ① Heat resistant tip
- ② Steam exhaust openings
- ③ Main power switch
- ④ Turning end of the power cord
- ⑤ POWER indicator light
- ⑥ Temperature indicator light
- ⑦ Steam exhaust openings

## INSTRUCTIONS FOR USE

### Connecting and setting up the iron

- 1) Connect the iron to a power socket.
- 2) The red POWER light will automatically turn on (the ironing plates remain cold).
- 3) Now using the main power switch set the desired temperature (140° C / 160° C / 180° C / 200° C). The set temperature will be indicated by the relevant LED light.
- 4) The iron is ready for use at a temperature of 140° C in 40 seconds.

### Turning off the iron

If you want to turn off the iron, press the main switch repeatedly through all the temperatures until only the red LED light is on. The iron will cool down and the light will signal only its connection to the power grid.

## Procedure for ironing hair

This iron is equipped with special openings for removing steam thanks to which it is also possible to iron damp hair. However, it is necessary to understand that the iron is not a substitute for a hair dryer and so only use it on damp hair, and not on wet hair. Ironing damp hair helps to form hard to form types of hair. The created water steam escapes from the hair through the openings in the iron.

- 1) Thoroughly wash the hair, depending on need either partially or fully dry the hair and brush through thoroughly so that it is smooth and without knots.
- 2) Separate this prepared hair using clips into equally wide strands (about 5 cm wide).
- 3) Start to iron the back part of the head at the lower strands of hair – at the root place the strand of hair between the plates and gently press the handle of the iron. With a sliding motion pull the iron all the way to the ends of the hair.
- 4) Repeat the procedure for the same strand of hair until you achieve the desired appearance.
- 5) Continue in the same way with the remaining strands of hair (first on the front part of the head and ending at the sides).
- 6) Before the final combing, allow the hair to fully cool down.



### Note:

- Do not leave the iron on the one spot for longer than 2 seconds as hair could be burnt.
- Use the iron only on healthy hair.
- Do not use the iron on oily, stuck together or sweaty hair.
- On perm or coloured hair only use the iron infrequently.



### Tip:

- Adjust the speed of movement of the iron on the hair strands to their character (fine hair is more sensitive to a hot surface and requires a significantly shorter ironing time than stronger hair).
- If you need to shape hair into locks, you can use your other hand to safely clamp the iron with the thumb and index finger in the area of the special rubber tips, which prevent your fingers from slipping and protect them from higher temperatures.

## Appropriate temperature settings for various types of hair:

- 1) For straightening rough, curled or hard hair:
  - set a higher temperature (180° C or 200° C)
- 2) For fine, slight to medium curled hair:
  - set a lower temperature (140° C or 160° C)
- 3) For blended or coloured hair:
  - start at a low temperature and gradually increase it

# HAIR STRAIGHTENER

SHI 650WD

## CLEANING AND MAINTENANCE

To clean the outside parts of the product and the ironing plates use a fine cloth dipped in lukewarm water. Do not use aggressive cleaning agents, paint thinners or solvents. Using these solutions could damage the surface of the product. The surface of the iron plates made from a tourmaline ceramic surface does not need any further cleaning.



### Note:

Clean the ironing plates only after they have fully cooled down!

## TECHNICAL SPECIFICATIONS

Nominal voltage .....	110 - 240 V AC (alternate current)
Maximum power input .....	32 W
Safety class (with regard to electric shock protection) .....	II
Time for heating up to operating temperature .....	40 seconds
Temperature control .....	in the range 140° C - 200° C
Power cord joint .....	360°

## DISPOSAL OF USED ELECTRICAL & ELECTRONIC EQUIPMENT



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material in a location determined by the municipality for the disposal of wastes.



This product meets all the basic EU regulation requirements that relate to it.