

# Electric Hot Plate

Instruction Manual

EN



**SENCOR®**

SCP 1501  
SCP 2252

Do read these instructions before using your hot plate and retain them for future reference, always follow them carefully.

## Safety instructions

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they will not play with the appliance.
- First check that the voltage marked on the product corresponds with your supply voltage.
- Choose a position convenient to an electrical socket but away from sources of water. Do not use the appliance in the immediate surroundings of a bath, a shower, or a swimming pool.
- The work surface must be heat resistant, dry and approximately 75cm high. A gap of at least 5cm must be left around the sides of the appliance, since the sides of the appliance may become hot during use. Do not place the appliance on window sills.
- Do not switch on the cooking plate without container on top.
- This appliance must not be positioned beneath cupboards.
- Do not attempt to move hot plate until it cooled down completely.
- Ensure that pans are situated centrally on the cooking plate(s) and the handles are safely positioned.
- Care must be taken when using oil or fat for cooking. Do ensure that overheating does not occur, by maintaining close supervision at all times.
- Once the cooking is over, turn the switch to "min" position. Ensure to unplug the hot plate from the electrical socket after use. Do not leave the appliance unattended in the presence of children.
- Do not place the unit near the flammable material such as curtains that may cause fire.
- Make sure that the electrical cable and plug cannot come in contact with water or humidity.
- Do not spray the appliance with any liquid. Never immerse any part of the appliance in water, or any other liquid.
- This appliance is for domestic use only and should not be used industrially. Do not use the appliance outdoors.
- Exercise extreme care whenever the appliance is to be used near the children. Always keep the appliance away from the children.



• **Caution! Hot surface! The temperature of accessible surfaces may be high when the appliance is in operation. Be careful and avoid touching hot surface which could result in skin burns. Unplug the appliance after each use and before handling of the appliance let it cool down as the accessible surfaces remain hot for a while even though the appliance is in operation no longer.**

- Disconnect the appliance from the power supply if it is to be moved, cleaned, or not to be used.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Do not use the appliance if the electrical cable is damaged or whenever any possible internal failure or incorrect operation has been detected.
- Do not attempt to make any repairs yourself. Always contact the official repair services for either mechanical or electrical repairs.
- Do not hold the electrical cable in hands and make sure it is not caught between furniture or any other object. Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Unplug the appliance by holding the plug; do not pull on the electrical cable.
- Do not use appliance for other than intended use.

# Electric Hot Plate

SCP 1501, SCP 2252

NE

## How to use

- Select a suitable position close to an electric socket.
- Having suitably positioned the appliance ensure the control(s) are in the „min“ position.
- When using the hot plate for the first time, an invisible protective coating may still not be removed. It may cause some smoke, but it is normal reaction.
- Ensure that there are not any foreign articles such as water, food etc. on the heating element before switching on.
- The hot plate is now ready for use.
- Always use flat-bottomed saucepans/containers that ensure good contact with the cooking plates.
- The hot plate(s) have a range of temperatures. Use the lower heat settings (min to 3) for simmering and gentle heating. Use the higher settings (4 to MAX) for boiling.
- Due to the cooking plate(s) construction, a certain amount of residual heat will remain after switching off. This may be used to keep some foods warm for a short period.
- **Once the cooking is over, turn the switch to „min“ position. Ensure to unplug the hot plate from the electrical socket after each use.**

## Maintenance & Cleaning

Ensure the plug is removed from the mains socket before attempting any cleaning.

All the surfaces may be cleaned simply by wiping over with a soft, damp cloth. For hard stains, we recommend using a non-scratch cream cleanser.

Do not immerse this appliance in water.

Do not use any abrasive cleaning agents, scourers etc. to clean the appliance.

The steel surface may be cleaned by using metal cleaning agent. Follow the recommendation mentioned on the label of the cleaning agent.

For ease of cleaning it is recommended that food spillage will be removed with a damp cloth while the cooking plate is still softly warm, but not hot.

## Technical features:

SCP 1501

230 V ~ 50 Hz, 1500 W

SCP 2252

230 V ~ 50 Hz, 2250 W

## Disposal of Used Electrical & Electronic Equipment



This symbol on products or original documents means that used electric or electronic products must not be added to standard communal waste. For proper disposal, renewal and recycling hand over these products to determined collection points. Or as an alternative in some European Union states or other European countries you may return your products to the local retailer when buying an equivalent new product. Through the correct disposal of this product you will help retain valuable natural resources and prevent potential negative effects on the environment, which could result from its incorrect disposal of waste. Ask about other details at the local council or at the nearest collection point. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

### For business entities in European Union states

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

### Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer. This product is in accordance with the requirements of EU regulations for electromagnetic compatibility and electrical safety.

## Instruction for handling with used packaging

Used packaging should be dumped on the place appointed for dumping of the waste, or into the junk.



This product is in compliance with the requirements of the regulations of EU on electromagnetic compatibility and electrical safety.

Changes in the text, design and technical specifications may change without prior notice and we reserve the right to make these changes.