

SENCOR[®]

SCF 2004

Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of devices. Use the device only as described in this user's manual. Keep the user's manual in a safe place for future use.

We recommend saving the original shipping cardboard box, packaging material, receipt and warranty for the period of the warranty at minimum. In case of transportation, pack the product using the original packaging materials only.

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	2
DESCRIPTION OF THE DEVICE	3
ASSEMBLY OF THE DEVICE	3
OPERATION OF THE DEVICE	4
CLEANING	4
STORAGE.....	4
TECHNICAL SPECIFICATIONS.....	4

IMPORTANT SAFETY INSTRUCTIONS

Read carefully and keep for future reference.



Warning! In order not to avoid the overheating the device do not cover it!


- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they will not play with the appliance.
- Do not use the heater unless the feet are correctly attached.
- Ensure the power supply to the socket into which the heater is plugged is in accordance with the rating label on the heater and that the socket is earthed.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool or other sources of water, liquids or humidity.
- Do not use outdoors.
- Do not place the heater on carpets having a very deep and long pile or near veiling, curtains, furniture or other flammable materials.
- Always ensure that the heater is placed on a firm level surface.
- Do not position the heater in front of, or immediately below, a wall socket.



WARNING: Do not operate the appliance with a programming device, timer or any other part that turn on the appliance automatically in order to avoid the risk of fire or other dangerous situation if the device is covered or wrongly placed.

- Do not insert any object through the heat outlet or air intake grilles of the heater. Risk of electric shock, fire or product damage.
- If you wish to displace the device, at first unplug the device from power outlet. Use handle on the sides for displacing.
- Do not use the heater if the power cord is damaged. If the power cord is damaged, it must be replaced by a recognized service agent or other qualified person to avoid the risk of hazard.
- Do not expose persons or animals to direct hot airflow for long time. It may damage their health.


DESCRIPTION OF THE DEVICE

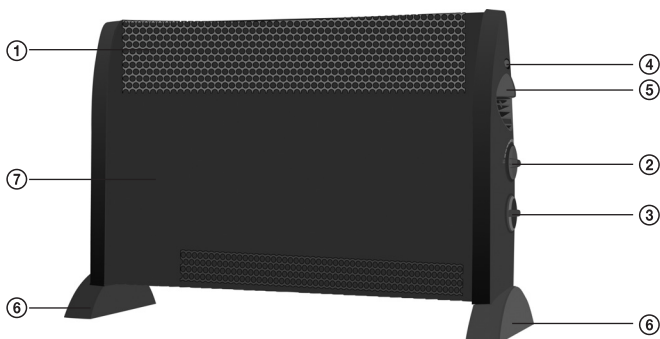

- ① Outlet slots for hot air
- ② Thermostat knob
- ③ Power switch
 - 0 – Off
 - I – 900 W
 - II – 1850 W
- ④ Indication light
- ⑤ Handle
- ⑥ Feet
- ⑦ Device body

ASSEMBLY OF THE DEVICE

Before using the device, the feet (supplied in the carton) must be fitted to the unit. These are to be attached to the base of the device as shows picture below. Ensure that they are located correctly in the bottom ends of the device side moldings.

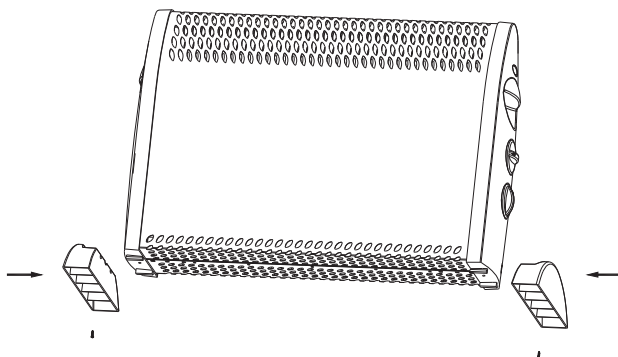

OPERATION OF THE DEVICE

Note: It is normal when the device is turned on for the first time or when it is turned on after having not been used for a long period of time, the device may emit some smell and fumes. This will disappear when the device has been on a short while.

Before connecting the device to the power outlet:

- a) check if the electrical voltage of the main supply matches the rated voltage marked on the rating label of the appliance,
- b) check if the power outlet, power cord and the plug are undamaged.
- c) place the appliance on a stable and flat surface with regard to safety instructions.
- d) ensure that there is enough space for the convector heater, at least 1 m. Do not insert any objects into air inlet and outlet.

Insert the plug to the power outlet.

Turn thermostat knob in a clockwise direction to the maximum setting.

Turn on the heating element using the power switch on the side panel. When the heating elements are on the switch will illuminate. For maximum heat it is necessary to set the switch into position II.

When the desired room temperature has been reached, the thermostat knob should be turned slowly anti-clockwise until the thermostat is heard to click off. The light goes off and the heating elements turn off. After this the heater will keep the air temperature in the room at the set level by switching on and off automatically. If you are not able to reach the desired temperature it is necessary to use another convector.

CLEANING

Always turn off the heater before cleaning. Thermostat knob set to minimum, turn power switch to position 0. Unplug the device from the wall socket and allow it to cool down. Clean the outside of the heater by wiping with a damp cloth and wipe with a dry cloth. Do not use any detergents or abrasives and do not allow any water to enter the heater.

Make higher attention while operating with water. Water mustn't enter to the inner part of the device. Never immerse the device into water or other liquid.

STORAGE

Before storage turn off the device, unplug from the wall socket and allow the device to cool down. When the heater is not used for long periods of time, it should be protected from dust and stored in a clean dry place.

TECHNICAL SPECIFICATIONS

220–240 V~ 50 Hz, 1700–2000 W

Dimensions: 59 × 43 × 20 cm (w×h×d)

Weight: 2,6 kg

HANDLING INSTRUCTIONS FOR THE DISPOSAL OF USED PACKAGING MATERIAL

Dispose of the packaging material in the designated place for waste disposal.

ELECTRONIC AND ELECTRIC APPLIANCE DISPOSAL INSTRUCTIONS



Information for users for the disposal of electric and electronic devices

This symbol on products or original documents means that used electric or electronic products must not be added to standard communal waste. For proper disposal, renewal and recycling hand over these products to determined collection points. Or as an alternative is some European Union states or other European countries you may return your products to the local retailer when buying an equivalent new product.

Through the correct disposal of this product you will help retain valuable natural resources and prevent potential negative effects on the environment, which could result from its incorrect disposal of waste. Ask about other details at the local council or at the nearest collection point. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer. This product is in accordance with the requirements of EU regulations for electromagnetic compatibility and electrical safety.



This product is in compliance with the requirements of the regulations of EU on electromagnetic compatibility and electrical safety.

Changes in the text, design and technical specifications may change without prior notice and we reserve the right to make these changes.