

CERAMIC HEATER USER'S MANUAL

EN



SENCOR[®]

SFH 8012

Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of devices. Only use the appliance in the manner described in this user manual. Keep the user's manual in a safe place for future use.

We recommend saving the original shipping cardboard box, packaging material, receipt and warranty for the period of the warranty at minimum. In the case of transportation, pack the product using the original packaging materials only.

CONTENTS

IMPORTANT SAFETY PRECAUTIONS	2
DESCRIPTION OF THE DEVICE	3
OPERATION OF DEVICE	3
CLEANING AND MAINTENANCE.....	4
TECHNICAL SPECIFICATIONS.....	5
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT.....	5

IMPORTANT SAFETY PRECAUTIONS


- Remove the packaging from the device and check whether the device is in good order. Do not leave packaging material, e.g. bags and clips within reach of children.
- The voltage in the power outlet to which the device will be connected must correspond to the nominal voltage on the type label of the device. The power socket must be grounded.
- Do not connect the device to a extension cord or two way adapter.
- Use the device only for the intended purpose, namely as a heater for home use.
- The use of electrical devices requires the basic knowledge of basic rules, which are:
 - never touch the device with wet or damp hands.
 - never subject the device to the weather (rain, sun, etc.).
- Always place the device on an even and stable surface.
- Do not use the device near a bath, shower, wash basin, pool or other sources of water, liquids or humidity.
- Do not place the power cord on the device while it is hot.
- Do not use the heater near furniture, curtains or drapes, shelves or other flammable materials.
- Never place the device directly in front of or under a socket.
- Never insert any objects through the front protective grill for the outflow of air or the back grill for the inflow of air. A electrical short could occur, a fire might start or the device may be damaged.
- Do not leave the device in operation if you are getting ready to go to sleep. If nonetheless you wish to leave it in operation, make sure that you have remove all items out of reach, such as textiles, bed linen and other flammable materials, so as to prevent a dangerous situation occurring.
- Never touch the front grill of the heater during operation, so as to prevent skin burns.



- **Warning!** To prevent the overheating of the device, do not cover with any items.
- **CAUTION:** Do not use this device with a programmer, time switch or any other device which would switch the device on automatically, because there is a danger of a fire if the device is covered or incorrectly located.
- If you are not using the device, turn it off and disconnect it from the source of electrical energy.
- This device is not intended to be mounted on a wall.
- Make sure that the power cord is not in contact with hot or sharp surfaces.
- To prevent damaging it, do not excessively bend or twist the power cable.
- If the power cord is damaged, it must be replaced by an authorised service centre or by a similarly qualified person, this will prevent the creation of a dangerous situation.
- This product must not be used by persons (including children) with physical or mental impairments or by inexperienced persons, unless properly trained or schooled in the safe use of the appliance, or unless they have been properly supervised by a qualified person who will be responsible for their safety..
- Children must be supervised to ensure that they do not play with the product.
- Do not subject people or animals to the direct flow of hot air for an extended period of time. It could negatively affect their health.
- Before cleaning the device, first turn it off and disconnect it from the power outlet.
- Do not submerge the device under water nor spray it with water, because there is a danger of electric shock.
- This device may only be repaired by an authorised service centre.
- The manufacturer takes no responsibility for any possible damages caused by the incorrect or entirely inappropriate use.

DESCRIPTION OF THE DEVICE




- ① Power indicator light
- ② Fan / heating element indicator light
- ③ Switch knob
0 (Off) →  (fan) → I (low power) → II (high power)
- ④ Thermostat knob
- ⑤ On / Off oscillation
- ⑥ Handle (at the back)
- ⑦ Air inlet grill (at the back)
- ⑧ Air outlet grill

OPERATION OF DEVICE

Remove and safely discard any packaging material and promotional labels before using the appliance for the first time.

Place the device on a flat and even surface.

Connect the power cord into a power outlet with the correct voltage. Turn the thermostat knob in a clockwise direction until maximum setting.

- If you wish to turn on the fan only, turn the power knob to position .
Heating elements will not be activated while the fan is turned on.
- Turning power knob to position I hot air function will be turned on.
Appliance will operate at 900 W power.
- Turning power knob to position II hot air function will be turned on.
Appliance will operate at 1800 W power.

Note: Fan / heating element indicator lights green while heating elements or fan are turned on.

To turn off the appliance turn the power knob to position 0.



Adjusting temperature

When the room has reached the required temperature turn the right thermostat knob in an anti-clockwise direction up to the point where the appliance switches off and not beyond. The temperature fixed in this way will be automatically regulated and kept at a constant level by the thermostat. If you are not able to reach the desired temperature it is necessary to use another heater.

CERAMIC HEATER

SFH 8012

Oscillation feature

This function enables the automatic turning of the body of the device from side to side. When the device is in operation, switch the oscillation button (back of the body) to position  and the body of the device will start to automatically turn from side to side. By switching the button to position  the turning function will be turned off.

Note: If the heating elements are turned off automatically, device oscillation will be stopped and it will be restored as soon as the heating elements are re-switching.

The safety function of the automatic shut off when the device tilts.

If you tilt the device you will hear a click sound. This is due to the in-built safety device, which serves to automatically turn off the device when it is tilted.

If the device falls over then this function serves as protection against the creation of a dangerous situation.

Double heat fuse

The device is equipped with a resetable heat fuse which is activated and shuts off the device if it overheats. If such a situation occurs, disconnect the device from the el. power socket. Check whether any air inlet or outlets are not blocked. If that situation occurred, take out the source. Let the appliance cool down for about 10 min. As soon as the device cools down, connect it to the power socket and you may turn it on again.

To increase safety the device is equipped with a non-resetable heat fuse for the situation, where the first heat fuse malfunctions. If the non-resetable heat fuse has been activated, operation cannot be resumed. Have the device repaired at an authorised service centre.

CLEANING AND MAINTENANCE

Ensure that the device is switched off before cleaning or maintenance. The power cord is pulled out of the power socket. Before cleaning the device, allow it to cool down.

Cleaning of the device

Wipe the surface of the device using a clean and dry wipe. Do not splash water or submerge in water or in any other liquid.

Do not use cleaning products causing scratching, petrol or other solvents, otherwise you could scratch the device surface.

TECHNICAL SPECIFICATIONS

220–240 V ~ 50 Hz, 1800 W

Power output setting 900 W/ 1800 W

Safety class (with regard to electric shock protection):..... II

Angle of oscillation..... 90°

Noise level..... 56 dB(A)

Dimensions (h x w x d) 17,5 × 45 × 16 cm

Weight 2,5 kg

The declared noise emission level for this appliance is 56 dB(A), which represents level A of the acoustic power relative to the reference acoustic power of 1 pW.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.