 


CERAMIC HEATER

USER'S MANUAL

EN

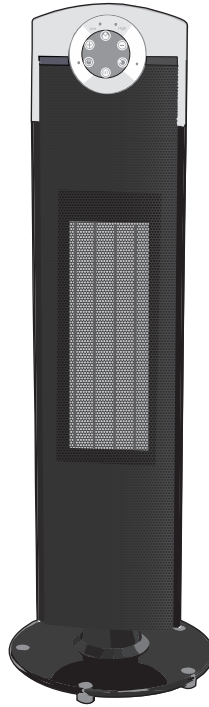

SENCOR®

SFH 9014

Prior to using this device, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of devices. Only use the appliance in the manner described in this user manual. Store the user's manual in a safe place for future reference.

We recommend saving the original shipping cardboard box, packaging material, receipt and warranty for the period of the warranty at minimum. In the case of transportation, pack the product using the original packaging materials only.

CONTENTS

IMPORTANT SAFETY PRECAUTIONS.....	2
ASSEMBLY OF DEVICE.....	3
DESCRIPTION OF THE DEVICE	3
OPERATION OF DEVICE	4
REMOTE CONTROL.....	4
MAINTENANCE AND CLEANING.....	5
TECHNICAL SPECIFICATIONS.....	5
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT.....	6

IMPORTANT SAFETY PRECAUTIONS

- Remove the packaging from the device and check whether the device is in good order. Do not leave packaging material, e.g. bags and clips within reach of children.
- The voltage in the power outlet to which the device will be connected must correspond to the nominal voltage on the type label of the device. The power socket must be grounded.
- Do not connect the device to a extension cord or two way adapter.
- Use the device only for the intended purpose, namely as a heater for home use.
- The use of electrical devices requires the basic knowledge of basic rules, which are:
 - never touch the device with wet or damp hands.
 - never subject the device to the weather (rain, sun, etc.).
- Always place the device on an even and stable surface.
- Do not use the device near a bath, shower, wash basin, pool or other sources of water, liquids or humidity.
- Do not place the power cord on the device while it is hot.
- Do not use the heater near furniture, curtains or drapes, shelves or other flammable materials.
- Never place the device directly in front of or under a socket.
- Never insert any objects through the front protective grill for the outflow of air or the back grill for the inflow of air. A electrical short could occur, a fire might start or the device may be damaged.
- Do not leave the device in operation if you are getting ready to go to sleep. If nonetheless you wish to leave it in operation, make sure that you have remove all items out of reach, such as textiles, bed linen and other flammable materials, so as to prevent a dangerous situation occurring.
- Never touch the front grill of the heater during operation, so as to prevent skin burns.



- **Warning!** To prevent the overheating of the device, do not cover with any items.
- **CAUTION:** Do not use this device with a programmer, time switch or any other device which would switch the device on automatically, because there is a danger of a fire if the device is covered or incorrectly located.
- If you are not using the device, turn it off and disconnect it from the source of electrical energy.
- This device is not intended to be mounted on a wall.
- Make sure that the power cord is not in contact with hot or sharp surfaces.
- To prevent damaging it, do not excessively bend or twist the power cable.
- If the power cord is damaged, it must be replaced by an authorised service centre or by a similarly qualified person, this will prevent the creation of a dangerous situation.
- This product must not be used by persons (including children) with physical or mental impairments or by inexperienced persons, unless properly trained or schooled in the safe use of the appliance, or unless they have been properly supervised by a qualified person who will be responsible for their safety..
- Children must be supervised to ensure that they do not play with the product.
- Do not subject people or animals to the direct flow of hot air for an extended period of time. It could negatively affect their health.
- Before cleaning the device, first turn it off and disconnect it from the power outlet.
- Do not submerge the device under water nor spray it with water, because there is a danger of electric shock.
- This device may only be repaired by an authorised service centre.
- The manufacturer takes no responsibility for any possible damages caused by the incorrect or entirely inappropriate use.


CERAMIC HEATER

SFH 9014

EN

ASSEMBLY OF DEVICE

 1. Open the box and take out all parts of the device. Unscrew the securing nut.
2. Place the base on the bottom side of the device and using the securing nut screw back in.
3. Before use place the device on an even and stable floor.

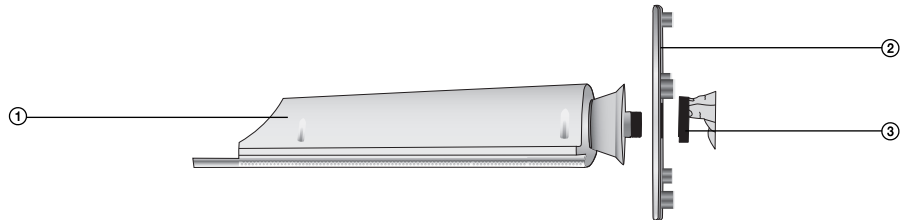


- ① Body of the device
- ② Base
- ③ Securing nut

DESCRIPTION OF THE DEVICE


Front view

 - ① Touch sensor control panel with LED display
- ② Front protective grill for air inflow
- ③ Base
- ④ PTC heating element

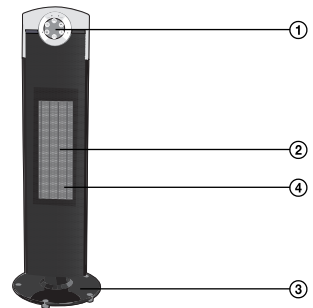


Back view

 - ① Main switch
- ② Handle
- ③ Back removable grill for the inflow of air
- ④ Air filter

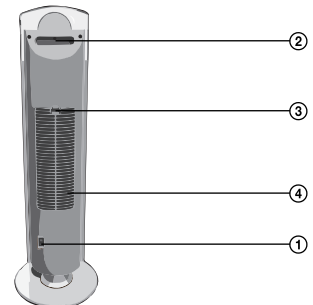

Remote control

 - ① Remote control
- ② Signal transmitter

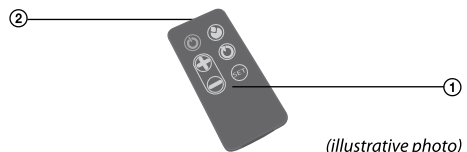

(illustrative photo)


OPERATION OF DEVICE

First connect the power cord into a power outlet with the correct voltage. Ensure that the device is located on an even and stable surface.


Main switch (on the back side of the device)

To turn on the device move the main switch to position „I“. A sound will be produced, which means that the device is ready for use. To turn off the device move the button to position „0“.

 
Touch sensor

Ensure that the main switch is in position „I“. Touch the sensor with symbol  and the relevant indicator will turn on. The device will start with low power (1300 W). By touching the sensor again you will bring the device to stand by mode. Note. the device will be in operation for approximately 30 seconds, before it goes into stand by mode. The relevant indicator will turn off.

Touch sensor - setting the power output

If you touch the sensor marked with the symbol , you will increase the power output to 2500 W. The control light „HIGH“ (high power) turns on. By pressing the sensor again the device will switch back to low power.

Touch sensor - oscillation

This function enables the automatic turning of the body of the device from side to side. When the device is in operation, touch the sensor marked with the symbol . The body of the device will start to automatically turn from side to side. At the same time the relevant indicator will be on. By pressing the sensor again the turning function will be turned off and the relevant indicator will turn off. Do not set the direction of air flow by turning the body of the device by force relative to the base of the device. If the direction of air flow does not suit you, hold the device by the handle and turn the entire device including the base according to your requirements. Make sure not to entangle the power cord.

Touch sensor SET – setting the shutoff timer or temperature

The touch sensor serves to set the automatic shutoff timer or temperature.

A: Setting the automatic shutoff timer:

This function serves to automatically turn off the device after duration of the set time. If you touch the sensor SET, „0 H“ will be displayed on the display. Then using the touch sensor „+“ or „-“ set the time. Time may be set in the range between 1–12 hours. Each time the button „+“ or „-“ is pressed the time will be increased or decrease by an hour. At the same time, the set time will be displayed on the display. By pressing the touch sensor SET you will confirm your selection.

Note: If you touch the sensor SET, the control light will flash for a time of 5 seconds. If you do not press any button within 5 seconds or you press a button other than SET, „+“ or „-“, then the LED display will display the temperature in the room.

 
B: Setting the temperature:

When the setting of the automatic shutoff is completed, press the button SET again. The display will show the standard value 25 °C and now you can set the temperature. Set the temperature using the touch sensors „+“ and „-“ in the range 15–35 °C. Each time you press the buttons „+“ or „-“ the temperature will increase or decrease by 1 °C. At the same time, the set temperature will be displayed on the display. By pressing the touch sensor SET you will confirm your selection. The device will switch to the mode displaying temperature in the room and will automatically maintain the set temperature by turning the heating elements on and off.

Note: If you touch the sensor SET, the control light will flash for a time of 5 seconds. If you do not press any button within 5 seconds or you press a button other than SET, „+“ or „-“, then the LED display will display the temperature in the room.

When the temperature in the room is lower than -9 °C, the display will show „LO“ (low temperature). When the temperature in the room is higher than +39 °C, the display will show „HI“ (high temperature). When the temperature is in the range -9–39 °C, then the display will show the actual temperature in the room.

REMOTE CONTROL

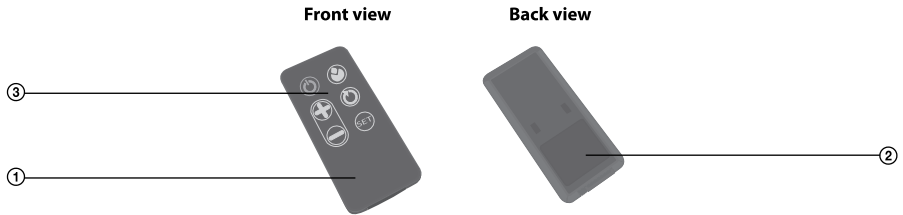

- ① Remote control
- ② Battery compartment
- ③ Remote control panel

1. From the rear part of the remote control pull out the battery compartment.
2. Insert a new battery type CR 2032 (1 × 3 V).
3. Insert the battery compartment back into the remote control.



There are 6 buttons on the remote control. Their function is equivalent to the functions of the touch sensors on the control panel of the device. If you wish to use the remote control, point the remote control at approximately the level of the control panel with the display. The maximum signal range of the remote control is 6 m. If you place the remote in such a way that the transmission of the signal is blocked by barrier, the signal may not be transmitted at all.

The safety function of the automatic shut off when the device overheats.

If you tilt the device to the side, you will hear a click. This is due to the in-built safety device, which serves to automatically turn off the device when it is tilted.

If the during operation the device is tilted by approx. 40°, the safety function is activated and the device will shut off. If the device falls over then this function serves as protection against dangerous situation.

Double heat fuse

The device is equipped with a resetable heat fuse, which is activated and shuts off the device if it overheats. If such a situation occurs, disconnect the device from the el. power socket. As soon as the device cools down, connect it to the power socket and you may turn it on again.

To increase safety the device is equipped with a non-resetable heat fuse for the situation, where the first heat fuse malfunctions. If the non-resetable heat fuse has been activated, operation cannot be resumed. Have the device repaired at an authorised service centre.

CLEANING AND MAINTENANCE

Ensure that the device is switched off before cleaning or maintenance - the main switch is in the position „0“ and the power cord is pulled out of the power socket. Before cleaning the device, allow it to cool down.

1. Surface of the device

Wipe the surface of the device using a clean and dry wipe. Do not use cleaning products causing scratching, petrol or other solvents. Do not submerge in water or in any other liquid.

2. Air filter

Dirt and dust may be caught on the air filter during operation. The caught dirt and dust may negatively affect the function of the device. So clean the air filter regularly.

Remove the grill for the inflow of air from back part of the device. Remove the air filter from the grill.

Wash the filter by hand in a lukewarm solution of water and detergent. Then rinse the filter in clean water and allow it to dry thoroughly. Place the clean, dry filter back into the back grill and attach it to the device.

Do not use the device without the filter and back grill being installed.

Place the device in a dry place out of reach of children.

TECHNICAL SPECIFICATIONS

220–240 V ~ 50 Hz, 2500 W

Power output setting 1300 W/ 2500 W

Protective class (with regards to protection from electric shock):..... II

Safety shut off function of the device when tilted 40° (±10°)

Angle of oscillation: 80°

Noise level 58 dB(A)

Dimensions (h x w x d) 840 x 263 x 263 mm

Weight (net) 4.5 kg

The declared noise emission level for this appliance is 58 dB(A), which represents level A of the acoustic power relative to the reference acoustic power of 1 pW.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.