

# Steam Iron

User's manual

EN



## SENCOR®

SSI 8440GR

SSI 8441VT

**Translation of the original manual**

Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep the manual for future use.

Save the original shipping transport box, packaging material, receipt and warranty card for the duration of the warranty. In the event of transportation, pack the appliance using the original packaging materials only.

# Steam Iron

SSI 8440GR / SSI 8441VT

## CONTENTS

IMPORTANT SAFETY INSTRUCTIONS .....	3
DESCRIPTION OF THE STEAM IRON. ....	6
USING THE STEAM IRON .....	7
TIPS FOR QUALITY IRONING .....	9
MAINTENANCE AND CLEANING .....	9
STORAGE. ....	10
TECHNICAL SPECIFICATIONS .....	10
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS .	10
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES .....	10

## IMPORTANT SAFETY INSTRUCTIONS

- This steam iron may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers.
- Do not allow children to play with the iron. Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.
- If it is connected to a power socket or if it is cooling down, keep the iron and its power cord out of reach of children younger than 8 years of age.
- The iron must not be left without supervision when connected to an electrical power socket.
- Always disconnect the iron from the power socket before filling or emptying the water

tank, before putting it away for a short time or after finishing using it.

- The iron must be used and placed on a flat and stable surface.
- When placing the iron on a stand, ensure that the surface on which the stand is located is stable.
- The iron must not be used if it shows visible signs of damage, if it is leaking or if it has fallen on the floor.

## IMPORTANT SAFETY INSTRUCTIONS

### READ CAREFULLY AND STORE FOR FUTURE USE

#### Electrical safety

- Before connecting this iron to a power socket, make sure the voltage stated on its rating label corresponds to the voltage in your power socket.
- Connect the steam iron only to a properly grounded socket. If necessary, an extension cord marked with a maximum electrical current capacity of 14 A may be used. A power cord with an insufficient capacity could overheat. Do not connect any other appliances to the extension cord. Position the extension cord so that it will not be stepped on or tripped over.
- Do not touch the iron with wet or damp hands when it is connected to a power socket.
- To avoid potential injury by electrical shock, do not clean the iron under running water, do not spray it with water and do not submerge it in water or any other liquid.
- Ensure that the power cord does not come into contact with water, moisture or a hot surface.
- Do not place heavy items on the power cord. Make sure the power cord does not hang over the edge of a table or that it is not touching a hot surface or sharp objects.
- Disconnect the iron from the power socket by gently pulling the plug of the power cord, and not the power cord itself. Otherwise, this could damage the power cord or the socket.
- Before disconnecting the iron from the el. power socket, set the output steam regulator to the 'ironing without steam' position.
- Do not pull or carry the iron by the power cord.
- To avoid the danger of injury by electrical shock, do not repair the iron yourself or make any adjustments to it. Have all repairs or adjustments performed at an authorised service centre. By tampering with the product you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.
- Always turn off the iron and disconnect it from the power socket when you have finished using it.


#### Safety during use

- This iron is designed for home use. Do not use it in industrial surroundings or outdoors.
- Do not use the iron for any other purposes than those intended.
- Do not place the iron on or near an electric or gas stove or other sources of heat.
- Never iron clothing on a body.
- Do not touch the hot ironing surfaces. Otherwise, this could cause burns.
- Never fill the water tank directly underneath a water tap. Always use the supplied container for filling the water tank. Never add vinegar, descaling agents or other anti-scaling additives to the water tank.
- Prior to cleaning or any other handling of the iron that you have disconnected from the power socket, allow the soleplate to cool down.

# Steam Iron

SSI 8440GR / SSI 8441VT

## DESCRIPTION OF THE STEAM IRON

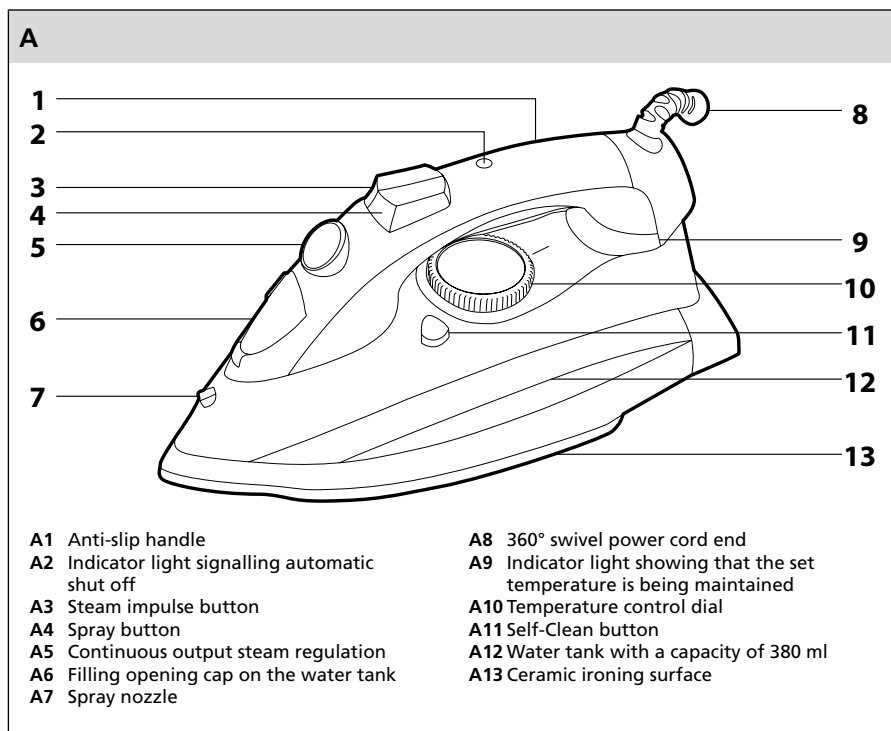

# Steam Iron

SSI 8440GR / SSI 8441VT

 



EN

## USING THE STEAM IRON

- Wipe the ironing surface with a lightly damp cloth before first use and then wipe dry.

## PREPARATION BEFORE IRONING

- Sort the laundry according to international symbols shown on the labels or according to the fabric types.

SYMBOL	FABRIC TYPE	SETTING THE TEMPERATURE CONTROL DIAL
	Synthetics (nylon, polyamid, polyester, etc.)	• Low temperature
	Silk – wool	• • Medium temperature
	Cotton	• • • High temperature
	Linen	<b>MAX</b> Maximum temperature
	Fabric, that should not be ironed.	

## IRONING WITH STEAM

### 1. Filling the water tank

#### 1.1 Water type that may be used

- This steam iron is equipped with a special Anti-Calc filter, which softens the water in the tank and prevents the formation of limescale deposits inside the steam chamber. The filter is permanent and it is not necessary to replace it.
- For filling the tank **A12** use water that has a soft to medium-hard water hardness level (up to 14 °dH / 2.5 mmol/l). If water in your area is particularly hard, use 1 part of distilled water and 1 part of tap water.



#### Attention:

Do not fill the tank with distilled water only or water containing chemical additives, fragrances or limescale removers.

#### 1.2 Filling the tank

- Check that the iron is disconnected from the power socket.
- Set the output steam regulator **A5** to the minimum level.
- Flip open the filling opening cap on the water tank **A6**.
- Tilt the iron backwards and fill tank **A12** with water. Ensure that the water level does not exceed the maximum water level mark.
- Close shut the filling opening cap on the water tank **A6**. Place the iron on a stable, even surface in a vertical position.

# Steam Iron

SSI 8440GR / SSI 8441VT

## 2. Setting the temperature control dial

- Ensure that the iron is located in a vertical position on an even stable surface.
- Connect the power cord to an el. power socket.
- Set temperature control dial **A10** based on the fabric type you wish to iron. A lit indicator light **A9** signals that the ironing surface is heating up. As soon as the ironing surface heats up to the set temperature, the indicator light **A9** will turn off.



### Note:

During first use a weak cracking sound caused by the expanding plastic may be heard. This is an entirely normal event, which will disappear in a short time. While ironing the indicator light **A9** will intermittently turn on and off. This indicates that the set temperature is being maintained.

First iron the laundry that requires the lowest temperature. This will save you time because the iron heats up faster than it cools down. If you are ironing at a high temperature and then set a lower temperature, wait until the iron cools down.

## 3. Steam

- Only use the steam function when the temperature control dial **A10** is set to a temperature of • • • to MAX. Use the control dial **A5** to set the desired steam output. Turn the control dial **A5** anticlockwise to continuously increase the steam output. Turn the control dial **A5** clockwise to continuously decrease the steam output.



### Note:

The iron continuously emits steam only if you hold it in a horizontal position. Stop the release of steam by standing the iron upright in a vertical position or by turning the output steam regulator **A5** to the minimum level.

## DRIP-STOP FUNCTION

- This function automatically stops the steaming process if the temperature control dial is set to a temperature that is too low and so prevents water from dripping from the openings.

## FUNCTION OF THE STEAM IMPULSE

- Press the steam impulse button **A3** to generate a strong flow of steam which can even out even very crumpled up textiles.
- Only use the steam impulse function when the temperature control dial **A10** is set to a temperature of • • • to MAX. If indicator light **A9** turns on, wait until it turns off and only then press the steam impulse button **A3**. Wait several seconds before pressing the button again.
- The steam impulse function **A3** can be used when ironing textiles (e.g. curtains, hanging clothes, etc.) in the vertical position.

## SPRAYING FUNCTION

- The spraying function can be used when the temperature control dial **A10** is set to any temperature. Ensure that there is water in the tank **A12** and to dampen the textile press the spray button **A4**.



### Note:

Do not use the spraying function on silk and synthetics.

## DRY IRONING

- If you want to iron without steam, follow the instructions in chapter Steam ironing, point 2. Setting the temperature control dial. Set the regulator **A5** to the minimum level.





**Note:**

If you wish to use the spraying function for dry ironing it is necessary to fill the water tank. To fill the water tank follow the instructions in chapter Steam ironing, point 1. Filling the water tank.

## AUTO SHUT-OFF FUNCTION

- If you do not move the iron for longer than 8 minutes in the vertical position or longer than 30 seconds in the horizontal position, the iron will shut off automatically. A warning sound will be made and indicator light **A2** will start flashing. If you move the iron, the AUTO SHUT-OFF function will be deactivated and the iron will be put back into operation. The indicator light **A2** will be permanently lit.

## TIPS FOR QUALITY IRONING

- Do not fill the washing machine drum with too much laundry, otherwise it will be overly crumpled up. You can also avoid overly crumpled laundry by setting a lower spin drying speed.
- If you are ironing fabrics from blended materials (e.g. 40 % wool and 60 % synthetic material), set the temperature control dial according to the material which is ironed at a lower temperature.
- If you do not know the composition of the fabric, identify the suitable temperature control dial setting by ironing a piece of the fabric from the underside. Start by setting the temperature control dial at a low temperature and gradually increase it until the ideal temperatures is achieved.
- Never iron over places that have sweat marks or other stains. The high temperature fixes the stain making it difficult to remove.
- To avoid silk, wool and synthetic fabrics from being shiny after ironing, iron them from the underside.
- Some materials are easier to iron when they are lightly damp (e.g. silk).
- Dampen fine fabrics with the spray before ironing them or iron them under a lightly damp wiping cloth.

## MAINTENANCE AND CLEANING

### Cleaning the exterior parts of the iron

- Before cleaning the iron, disconnect it from the power socket. Allow the ironing surface to cool down and empty the water tank.
- Wipe the ironing surface and the housing of the iron with a lightly damp wiping cloth. Then wipe all parts until dry.
- Do not use metal items or abrasive cleaning products for cleaning.

### Removal of limescale deposits

- For the removal of limescale deposits from the steam chamber the iron is equipped with a Self-Clean function. Use the Self-Clean function regularly at least once per month.
- Fill the tank with water up to the maximum water mark. Check that the output steam regulator **A5** is set to the minimum level. Connect the iron to a power socket. Set the temperature control dial **A10** to maximum and wait until indicator light **A9** turns off. Disconnect the iron from the el. power socket and hold it in a horizontal position above the sink. Press the Self-Clean button **A11** and hold it down. Steam will start to be emitted from the ironing surface and water will drip out. Slightly move the iron from side to side, until its contents are emptied completely. Together with the dripping, limescale deposits will be removed from the steam chamber. Release the Self-Clean button **A11**. Allow the iron to cool and then wipe dry the ironing surface dry using a clean cloth.

# Steam Iron

SSI 8440GR / SSI 8441VT

## STORAGE

- Unplug the iron from the el. power socket and let it cool completely. Empty the water tank and store the iron in a vertical position in a safe place.

## TECHNICAL SPECIFICATIONS

Nominal voltage range .....	220–240 V
Nominal frequency .....	50/60 Hz
Rated power input .....	2000–2400 W

We reserve the right to change text and technical specifications.

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

## DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

### For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

### Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.