








# Porcelain Electric Kettle

SWK 8001GR/SWK 8002OR/SWK 8003BL/SWK 8004RD

## DESCRIPTION OF THE KETTLE

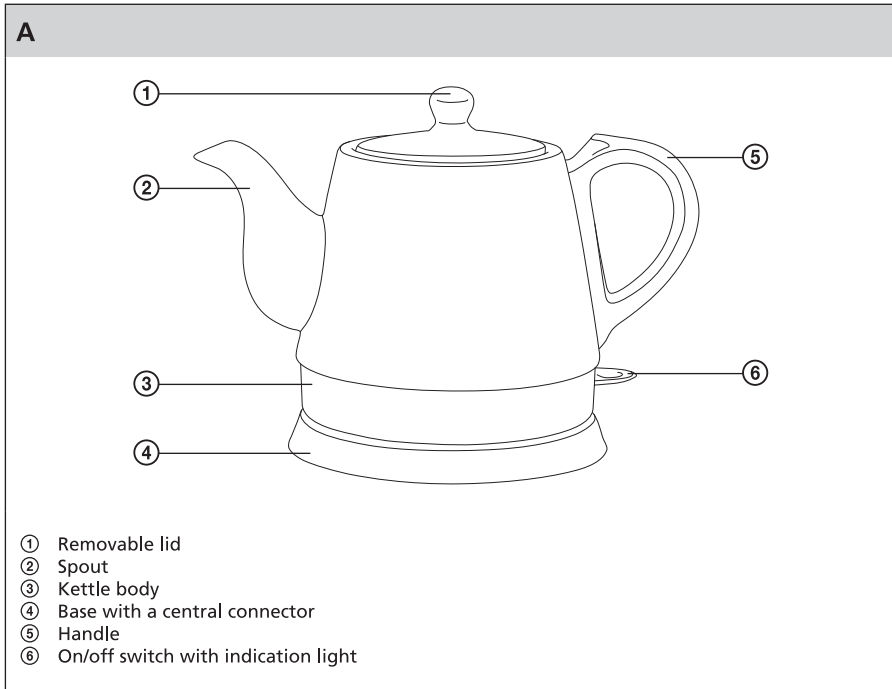

## OPERATION OF THE KETTLE

Prior to use, remove all packaging material from the kettle. Set the required length of the electric cable. Press the electric cable into the groove in the base.

- 1) Place the base on a stable, flat and dry surface.
- 2) Remove the lid and fill the kettle with the required amount of water.  
Attention: Do not fill the kettle with less than 0.2 l of water or more than 0.8 l of water. The maximum water level mark is located inside the kettle.



### Warning!

In case the kettle is overfilled, this can lead to the spurting of boiling water.

- 3) Place the kettle on the base.
- 4) Insert the plug into the electric socket.
- 5) By shifting the switch into position I, the kettle will begin its function.

# Porcelain Electric Kettle

SWK 8001GR/SWK 8002OR/SWK 8003BL/SWK 8004RD

EN



## Caution

Prior to switching the kettle on, make sure the lid is closed properly.

- 6) As soon as the water is boiled, the kettle will be turned off automatically.
- 7) Prior to removing the kettle from the base, make sure it has been automatically turned off. In case it is not automatically turned off, turn it off manually.

The kettle is

- turned off, provided the switch is in position 0.
- turned on, provided the switch is in position I.

Pour the boiled water into a prepared container, cup or mug. To hold the handle of the kettle we recommend the use of a kitchen mitten or wipe, so that possible contact of the skin with the heated surface of the kettle body is prevented. Ensure that when carrying the kettle it remains in a horizontal position, especially when it is filled up to the maximum mark.

If you wish to remove the lid to refill the kettle, first empty the entire contents of the kettle, so scalding from the escaping steam is prevented.

- 8) After use, remove the electric cable from power point and let the kettle cool.



## Caution

- Never fill the kettle while placed on the base.
- Do not turn on the kettle when empty. Incorrect use may adversely affect the operation life of the appliance.
- In case you accidentally turn on the kettle without water, the thermostat will automatically cut off the electric circuit once it has reached a certain temperature. After several minutes, once the stainless-steel bottom has cooled, it is possible to use the kettle again.

## CLEANING THE KETTLE

Remove limestone scales on a regular basis, at least once a month or depending on the hardness of the water in your home.

To remove limestone scales, you can use:

- 8 % white vinegar, readily available in shops. Fill the kettle with ½ l of vinegar and let it stand for 2 hours. Then empty the kettle and boil clean water 4-5 times prior to use.
- citric acid. Boil ½ l of water in the kettle, add 30 g of citric acid and let it stand for 30 minutes. Then empty the kettle and boil clean water 4-5 times prior to use.

To clean the exterior part of the kettle use a dry cloth or a cloth dampened in a weak solution of neutral dish liquid.

To clean the stand, only use a dry cloth.

To clean the kettle, its components or accessories, never use cleaning agents that cause scratches, gas, thinners, etc.

## TECHNICAL SPECIFICATIONS

220–240 V ~ 50/60 Hz, 1000–1200 W

Volume: 0,8 l

Changes to the text and technical specifications reserved.

# Porcelain Electric Kettle

SWK 8001GR/SWK 8002OR/SWK 8003BL/SWK 8004RD

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

## DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

### For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

### Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.