













# Hand mixer with blender stick

SHM 5270

EN

## Selecting a speed for the beaters/dough hooks

Setting 1 – suitable for the initial speed for mixing a larger amount of food, or dry foods such as flour, butter and potato

Setting 2 – suitable for processing liquid ingredients, for mixing salad dressings

Setting 3 – suitable for mixing ingredients for preparing pies, cookies and bread

Setting 4 – suitable for beating butter and sugar for cookie preparations, desserts, etc.

Setting 5 – suitable for beating eggs, icings, creams, etc.

## Quantity and duration of process

Beaters	Quantity	Duration of process	Selection of speed
Thin sauces, creams and soups	approx. 750 ml	approx. 4 minutes	Setting 2
Mayonnaise	max. 3 egg yolks	approx. 3 minutes	Setting 5
Mashed potato	max. 750 g	max. 4 minutes	Setting 4
Whipping cream	max. 500 g	max. 5 minutes	Setting 5
Beating egg whites	max. 5 egg whites	approx. 4 minutes	Setting 5
Pie pastry	approx. 750 g	approx. 4 minutes	Setting 3

Dough hooks	Quantity	Duration of process	Selection of speed
Yeast dough	max. 500 g of flour	max. 5 minutes	Setting 3



### Note:

Beat first of all on a low speed to keep the dough from spurting. Only then you can change to a higher speed. For easier mixing and kneading, we recommend using soft margarine or butter.

Stick mixer	Amount	Processing time
Baby food, sauces	100–300 g	45 seconds
Mixed beverages	100–500 g	30 seconds
Fruit, vegetables	100–200 g	45 seconds
Cheeses	50–100 g	30 seconds



### Note:

The processing time depends on how thoroughly you wish to mix the ingredients.

## MAINTENANCE AND CLEANING

- Prior to cleaning the appliance, always turn it off by shifting the switch into the 0 position and remove it from the power point.
- Following each use of the beaters or dough hooks, it is necessary to thoroughly rinse them with hot water and to use dish detergent. Then rinse with drinking water and thoroughly dry with a soft tea towel. The attachments are designed for short contact with food (including drinks), i.e. max. 4 hours.
- Thoroughly clean the stick mixer after every use. After finishing mixing (without first disassembling and turning off the appliance) submerge the attachment into warm water and kitchen detergent. Hold down the TURBO button for a short time to rid the attachment of food remains. Then turn off the appliance and disconnect it from the power socket. Remove the stick mixer and wash under clean running water. You may also wash the removed stick mixer in the dishwasher.  
Note: Some food may cause discolouration of plastic surfaces. If you have processed such food, apply vegetable oil to the attachment before washing.
- To clean the motor unit/cover of the motor use a cloth slightly moistened in a weak solution of dish detergent. Never submerge the motor unit under water, or any other liquids!
- To clean the appliance, do not use thinners or solvents, such as cleaning agents causing abrasion - they may damage the surface.
- Should you not use the appliance, store it in a dry place away from the reach of children. To store the appliance, you can (once it has been disassembled) use its transport cardboard box.

## TECHNICAL SPECIFICATIONS

230 V~ 50 Hz, 300 W

Safety class (for electric shock protection): II

Noise level: 68 dB(A)

The declared noise emission level for this appliance is 68 dB(A), which represents level A of the acoustic power relative to the reference acoustic power of 1 pW.

### Glossary of technical terms

#### **Safety class for electric shock protection:**

Class II - Electric shock protection is provided by double or heavy-duty insulation.

Changes to text and technical parameters reserved.



## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

## DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

### For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

### Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

# Hand mixer with blender stick

SHM 5270