

Coffeemaker

User's manual

EN



SENCOR®

SCE 5000BK
SCE 5000WH

Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep the user's manual in a safe place where it can be easily retrieved for future use.

We recommend saving the original shipping cardboard box, packaging material, receipt and warranty card for the duration of warranty. In the event of transportation, pack the appliance using the original packaging materials only.

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS.....	3
DESCRIPTION OF THE COFFEEMAKER.....	6
BEFORE FIRST USE	7
BASIC GUIDELINES FOR PREPARING FINE TASTING COFFEE.....	7
SELECTING A COFFEE FILTER TYPE	7
USING THE COFFEEMAKER	8
DRIP-STOP FUNCTION	8
CLEANING AND MAINTENANCE	9
TECHNICAL SPECIFICATIONS	9
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS ..	10
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES	10

IMPORTANT SAFETY INSTRUCTIONS

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers. Do not allow children to play with the appliance.
- Cleaning and maintenance must not be performed by children unless they are older than 8 years of age and under supervision. Keep this appliance and the power cord out of reach of children younger than 8 years of age.

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND STORE IT FOR FUTURE USE.

- This appliance must not be used by persons (including children) with physical or mental impairments or by inexperienced persons, unless properly trained or schooled in the safe use of the appliance, or unless they have been properly supervised by a qualified person who will be responsible for their safety.
- Children must be supervised to ensure that they do not play with the appliance.
- Before connecting the appliance to a power socket check that the technical details on the appliance label match the electrical voltage in the socket.
- Only plug the appliance into a correctly grounded socket.



Attention:

This appliance is not designed to be controlled using a programmed device, external timer switch or remote control.

- This appliance is designed for domestic use and similar locations such as:
 - staff kitchens in stores, offices and other workplaces;
 - hotel or motel rooms and other living areas;
 - bed and breakfast establishments.
- Only use the appliance to brew filtered coffee.
- Do not place the appliance on window sills or on unstable surfaces. The appliance must always be located on a stable, even and dry surface.
- Never use the appliance in the near vicinity of a bath, shower or swimming pool.
- Only fill the water tank with cold drinking water. Do not fill it with any other liquid or place any objects into it. When filling the water tank the appliance must be turned off. If the appliance is to be used repeatedly, do not refill the water tank before the appliance has cooled down.
- Only use the appliance with the supplied glass kettle. Do not place the glass kettle on any other heat source or use it for heating liquids in a microwave oven.
- Do not use the appliance if the glass kettle has a loosened or damaged handle or if its surface is cracked. If the kettle shows any signs of damage, it must be replaced with a new one.
- Do not place any objects on the hotplate or lid of the appliance.
- Before turning on the appliance, check that the water tank is filled with water and that the lid of the water tank/brew chamber is properly closed.
- During operation leave at least 20 cm of free space above the appliance.



Warning:

Do not move the lid or the aroma control dial and do not touch the heated surface of the hotplate or the glass kettle during the brewing process. This could cause burns. Use the handle for lifting and carrying the kettle.

- Pay extra attention when handling a kettle filled with hot coffee to prevent scalding.
- Do not place a hot kettle on a wet or cold surface or submerge it in cold water. Do not leave an empty kettle on a hot hotplate. This could damage it.
- Allow the appliance to cool down for at least 10 minutes before using it again.
- Always disconnect the appliance from the power socket if you will not be using it or before moving and cleaning it.
- Allow the appliance to fully cool down before moving, or cleaning it. Do not move the appliance with a full water tank or with the kettle located on the hotplate.
- Do not clean the appliance (excluding the glass kettle, permanent filter and filter holder) under running water and do not submerge it under water or any other liquid.
- Do not place the appliance on or near an electric or gas stove or other sources of heat.

Coffeemaker

SCE 5000BK/SCE 5000WH

EN


- To prevent the appliance from falling, locate the power cord so that it does not hang over the edge of a table.
- Ensure that the power cord does not come into contact with water or moisture or a heated surface.
- Do not disconnect the appliance from the power socket by pulling on the power cord. This could damage the power cord or the power socket. Disconnect the cord from the power socket by gently pulling out the plug of the power cord.
- If the power cord is damaged, have it replaced at a technical service centre. It is forbidden to use the appliance if it has a damaged power cord or plug.
- To avoid the danger of injury by electrical shock, do not repair the appliance yourself or make any adjustments to it. Have all repairs or adjustments of the appliance performed at an authorised service centre. Tampering with the appliance during the warranty period may void the warranty policy.

Coffeemaker

SCE 5000BK/SCE 5000WH

DESCRIPTION OF THE COFFEEMAKER

A

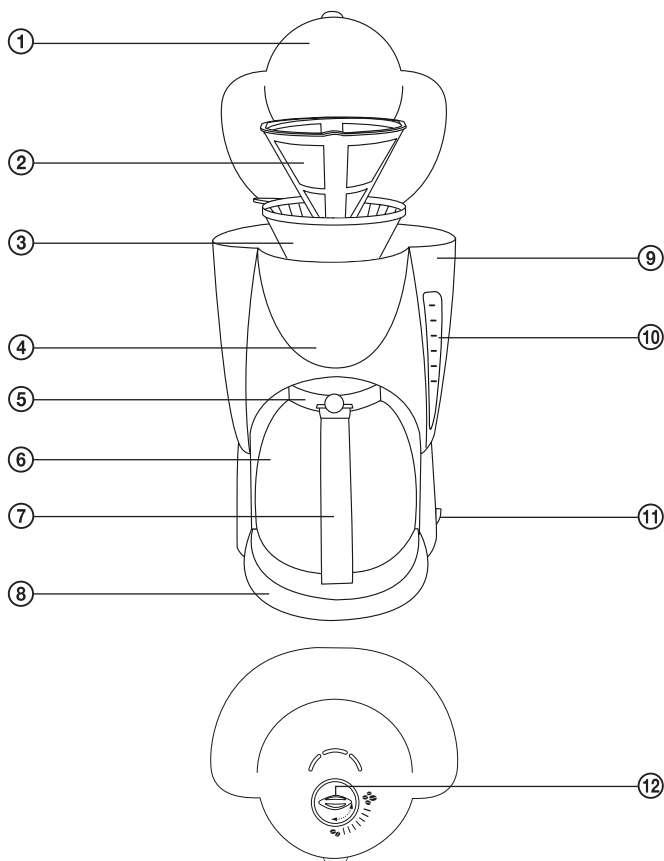

- ① Lid of the water tank and the brew chamber
- ② Permanent removable coffee filter
- ③ Removable filter holder with a Drip-Stop shut-off valve
- ④ Brew chamber
- ⑤ Glass kettle lid
- ⑥ Glass kettle
- ⑦ Glass kettle handle

- ⑧ Hotplate
Maintains the coffee at an optimal serving temperature
- ⑨ Water tank
- ⑩ Water level mark
- ⑪ I/O (On/Off) switch with a power on indicator light
- ⑫ Aroma control dial

BEFORE FIRST USE

- 1) Remove the coffeemaker from the packing material.
- 2) Thoroughly wash the permanent filter ②, filter holder ③ and the glass kettle ⑥ in hot water using kitchen detergent. Then rinse these parts under flowing drinking water and dry them.
- 3) Place the filter holder ③ and the permanent filter ② into the brew chamber ④.
- 4) Fill the water tank ⑤ with clean cold water up to the maximum level line 14/MAX. Check that the filter holder and the filter are properly inserted in the brew chamber. Close the lid ① and place the glass kettle ⑥ on the hotplate ⑧.
- 5) Connect the power cord to the el. power socket and move the On/Off switch ⑪ to position I (On). Allow the contents of the water tank to flow into the glass kettle. Turn off the coffeemaker by moving the On/Off switch ⑪ to position 0 (Off). Empty the contents of the kettle and allow the coffeemaker to cool down for at least 10 minutes.
- 6) Repeat the procedure described in steps 4 and 5.
- 7) Now the coffeemaker is ready for operation.

BASIC GUIDELINES FOR PREPARING FINE TASTING COFFEE

- Always brew coffee in a clean coffeemaker. A dirty coffeemaker can negatively impact the taste of the coffee beverage. Instructions for cleaning and removing limescale deposits are found in the Cleaning and maintenance chapter.
- Always brew coffee using cold drinking water.
- Brew coffee using ground coffee intended for coffeemakers or from freshly ground coffee beans. Coffee brewed from freshly ground coffee beans will have a better taste and aroma. When grinding coffee it is important to follow the instructions below.
- Grind the coffee beans to a fine texture but not too fine. If the ground coffee feels like fine flour when sifted between the fingers then water will take too long to flow through the coffee and the resulting beverage will be too dark and bitter, or the coffee filter may become clogged and the brew chamber may overflow. If you grind the coffee beans too coarse, then a larger amount of coffee will be needed to brew a single cup with an optimal taste and aroma.
- Store ground coffee in an enclosed container, in dry and cool conditions. Do not place it into a refrigerator or freezer. Consume within a week of first opening it.
- Coffee tastes the best freshly brewed and so it is not recommended to reheat it.

SELECTING A COFFEE FILTER TYPE

- This coffeemaker is supplied with a permanent filter ②, which can be used repeatedly. Or you may use single-use No. 4 paper filters, which are commonly available from your vendor or in supermarkets. Fold the edge of the paper filter before inserting it into the filter holder ③.

Coffeemaker

SCE 5000BK/SCE 5000WH

USING THE COFFEEMAKER

- 1) Fill the glass kettle ⑥ with the required amount of water. The water level must reach at least the minimum level line 4/MIN (i.e. 4 cups of water) and must not exceed the maximum level line 14/MAX (i.e. 14 cups of water). Open the lid ① and pour the contents of the kettle into the water tank ⑨.



Attention:

Only fill the water tank with cold drinking water. Do not use warm water.
The maximum capacity of the water tank is 2.2 l of water.
The amount of brewed coffee will always be less than the amount you poured into the water tank. During the brewing process approximately 10 % of the water is absorbed by the ground coffee.

- 2) Insert the permanent filter ② or a single-use No. 4 paper filter into the filter holder ③.
- 3) Put the ground coffee into the filter. Recommended dosage: 7 g of ground coffee per cup.
- 4) Close the lid ① and check that it is properly closed.
- 5) If you wish to brew stronger coffee, turn the aroma control dial ⑫ anticlockwise. If you wish to brew weaker coffee, turn the aroma control dial ⑫ in the opposite direction.
- 6) Place the glass kettle ⑥ on the hotplate ⑧ and turn on the coffeemaker by moving switch ⑪ to position I (On). The "On" indicator light will turn on.
- 7) Once the entire batch has been brewed, wait another minute before the dripping process is complete. Now you may serve the coffee.
- 8) If you wish to serve the coffee later, leave the kettle on the hotplate. The hotplate will keep the coffee at an optimal serving temperature for 30 minutes, then the coffeemaker will automatically switch to stand-by mode.
To turn it on again, move the switch to position 0 (off) and then back to position 1 (on).
- 9) As soon as you empty the kettle return it to the hotplate and turn off the coffeemaker by moving the switch ⑪ to position 0 (Off). The power indicator light will turn off.
- 10) Allow the coffeemaker to cool down for at least 10 minutes before using it again.



Warning:

The water inside may overheat if you do not allow the coffeemaker to cool down, which could result in scalding by the escaping steam.

- 11) Before using the coffeemaker again, remove the coffee sediment and wash out the permanent filter ② or remove the paper filter together with the coffee sediment and dispose of it together with regular household waste. Wash the filter holder ③ and the kettle ⑥ under running water. Dry it and return it back to its place.
- 12) If you will not be using the coffeemaker, disconnect the power cord from the wall outlet.

DRIP-STOP FUNCTION

The Drip-Stop function allows you to serve the coffee before the dripping process is complete.

- 1) Once approximately 4 cups of coffee have been brewed, remove the kettle from the coffeemaker. The Drip-Stop shut-off valve will be activated and the coffee will stop dripping.
- 2) Serve the necessary amount of coffee and then return the kettle back on to the hotplate within 1 minute of removing it so as to prevent overfilling the filter with hot water.
- 3) As soon as the kettle is back on the hotplate, the dripping process will restart automatically.



Note:

Coffee served before the dripping process is complete may taste differently to the coffee served after the dripping process has finished.

CLEANING AND MAINTENANCE

- Before cleaning the coffeemaker disconnect it from the power socket and allow it to fully cool down.
- After every use remove the coffee sediment and wash out the permanent filter, filter holder and the glass kettle in hot water with kitchen detergent. Then rinse these parts under flowing drinking water and dry them.



Note:

To clean the permanent filter you may use a nylon brush.

- Clean the outer surface of the coffeemaker using a fine lightly damp cloth. Use kitchen detergent to remove coffee stains.
- Never use cleaning products causing abrasion, petrol or solvents for cleaning.

Removal of limescale deposits

- It is necessary to regularly remove limescale deposits from the coffeemaker. Limescale deposits may prolong the time required to brew the coffee and negatively influence its final quality. In the case of daily use of the coffeemaker we recommended to remove the limescale deposits:
 - once per month in areas with hard and very hard water;
 - once every 2 to 3 months in areas with soft and medium soft water.
- To remove limescale deposits use an 8% solution of white vinegar and water (recommended dilution ratio of 1:2). Fill the water tank with the solution all the way up to the maximum level line. Then place the filter holder and the permanent filter into the brew chamber. Then follow the procedure described in chapter Using the coffeemaker, but do not put coffee into the filter.



Warning:

During the cleaning process more steam may be emitted than when coffee is being brewed, so do not tamper with the lid while the coffeemaker is in operation.

- After using the solution, allow clean water to run through the coffeemaker two to three times. Allow the coffeemaker to cool down for at least 10 minutes between individual cycles.

TECHNICAL SPECIFICATIONS

Nominal voltage range	220–240 V
Nominal frequency.....	50 Hz
Rated power input.....	820–980 W
Water tank capacity	2.2 l

We reserve the right to change text and technical specifications.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.