

Curling Iron

User's manual

EN



SENCOR®

SHS 7780WH

Prior to using this product, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of products. Only use the product in the manner described in this user's manual. Keep the user's manual in a safe place where it can be easily retrieved for future use.

We recommend saving the original shipping cardboard box, packaging material, receipt and warranty card for the duration of warranty. In the case of transportation, pack the product using the original packaging materials only.

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS.....	3
DESCRIPTION OF THE CURLING IRON	5
INSTRUCTIONS FOR USE.....	6
MAINTENANCE AND CLEANING	6
TECHNICAL SPECIFICATIONS	6
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS ..	7
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES	7

IMPORTANT SAFETY INSTRUCTIONS

This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers. Children must not play with the appliance. Cleaning and maintenance performed by the user must not be performed by unsupervised children.

IMPORTANT SAFETY INSTRUCTIONS

- Carefully unpack the product and take care not to throw away any part of the packaging before you find all the parts of the product.
- Use extra care if the product is used near children. Always keep the product out of the reach of children.
- Before connecting this product to the socket outlet, make sure the voltage stated on the label of the product corresponds to the voltage in your wall socket.
- Never use accessories, which have not been supplied with this product or which are not designed for this product.
- Make sure that the electric cable and plug cannot get in contact with water or dampness.
- Do not spray the product with water or any other liquid. Do not submerge this product and any of its components in water, or any liquids.
- This product is designed for household use. Do not use it in industrial environment, or outdoors!
- Do not use sprays in the vicinity of the product.
- If you will not be using the product, disconnect it from the electrical grid. Before cleaning or moving proceed in the same manner.
- Do not place the product on or near an electrical or gas stove. Do not place the product near heat producing products such as fireplaces etc.
- Do not use the product if it has a damaged electric cable/electric cable plug.
- In no case should you attempt to repair the product yourself, do not make any amendments to it – danger of electric shock! Entrust all repairs and adjustments of this product to a specialised company/service. Failure to do so will expose you to a danger of voiding the warranty policy.
- In case the electric cord is damaged, have it replaced by an expert service. Do not use the product if it has a damaged power cord/plug.
- Do not place the electric cord of the product near hot surfaces, or over sharp objects.
- Do not place heavy objects on the power cord, position the cord so that it is not stepped on, or tripped over. Make sure the power cable does not hang over the edge of a table, or that it does not touch a hot surface.
- Do not disconnect the product from the power point by pulling the electric cord – it may damage the electric cord / power point. Disconnect the cable from the power point by gently pulling the plug of the electric cable.
- Do not use the product for any other purposes than those intended.
- To insure additional safety, it is recommended to install an Residual Current Device (RCD) into the electric circuit to the bathroom with a maximum current rating of 30 mA. Ask a electrician for advice.
- The manufacturer takes no responsibility for damages caused by the incorrect use of this product and its accessories (injuries, burns, scalding, fire, food spoilage, etc.).



Do not use this appliance near baths, showers, washbasins or other containers containing water.


Curling Iron

SHS 7780WH

EN

DESCRIPTION OF THE CURLING IRON

A

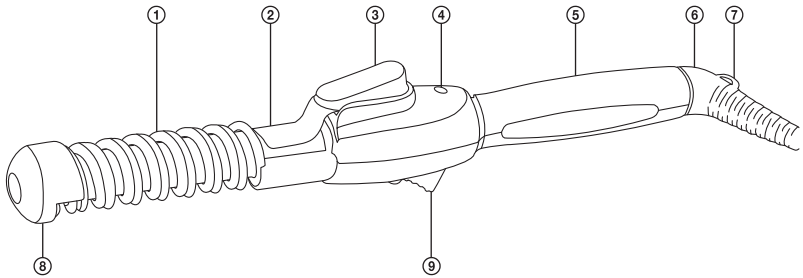

- | | |
|---|---|
| ① Curling tongs with sliding spirals for perfect clamping and curling of hair | ⑥ 360° swivel power cord |
| ② Clamp for clamping hair strands | ⑦ Hanging loop |
| ③ Clamp release clip | ⑧ Thermally insulated end for safe handling and turning of hair strands |
| ④ Power indicator | ⑨ Button for pressing the sliding spirals against each other |
| ⑤ Anti-slip handle | |

Curling Iron

SHS 7780WH

INSTRUCTIONS FOR USE

- 1) Connect the power cord plug to an el. power socket. After connecting the curling iron to an el. power socket the power indicator A④ will turn on.



Warning:

Do not touch the hot surface of the curling tongs and sliding spirals. Use the handle A⑤ to hold the curling iron.

- 2) Wait a moment until the curling tongs with the sliding spirals A① heat up to operating temperature.
- 3) Separate a thin lock of hair.
- 4) Press the clip A③ and insert the end of the lock of hair between the curling tongs A① and the clamp A②. Release the clip A③ to clamp the lock of hair.
- 5) Turn the curling iron in the direction of the spirals until the lock of hair winds up around the curling tongs A① down to the hair root. Leave sufficient space between the scalp and the curling tongs A① so that they do not come into contact. Otherwise the scalp may suffer burns.



Note:

After winding up, the hair lock must be between the sliding spirals.

- 6) To push the sliding spirals together, press the button A⑥. The spirals will set the curled hair locks in place.
- 7) Hold down the button A⑥ for approximately 5 to 10 seconds and then release it. Unwind the lock of hair by turning the curling iron in the opposite direction to the spiral and press the clip A③ to release the end of the lock of hair from the clamp A②.
- 8) Proceed in the same way with the remaining locks of hair which you wish to curl.



Note:

For a longer-lasting effect firm the hairstyle using a hair spray.

- 9) Disconnect the power cord of the curling iron from the el. power socket after use. The power indicator A④ will turn off.
- 10) Allow the curling iron to cool down. We recommend that you place the curling iron on a heat insulated base.

MAINTENANCE AND CLEANING

- Before cleaning, check that the curling iron is disconnected from the el. power socket and that it has cooled down after use.
- To clean the surface of the curling iron use a soft cloth slightly dipped in lukewarm water. Do not use abrasive cleaning agents, solvents or thinners.

TECHNICAL SPECIFICATIONS

Nominal voltage range	100–240 V
Nominal frequency.....	50/60 Hz
Input power	31–35 W
Safety class (with regard to electric shock protection).....	II
Diameter of the tongs	20 mm

Amendments to text and technical parameters are reserved.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Curling Iron

SHS 7780WH