User's Manual





Before first use, please read all instructions contained in this user manual carefully, even if you are already familiar with using similar products. Only use this product in accordance with the instructions described in the user manual. Keep this user manual in a safe place for future use.

Keep the original packaging, including the internal packing material, warranty card and proof of purchase receipt, at least for the duration of the warranty. If you need to ship this product, pack it in the original cardboard box to ensure maximum protection during transport (e.g., when moving or when you need to send this product for repair).

SJE 1005 / SJE 1006RD / SJE 1007WH

## **CONTENTS**

IMPORTANT SAFETY NOTICE	. 3
PRODUCT DESCRIPTION	. 4
INSTRUCTIONS FOR USE	. 5
RECIPES	. 7
CLEANING AND MAINTENANCE	. 8
TECHNICAL SPECIFICATIONS	. 8
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS	. 9
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES	q


SJE 1005 / SJE 1006RD / SJE 1007WH

## **IMPORTANT SAFETY NOTICE**

- Carefully unpack the product, and take care not to throw away any part of the packaging material before you have found all parts of the product.
- 2) This appliance must not be used by persons (including children) with physical or mental disabilities or by inexperienced persons, unless properly trained or schooled in the safe use of the appliance, or unless they have been properly supervised by a qualified person who will be responsible for their safety.
- 3) Children must be supervised to ensure that they do not play with the appliance.
- 4) Never use accessories that have not been delivered with this product or are not intended for it.
- 5) Under no circumstances should you try to repair or alter the appliance on your own danger of electric shock! Entrust all repairs and adjustments to a specialised company/service. If you open the product during the warranty period, you run the risk of voiding the warranty.
- 6) Store and use the appliance away from flammable or volatile materials.
- 7) Keep the product away from extreme temperatures, direct sunlight and excessive humidity. Do not keep it in a dusty environment.
- 8) Do not place the product near heaters, open fires or other appliances or equipment that are sources of heat.
- 9) This appliance is designed for household use. Do not use it in industrial surroundings or outdoors!
- 10) Do not use the product for purposes other than those intended.
- 11) Before connecting this product to an electrical outlet, make sure the voltage stated on the label of the product corresponds to the voltage in your wall socket.
- 12) Do not place the power cord near hot surfaces, or over sharp objects. Do not place heavy objects on the power cord. Position the cord so that it will not be stepped on or tripped over. Make sure the power cord is not touching any hot surface.
- 13) If the appliance's power cord is damaged, have it replaced by authorised service or qualified person to prevent hazards. It is forbidden to use a product with a damaged power cord or plug.
- 14) Do not disconnect the electrical plug from the wall outlet by pulling on the cord.
- 15) Do not use the appliance if the stainless steel strainer is damaged.
- 16) Do not submerge the motor unit in water or any other liquid.
- 17) If you are not using the product, or if you know that you will not be using it soon, turn it off and disconnect the power cord from the wall socket. Prior to cleaning, proceed in the same manner.
- 18) Never leave the appliance switched on without supervision.
- 19) Use extra care if the product is used near children. Always keep the product out of the reach of
- 20) While the product is operating, never place your hand or any foreign object into the filling port.
- 21) Do not push ingredients into the filling port with your fingers or with any utensil. Always use the plunger provided.
- 22) Be careful when handling the stainless steel strainer, because the blade on its bottom is very sharp. Careless handling can cause injuries.
- 23) The manufacturer is not responsible for damages caused by incorrect use of this appliance or its accessories. Such damages include food spoilage, injuries, burns, scalding, fire, etc.


SJE 1005 / SJE 1006RD / SJE 1007WH

## PRODUCT DESCRIPTION

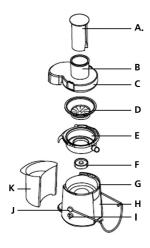

- A. Plunger
- B. Filling port
- C. Lid
- D. Stainless steel strainer
- E. Juice collector
- F. Drive shaft
- G. Motor unit
- H. Spout
- I. Control button
- J. Safety latch
- K. Pulp container

## Control button

 

Off (O) Low power (1) High power (2)

SJE 1005 / SJE 1006RD / SJE 1007WH

## **INSTRUCTIONS FOR USE**

#### Before first use

 
- 1) Wash all detachable parts in warm water and dry them completely.
- 2) Place the juicer on a stable, even surface that is not slippery.
- 3) Plug the power cord into an appropriate electrical socket (220-240 V).

## Assembling the product

Insert the juice collector into the juicer as shown in the illustration.
 Make sure that the edge of the collector is even with the motor unit.



 Insert the stainless steel strainer into the collector. Make sure that the strainer is firmly seated on the drive shaft. When properly placed, the upper edge of the strainer should be below the level of the upper edge of the juice collector.




3) Cover everything with the lid and press it down into the proper position.



4) Use one hand to press the lid downward, and at the same time pull the safety latch over it so that the lid will be secured in the correct position (you will hear a click).



 5) Tilt the juicer slightly forward and place the pulp container onto it — first slide the upper end in, and then press the lower end toward the juicer.







## SJE 1005 / SJE 1006RD / SJE 1007WH

## Using the product

 
1) Under the spout, place a large enough container for the juice.



  Prepare the ingredients for processing. Thoroughly wash all ingredients before using. After washing, cut excessively large pieces into smaller ones. You will find other processing tips in the "RECIPES" section (see below).



 - 3) Turn the control switch to the "1" or "2" position, depending on the type of fruit or vegetables being processed. For softer ingredients, use speed 1 (e.g., grapes, blueberries, melons, raspberries, tomatoes, etc.). For harder ingredients use speed 2 (e.g., pineapple, celery, carrots, beets, apples, etc.)
- 4) Insert the prepared ingredients into the filling port and, using the plunger, carefully begin pressing them downward onto the spinning stainless steel strainer. Do not use too much pressure. Ingredients juice slowly, so let them have as much give as possible.



- 5) During the juicing process, the juice will go into the juice container, while the pulp will be separated and collect in the pulp container. You can empty the pulp container during the juicing process turn the switch to the OFF position and carefully empty the container. Before you restart the juicing process, put the pulp container back in place.
- 6) After processing the ingredients, turn off the appliance and wait until the spinning strainer has completely stopped.



### Warning:

This appliance is intended only for short-term use. When juicing large quantities, do not use this juicer for more than 40 seconds at a time, and allow the juicer to cool completely between uses.

SJE 1005 / SJE 1006RD / SJE 1007WH

## **RECIPES**

Before starting work, read the following tips. They will help you get the most efficiency and flavour when juicing, and they will also make your work easier.

- Use only fresh fruit and vegetables, because they contain more juice. Especially appropriate are pineapple, red beets, celery, apples, cucumbers, carrots, melons, tomatoes, oranges and grapes. Don't use overripe fruit and vegetables, because the juice won't taste as good.
- You don't have to cut or slice most fruit and vegetables (such as apples, carrots and cucumbers), because they will go into the filling port whole.
- With root vegetables (such as carrots or beets), make sure that you have removed all dirt and
  greens and washed the vegetables thoroughly.
- Before juicing, you must remove all pits and hard seeds from fruits that have them (e.g., nectarines, peaches, mangoes, apricots, plums and cherries). The pits would make the juice too bitter.
- You do not need to remove thin skin or peels (e.g., apples and pears). Thick peels must be removed (e.g., on oranges, pineapple and raw beets). Always remove the white rind from citrus fruit — it tastes bitter.
- When making apple juice, keep in mind that the thickness depends on the type of apples you are using. The juicier the apple, the thinner the juice. Apple juice turns brown very quickly. You can slow this process by adding a few drops of citrus juice.
- Starchy fruits (such as bananas, avocados and figs) are not appropriate for this juicer. Before
  adding these types of fruit to the juicer, process them with a mixer or food processor.
- You can also process leaves and stalks (such as lettuce) in this juicer.
- If you decide to store the juice in the refrigerator, do not leave it there for more than one day.
   It may go sour after that.
- If you decide to freeze the juice, do not leave it for more than one month.

#### Tomato iuice

Juice 1 kg of fresh, ripe tomatoes and serve immediately. For flavour, add some celery stalks and fresh pepper.

#### Apple juice

Juice 4 large apples with the stems removed, and serve immediately. To vary the flavour, you can combine more than one type of apple. For added sweetness and vitamins, add a carrot.

#### Island mix

Juice 1 middle-sized pineapple, 1 papaya, 1 large orange and 1 peeled guava. Add 1 mango (after processing in a mixer). Serve right away.

## Carrot and fruit juice

Juice 4 large carrots (remove the tops and bottoms, and wash them) with 2 sweet, washed apples (with the stems removed). Serve right away.

#### Pineapple juice

Juice 4 pineapple slices, 1 one middle-sized orange, and serve immediately.

SJE 1005 / SJE 1006RD / SJE 1007WH

## **CLEANING AND MAINTENANCE**



Warning:

Unplug this product before cleaning.

To clean the outer parts of the appliance, use a soft cloth dipped in lukewarm water. Do not use harsh cleaning fluids, paint thinners or solvents. These can damage the surface of the appliance.

After each use, wash the accessories with ordinary dishwashing detergent and rinse them with warm water.

## **TECHNICAL SPECIFICATIONS**

Rated voltage:	230 V AC
Nominal frequency:	
Rated power input:	
Protection class (regarding protection from electric shock):	
Pulp container capacity:	
Noise level	

The declared noise emission level for this appliance is 73 dB(A), which represents level A of the acoustic power relative to the reference acoustic power of 1 pW.

## Package includes:

1 juicer

1 pulp container

1 plunger

1 lid with filling port

1 stainless steel strainer

1 juice collector

1 user manual

1 warranty certificate

SJE 1005 / SJE 1006RD / SJE 1007WH

# INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

#### DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

### For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

#### Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.



SJE 1005 / SJE 1006RD / SJE 1007WH